


direction indicators / side repeaters / hazard warning lamps

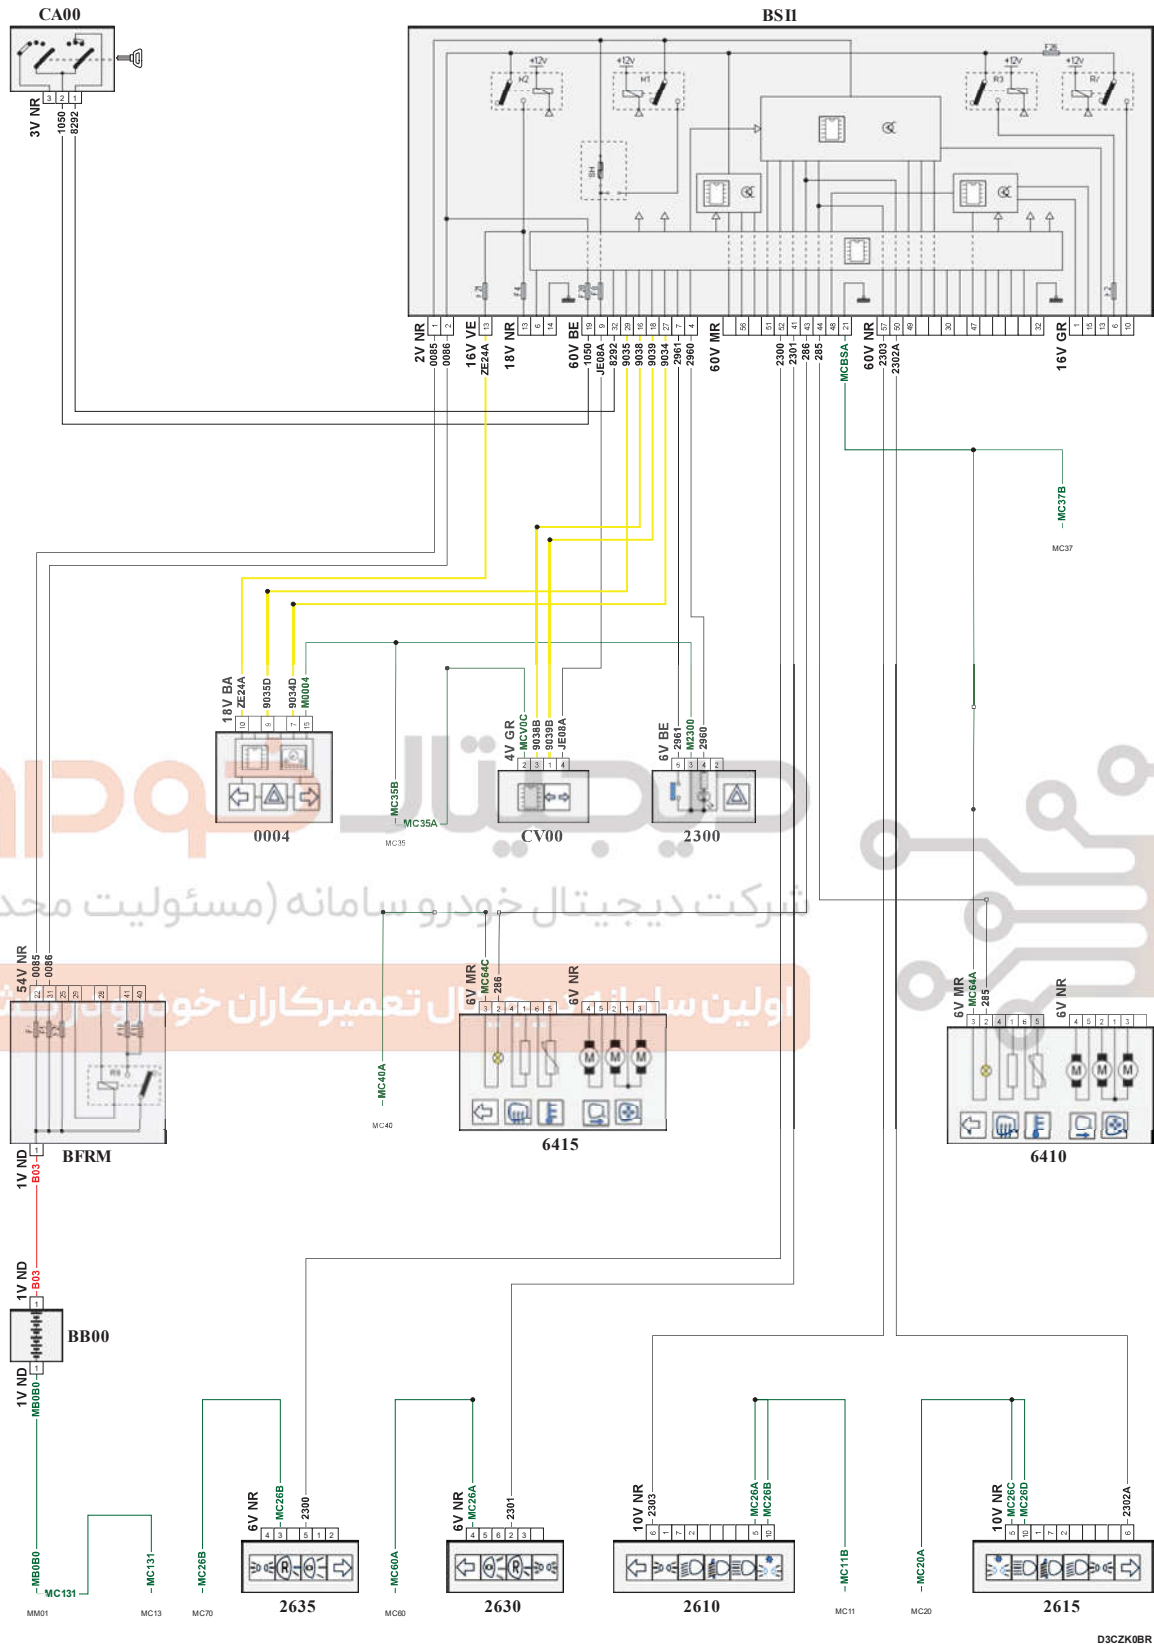

direction indicators / side repeaters / hazard warning lamps

item code	description	information
0004	null	/ instrument panel
2300	null	hazard warning switch
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2635	null	rear right lamp on body
6410	null	left-hand electric and heated exterior mirror
6415	null	right-hand electric and heated exterior mirror
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E904	null	crimp one information (or equipotential 904) wire
E905	null	crimp one information (or equipotential 905) wire
E907	null	crimp one information (or equipotential 907) wire
E908	null	crimp one information (or equipotential 908) wire
EM11B	null	crimp earth (earth point number 11B)
EM20	null	crimp earth (earth point number 20)
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
EM37	null	crimp earth (earth point number 37)
EM40	null	crimp earth (earth point number 40)
EM60	null	crimp earth (earth point number 60)
EM60A	null	crimp earth (earth point number 60A)
EM60B	null	crimp earth (earth point number 60B)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35A	null	body earth point number 35
MC37B	null	body earth point number 37B
MC40A	null	body earth point number 40
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01