


# 组合仪表电路图

# Instrument cluster diagram

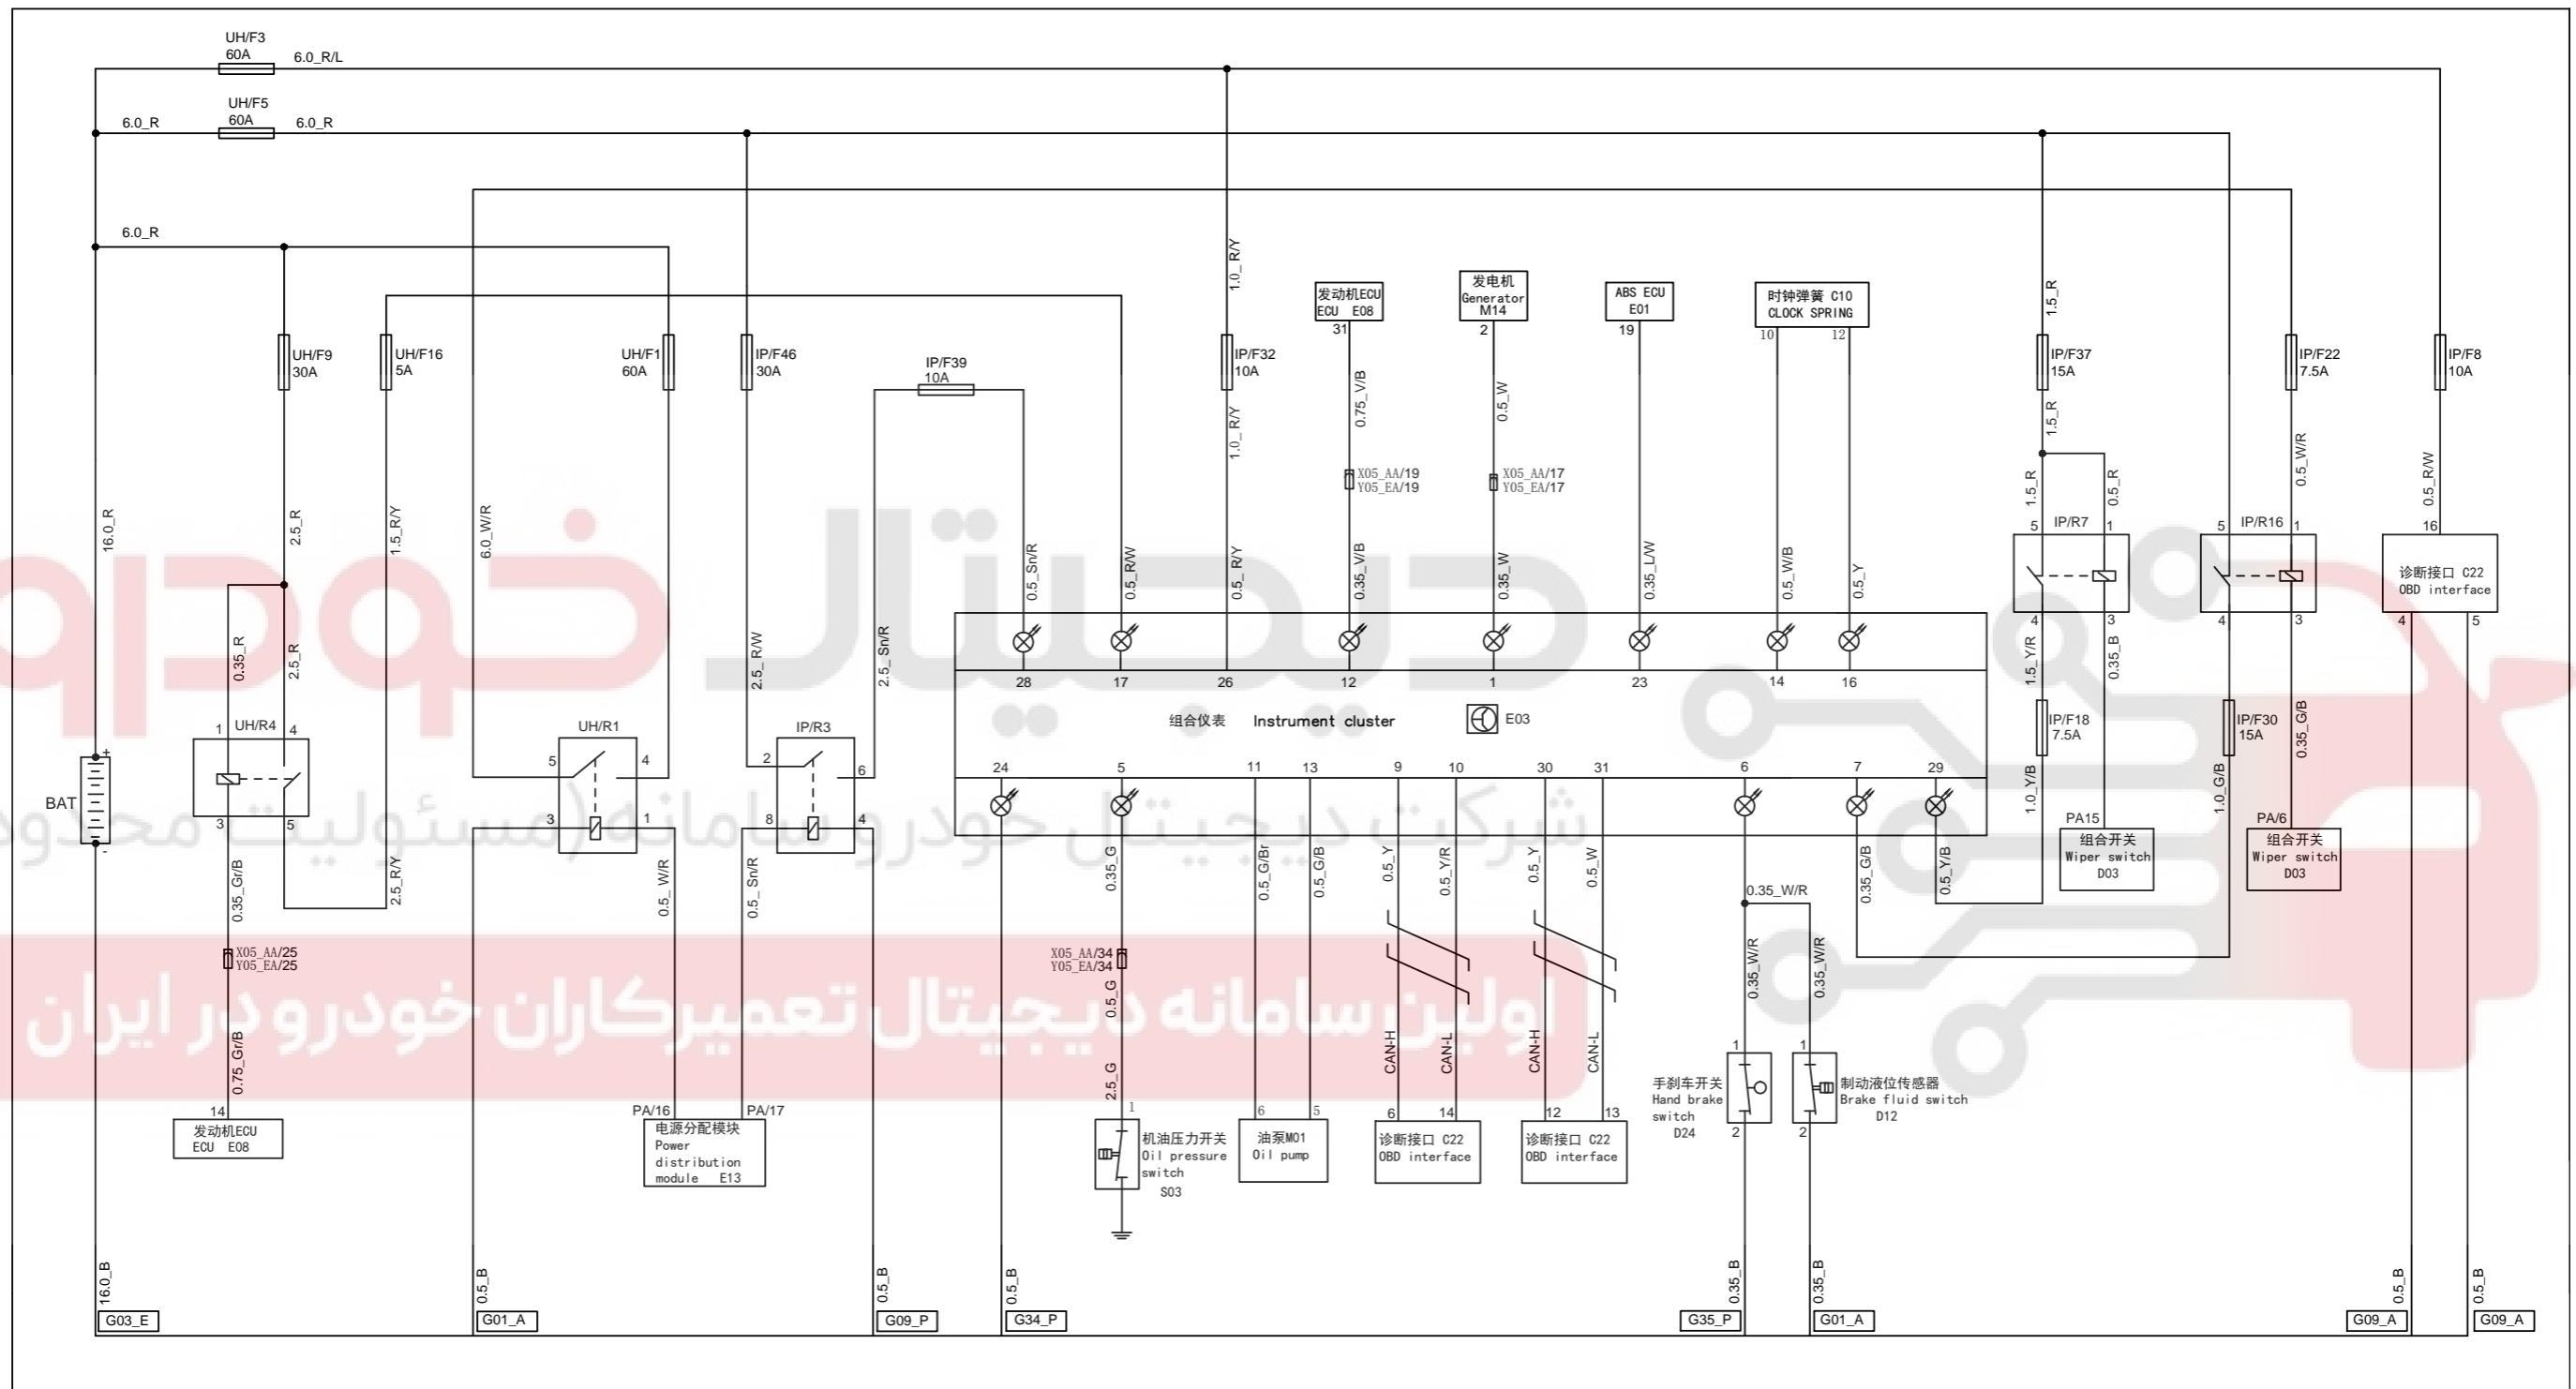

组合仪表电路图

Instrument cluster diagram

- E03—组合仪表
- D12—制动液位传感器
- D24—手刹车开关
- S03—机油压力开关
- C22—诊断接口
- C10—时钟弹簧
- M01—油泵
- M14—发电机
- E08—发动机ECU
- E01—ABS ECU
- E13—电源分配模块
- D03—组合开关
- G01\_A—发动机舱左前搭铁点
- G03\_E—蓄电池负极到车身搭铁点
- G09\_P—主线束左侧A立柱下搭铁点2
- G34\_P—气囊ECU处搭铁点2
- G35\_P—中控台处搭铁点

- E03—Instrument cluster
- D12—Brake fluid switch
- D24—Hand brake switch
- S03—Oil pressure switch
- C22—OBD interface
- C10—CLOCK SPRING
- M01—Oil pump
- M14—Generator
- E08—Engine ECU
- E01—ABS ECU
- E13—Power distribution module
- D03—Wiper switch
- G01\_A—ground point1 at left front shock absorber in the engine compartment
- G03\_E—ground point on pillar from cathode of battery to body wiring harness
- G09\_P—ground point on pillar—A at the left of main
- G34\_P—airbag ECU ground point
- G35\_P—ground point on pillar on central control desk

- G01\_A—ground point1 at left front shock absorber in the engine compartment
- G03\_E—ground point on pillar from cathode of battery to body wiring harness
- G09\_P—ground point on pillar—A at the left of main
- G34\_P—airbag ECU ground point
- G35\_P—ground point on pillar on central control desk