


# Electronic Injection

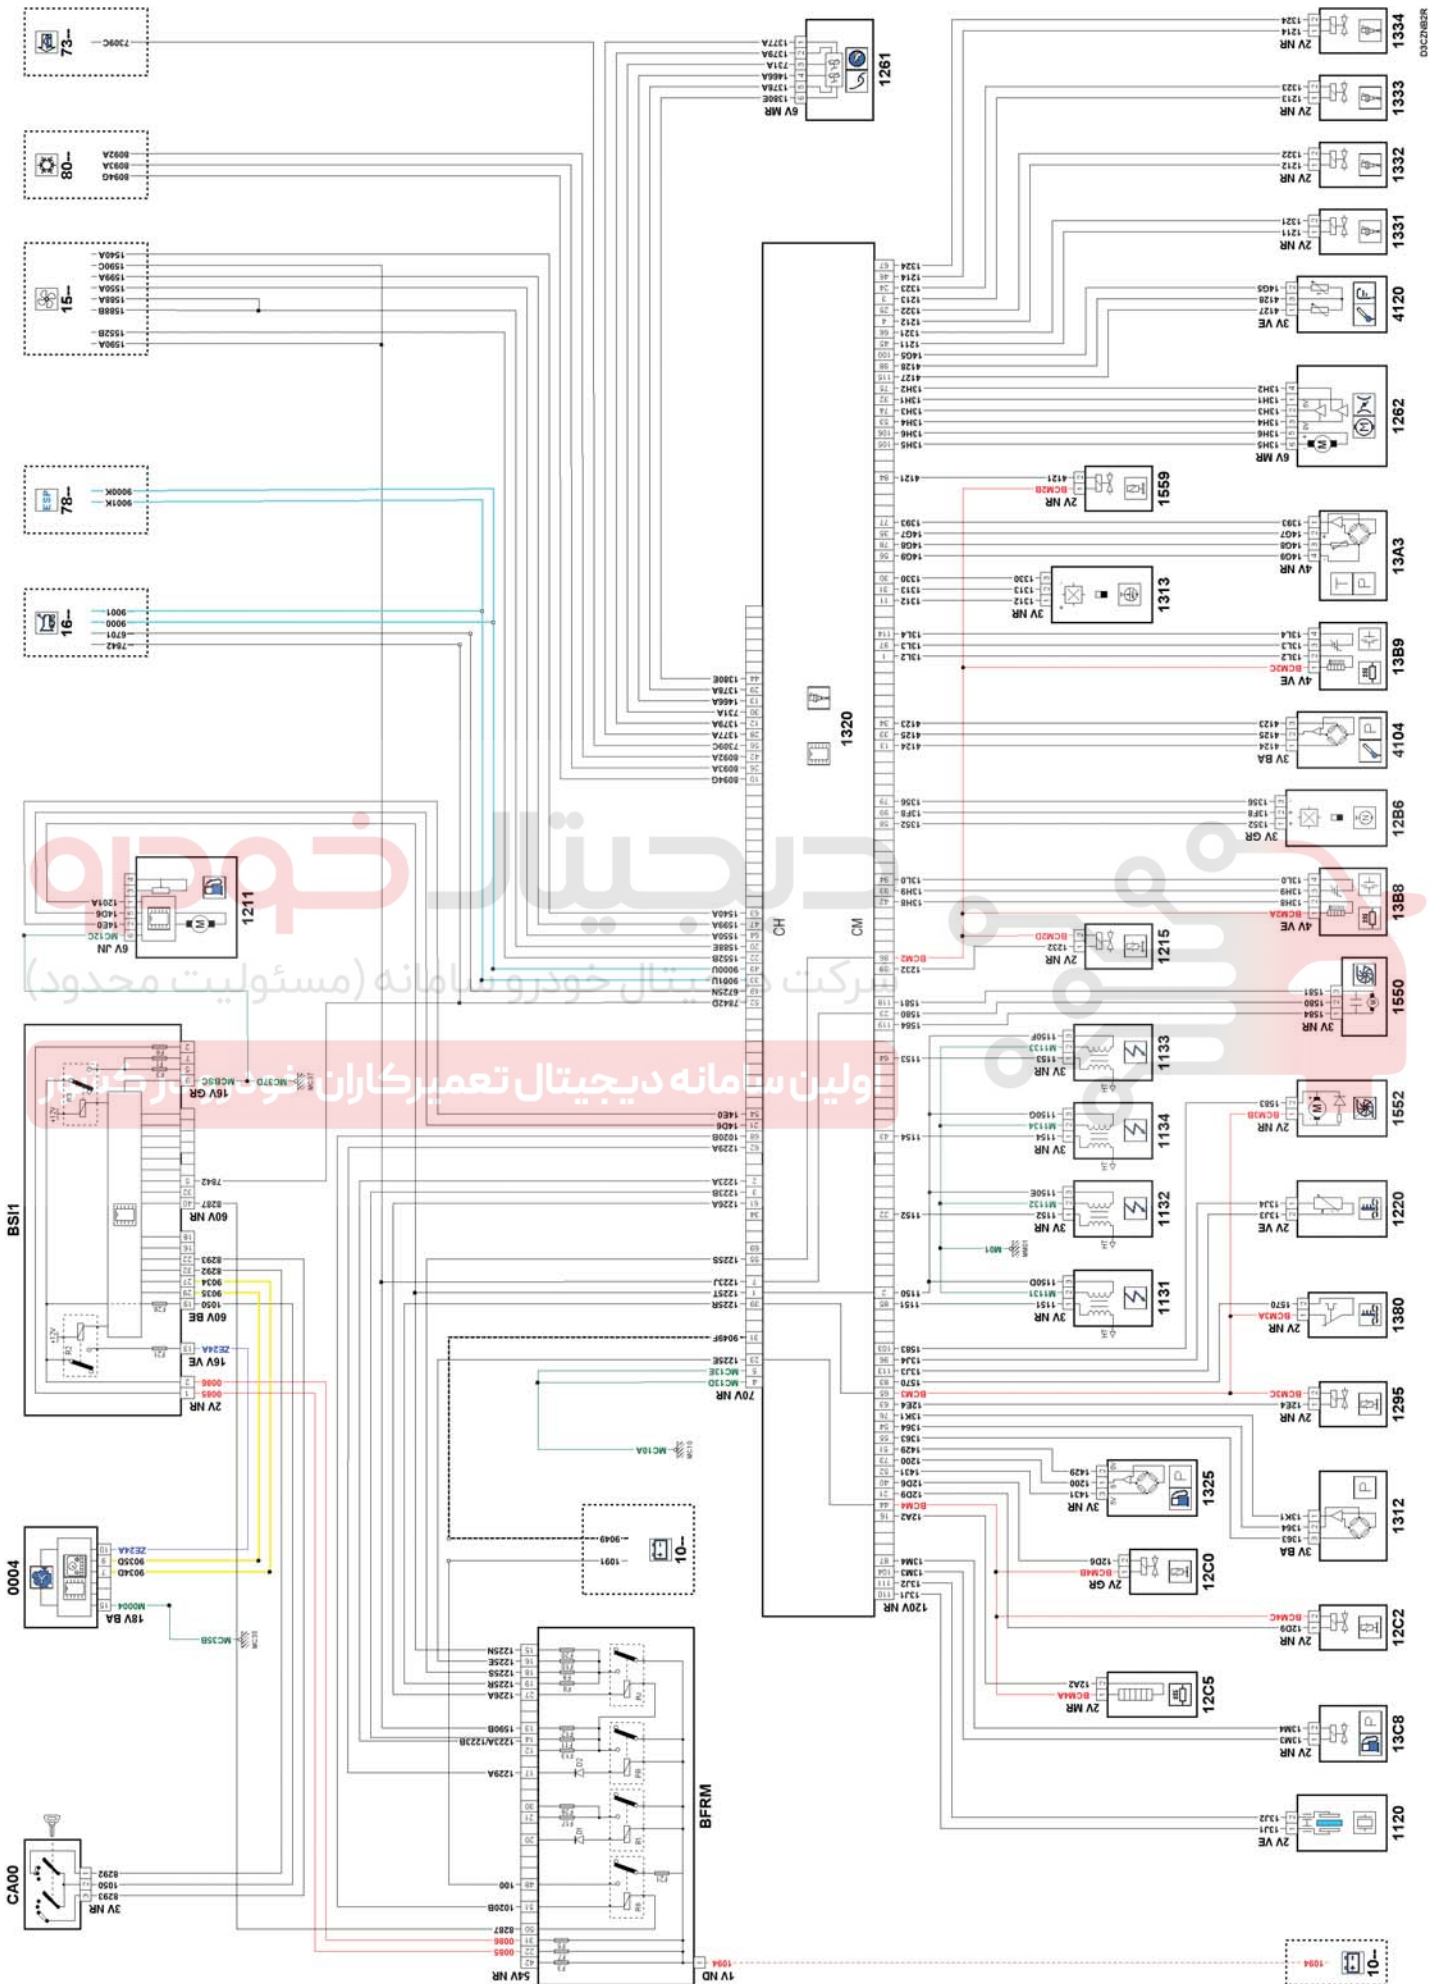

item code	description	information
1220	null	Engine coolant temperature sensor
1380	null	S2RE control thermostat
16...	null	Automatic gearbox control assembly
1120	null	knock sensor /
1131	null	ignition coil for cylinder N°1
1132	null	ignition coil for cylinder N°2
1133	null	ignition coil for cylinder N°3
1134	null	ignition coil for cylinder N°4
1211	null	fuel pump - gauge assembly
1215	null	purge canister solenoid valve
1261	null	accelerator pedal position sensor /
1262	null	Motorised throttle housing
1295	null	turbocharger discharge electrovalve
78...	null	ESP ECU
12B6	null	inlet camshaft position sensor
12C0	null	turbocharging pressure regulation regulated solenoid valve
12C2	null	inlet camshaft dephaser proportional solenoid valve
12C5	null	oil vapour recirculation circuit heater 1
1312	null	inlet air pressure sensor /
1313	null	engine speed sensor
1320	null	engine ECU /
1325	null	high pressure fuel sensor /
1331	null	no. 1 cylinder injector
1332	null	no. 2 cylinder injector
1333	null	no. 3 cylinder injector
1334	null	no. 4 cylinder injector
15...	null	Engine Cooling Fan System
13A3	null	inlet air pressure and temperature sensor
13B8	null	downstream ON/OFF oxygen sensor
13B9	null	upstream ON/OFF oxygen sensor
13C8	null	high pressure fuel regulator /
80...	null	Air conditioning System
1550	null	turbocharger cooling coolant pump
1552	null	declutchable coolant pump
1559	null	oil pump electrovalve
73...	null	Cruise control
4104	null	engine oil pressure sensor
4120	null	engine oil level sensor /
10...	null	Starter & Sharj Battrey System
BFRM	null	Engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch



item code	description	information
1220	null	Engine coolant temperature sensor
1380	null	S2RE control thermostat
16...	null	Automatic gearbox control assembly
1120	null	knock sensor /
1131	null	ignition coil for cylinder N°1
1132	null	ignition coil for cylinder N°2
1133	null	ignition coil for cylinder N°3
1134	null	ignition coil for cylinder N°4
1211	null	fuel pump - gauge assembly
1215	null	purge canister solenoid valve
1261	null	accelerator pedal position sensor /
1262	null	Motorised throttle housing
1295	null	turbocharger discharge electrovalve
78...	null	ESP ECU
12B6	null	inlet camshaft position sensor
12C0	null	turbocharging pressure regulation regulated solenoid valve
12C2	null	inlet camshaft dephaser proportional solenoid valve
12C5	null	oil vapour recirculation circuit heater 1
1312	null	inlet air pressure sensor /
1313	null	engine speed sensor
1320	null	engine ECU /
1325	null	high pressure fuel sensor /
1331	null	no. 1 cylinder injector
1332	null	no. 2 cylinder injector
1333	null	no. 3 cylinder injector
1334	null	no. 4 cylinder injector
15...	null	Engine Cooling Fan System
13A3	null	inlet air pressure and temperature sensor
13B8	null	downstream ON/OFF oxygen sensor
13B9	null	upstream ON/OFF oxygen sensor
13C8	null	high pressure fuel regulator /
80...	null	Air conditioning System
1550	null	turbocharger cooling coolant pump
1552	null	declutchable coolant pump
1559	null	oil pump electrovalve
73...	null	Cruise control
4104	null	engine oil pressure sensor
4120	null	engine oil level sensor /
10...	null	Starter & Sharj Battrey System
BFRM	null	Engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch