



## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-063	08-5 (MT) 08-7 (AT)	I-032	08-10
E-028	08-5 (MT) 08-7 (AT)	B-022	08-12	T-008	08-18
T-009	08-18	T-010	08-18	K-004	08-20
I-023	08-10				

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF02	06-2	Engine Compartment Fuse and Relay Box
SB06	06-2	Engine Compartment Fuse and Relay Box
SB09	06-2	Engine Compartment Fuse and Relay Box
MF05	06-2	Engine Compartment Fuse and Relay Box
RF07	06-10	IP Fuse and Relay Box
RF09	06-10	IP Fuse and Relay Box
RF15	06-10	IP Fuse and Relay Box
RF18	06-10	IP Fuse and Relay Box
RF24	06-10	IP Fuse and Relay Box
Defrost Relay	06-10	IP Fuse and Relay Box
Blower Relay	06-2	Engine Compartment Fuse and Relay Box


## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-029, I-035	08-5, 08-10 (MT) 08-7, 08-10 (AT)	I-019, K-006	08-10, 08-20	I-002, B-019	08-10, 08-12
I-001, B-017	08-10, 08-12	B-001, T-001	08-12, 08-18	T-003, T-007	08-18, 08-18

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-063	12-5	I-032	12-9
E-028	12-3	B-022	12-11	T-008	12-15
T-009	12-15	T-010	12-15	K-004	12-17
I-023	12-8	E-029, I-035	12-3	I-019, K-006	12-8
I-002, B-019	12-7	I-001, B-017	12-7	B-001, T-001	12-10
T-003, T-007	12-15				

Circuit Diagram (Page 2 of 5)

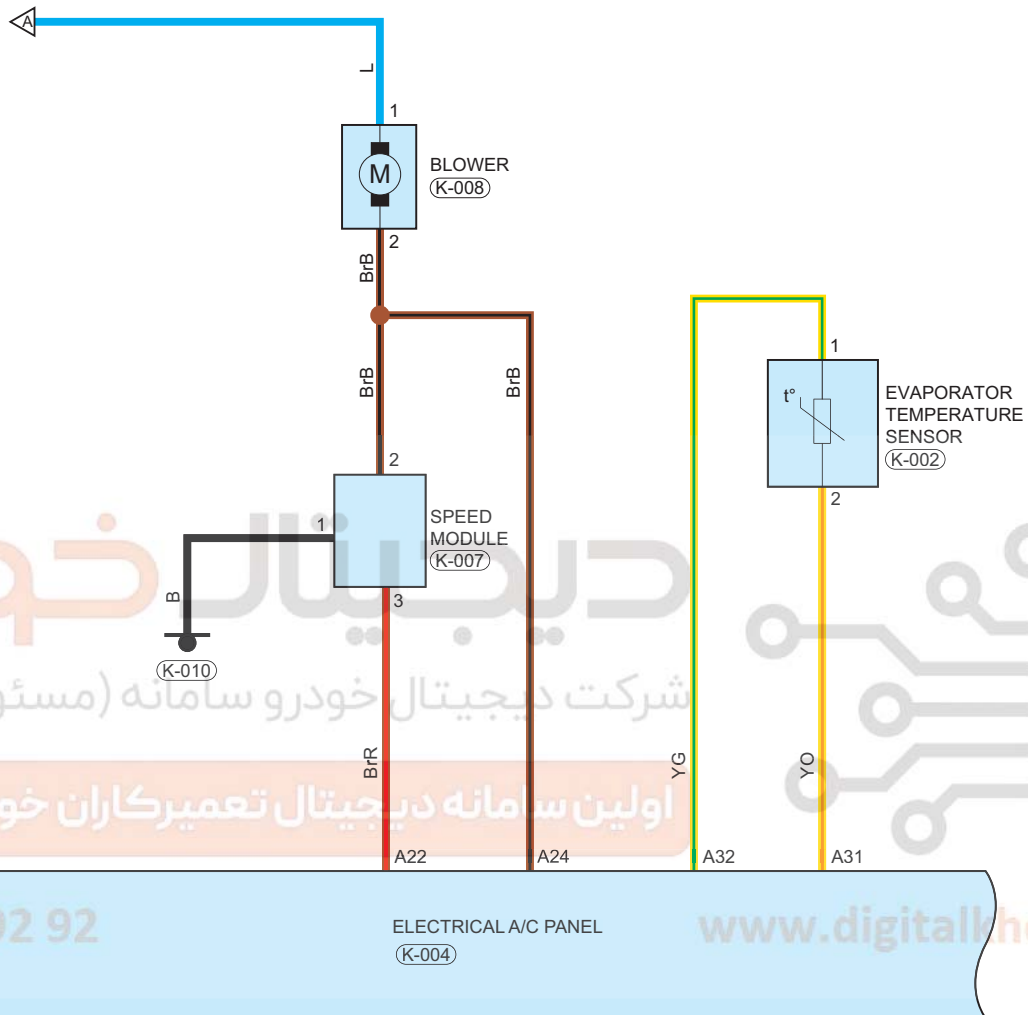

دیجیتال خودرو  
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)  
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



02 09 52 99 92 92

ELECTRICAL A/C PANEL (K-004)

www.digitalkhodro.com

EA13T090330

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-008	08-20	K-007	08-20	K-010	08-20
K-004	08-20	K-002	08-20		


## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-008	12-17	K-007	12-17	K-010	12-17
K-004	12-17	K-002	12-17		

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)



اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

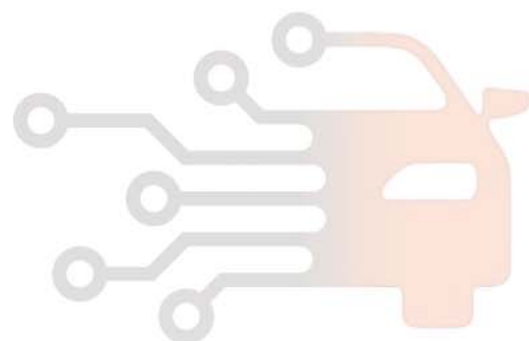

021 62 99 92 92

www.digitalkhodro.com 09

Circuit Diagram (Page 3 of 5)

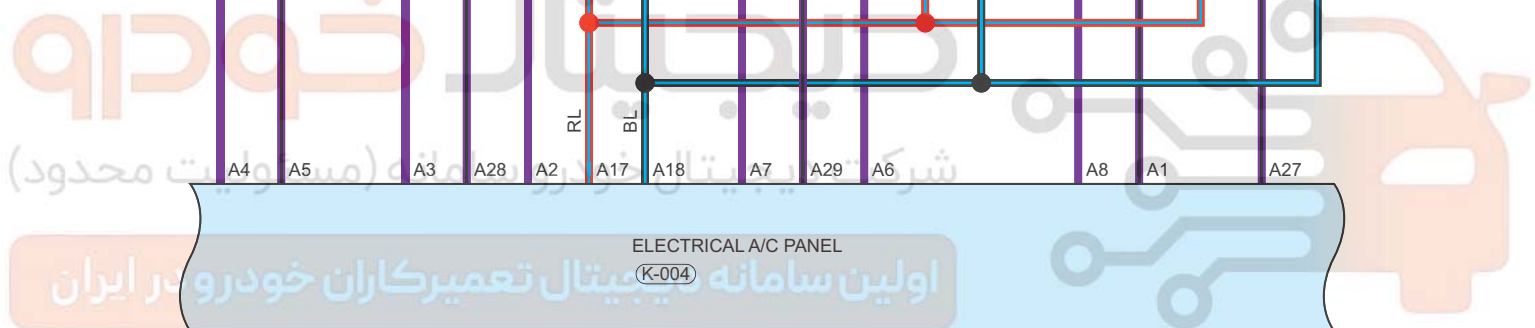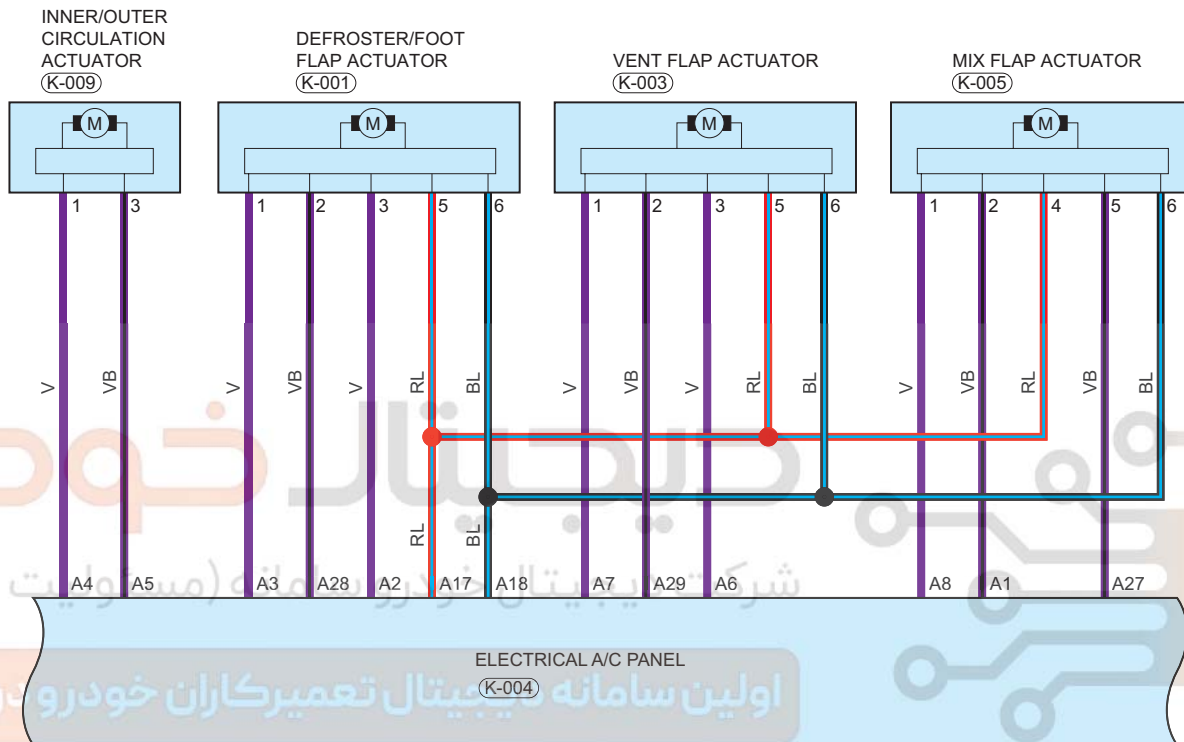

02 09 52 99 92 92

www.digitalkhodro.com

EA13T090340

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-004	08-20	K-005	08-20	K-003	08-20
K-001	08-20	K-009	08-20		


## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-004	12-17	K-005	12-17	K-003	12-17
K-001	12-17	K-009	12-17		

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)



اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

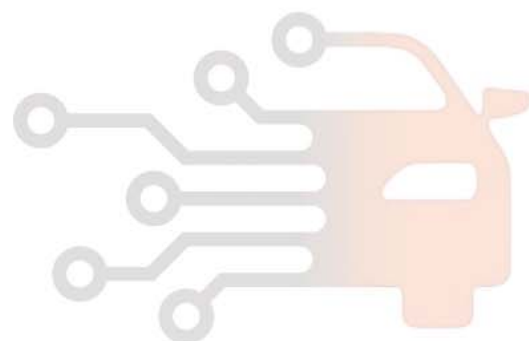

021 62 99 92 92

www.digitalkhodro.com 09

Circuit Diagram (Page 4 of 5)

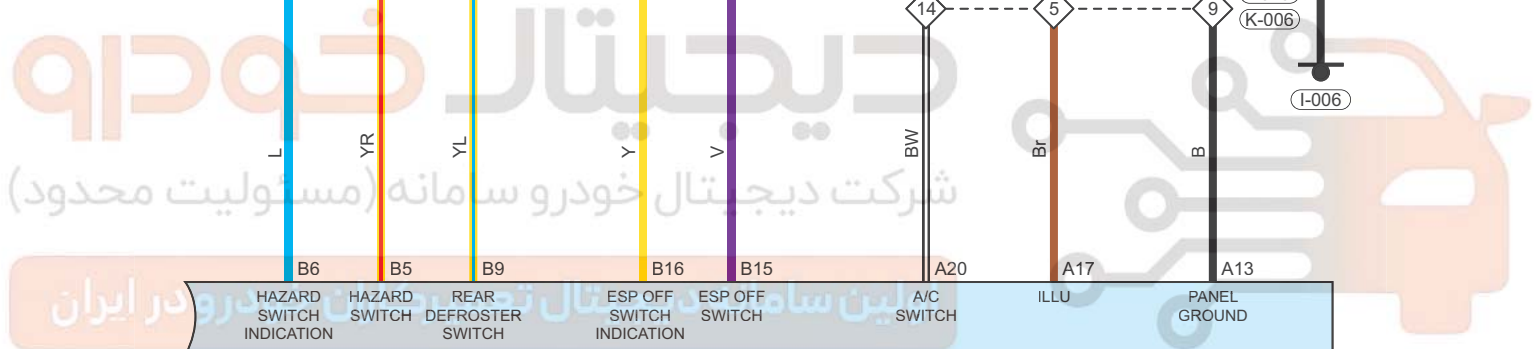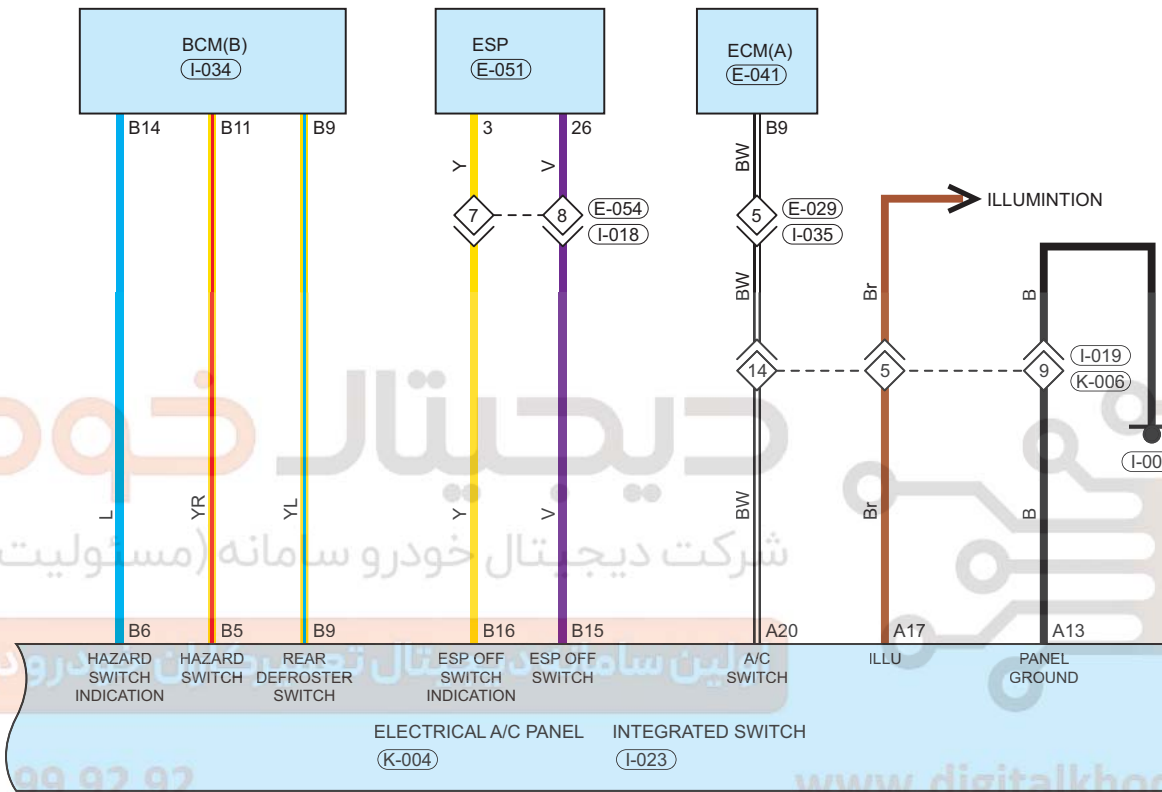

02 09

www.digitalkhodro.com

EA13T090350

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-034	08-10	E-051	08-5 (MT) 08-7 (AT)	E-041	08-5 (MT) 08-7 (AT)
I-006	08-10	I-023	08-10	K-004	08-20

## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-054, I-018	08-5, 08-10 (MT) 08-7, 08-10 (AT)	E-029, I-035	08-5, 08-10 (MT) 08-7, 08-10 (AT)	I-019, K-006	08-10, 08-20

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-034	12-9	E-051	12-5	E-041	12-4
I-006	12-7	I-023	12-8	K-004	12-17
E-054, I-018	12-5	E-029, I-035	12-3	I-019, K-006	12-8

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.com 09



Circuit Diagram (Page 5 of 5)

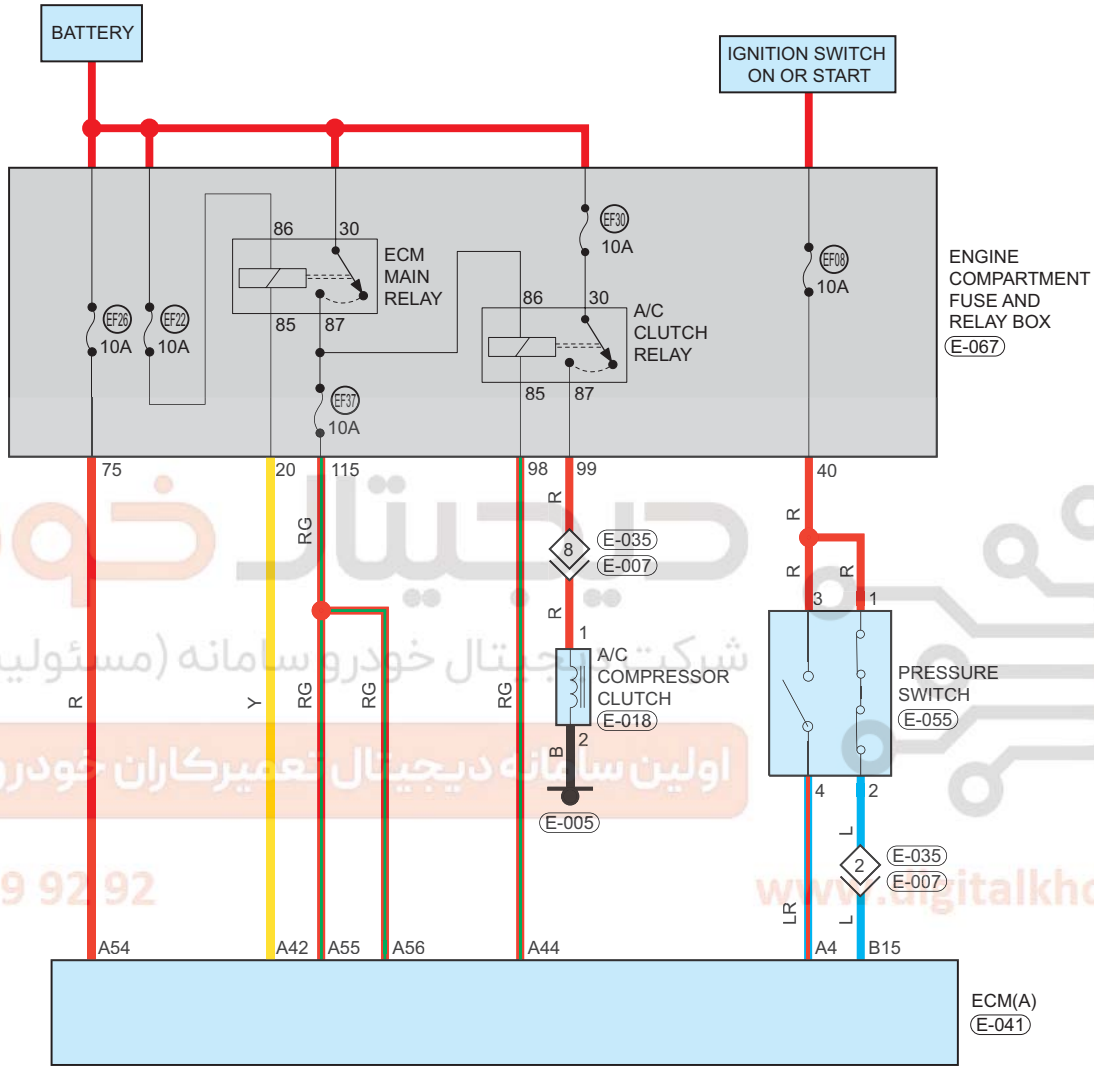

دیجیتال خودرو  
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)  
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران  
 02 09 52 99 92 92  
 www.digitalkhodro.com

EA13T090360

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-055	08-5 (MT) 08-7 (AT)	E-041	08-5 (MT) 08-7 (AT)
E-018	08-3	E-005	08-3		

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF08	06-2	Engine Compartment Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse and Relay Box
EF26	06-2	Engine Compartment Fuse and Relay Box
EF30	06-2	Engine Compartment Fuse and Relay Box
EF37	06-2	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-2	Engine Compartment Fuse and Relay Box
A/C Clutch Relay	06-2	Engine Compartment Fuse and Relay Box

## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-035, E-007	08-5, 08-3 (MT) 08-7, 08-3 (AT)				

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-055	12-5	E-041	12-4
E-018	12-3	E-005	12-2	E-035, E-007	12-4