


Remote Control Mirror

Service Hints

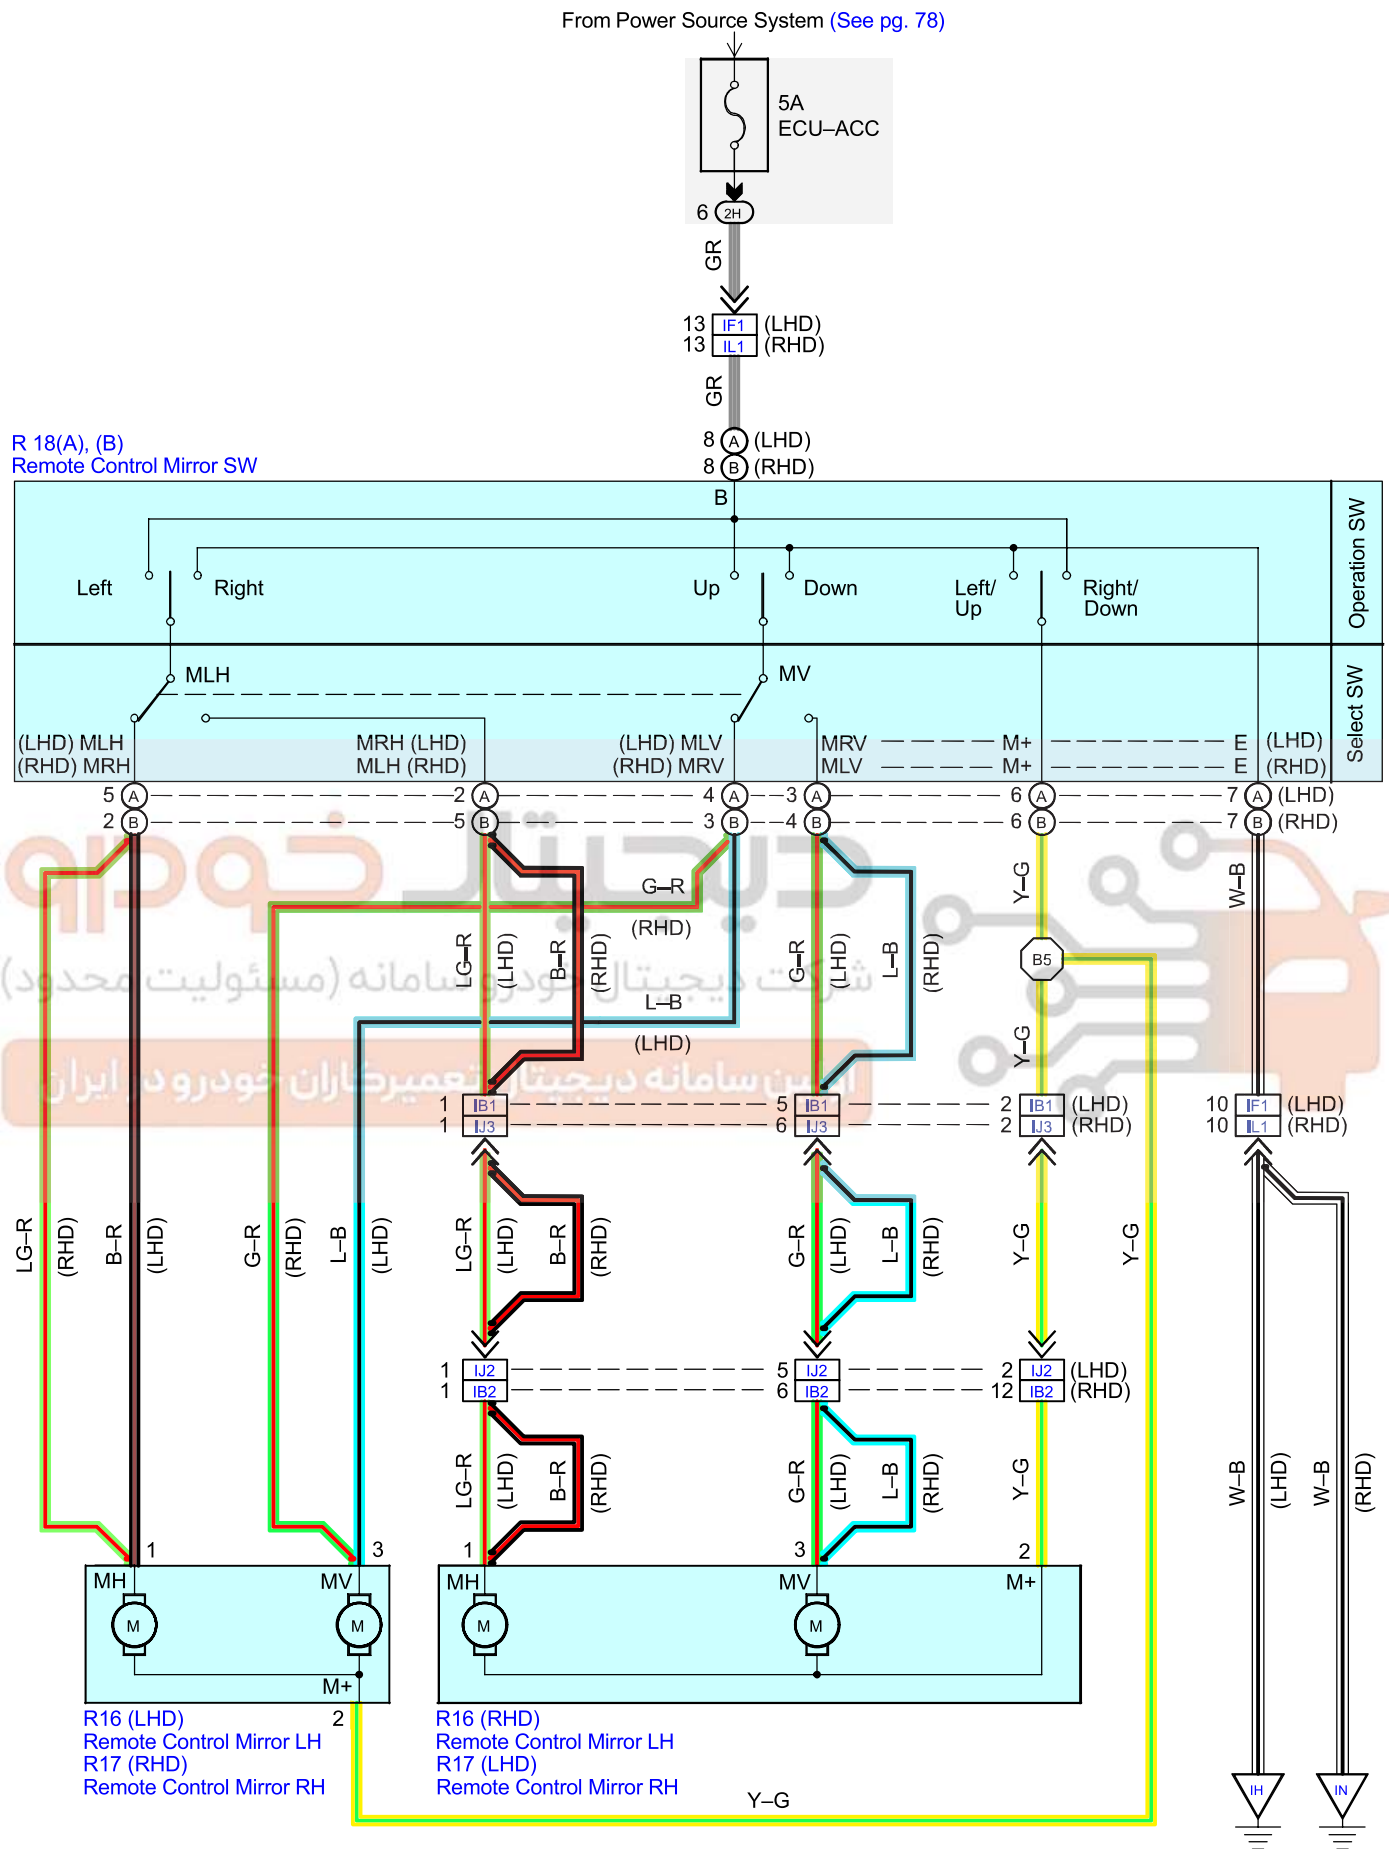

Service Hints**R18 Remote Control Mirror SW**

- 8-Ground : Approx. 12 volts with ignition SW at ACC or ON position
 7-Ground : Always continuity
 8-6 : Continuity with the operation SW at DOWN or RIGHT position
 6-7 : Continuity with the operation SW at UP or LEFT position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
R16	39 (LHD)	R18	A	39 (LHD)	
	49 (RHD)			49 (RHD)	
R17	39 (LHD)		B	39 (LHD)	
	49 (RHD)			49 (RHD)	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2H	26	Floor Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	55 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2	67 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IF1	58 (LHD)	Front Door LH Wire and Floor Wire (Left Kick Panel)
IJ2	58 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
IJ3	70 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	70 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IH	55 (LHD)	Left Kick Panel
IN	67 (RHD)	Right Kick Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B5	60 (LHD)	Front Door LH Wire			
	72 (RHD)	Front Door RH Wire			