




IN-C-2

Fuse Block

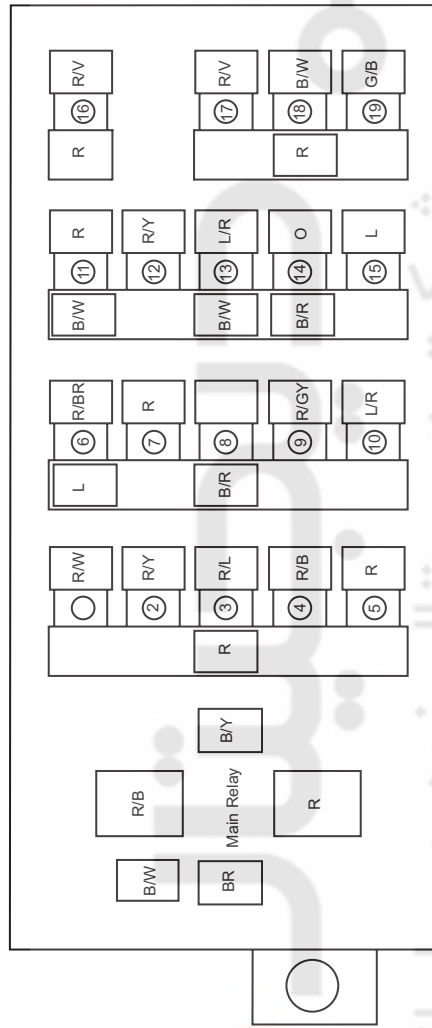


|   |                      |    |                   |    |                       |    |                            |
|---|----------------------|----|-------------------|----|-----------------------|----|----------------------------|
| 1 | 20A IG COIL          | 6  | 15A ROOF          | 11 | 30A CENTER DOOR LOCK  | 16 | 40A WINDOW MOTOR           |
| 2 | 15A SOL              | 7  | 10A A/C           | 12 | 20A WINDOW MOTOR      | 17 | 10A AIRBAG                 |
| 3 | 20A O <sub>2</sub> S | 8  |                   | 13 | 30A GAUGE             | 18 | 10A MAIN RELAY             |
| 4 | 5A FAN COIL          | 9  | 10A BACK-UP LIGHT | 14 | 5A MIRROR             | 19 | 25A BRAKE ASSIST PUMP etc. |
| 5 | 20A ECU 27           | 10 | 20A WIPER         | 15 | 20A CIGARETTE LIGHTER |    |                            |

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

IN

IN-C-1


Usual Connector List

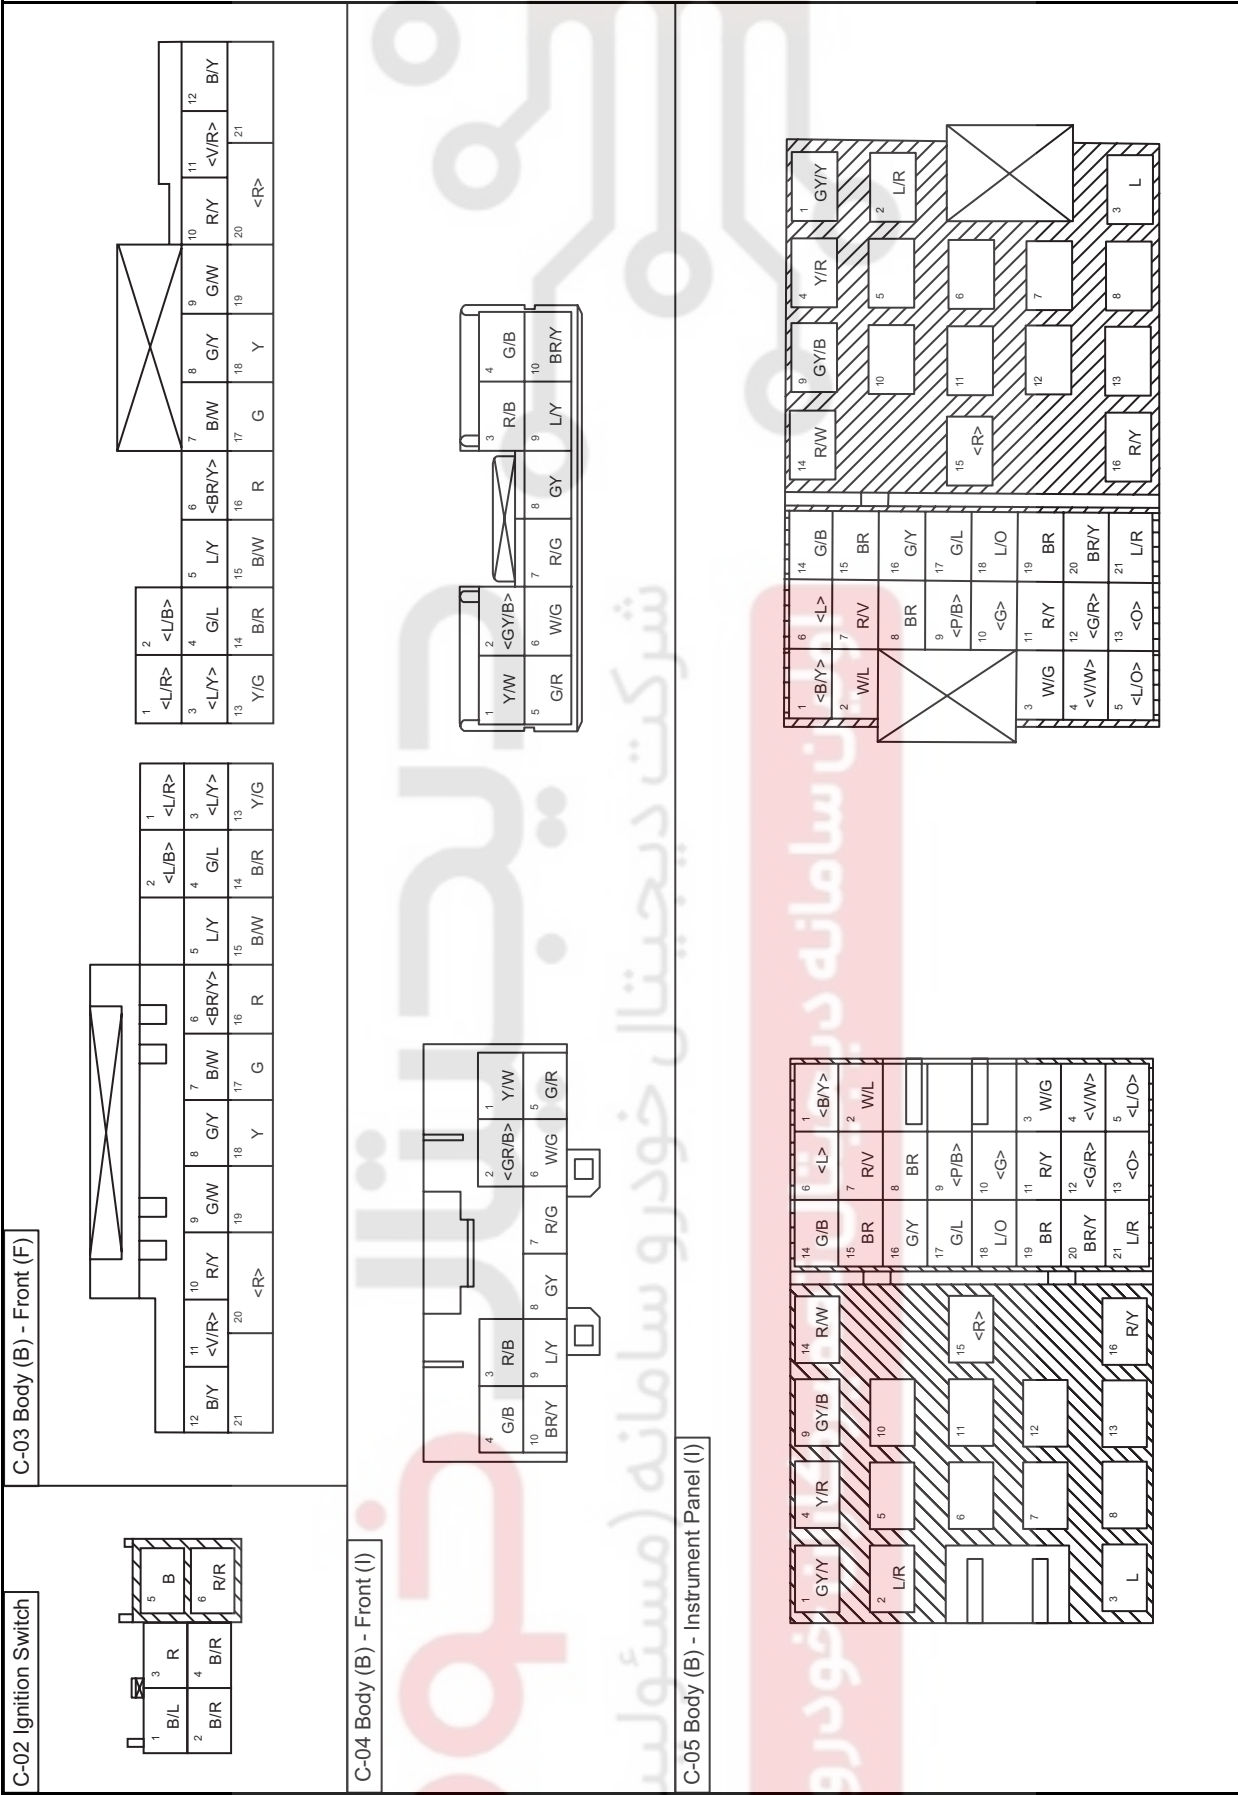

IN-C-2

Usual Connector List

C-06 Body (B) - Instrument Panel (I)

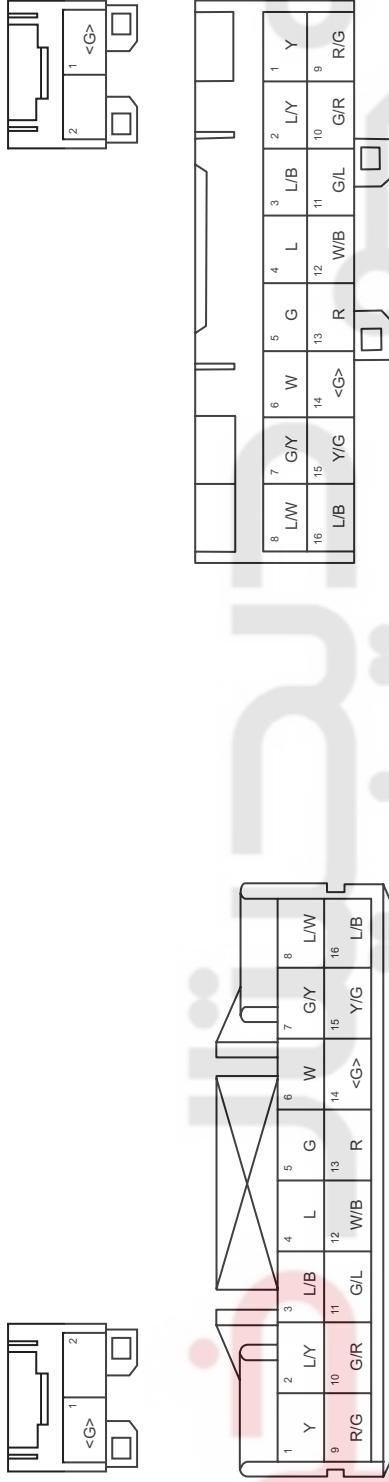

C-07 Body (B) - Instrument Panel (I)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

IN


IN-C-3

Usual Connector List

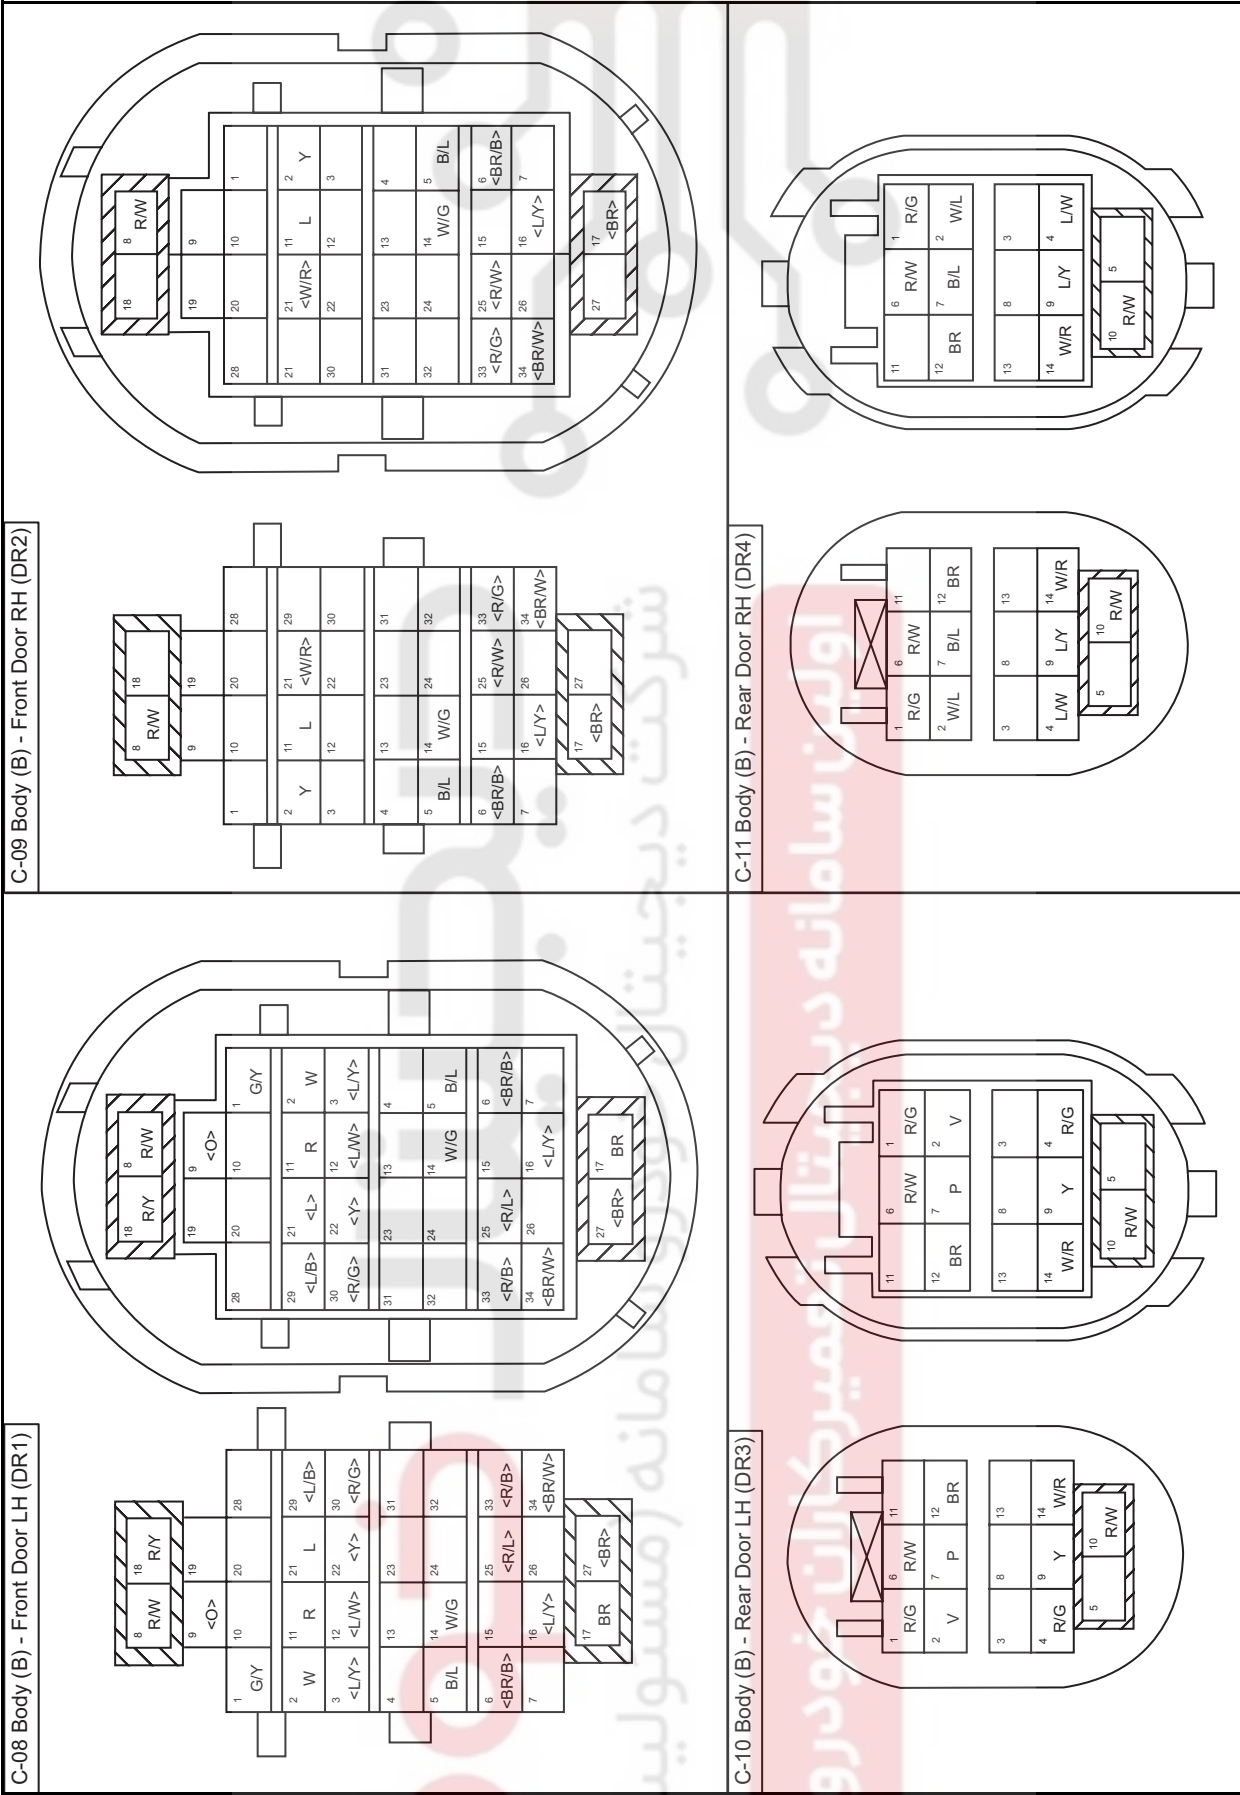

IN-C-4

Usual Connector List


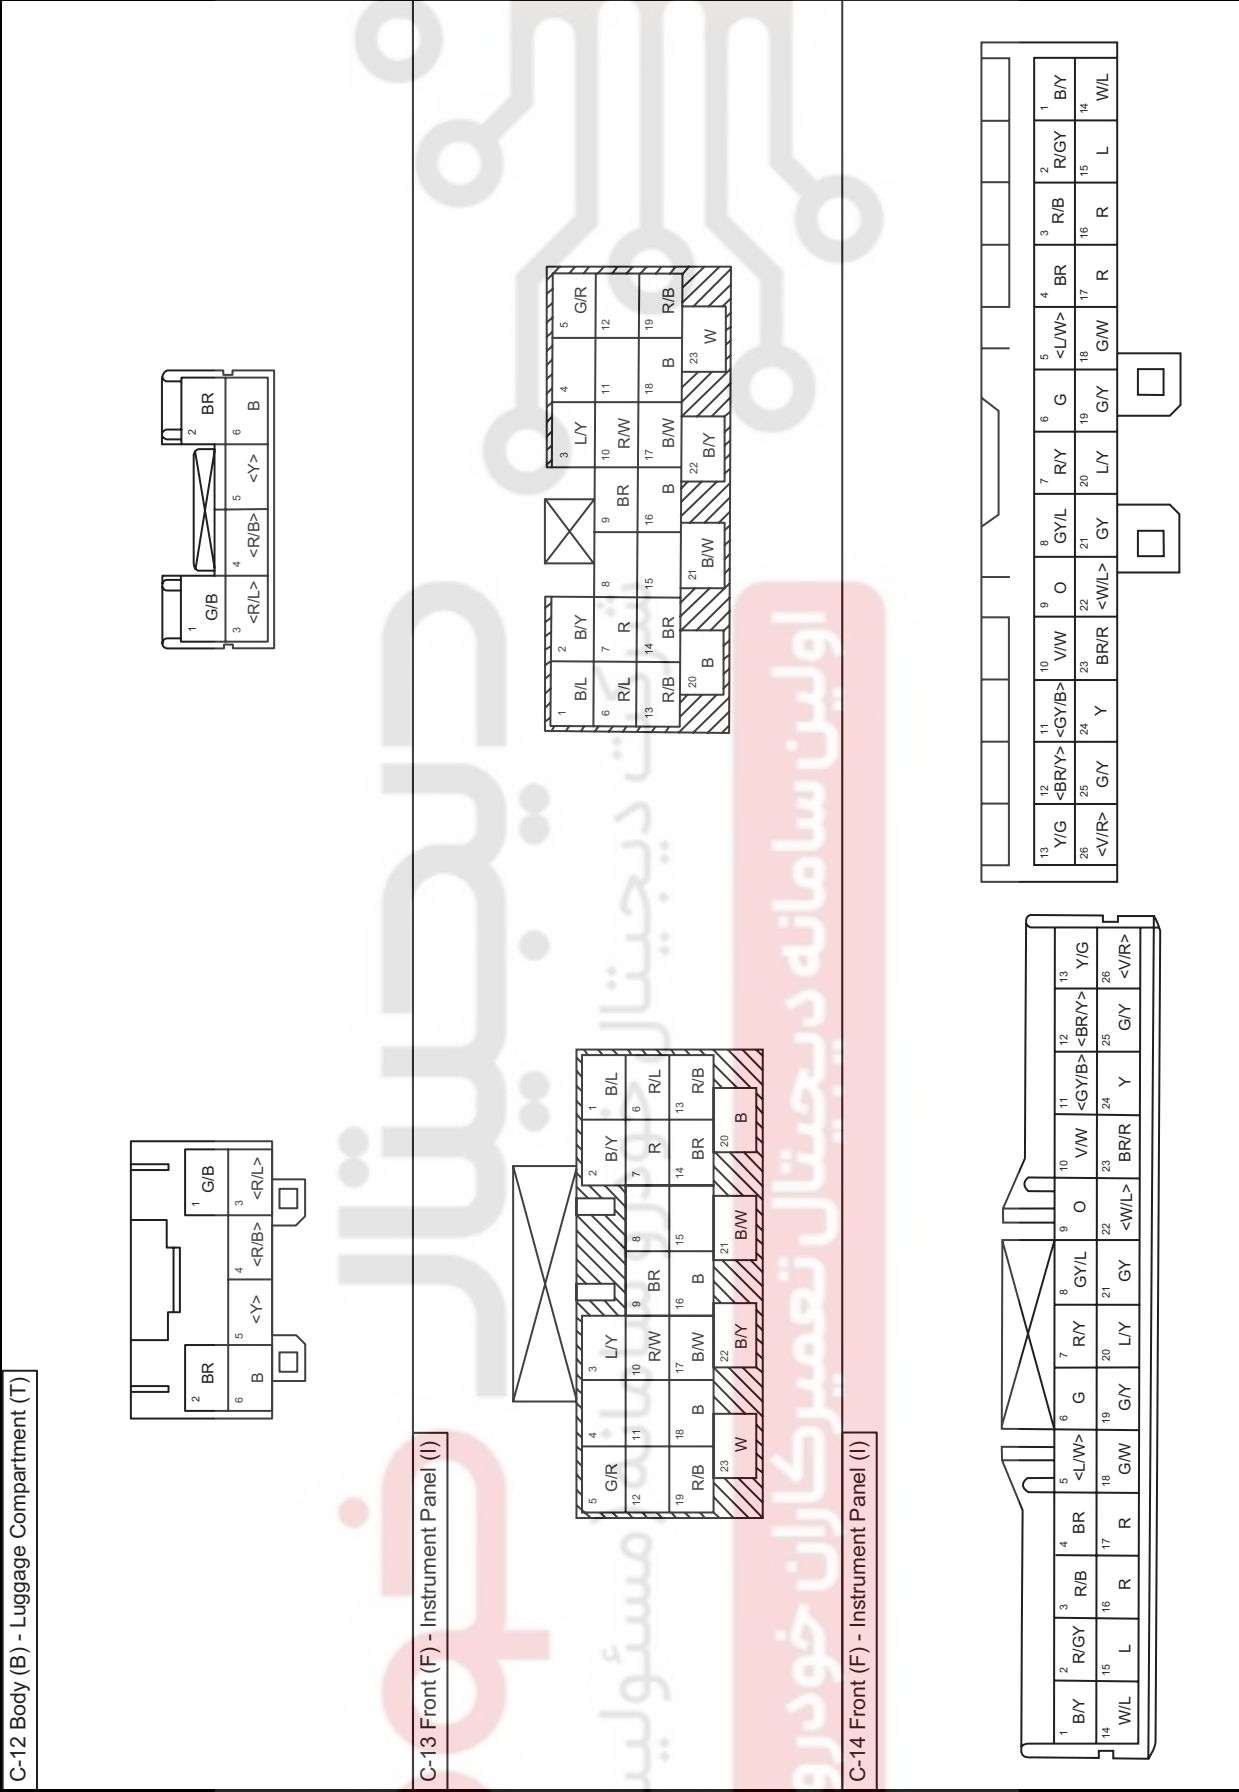


IN



IN-C-5

Usual Connector List



C-15 Front (F) - Instrument Panel (I)

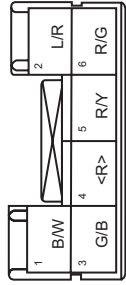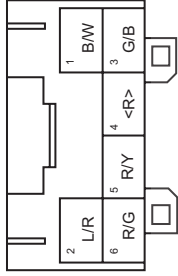

C-16 Front (F) - Engine (E)

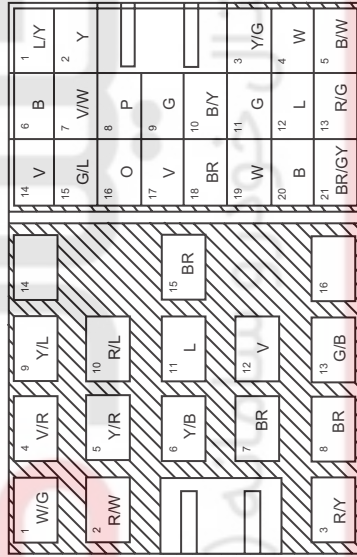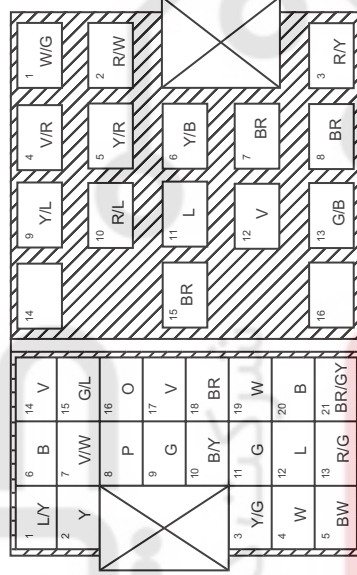



C-17 Instrument Panel (I) - Roof (RO)

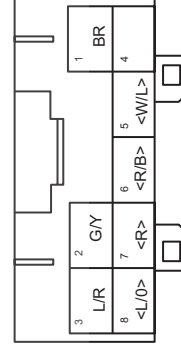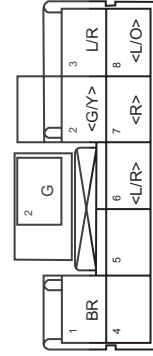

IN-C-6

Usual Connector List

C-18 Body (F) - Instrument Panel (I)

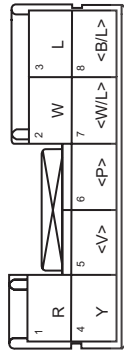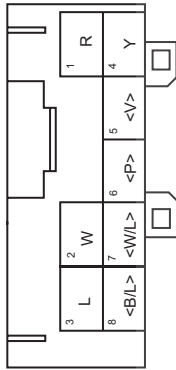

خودرو دیجیتال


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران


IN

IN-G-01

Ground Contact Point

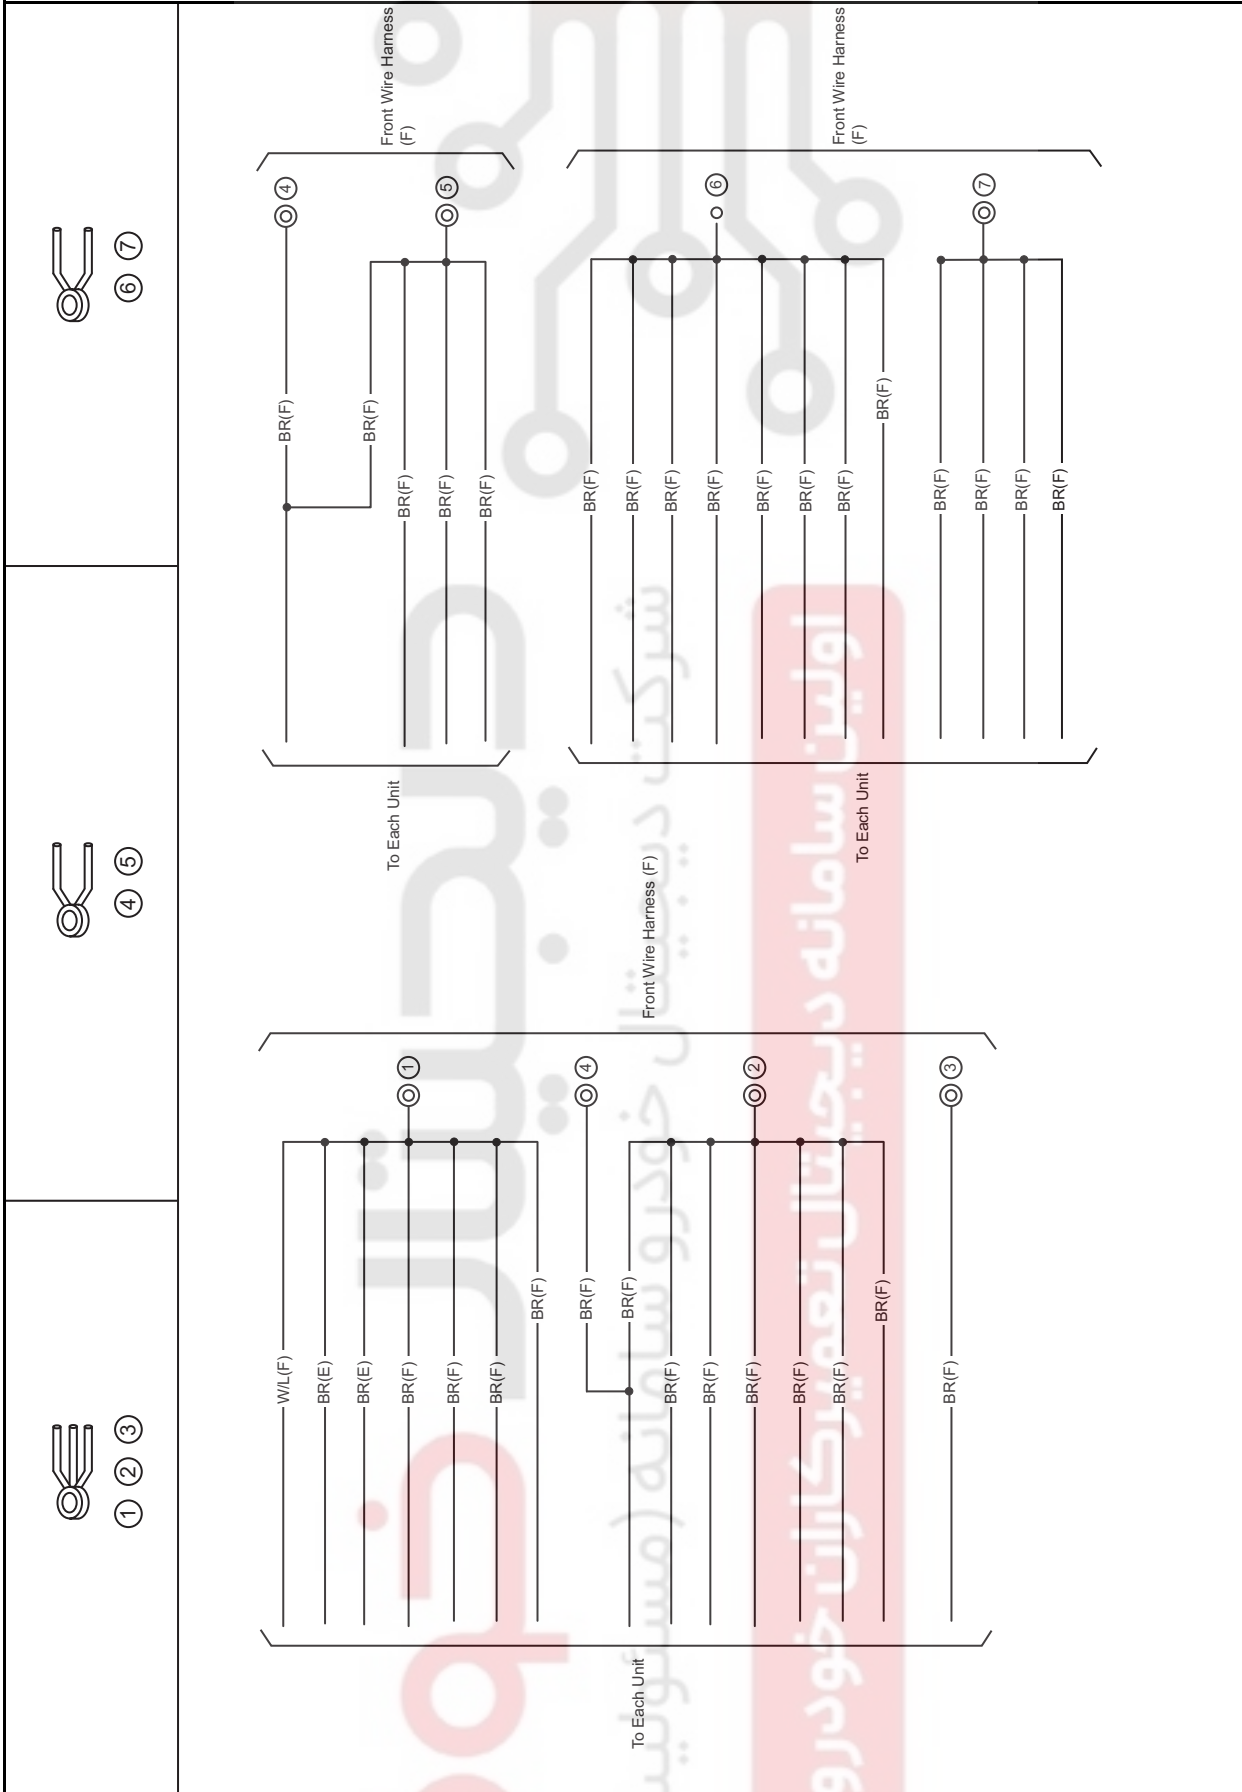

Wire Harness Symbol: (F) (E) (I) (B)

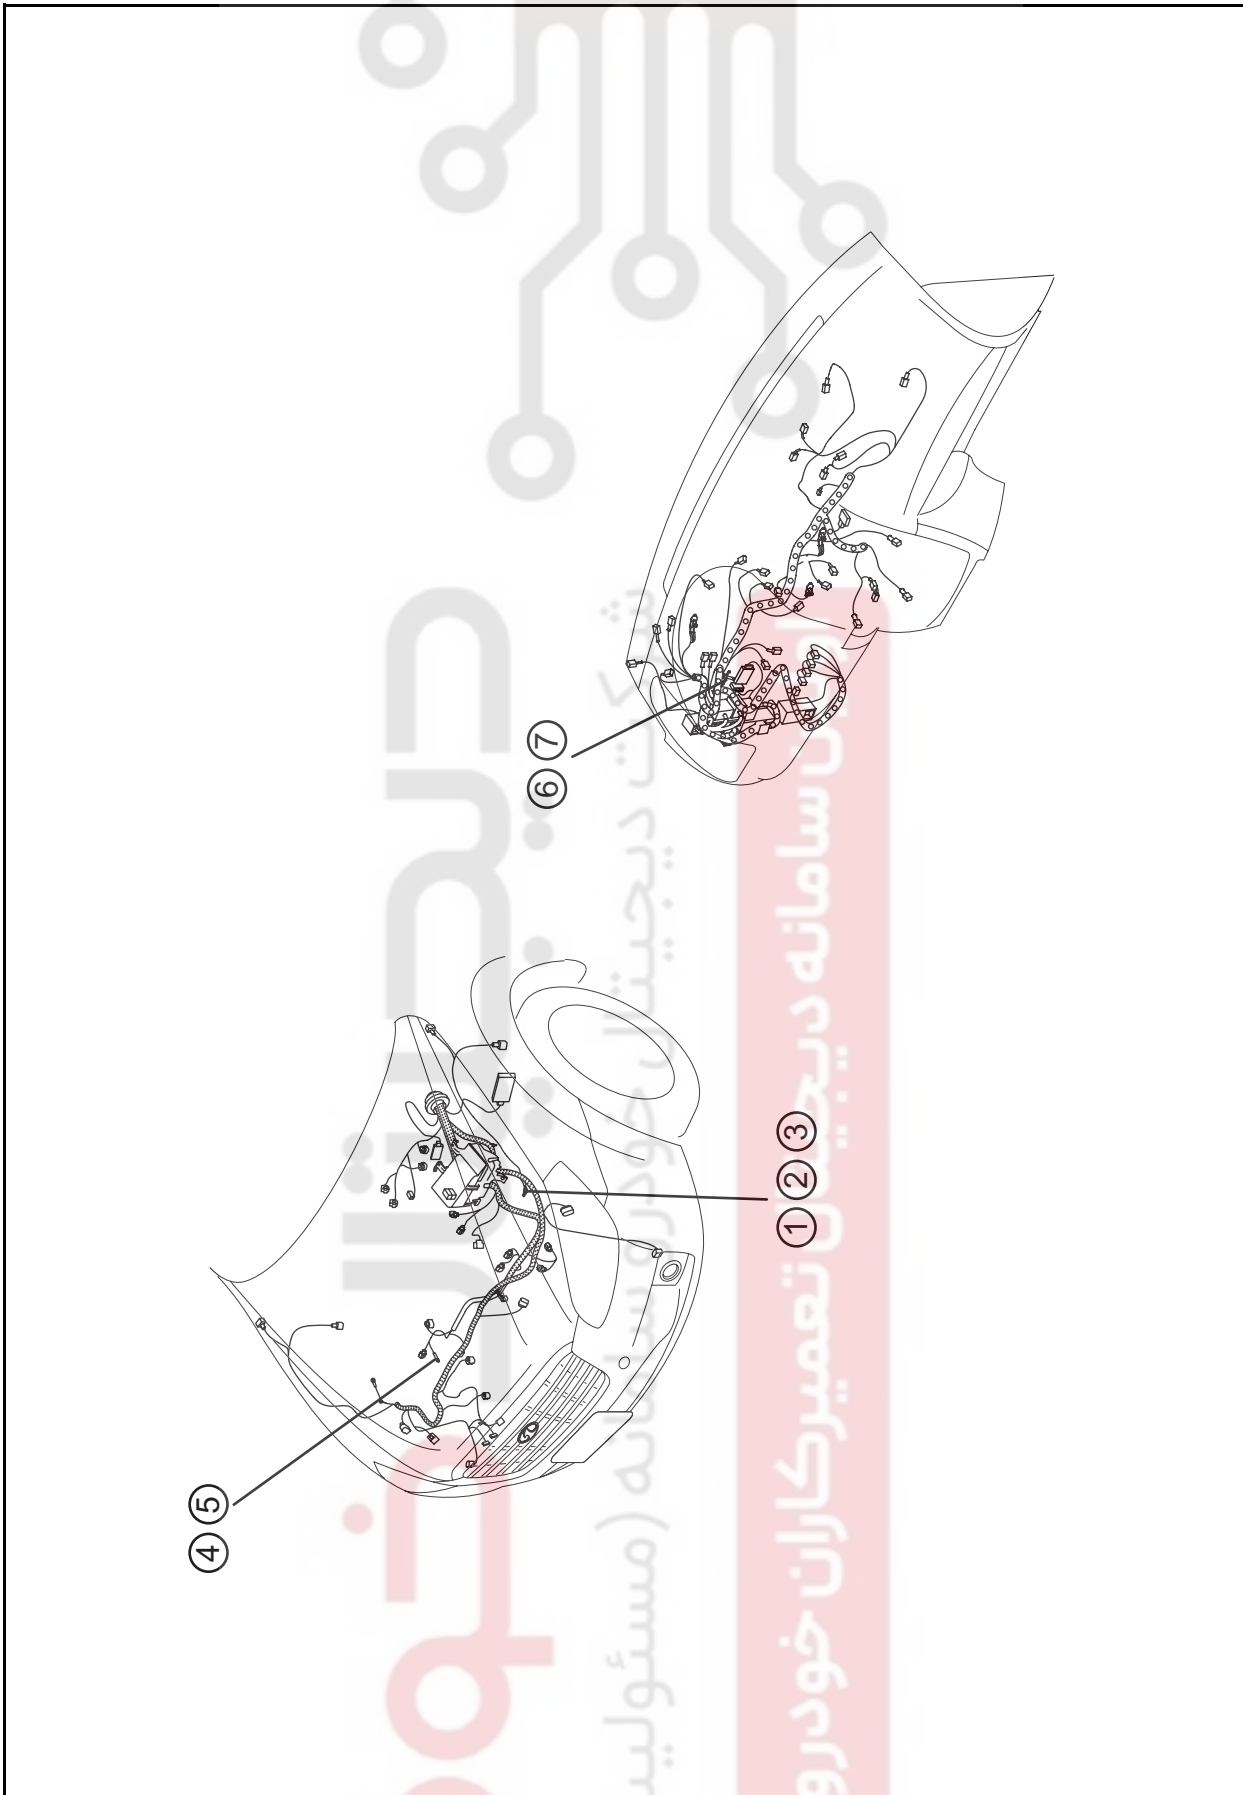


IN-G-1


IN

IN-G-02

Ground Contact Point

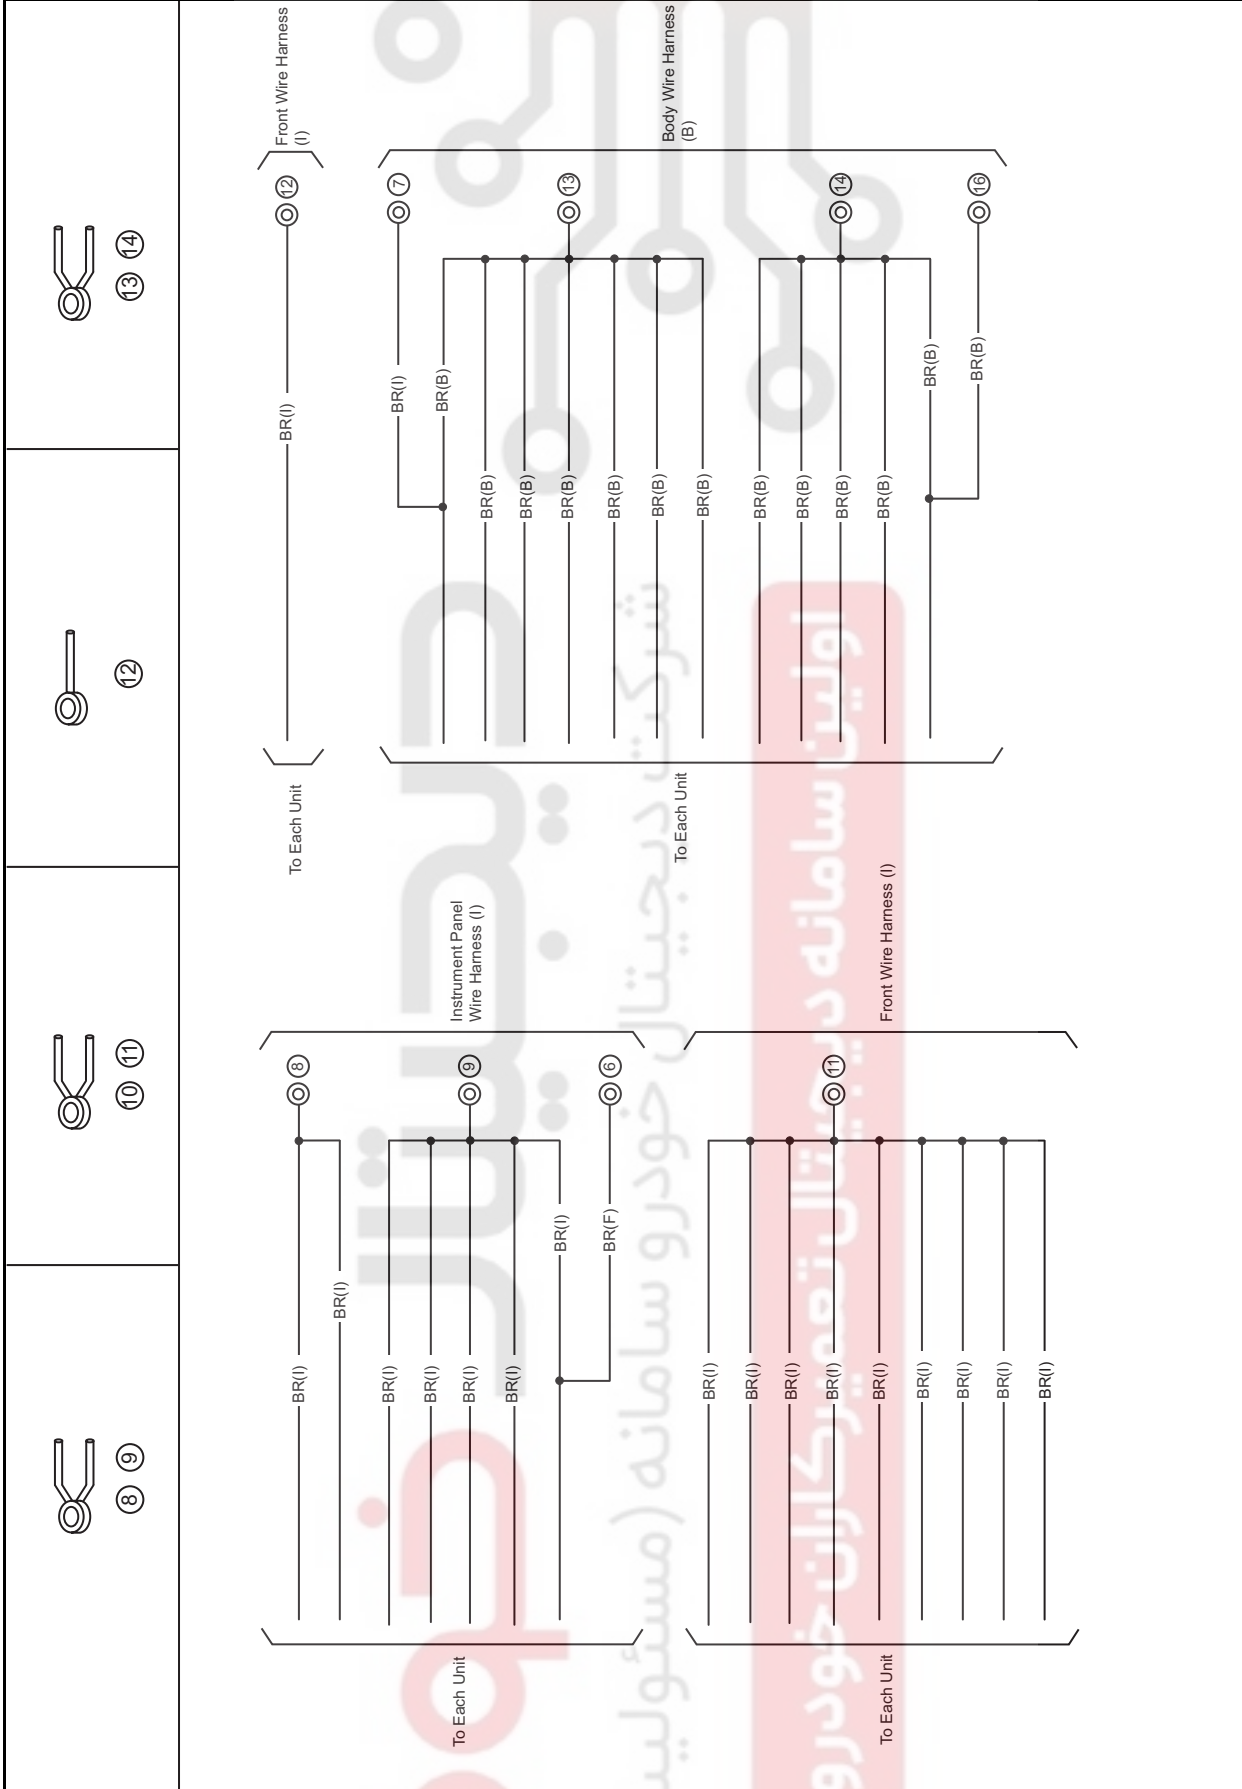

Wire Harness Symbol: (F) (E) (I) (B)

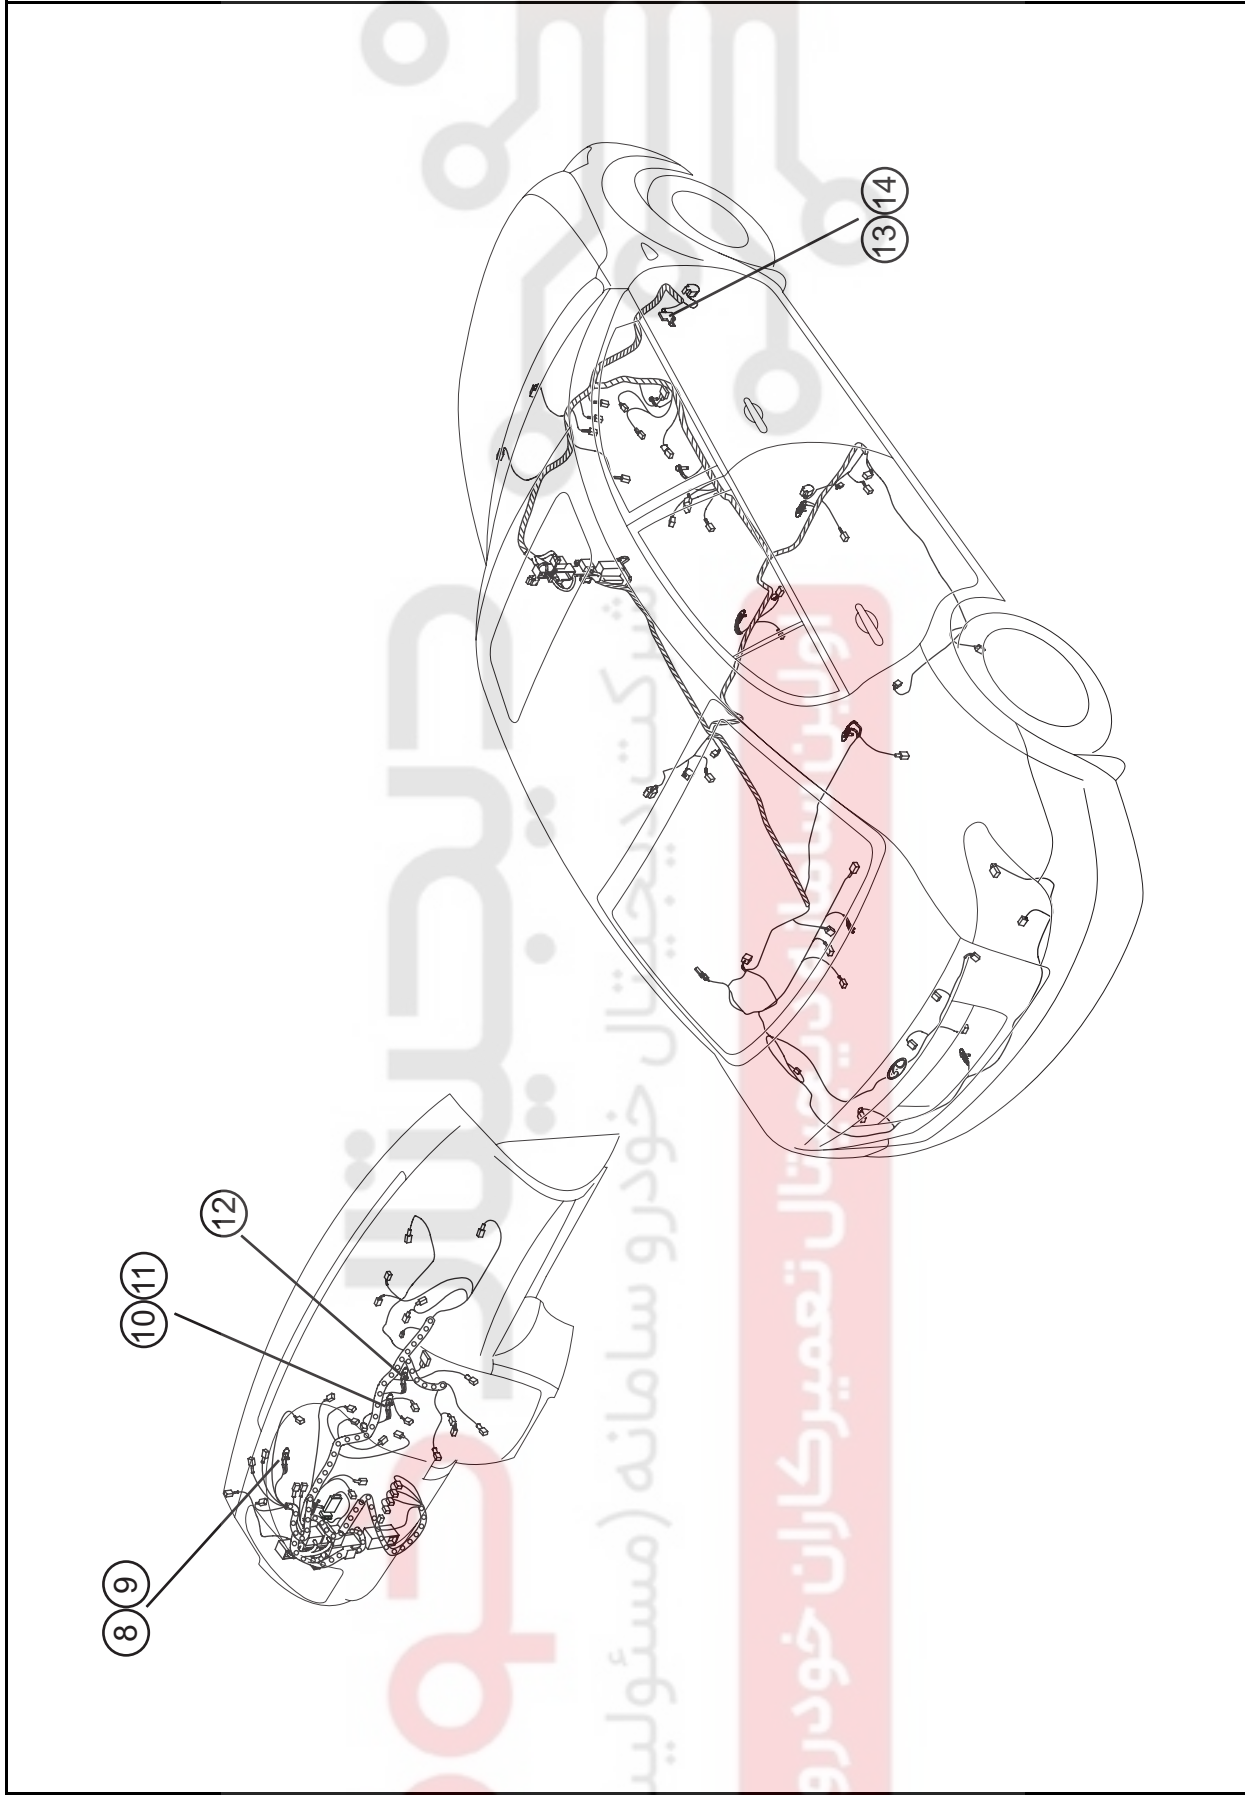


IN-G-2

IN

IN-G-03


Ground Contact Point

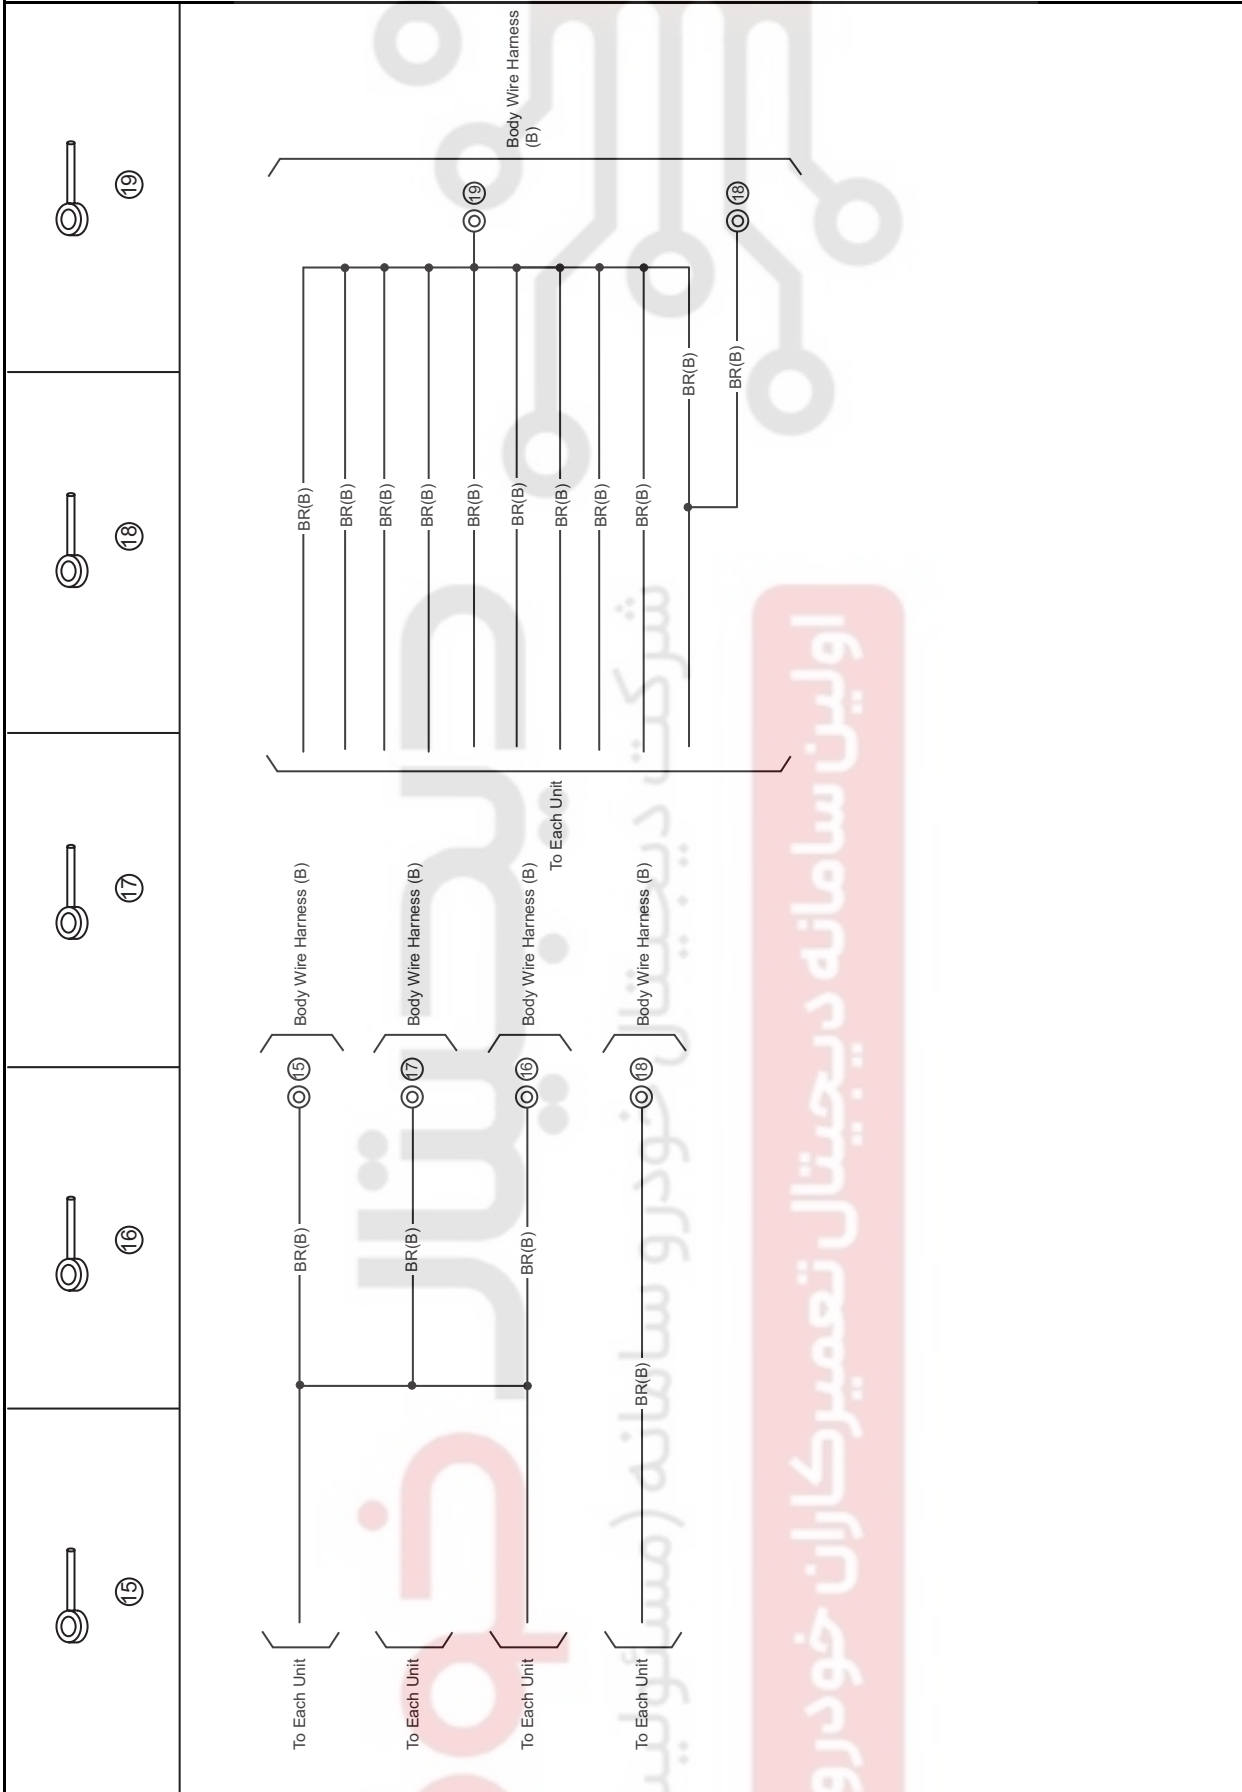

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

Wire Harness Symbol: (F) (E) (I) (B)

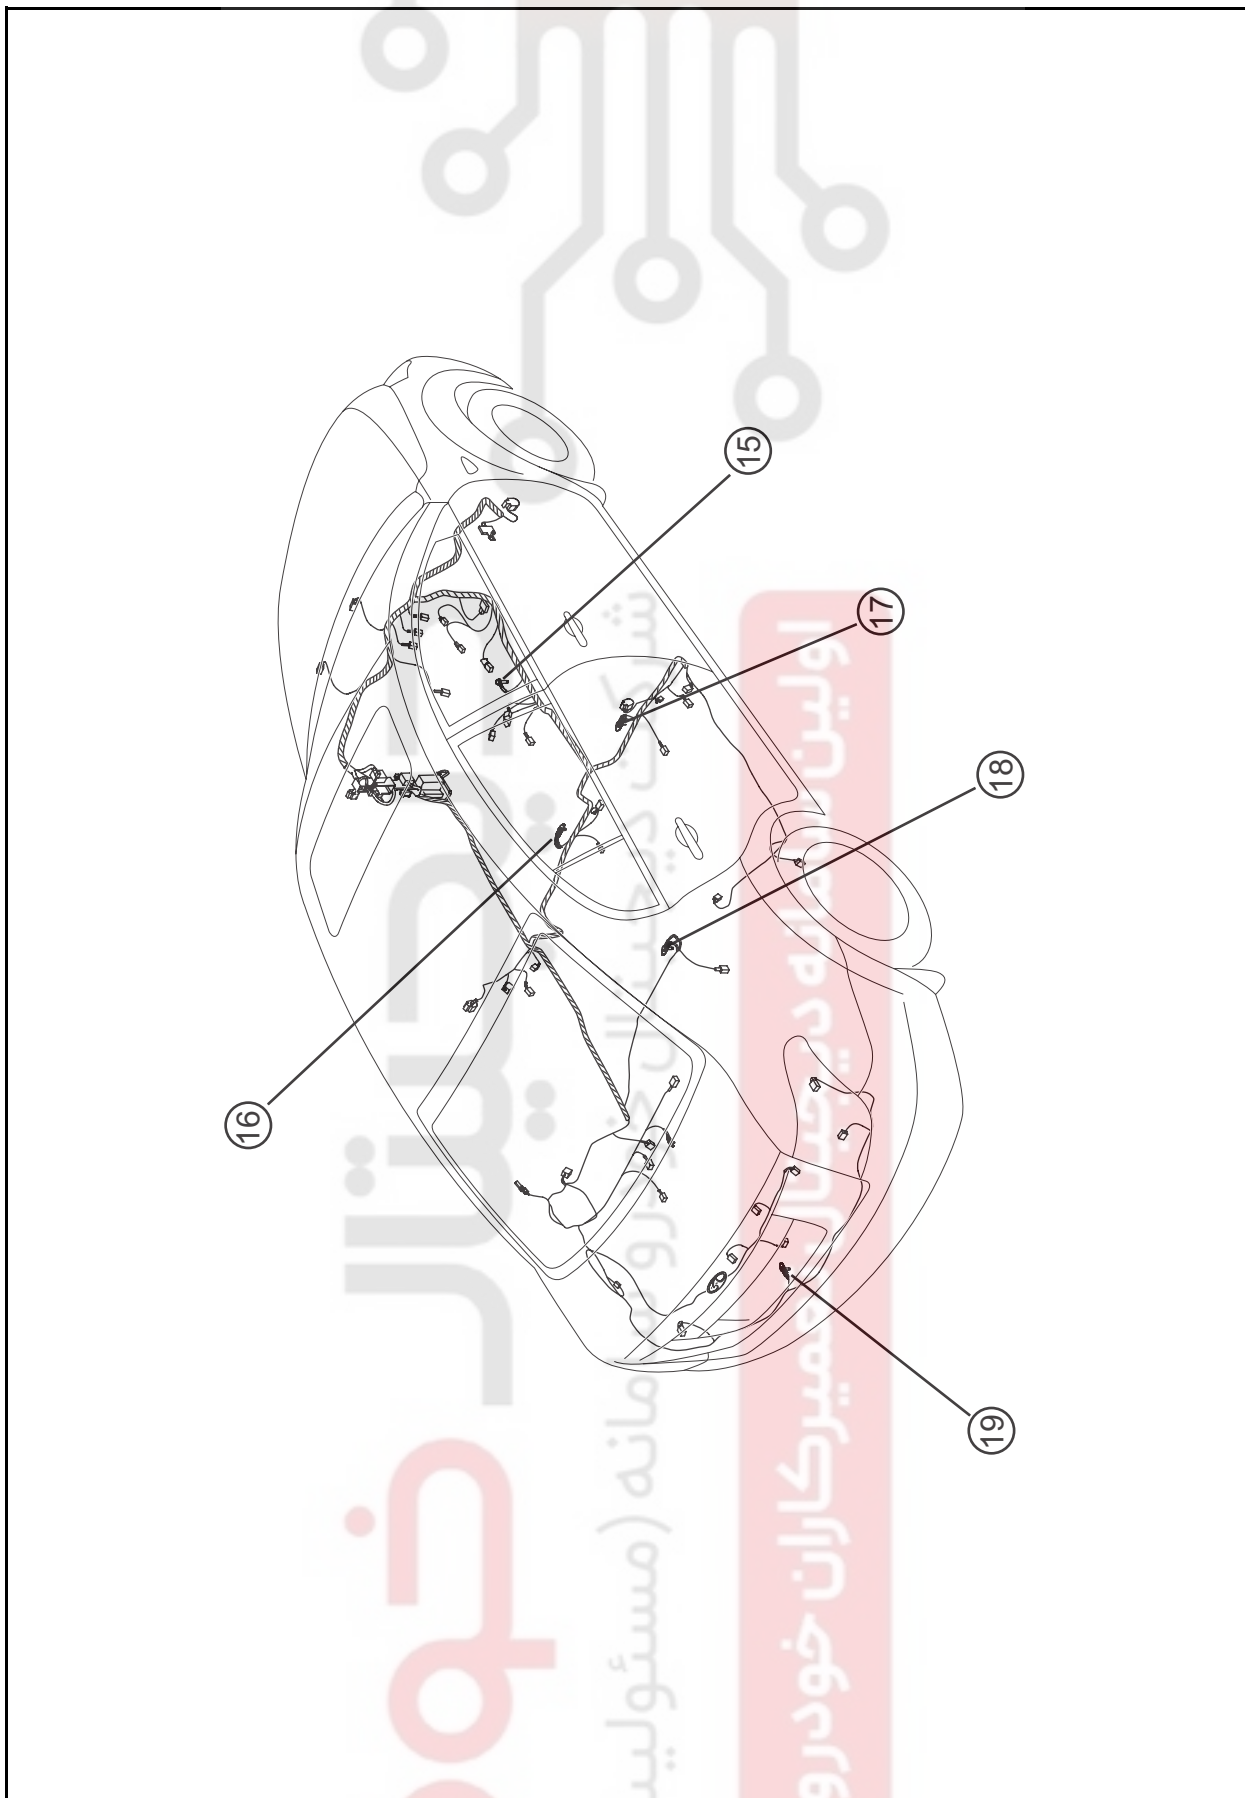


IN-G-3


IN

IN-D-1

Data Link Connector

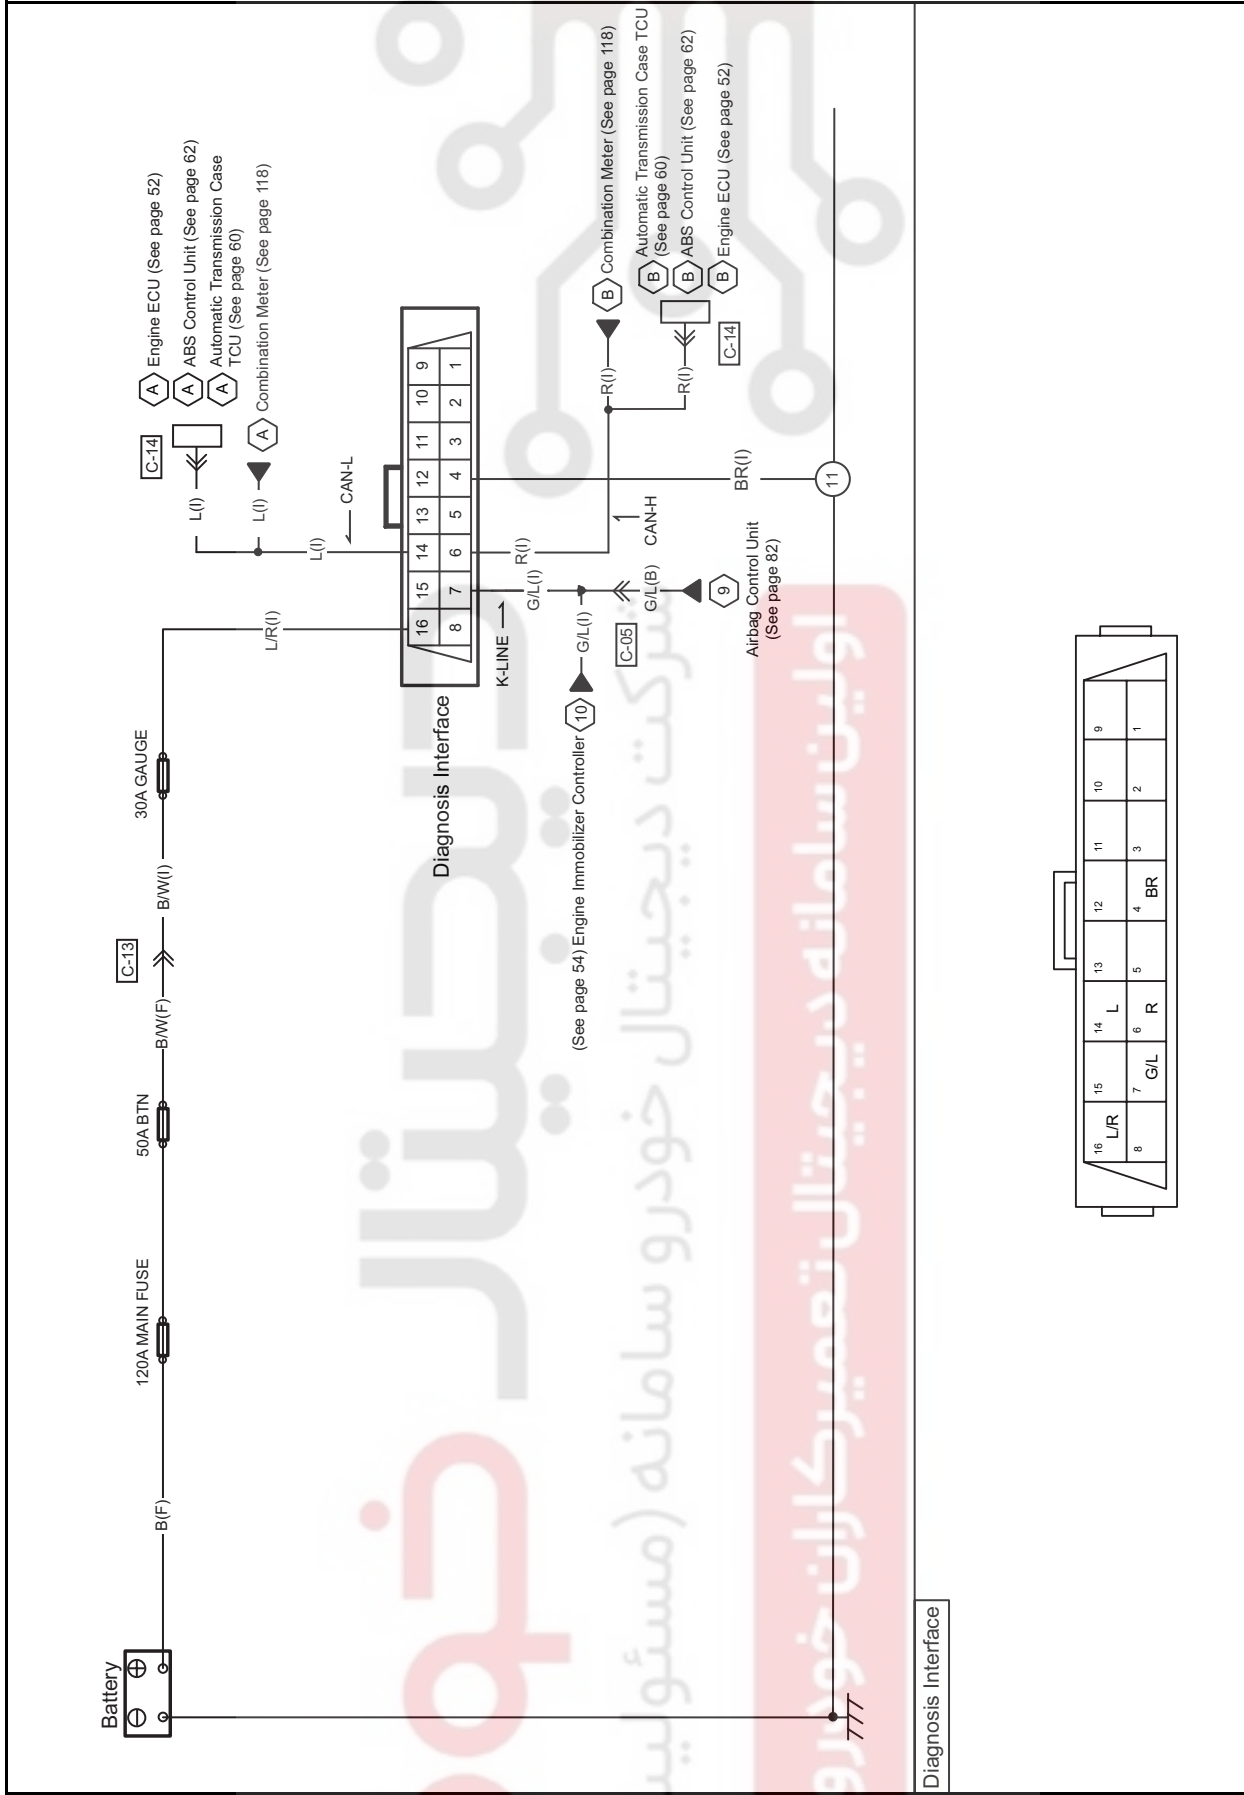

Wire Harness Symbol: (F) (E) (I) (B)

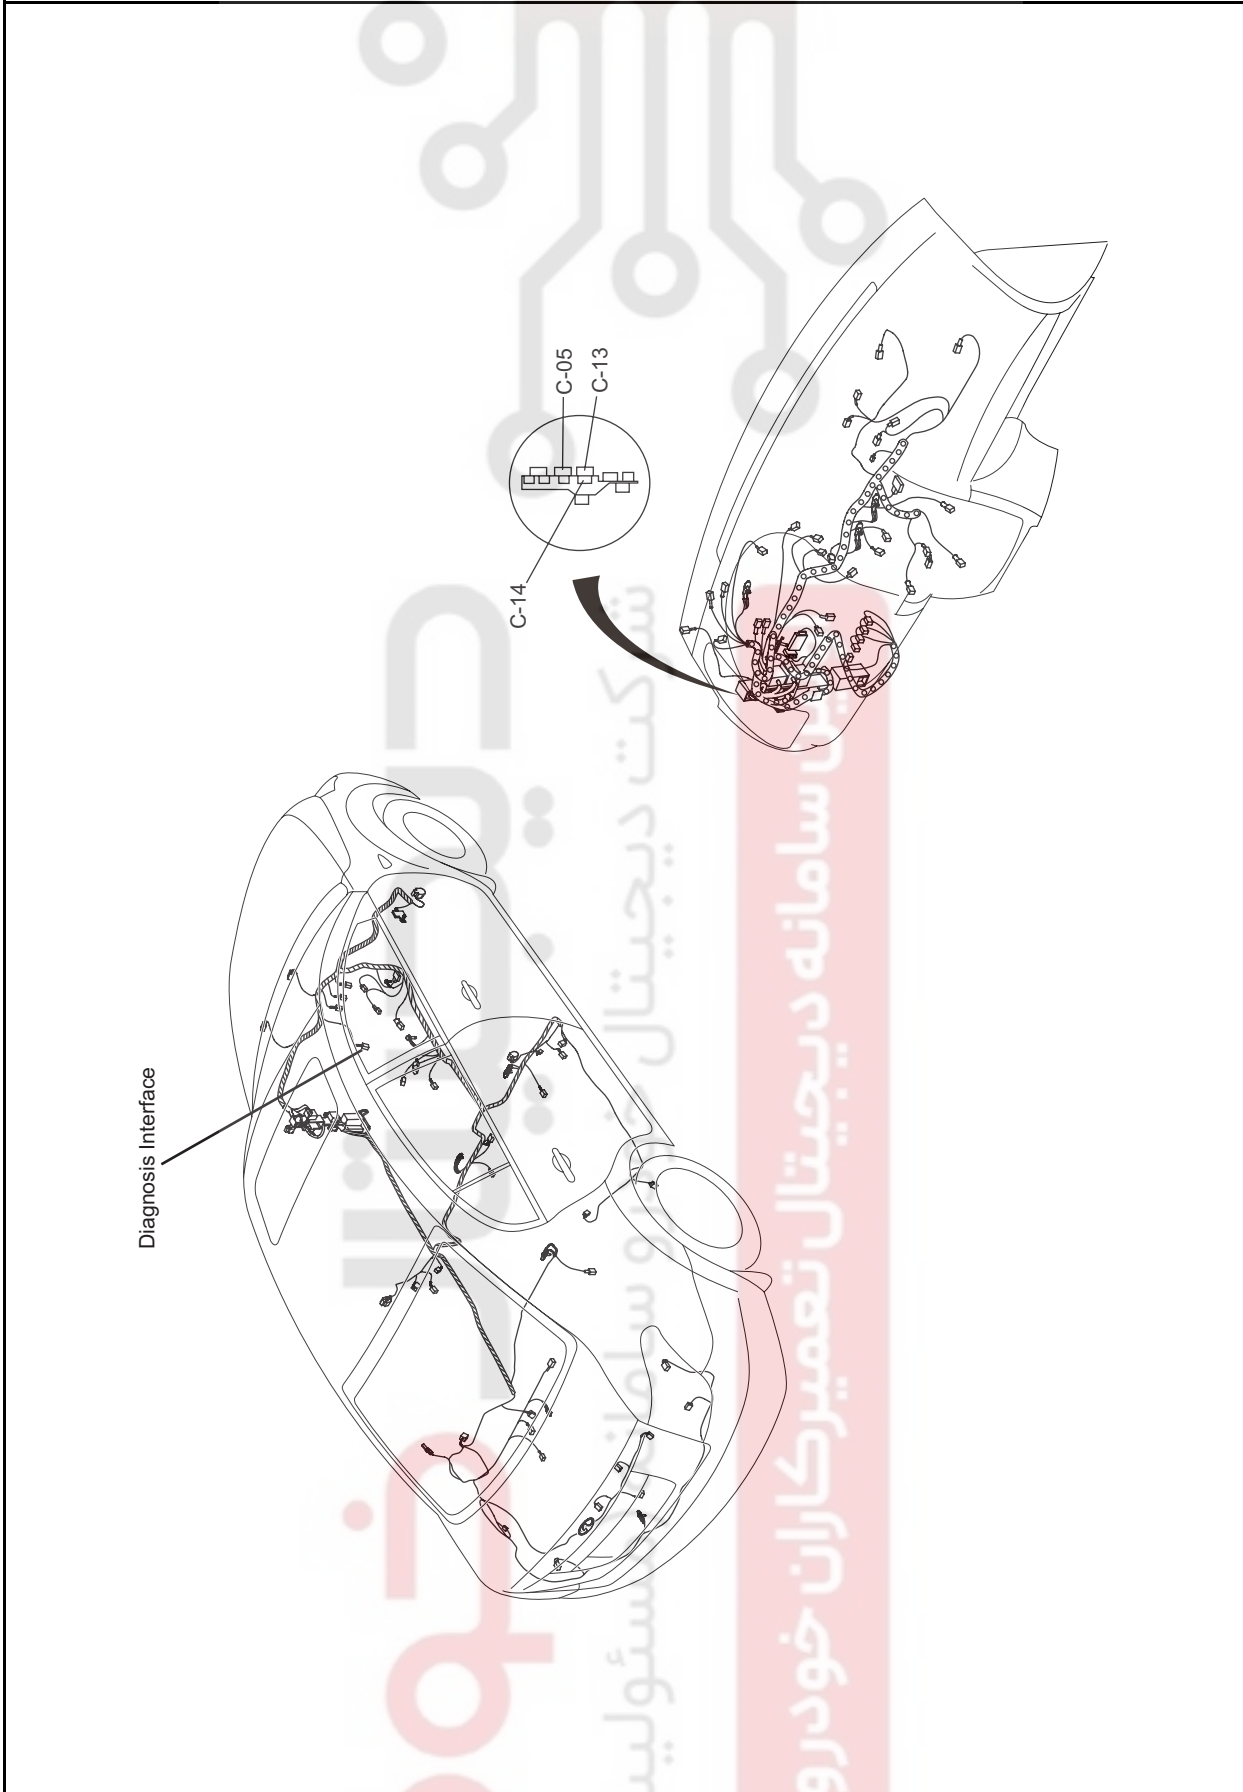


IN-D-1

IN


IN General D Data Link Connector

EG-CO-1

Cooling System

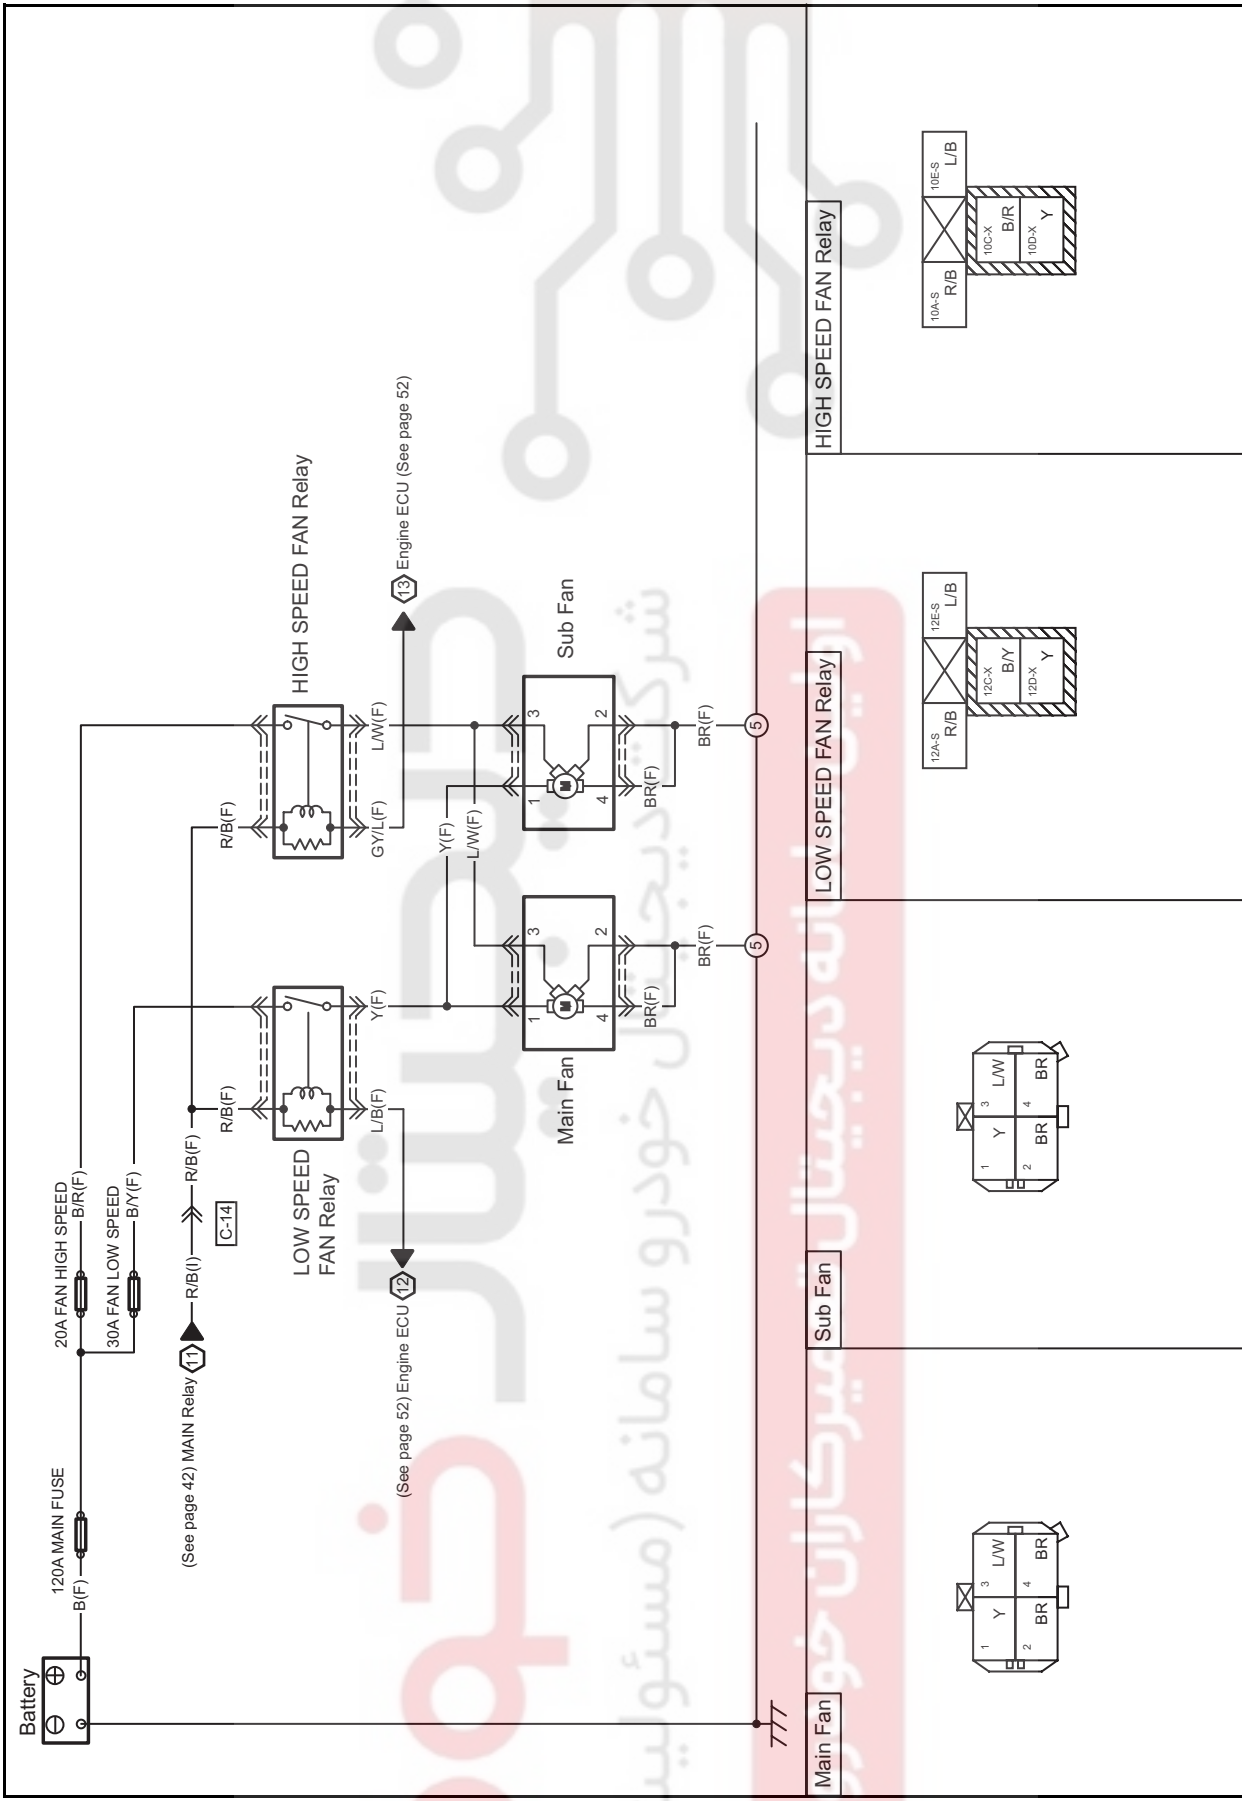

Wire Harness Symbol: (F) (E) (I) (B)

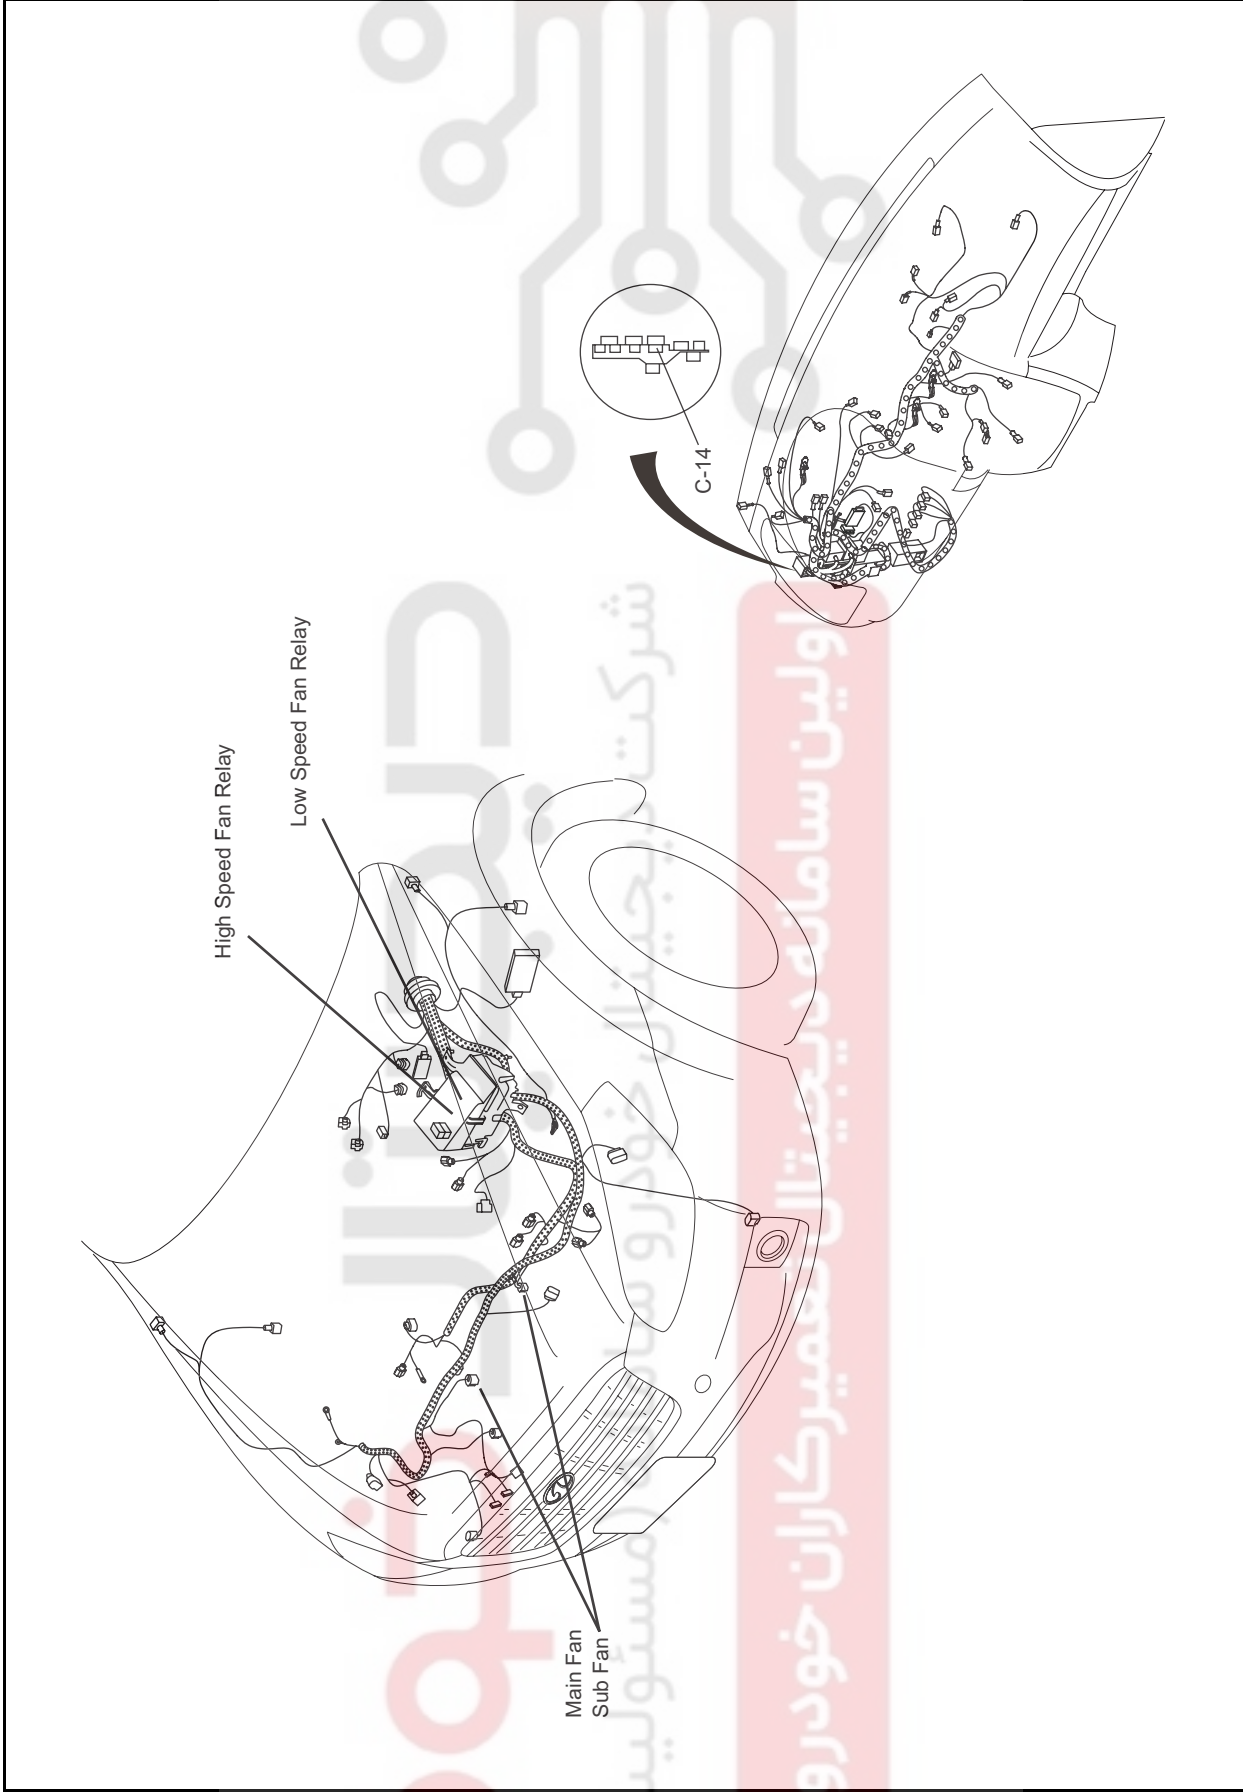


EG-CO-1

EG

EG Engine CO Cooling System

EG-FU-1


Fuel System

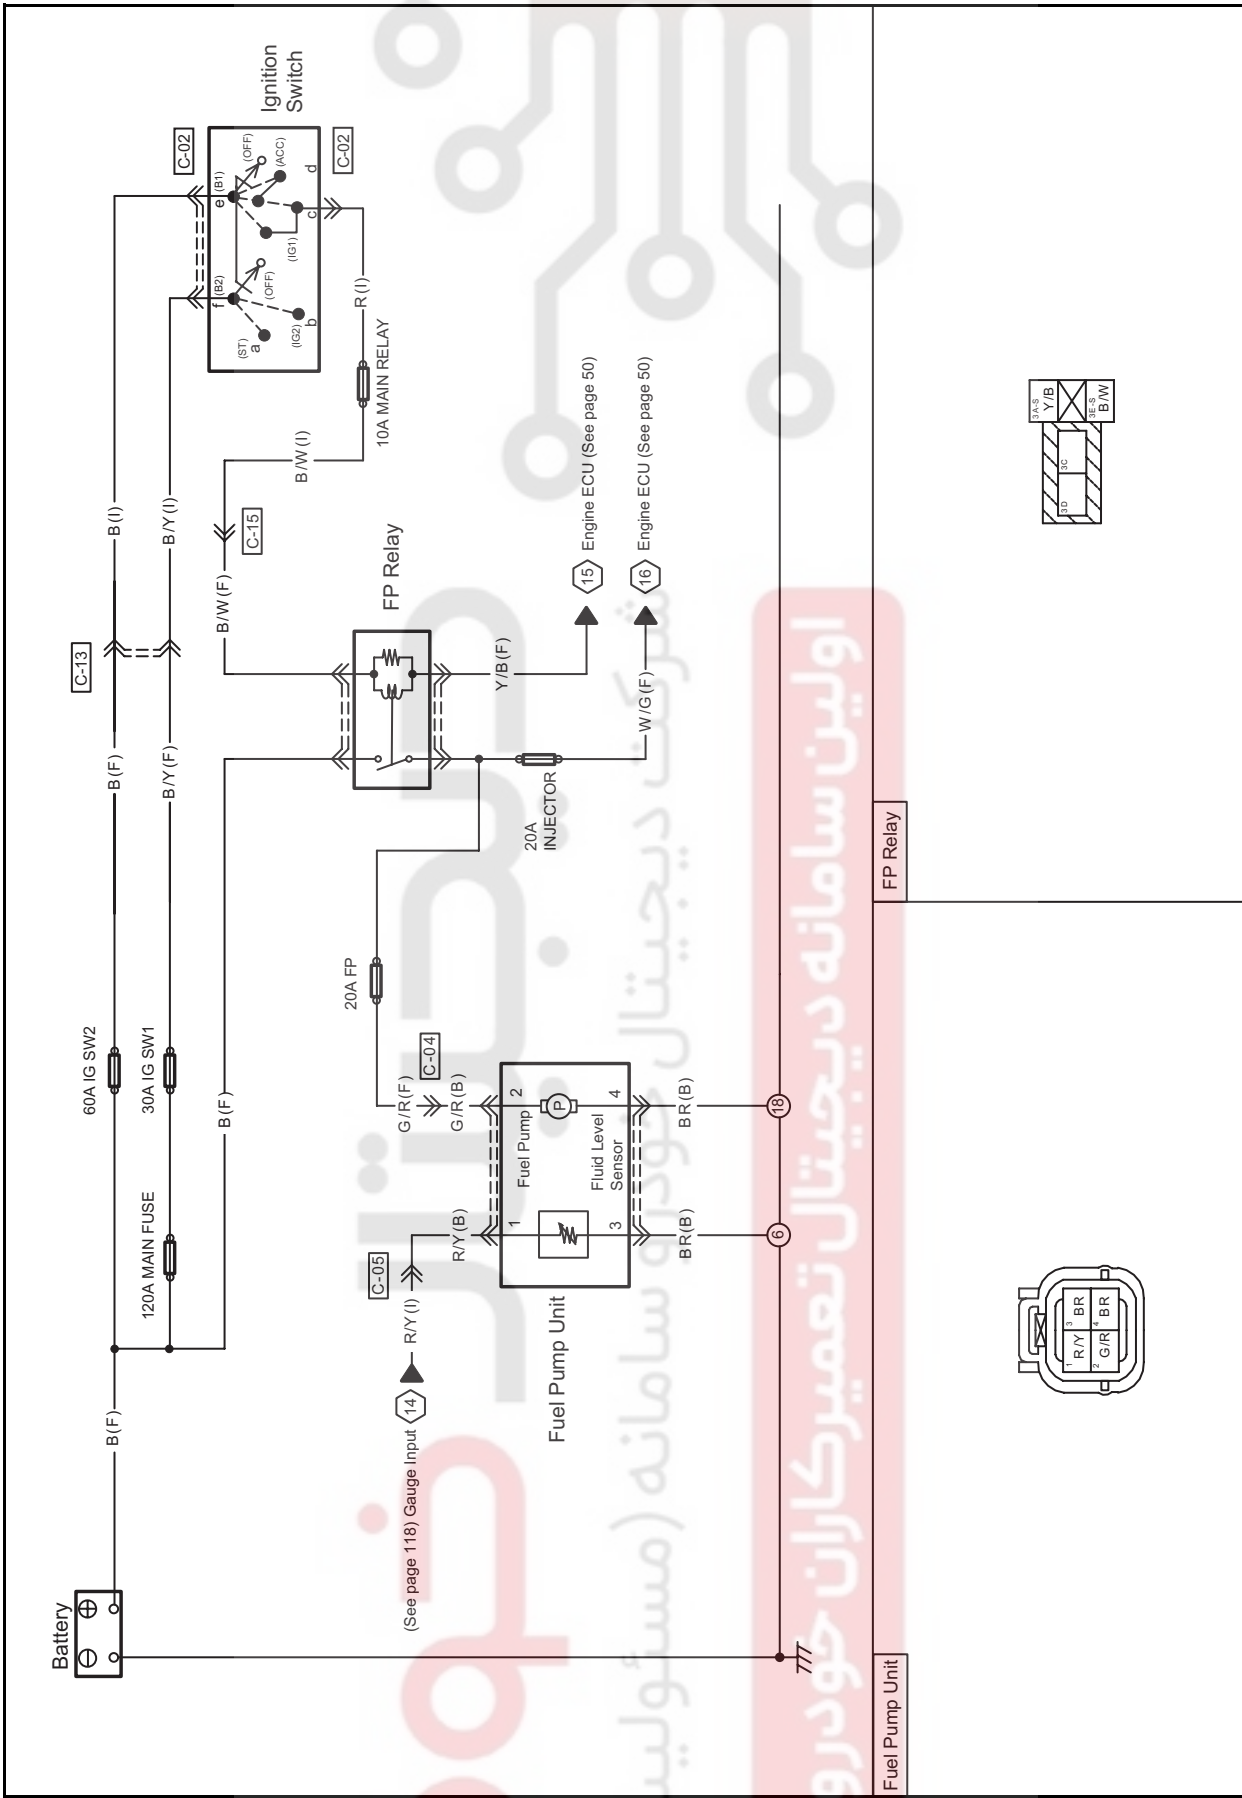

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

شرکت دیجیتال خودرو سامانه (مستولیت محدود)

Wire Harness Symbol: (F) (E) (I) (B)

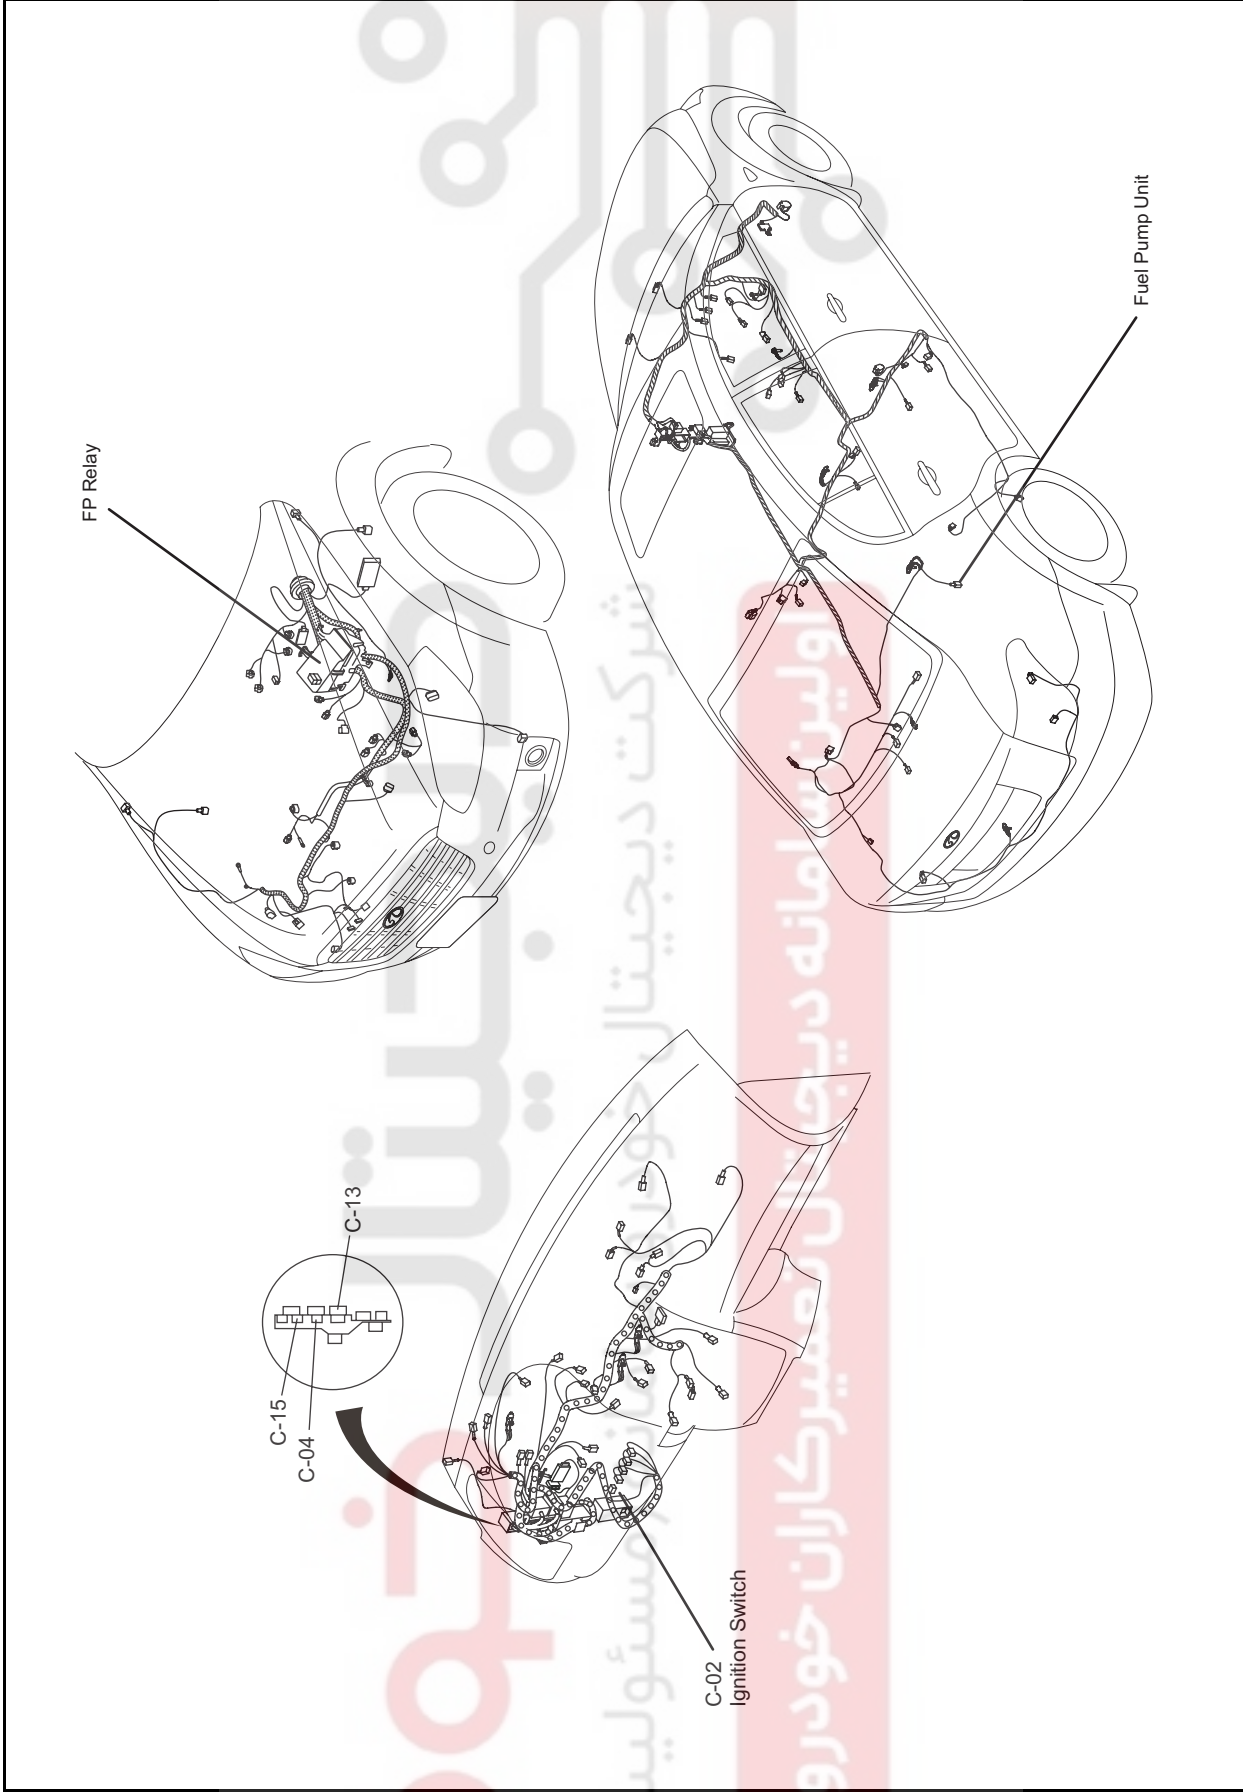


EG-FU-1

EG


EG Engine CS Fuel System

EG-CH-1

Charging System

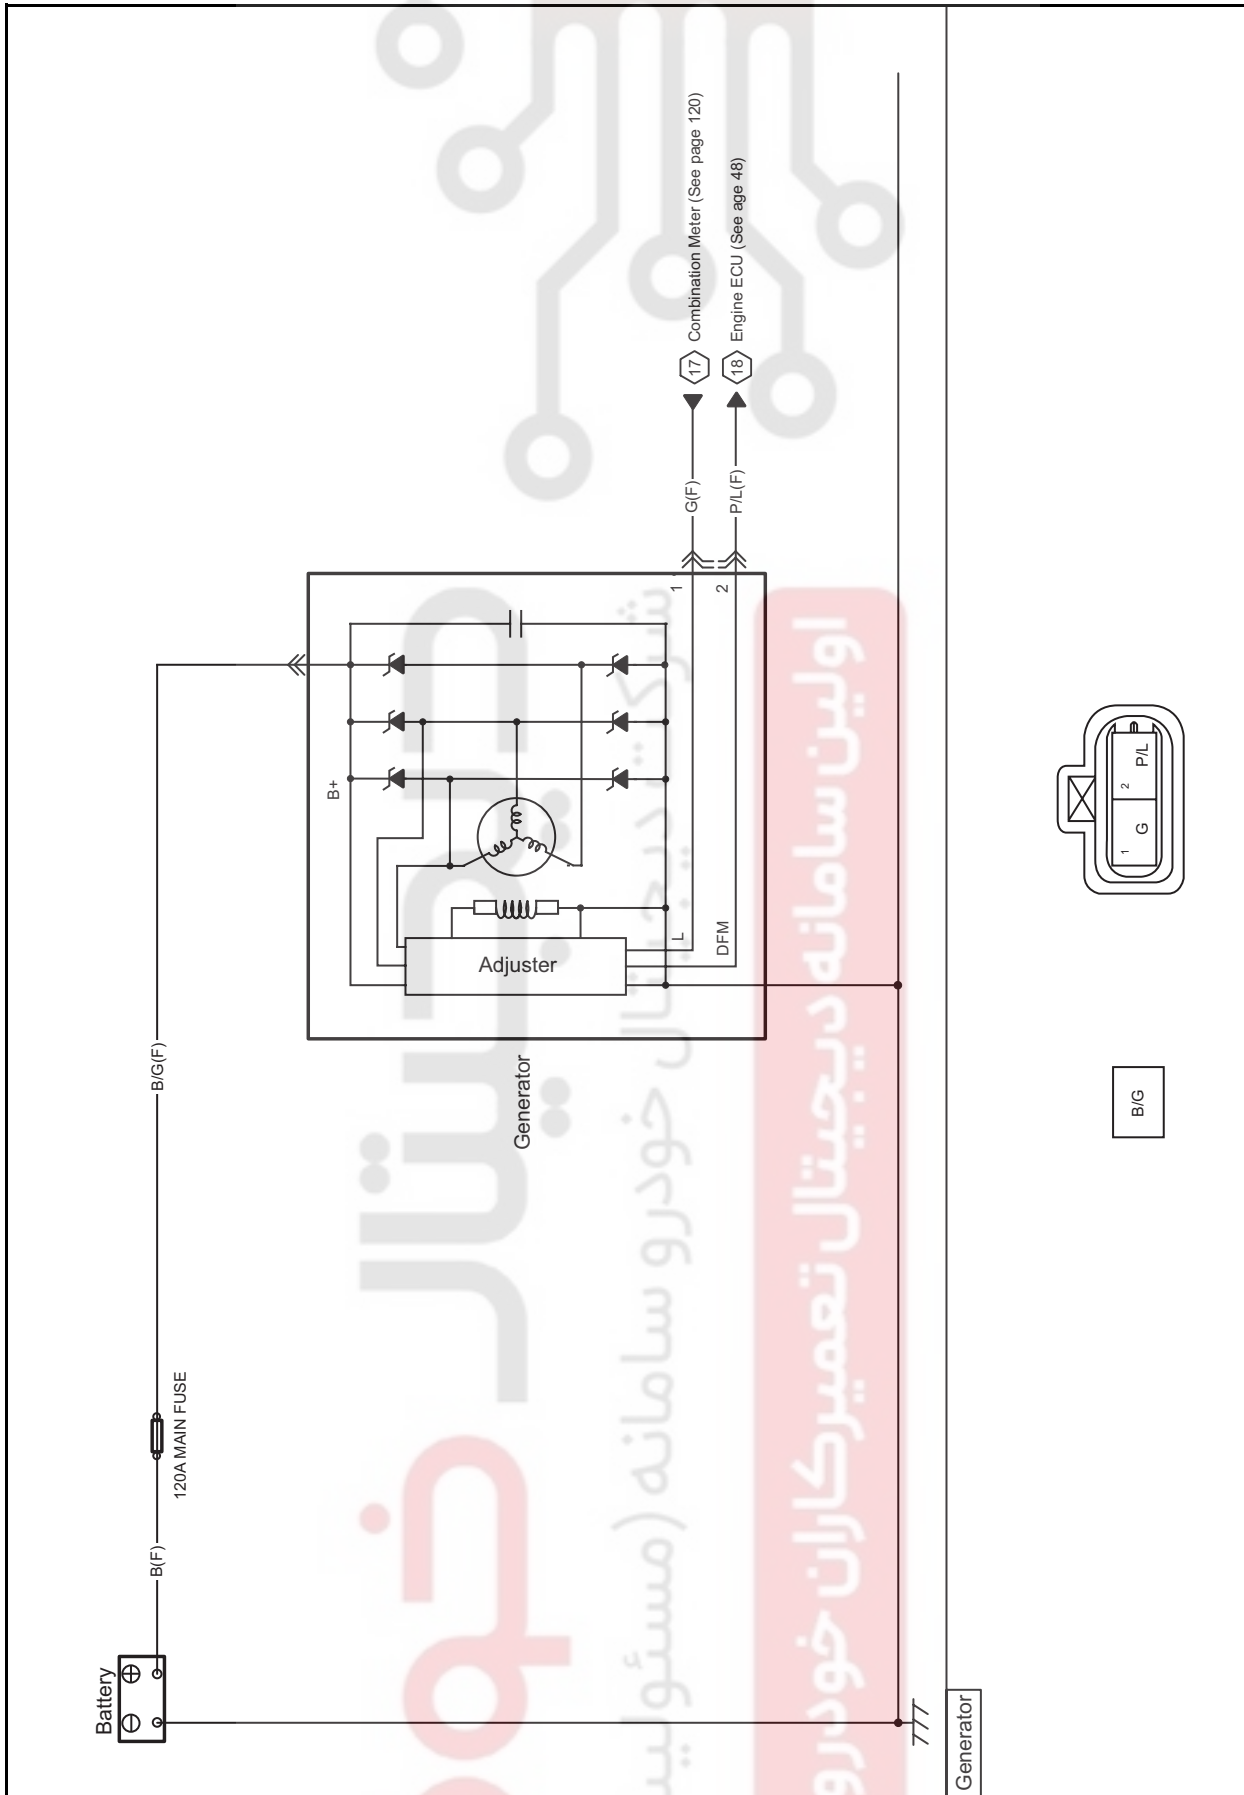

Wire Harness Symbol: (F) (E) (I) (B)

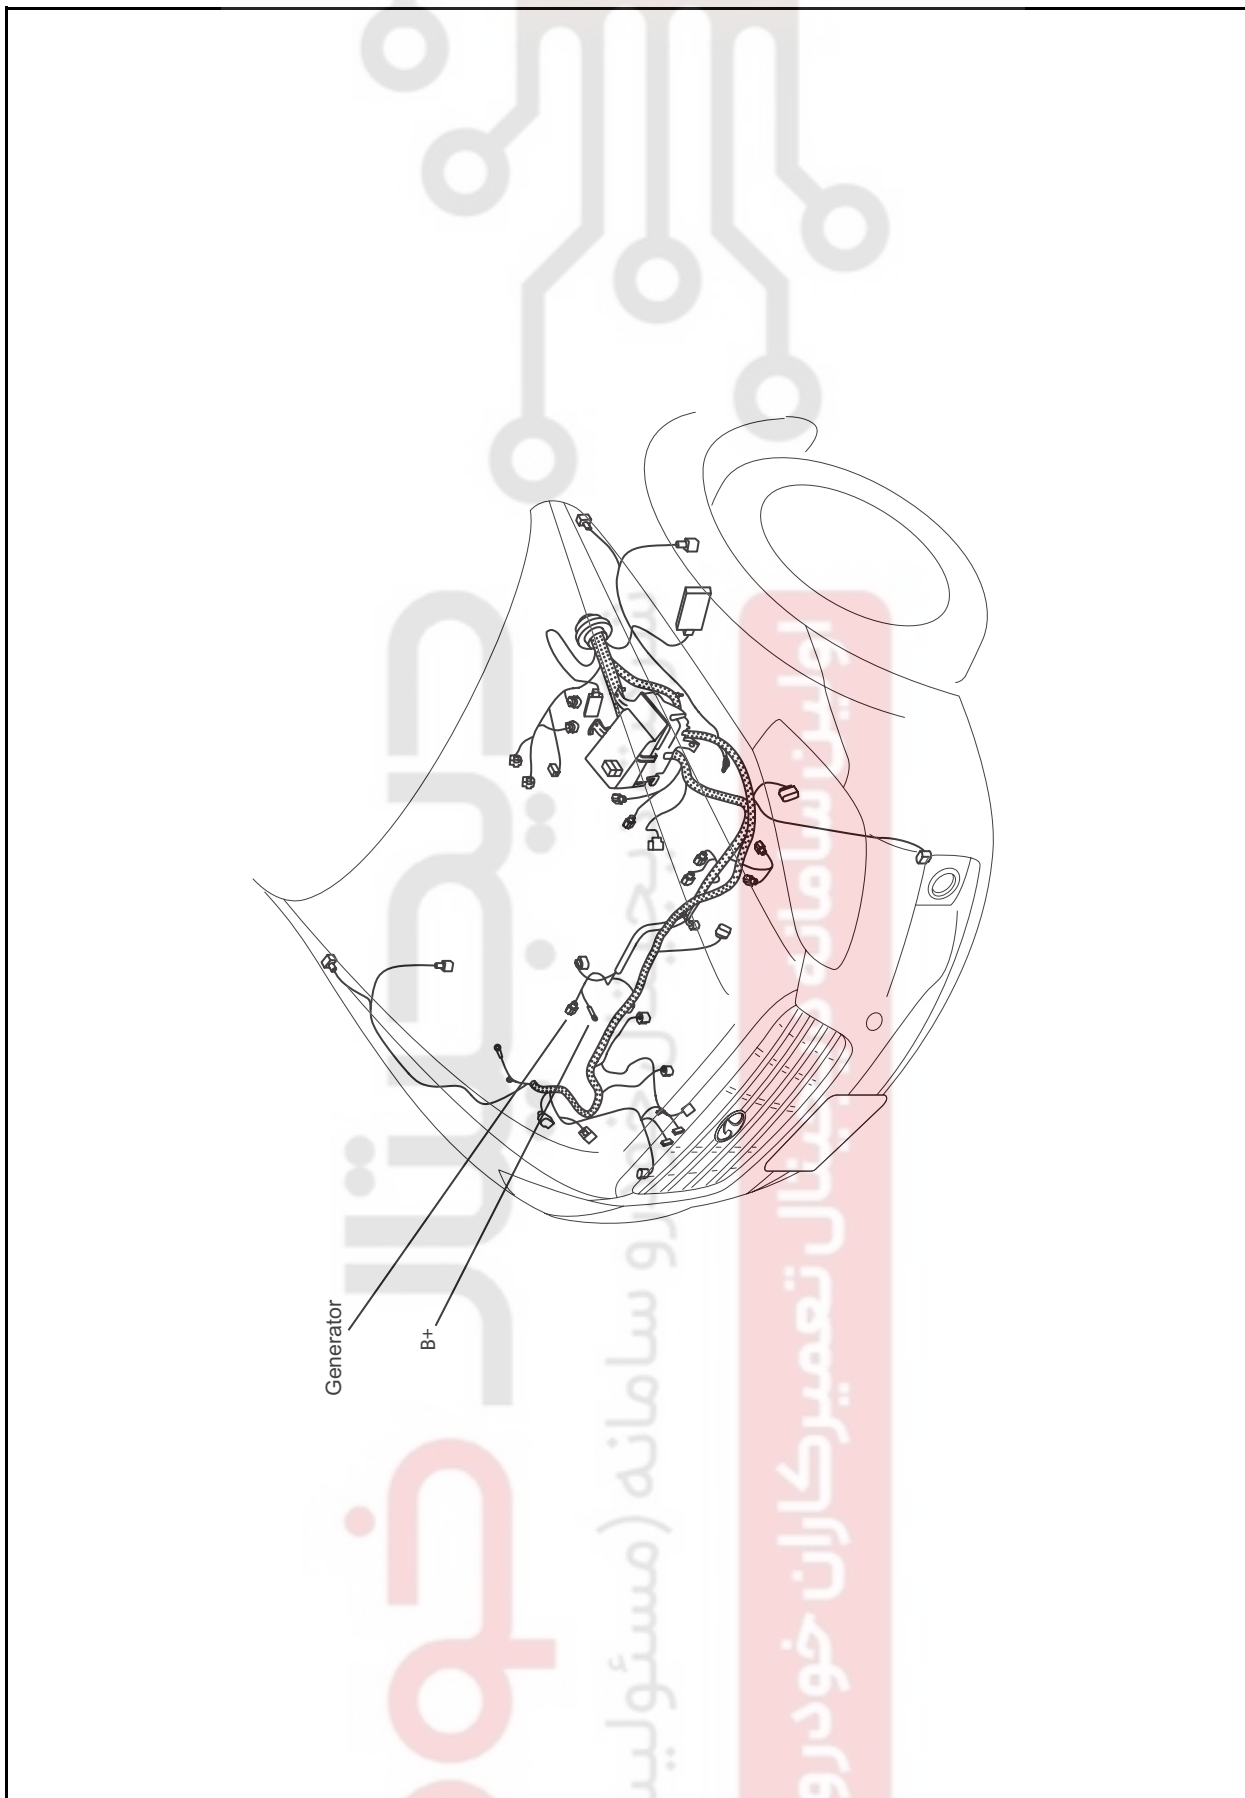


EG-CH-1

EG


EG Engine CH Generator

EG-ST-1

Starting System

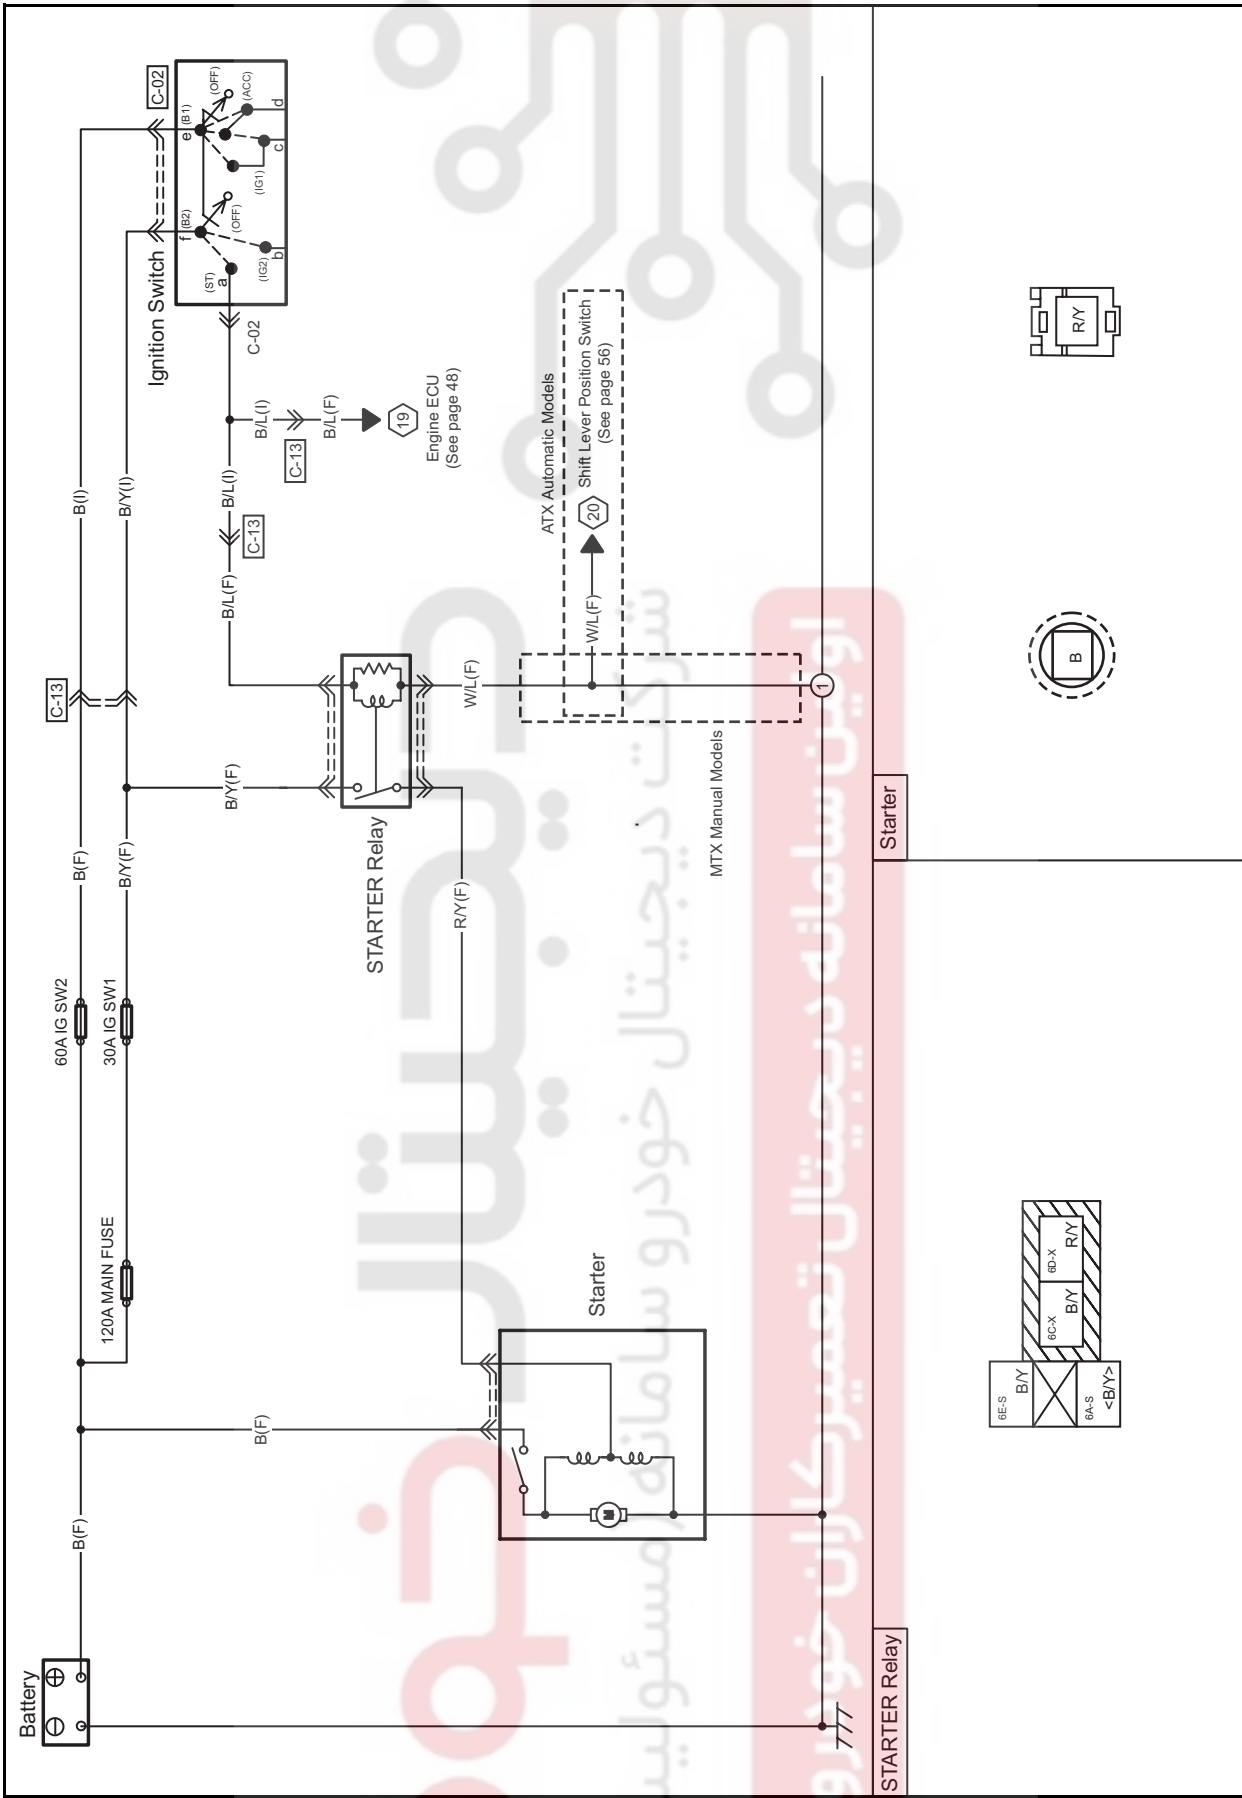

Wire Harness Symbol: (F) (E) (I) (B)

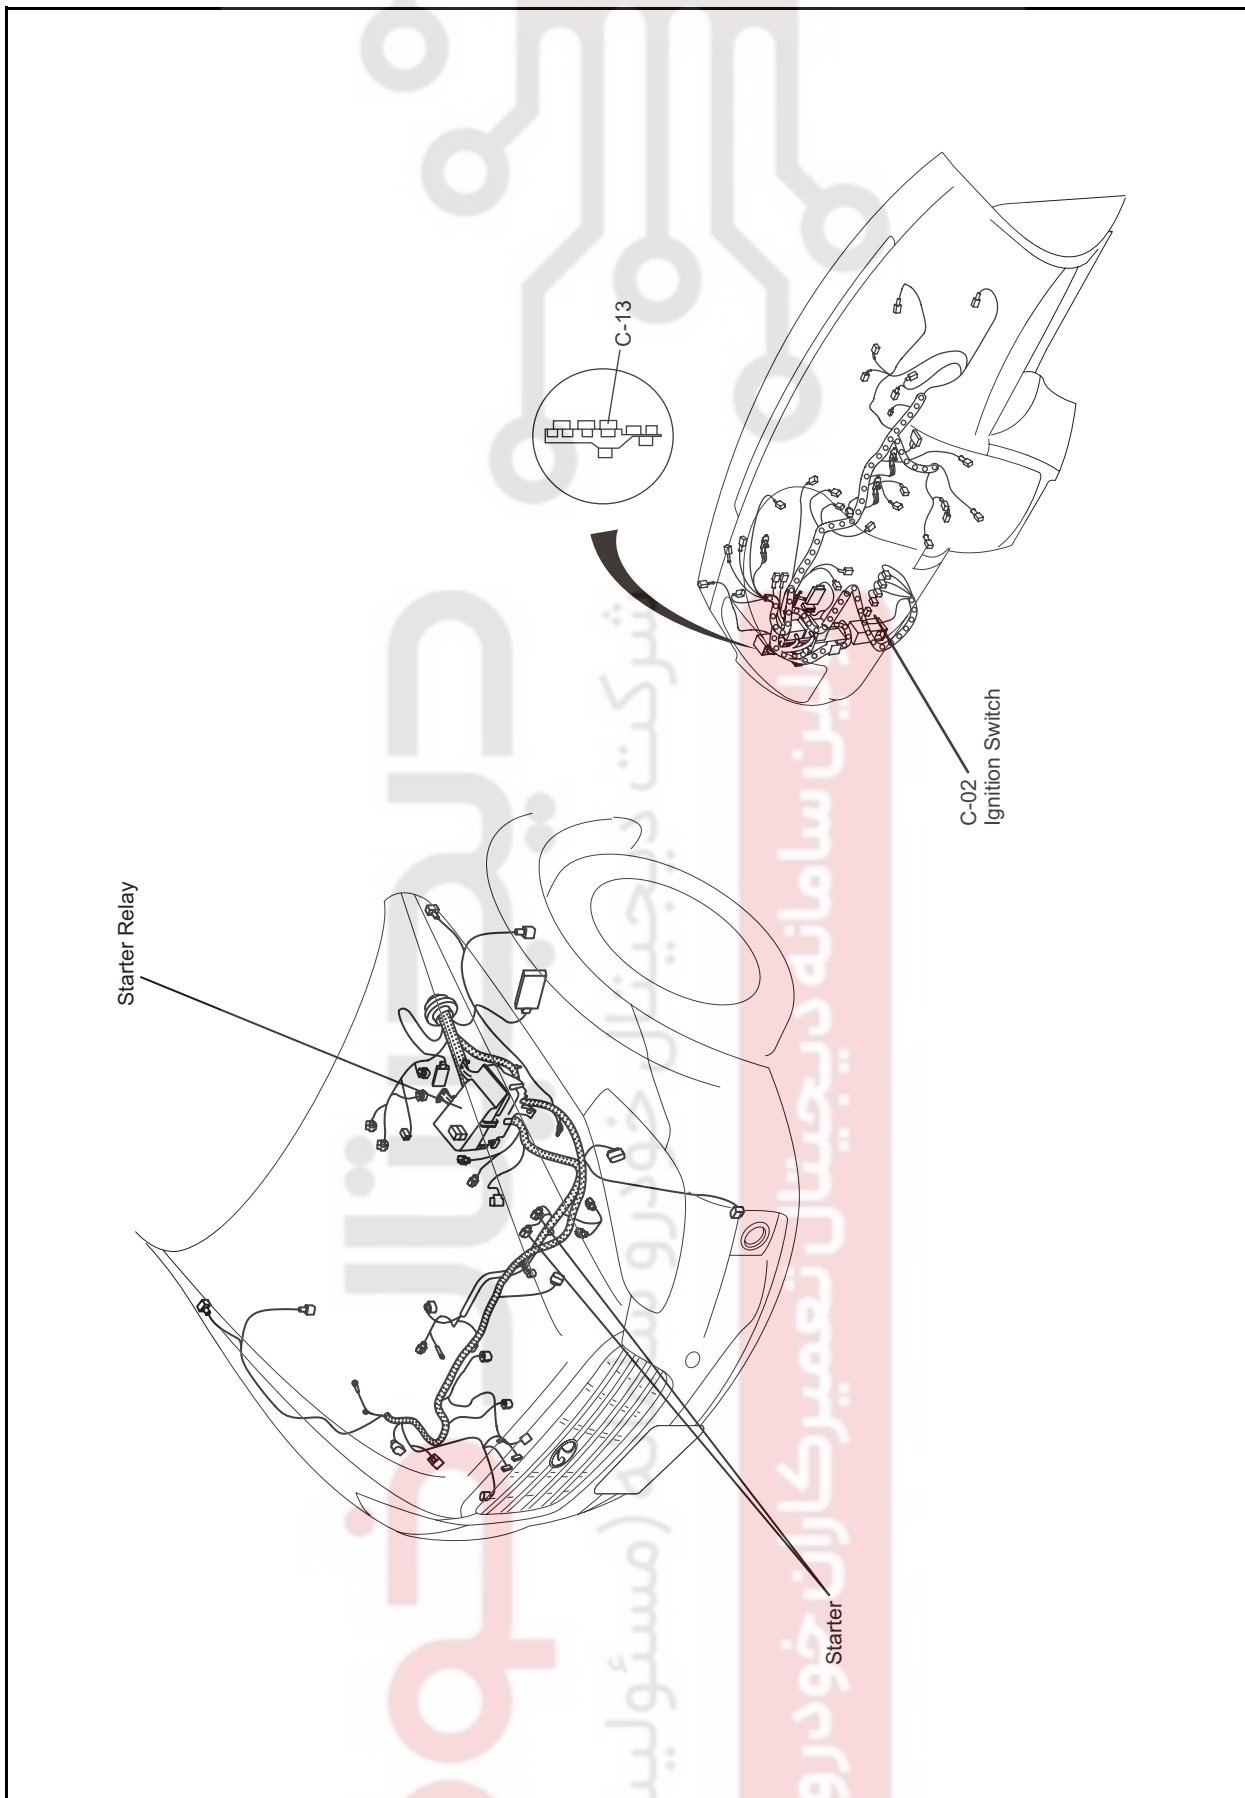


EG-ST-1

EG


EG Engine ST Starter

EG-CS-1

Control System

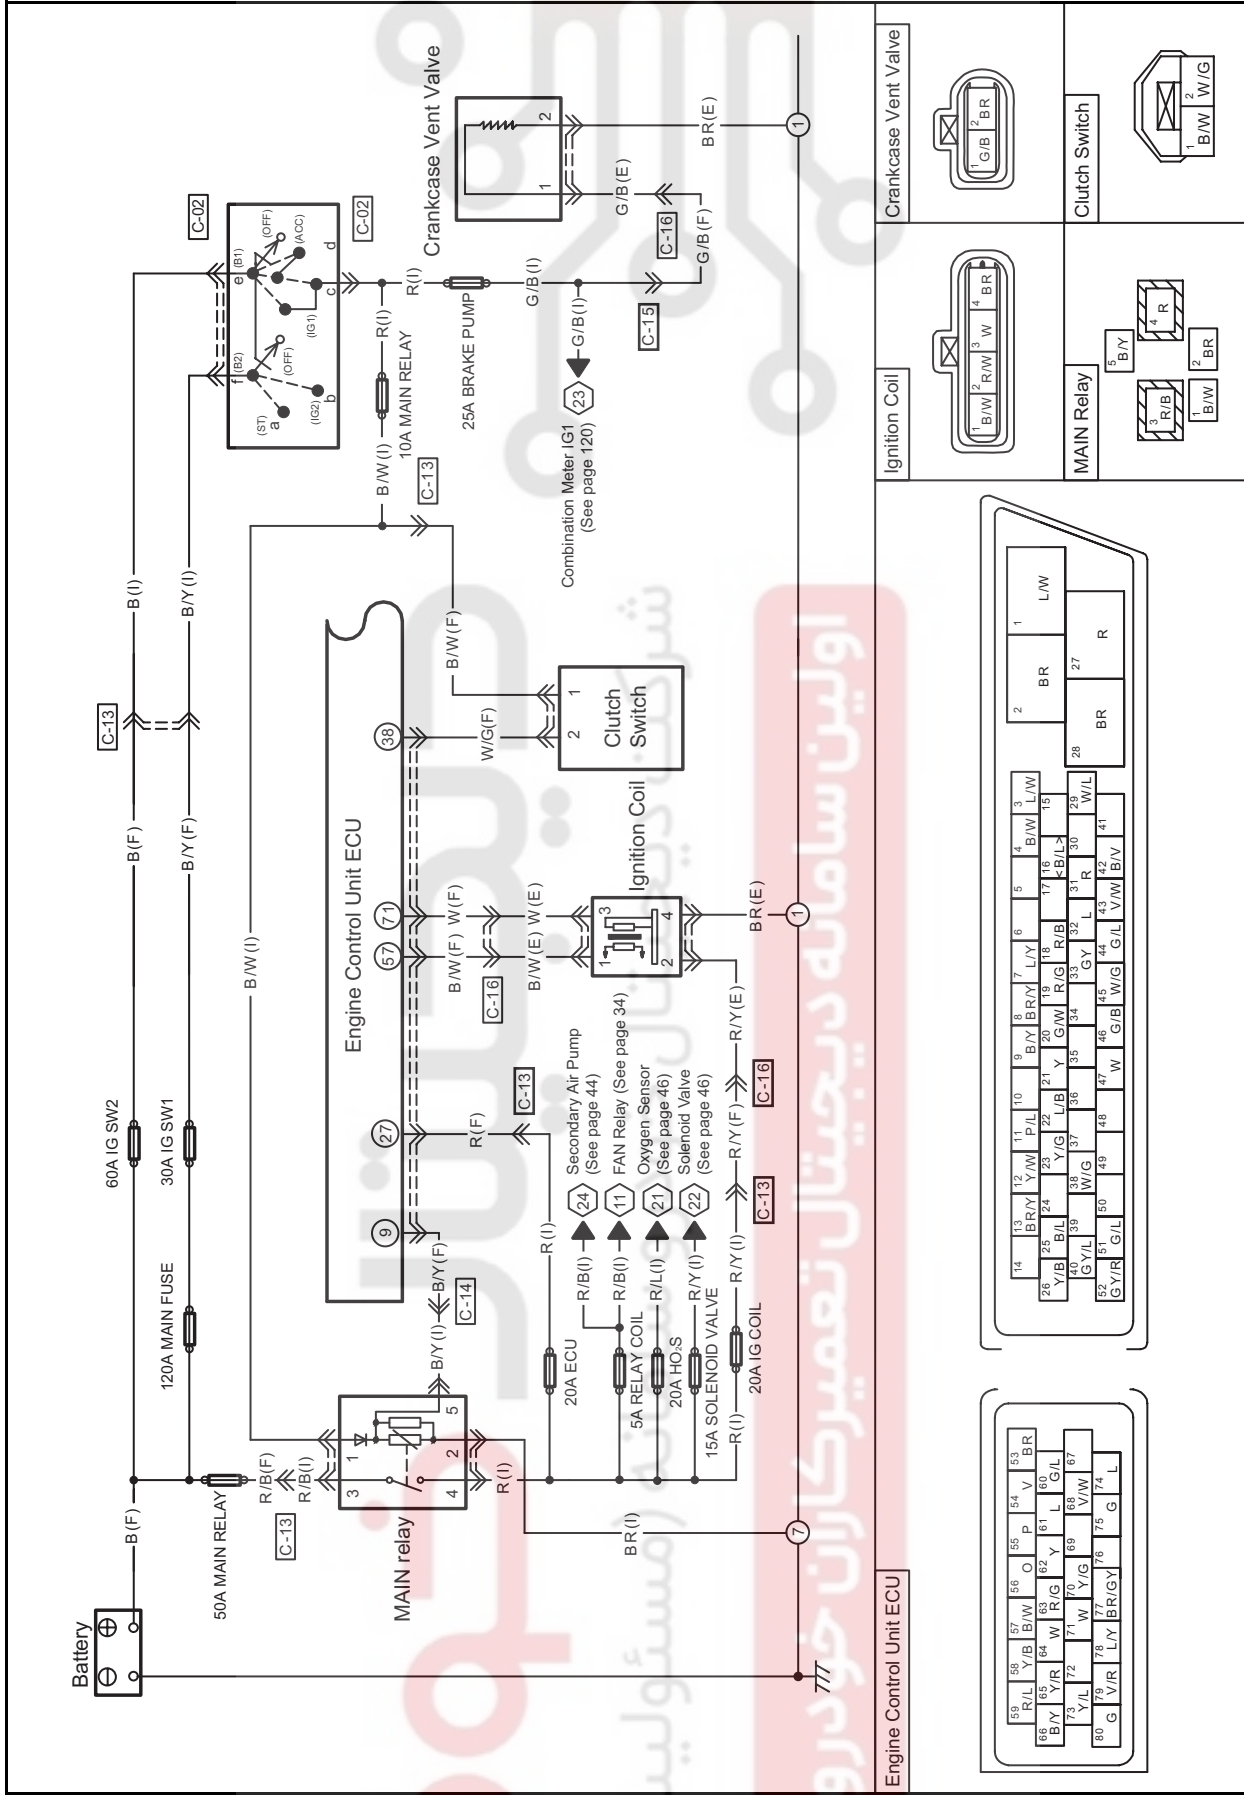

Wire Harness Symbol: (F) (E) (I) (B)

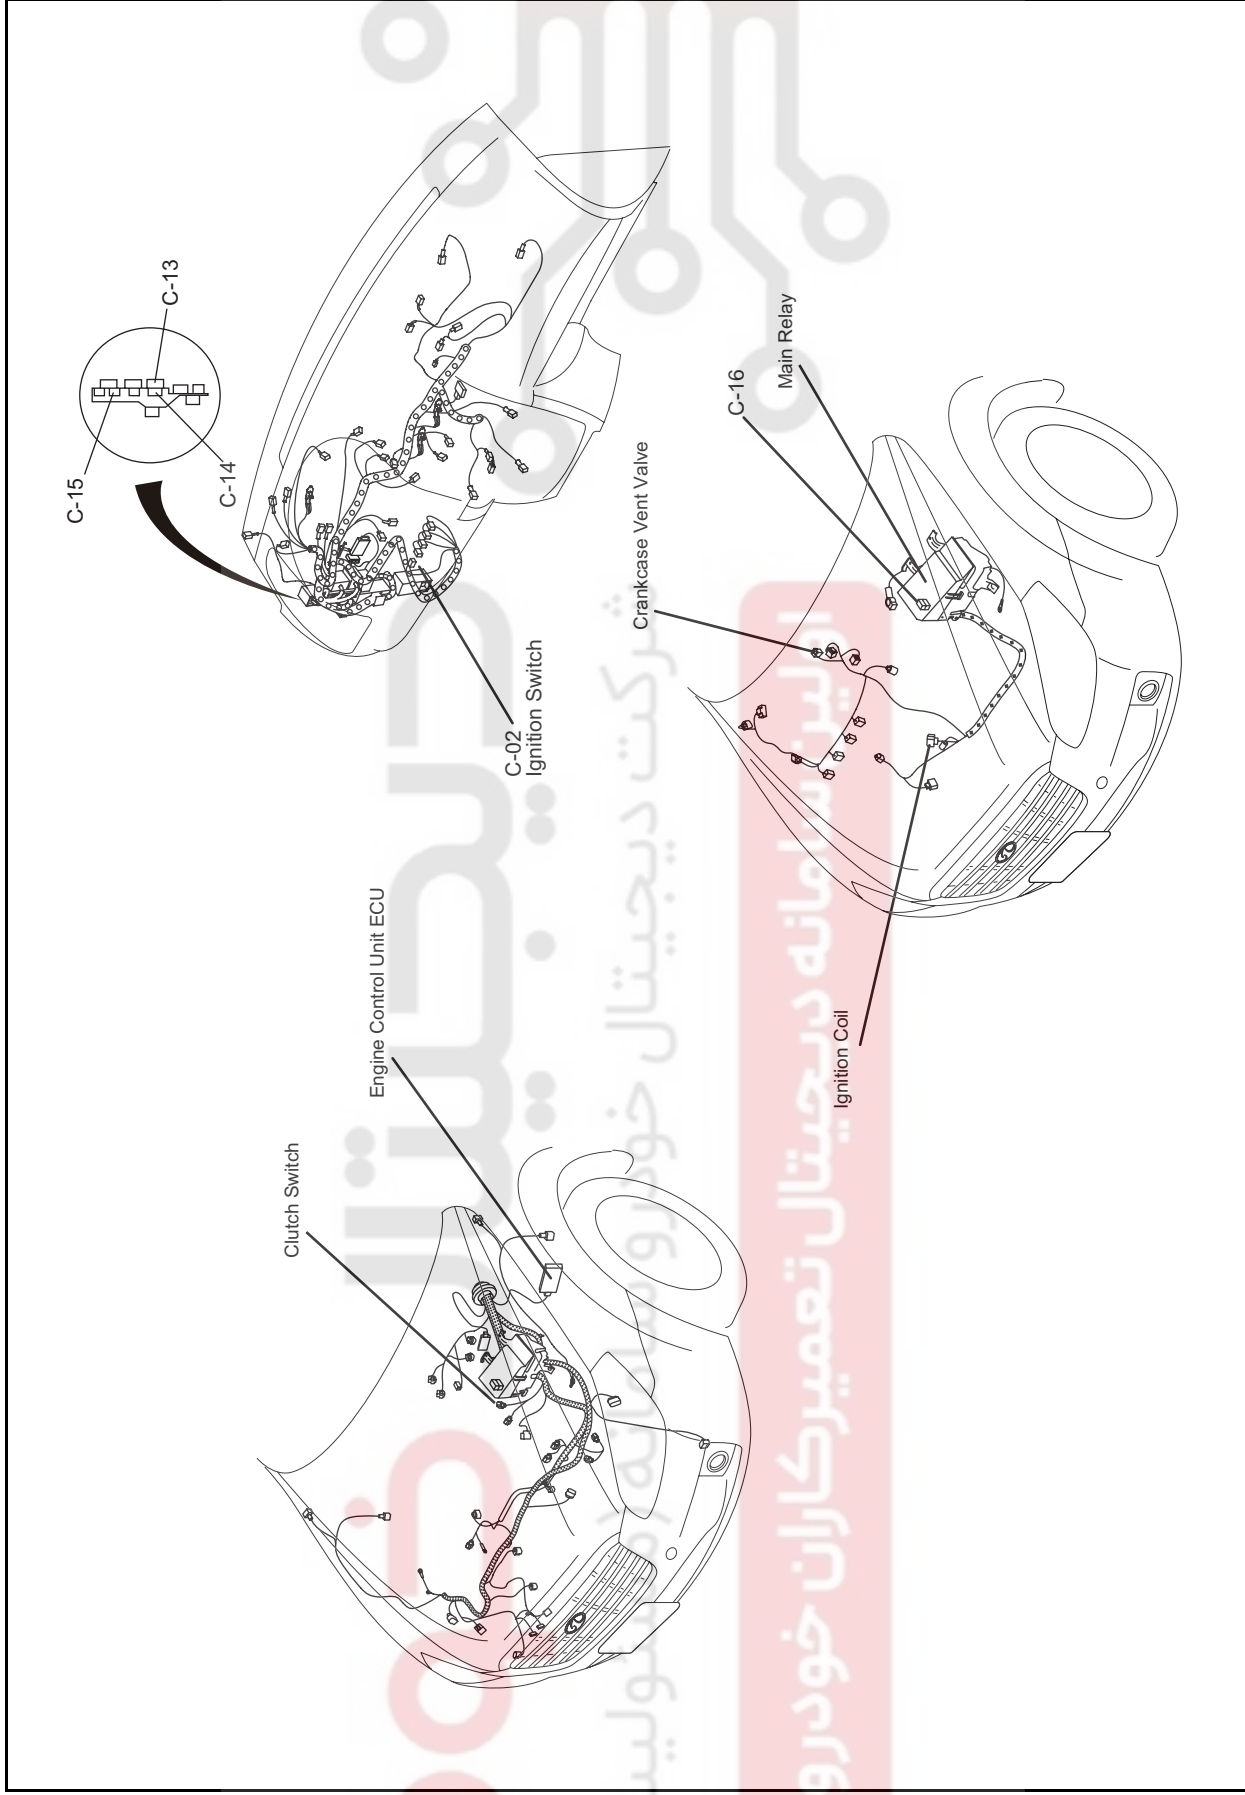


EG Engine CS Control System

EG-CS-1


EG

EG-CS-2

Control System

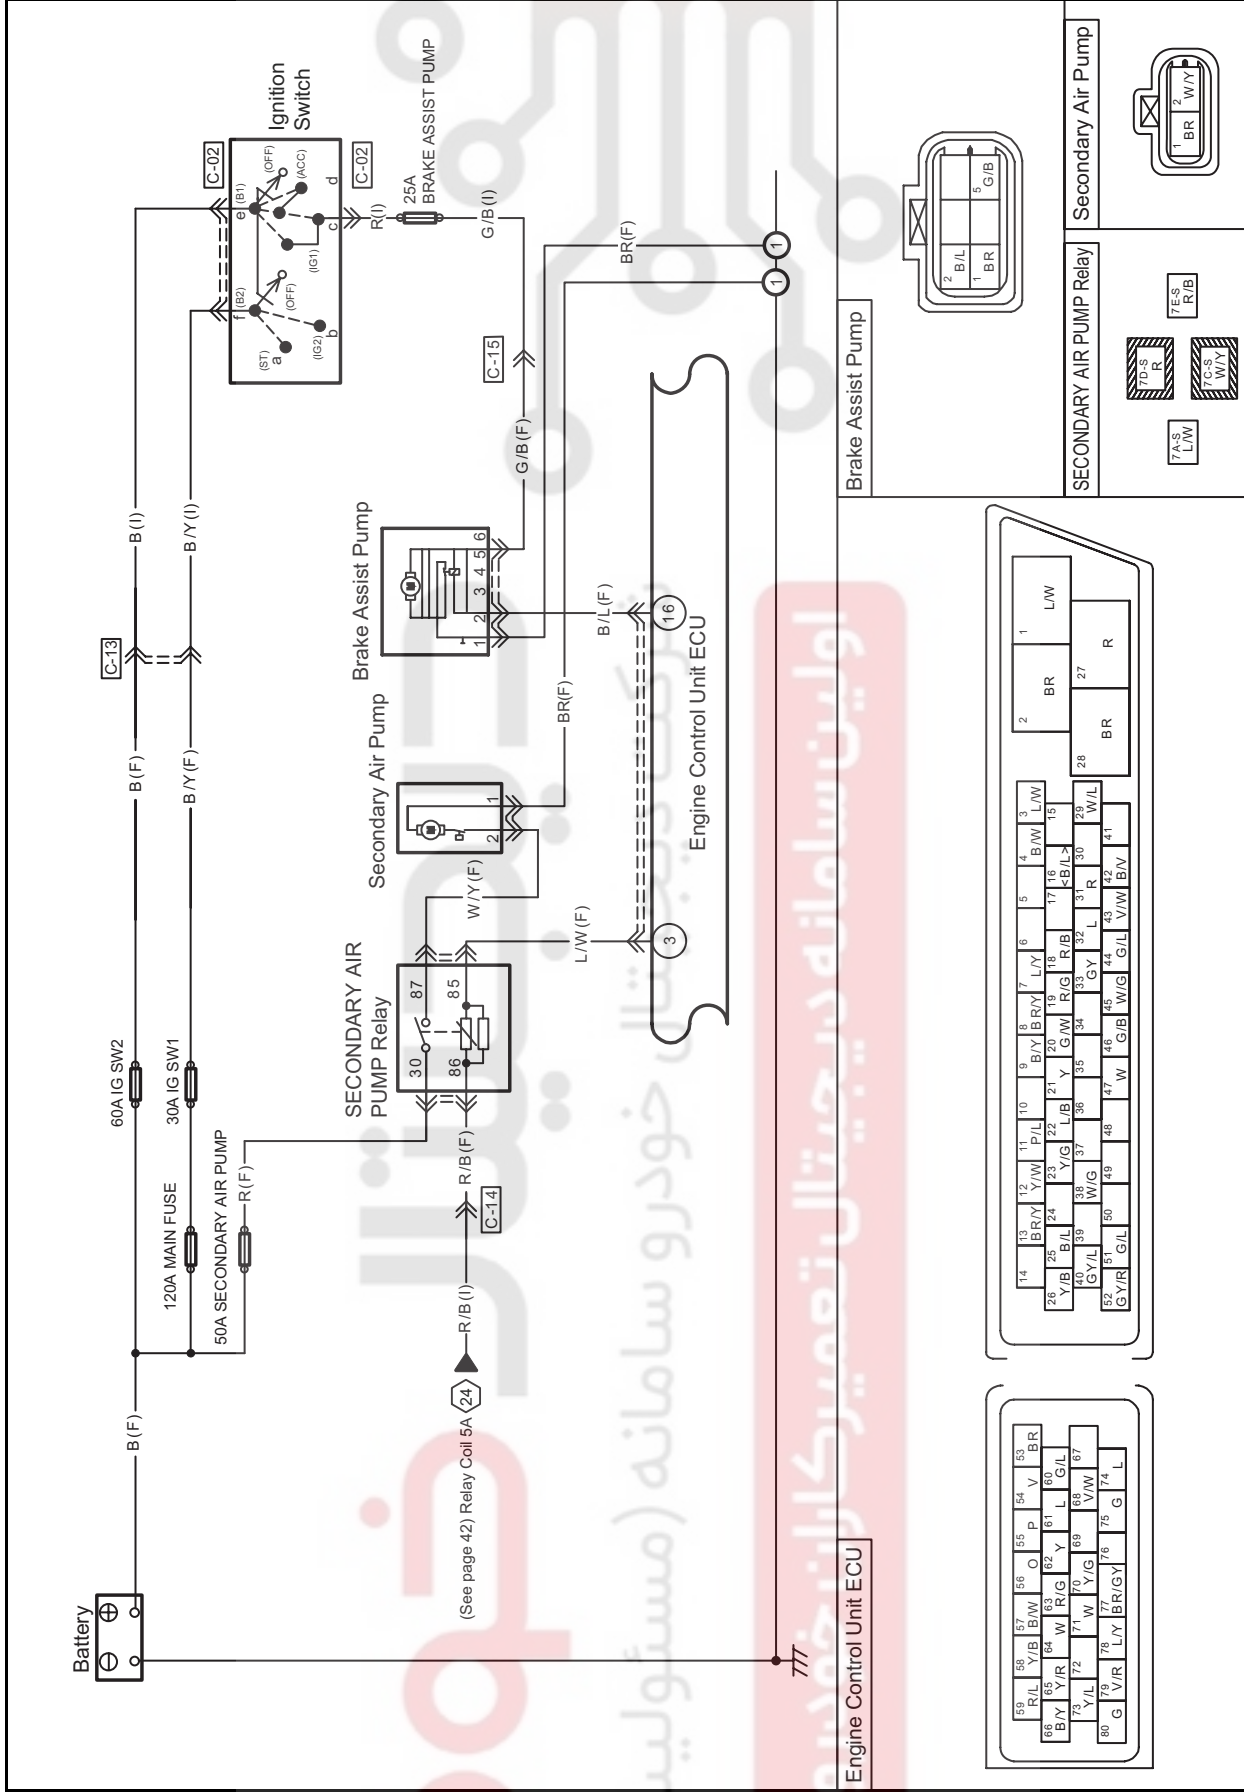

Wire Harness Symbol: (F) (E) (I) (B)

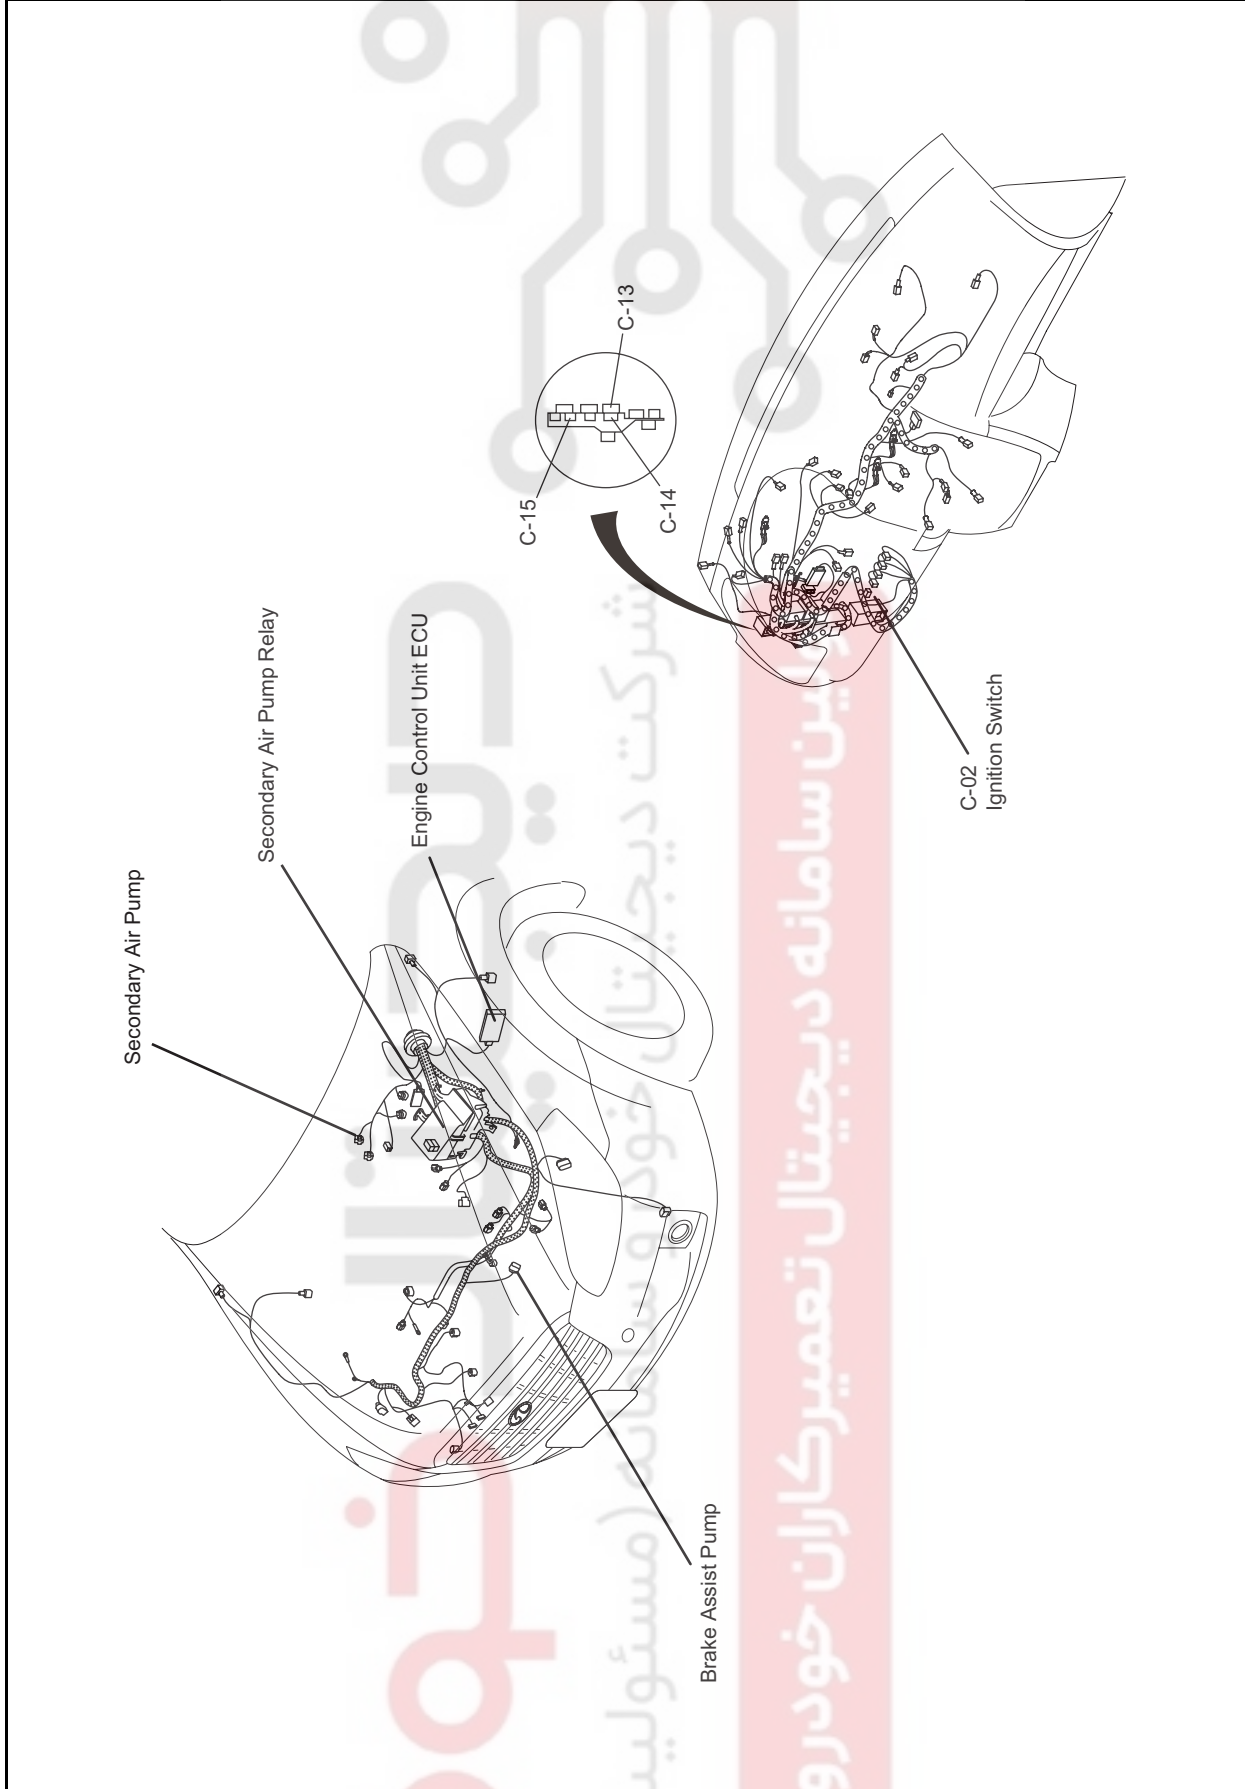


EG-CS-2

EG

EG Engine CS Control System


EG-CS-3

Control System

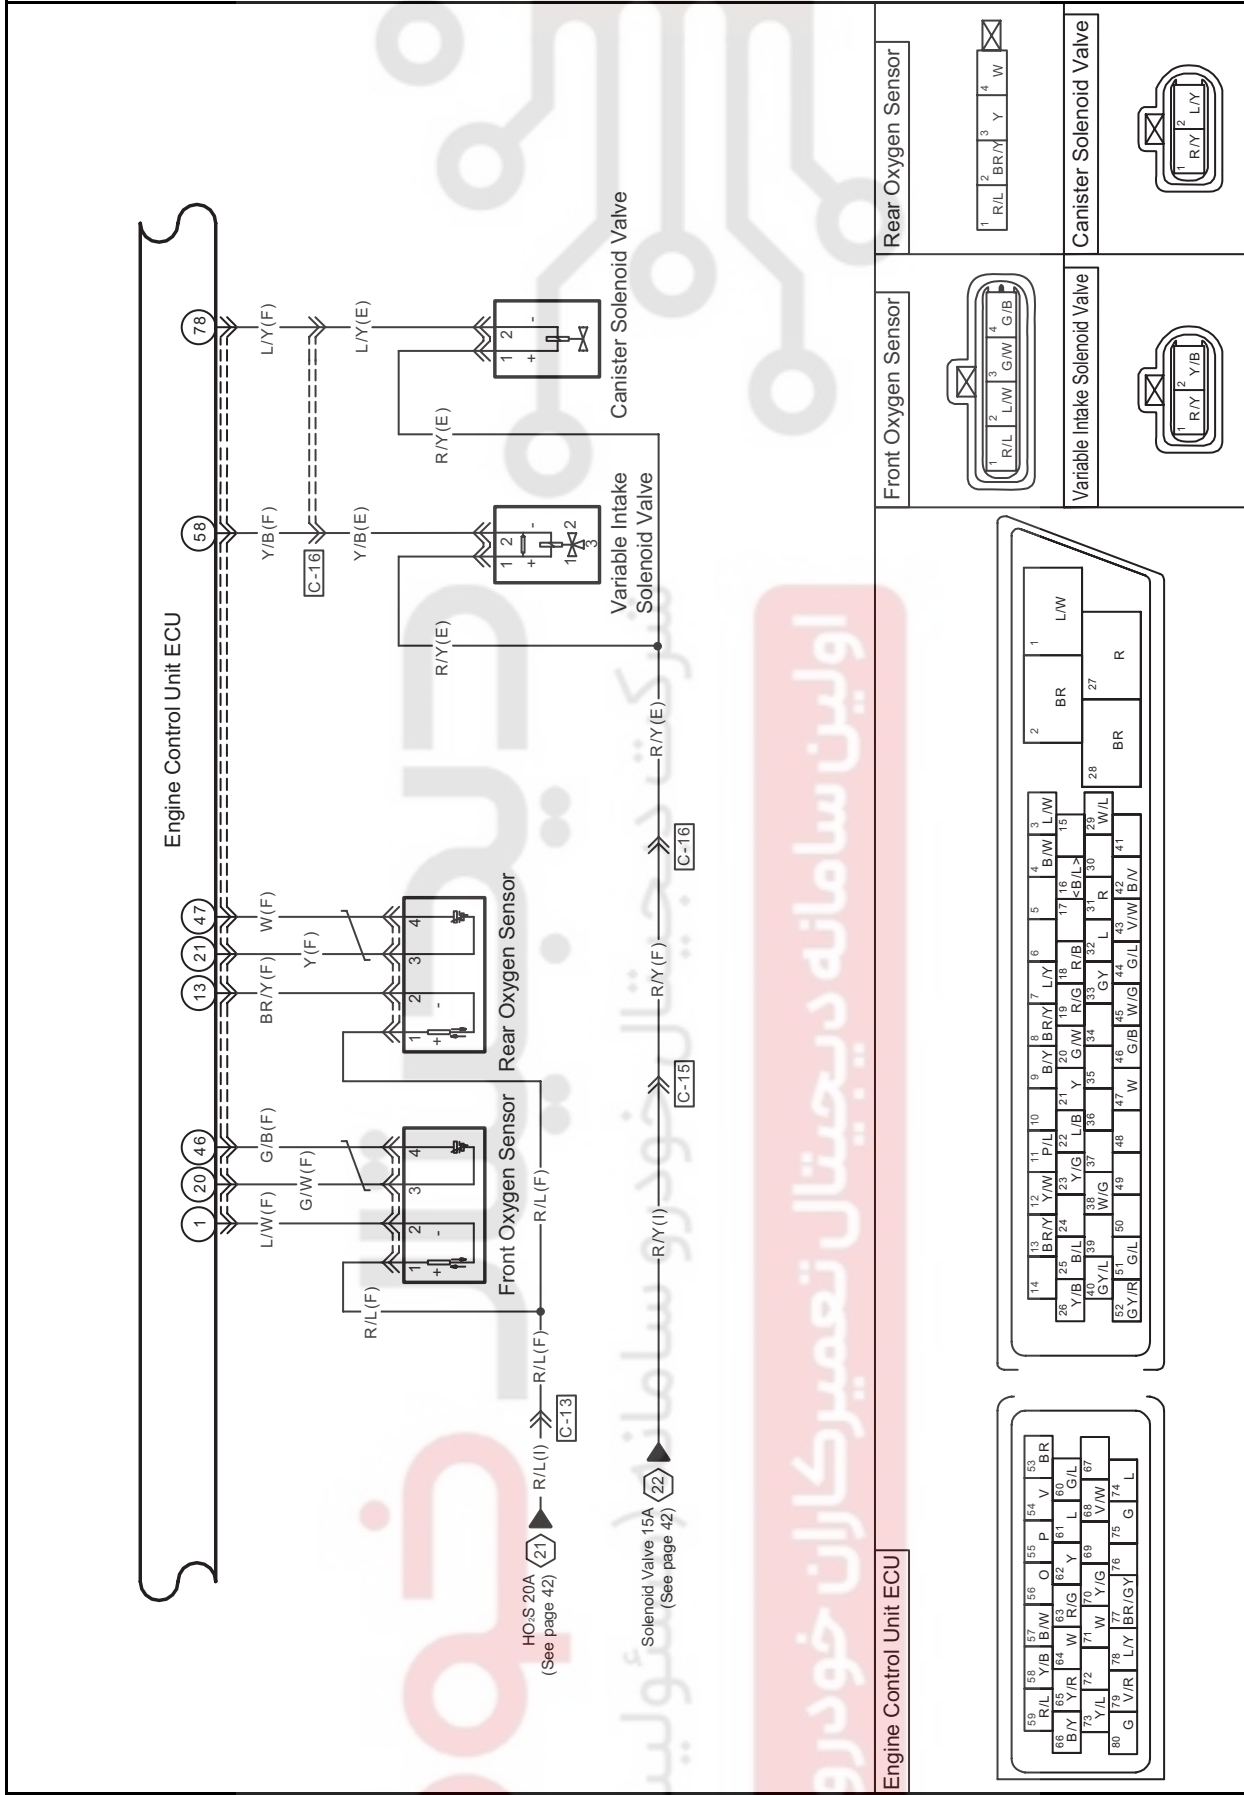

اولین سامانه دیجیتال تعمیرکاران خودرو

Wire Harness Symbol: (F) (E) (I) (B)

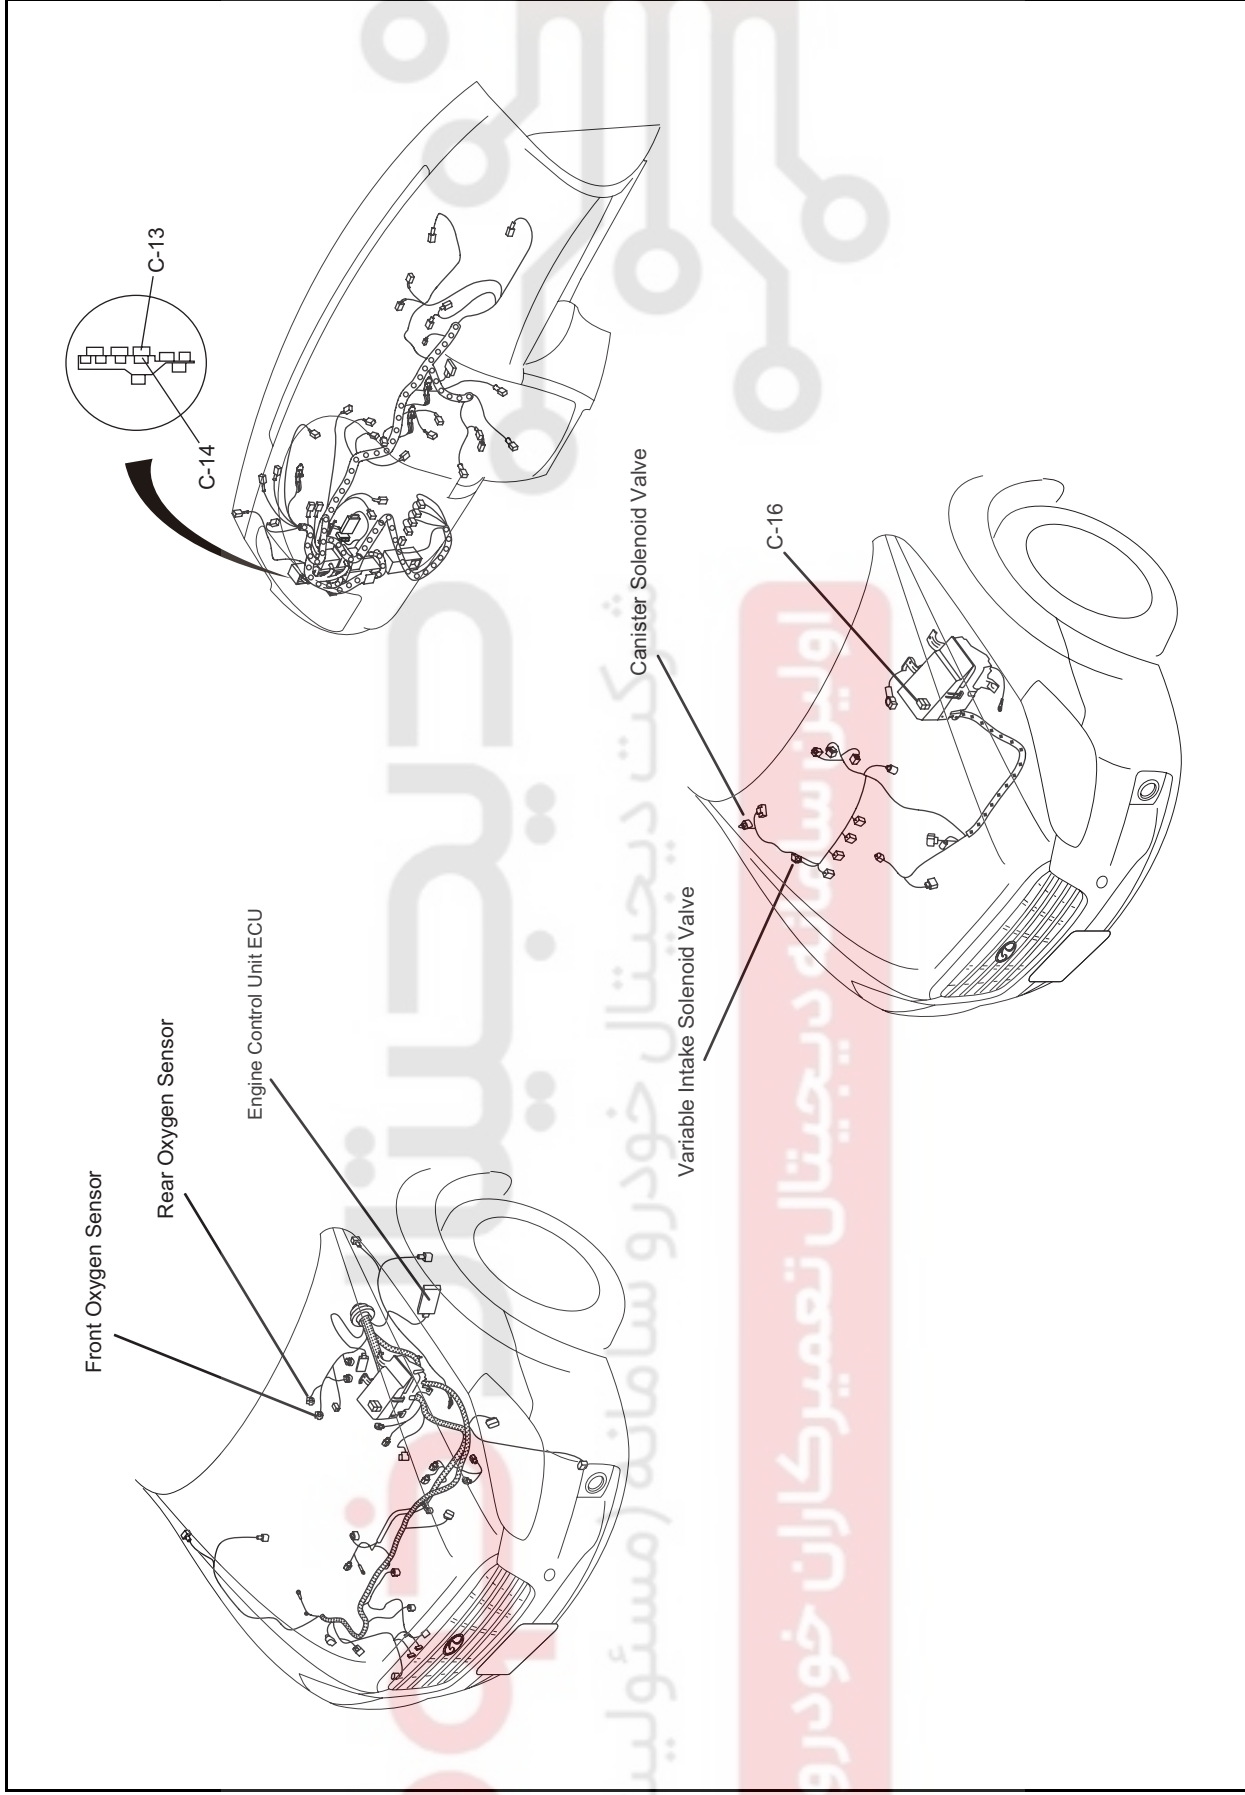


EG-CS-3

EG

EG Engine CS Control System



Wire Harness Symbol: (F) (E) (I) (B)

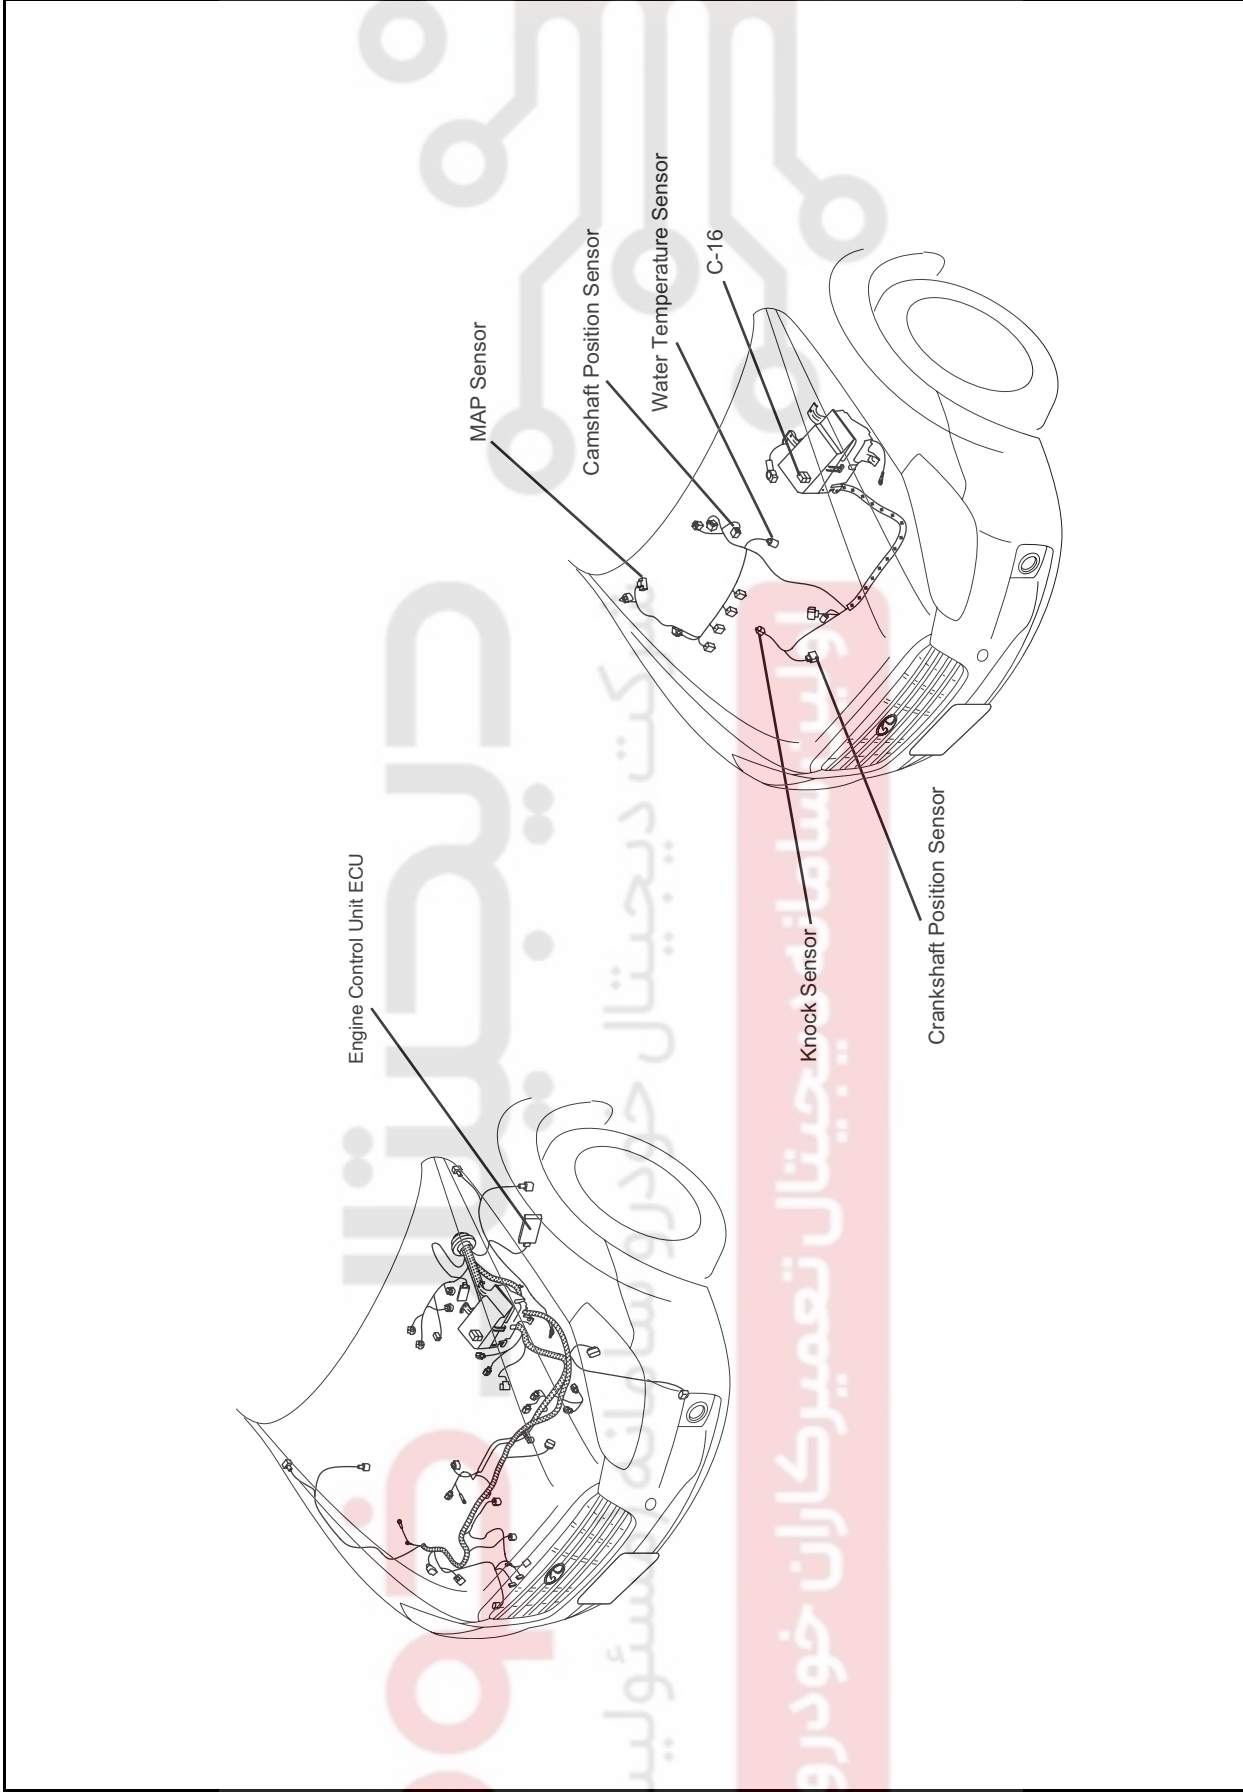


EG-CS-4

EG

EG Engine CS Control System

EG-CS-5

Control System

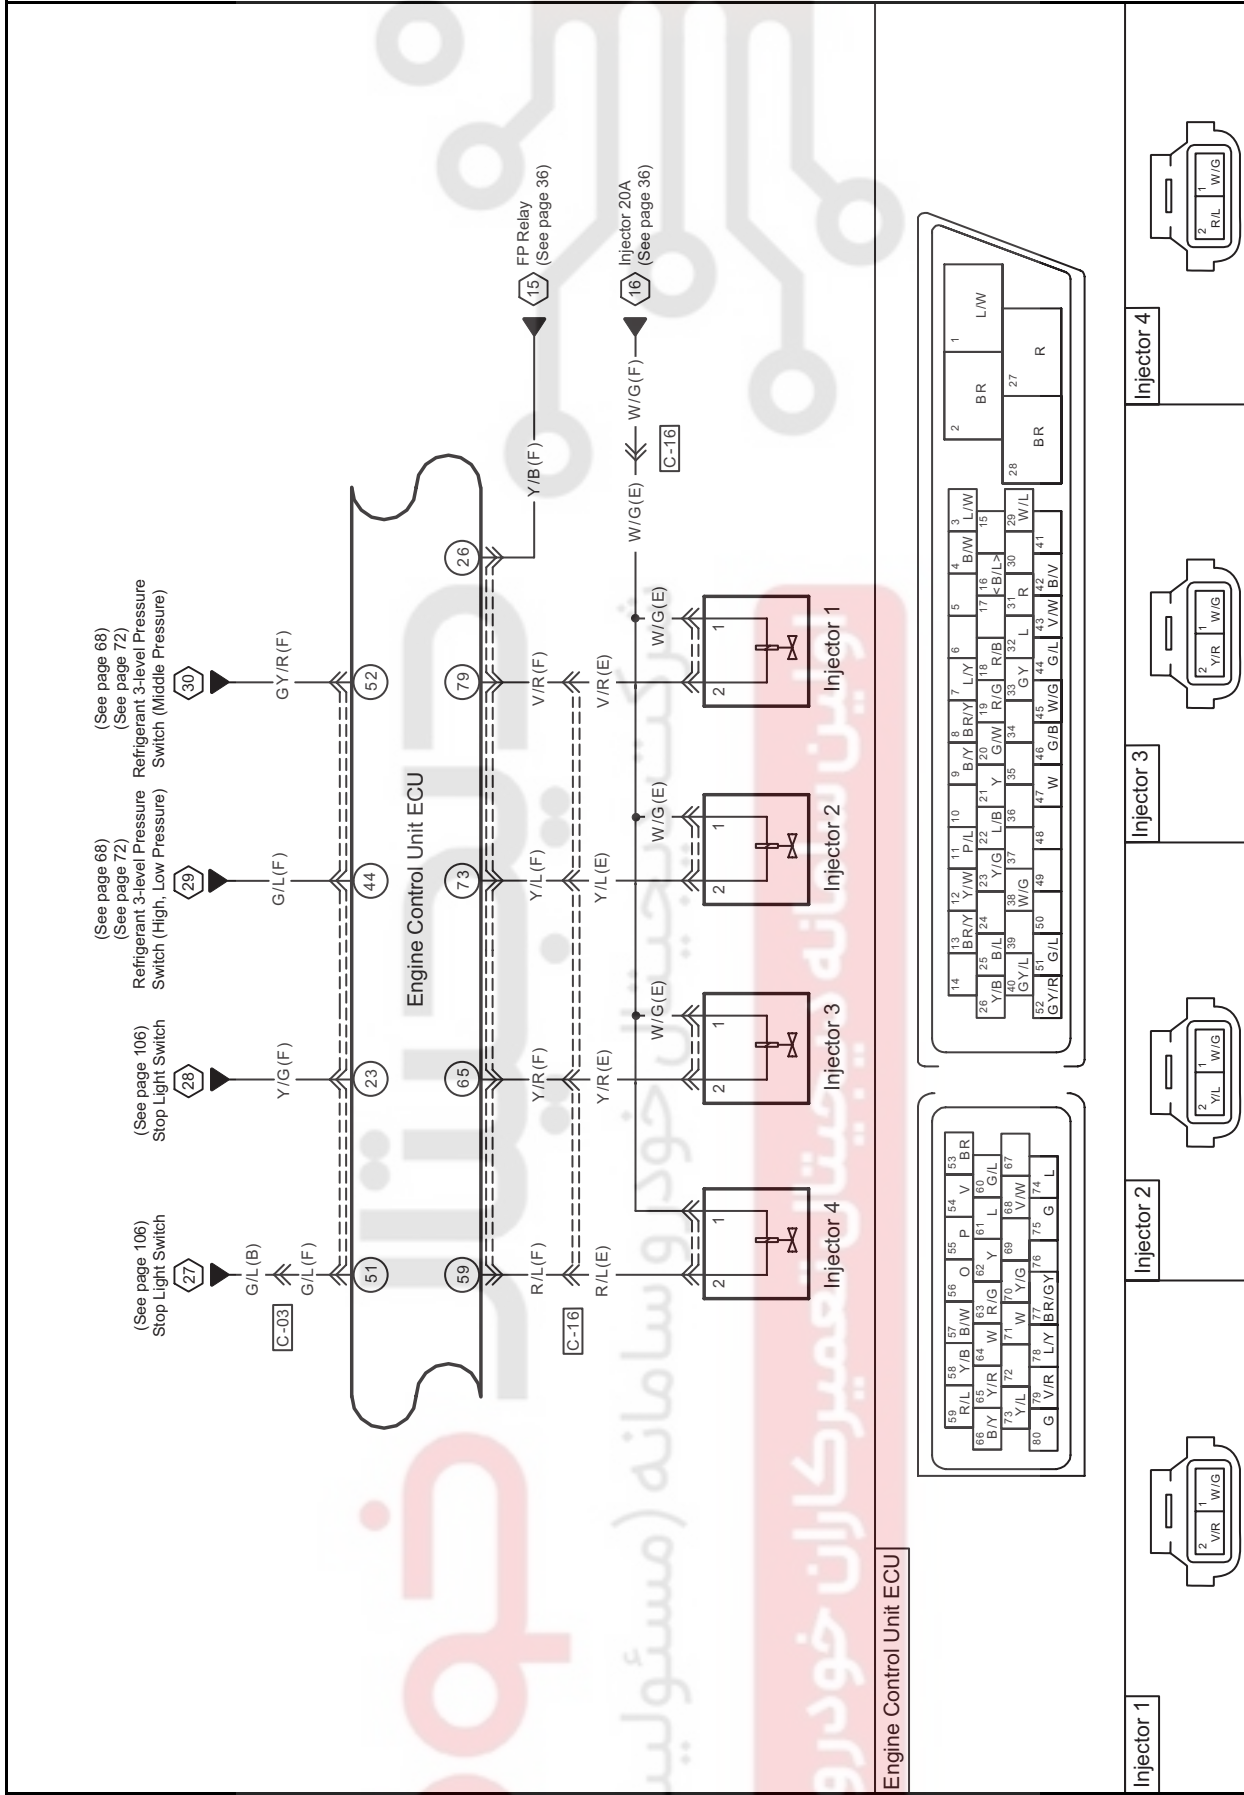

Wire Harness Symbol: (F) (E) (I) (B)




EG-CS-5

EG

EG Engine CS Control System



Wire Harness Symbol: (F) (E) (I) (B)

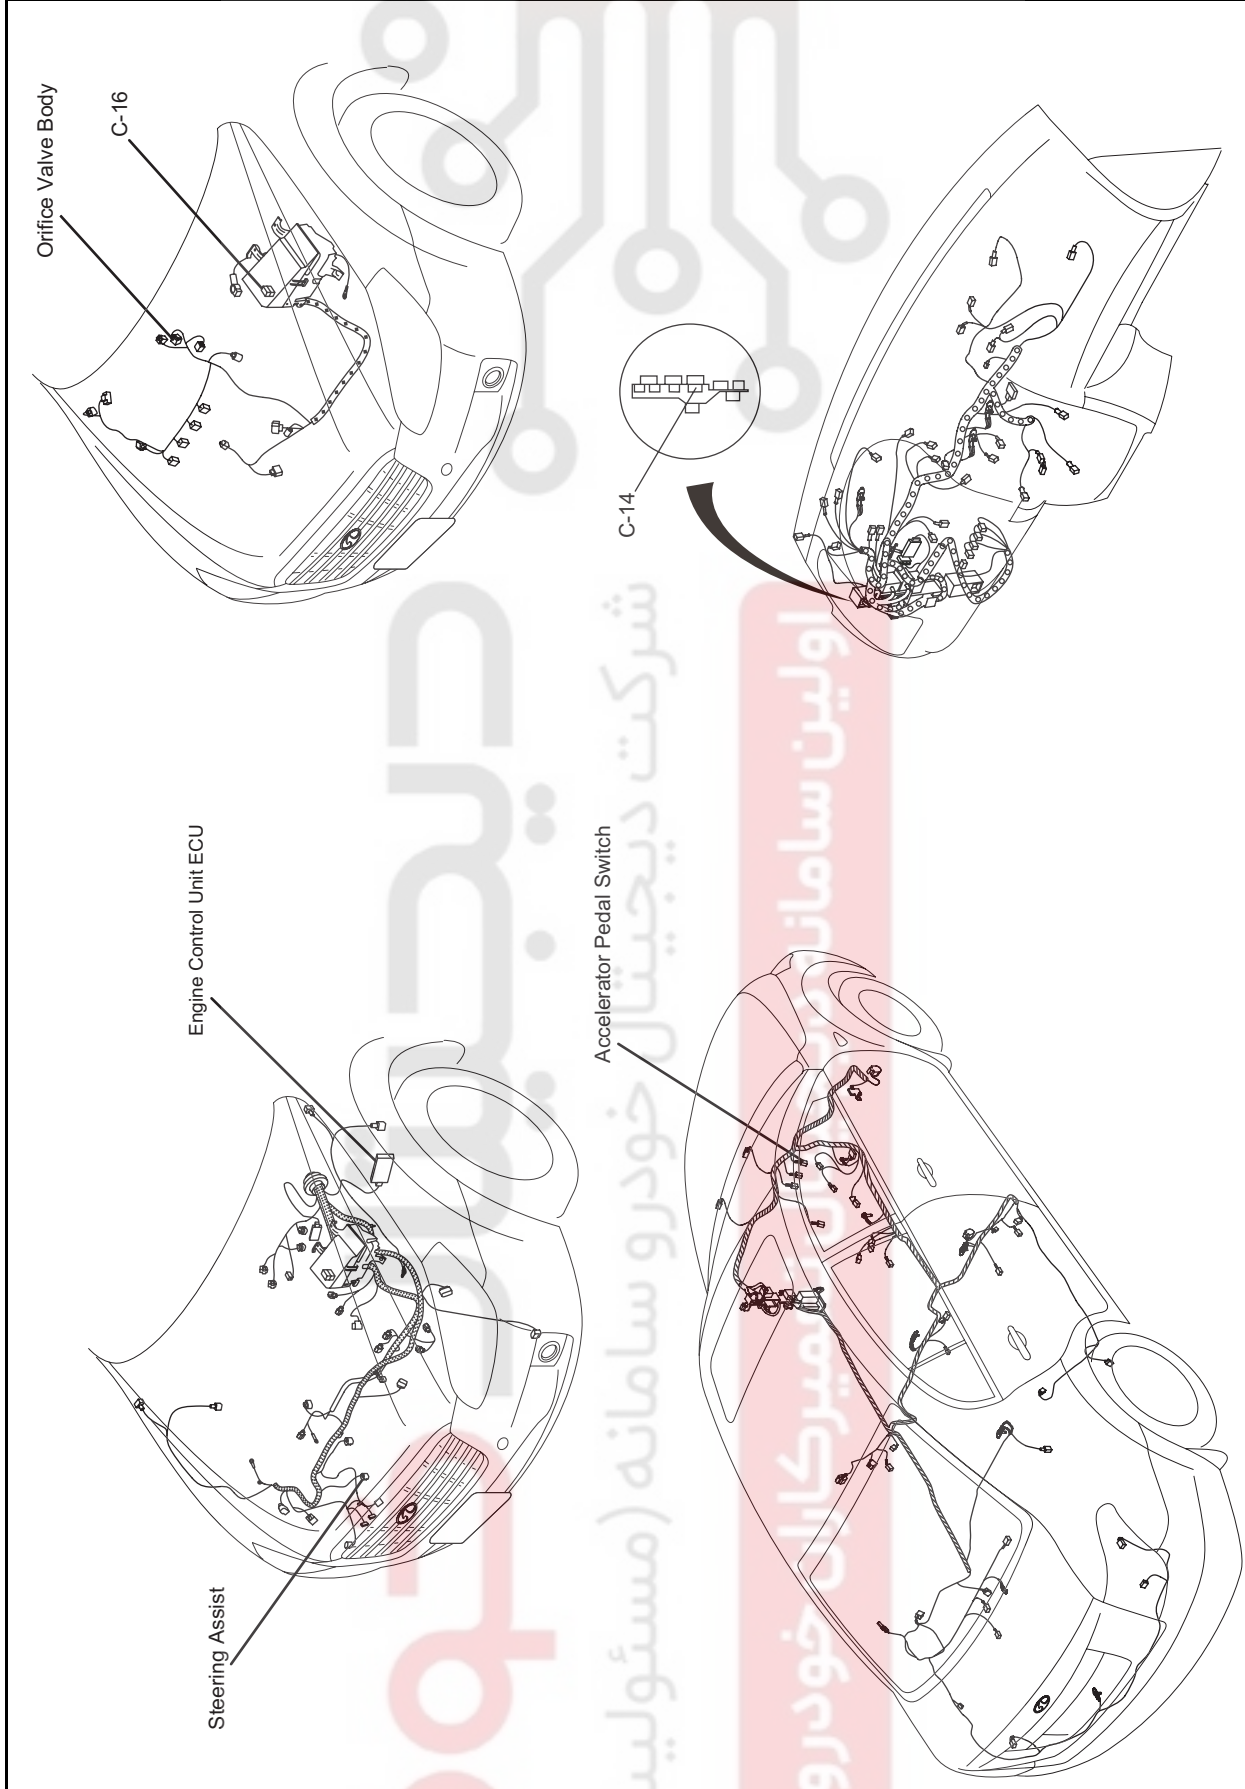


EG-CS-6

EG

EG Engine CS Control System


EG-EI-1

Engine Immobilizer System

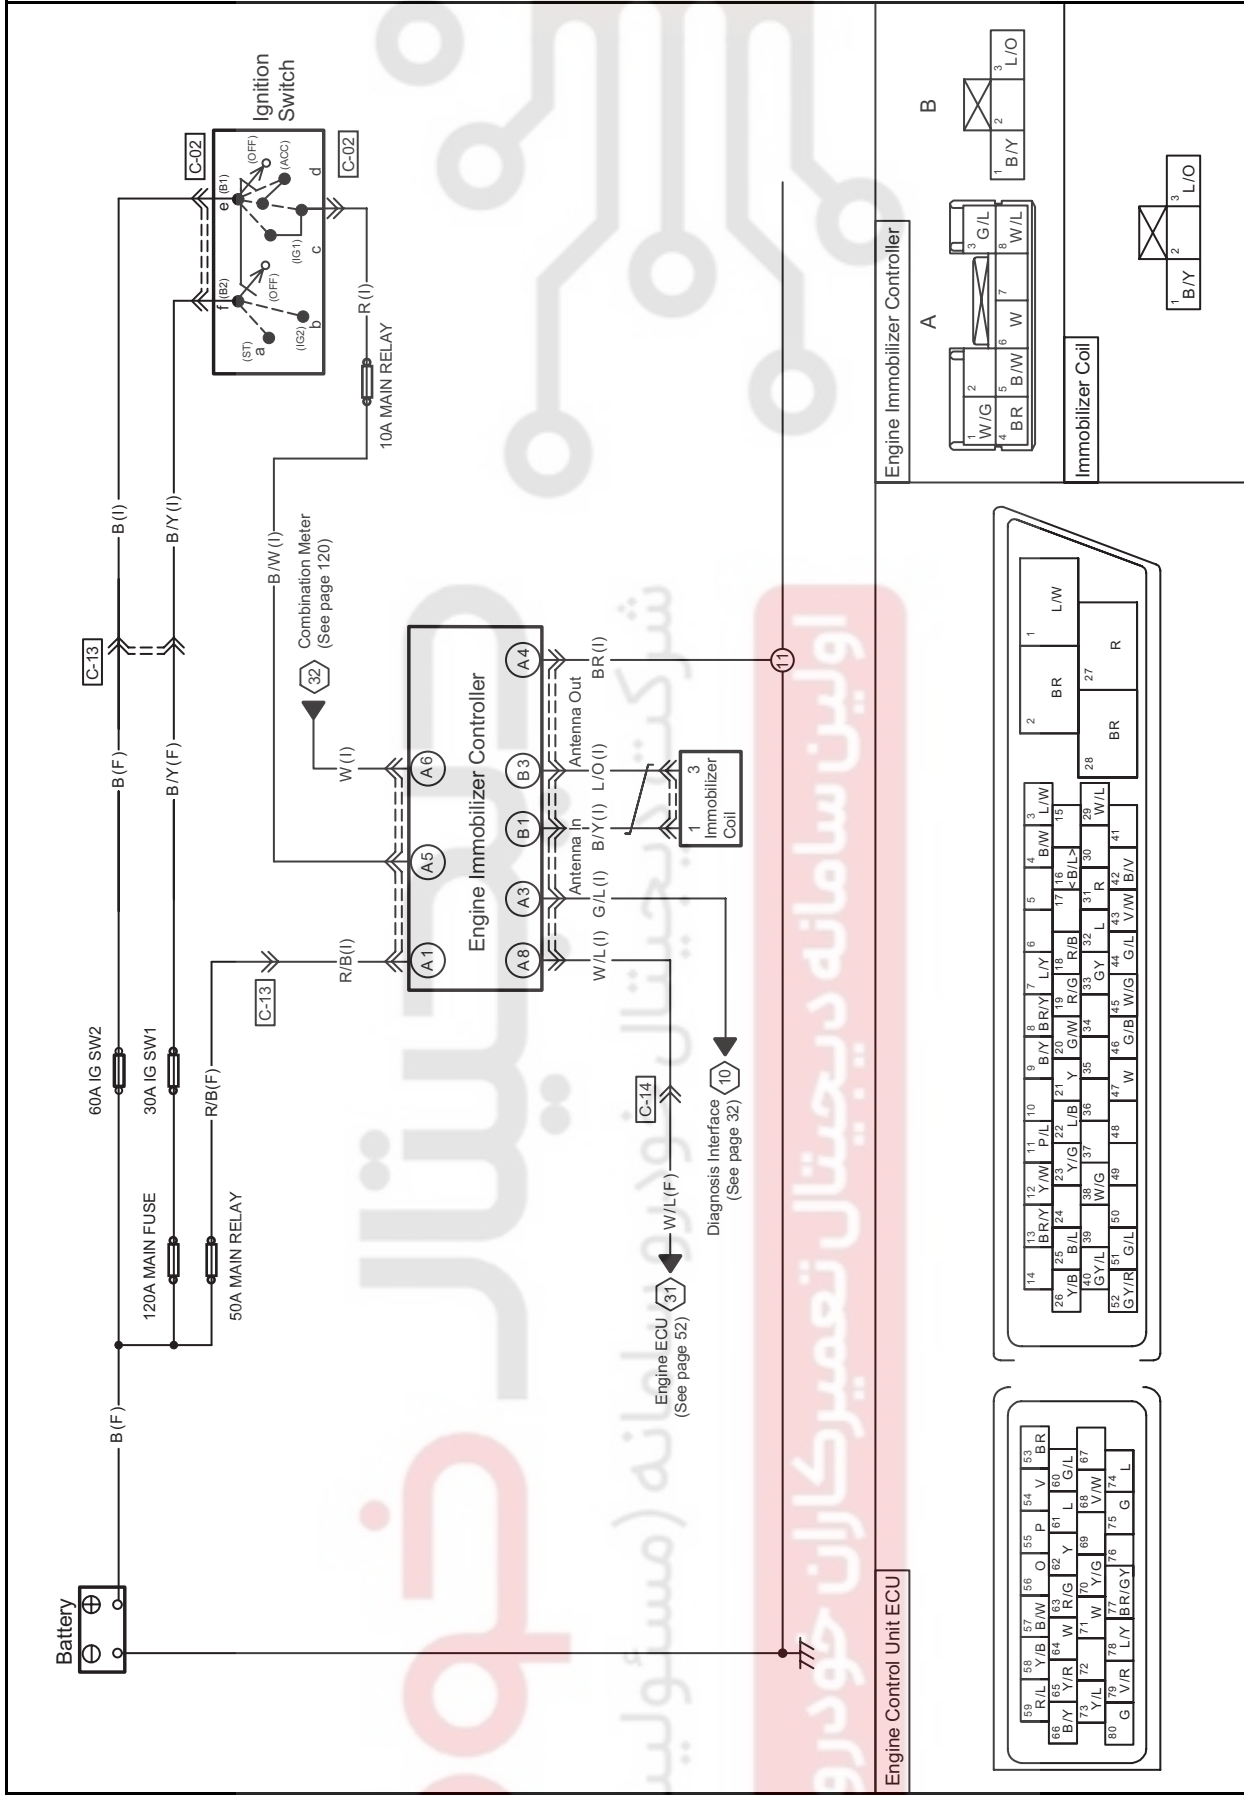

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Wire Harness Symbol: (F) (E) (I) (B)

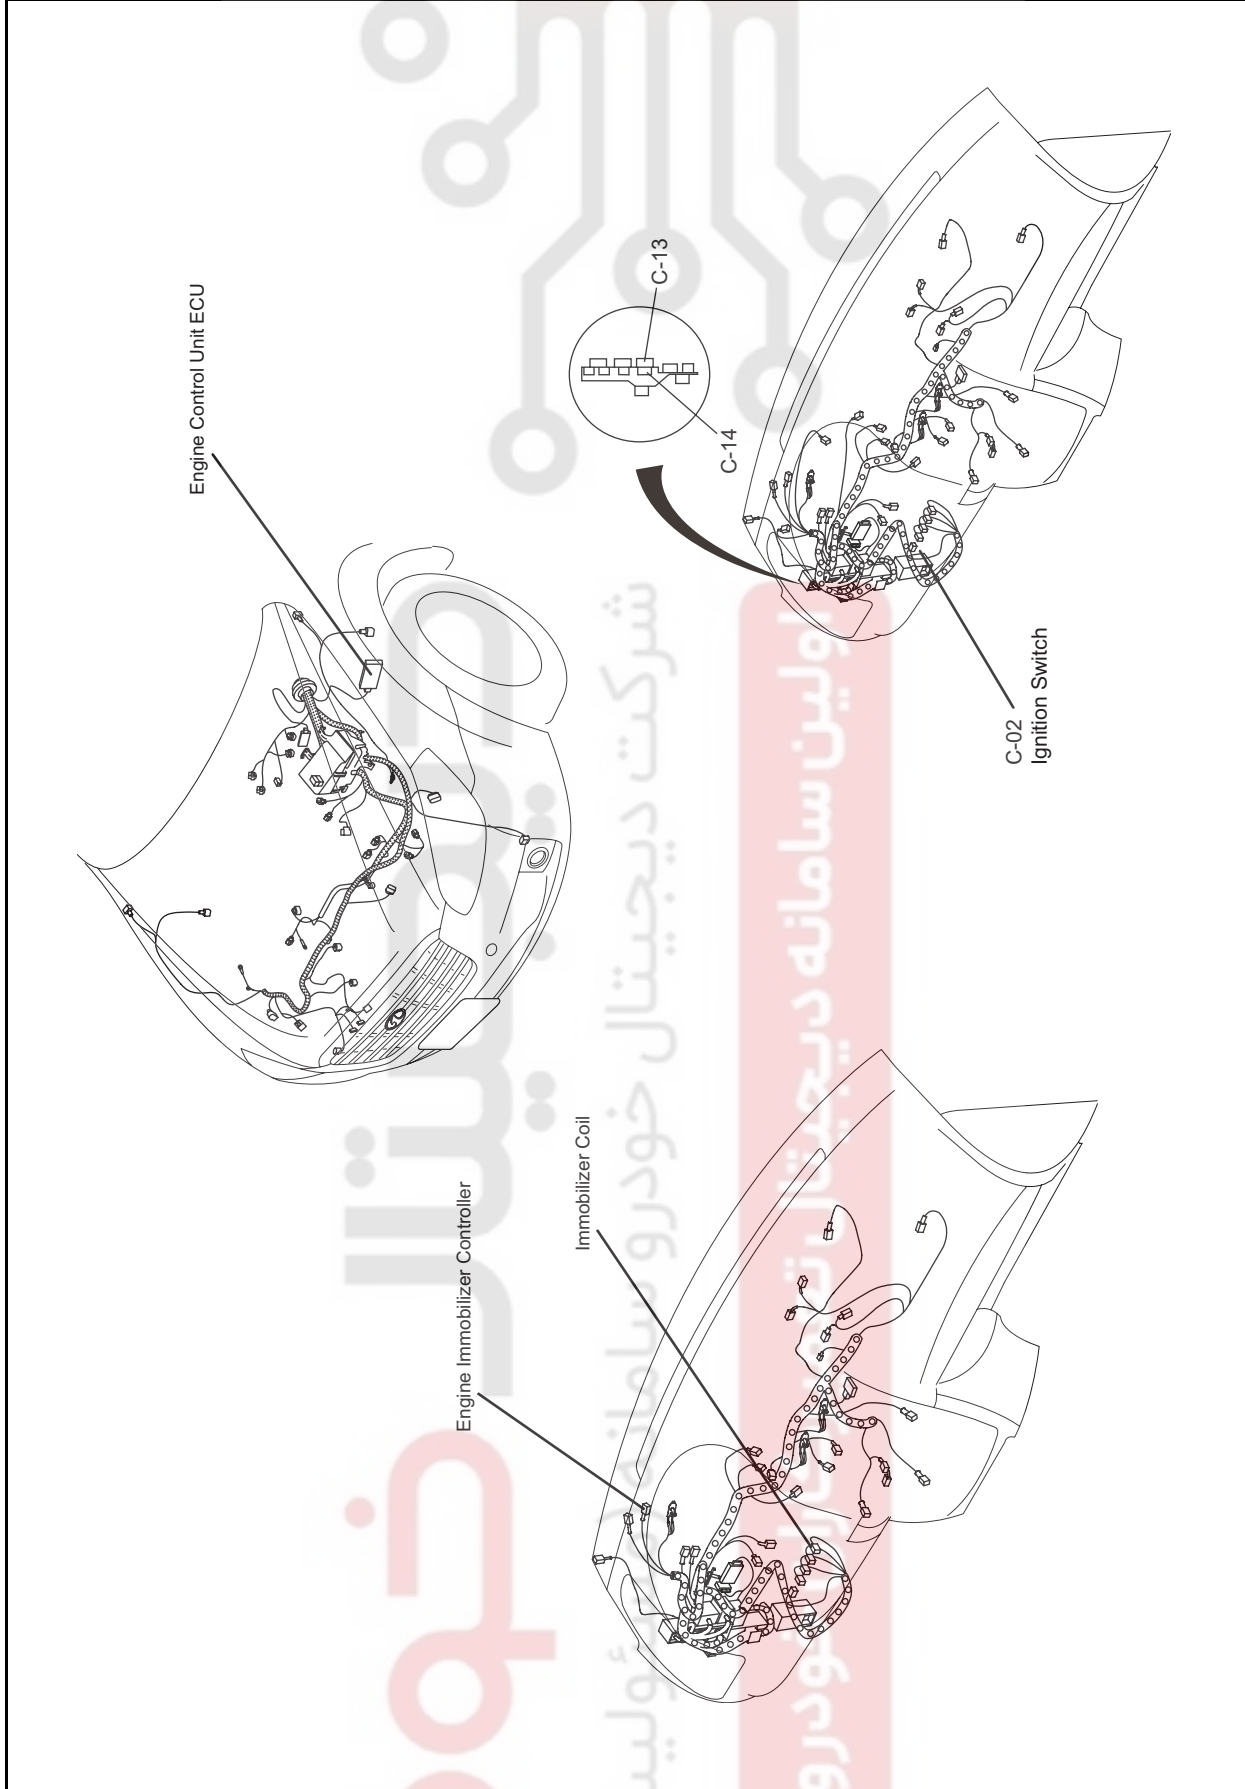


EG-EI-1


EG

EG Engine EI Immobilizer System

AT Transmission Case Control System

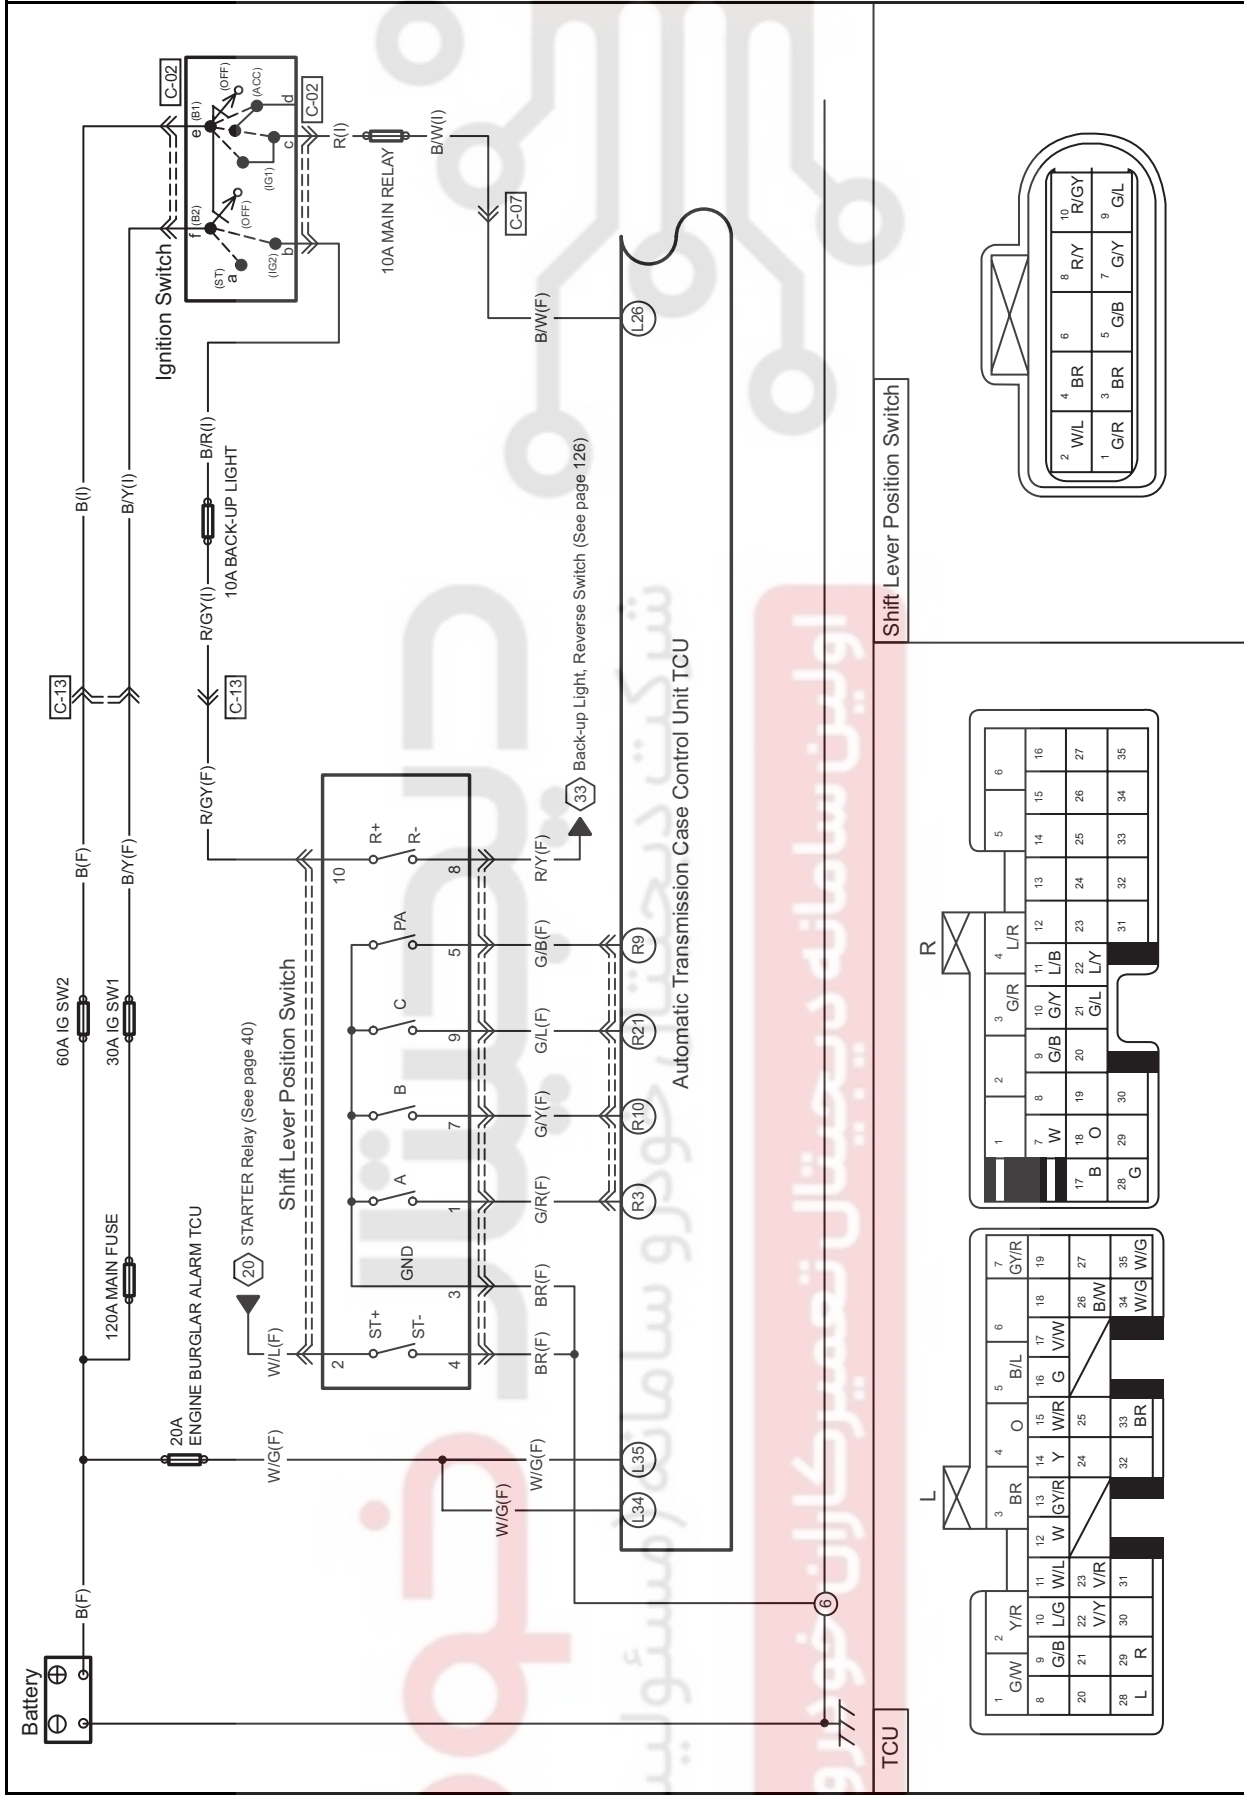

Wire Harness Symbol: (F) (E) (I) (B)

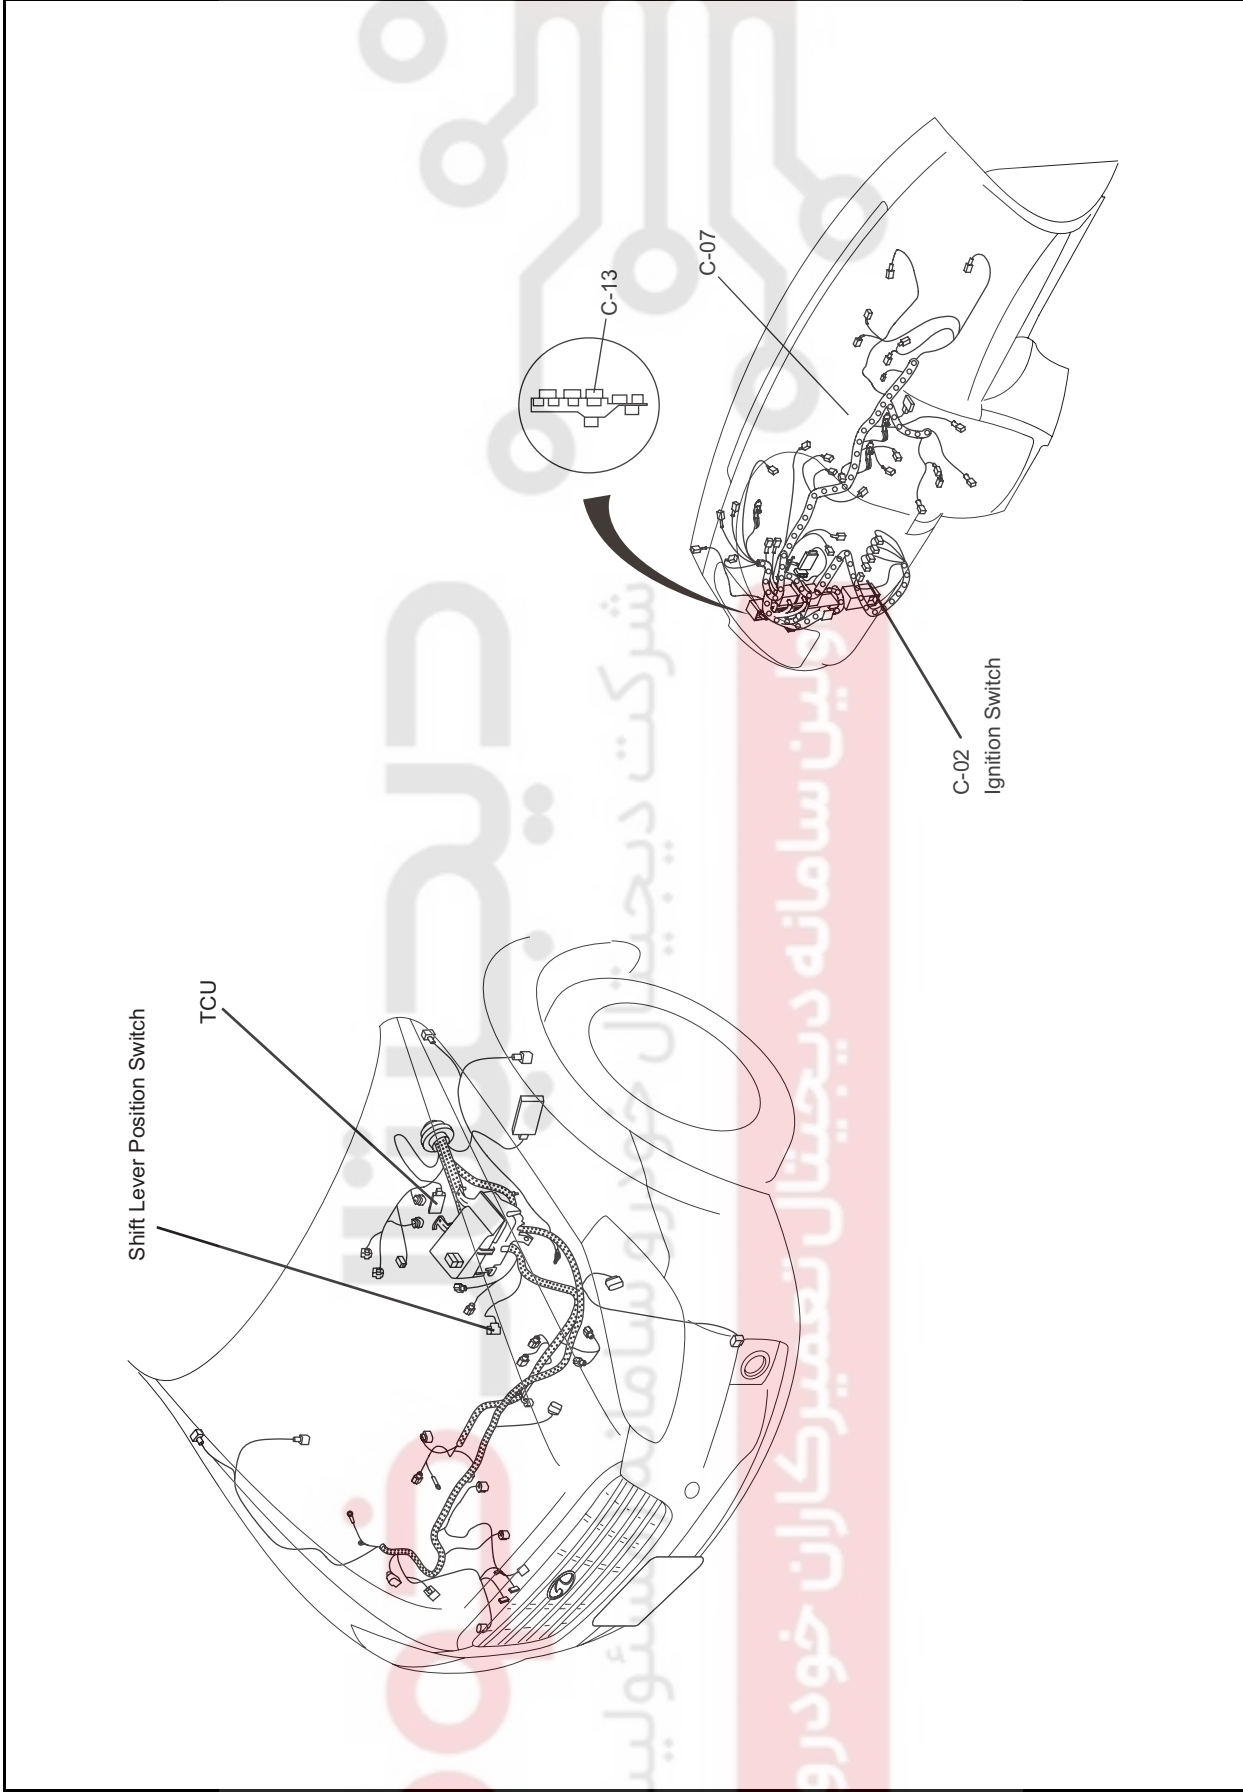


AT Automatic Transmission CS Control System

AT-CS-1

AT


AT-CS-2

AT Transmission Case Control System

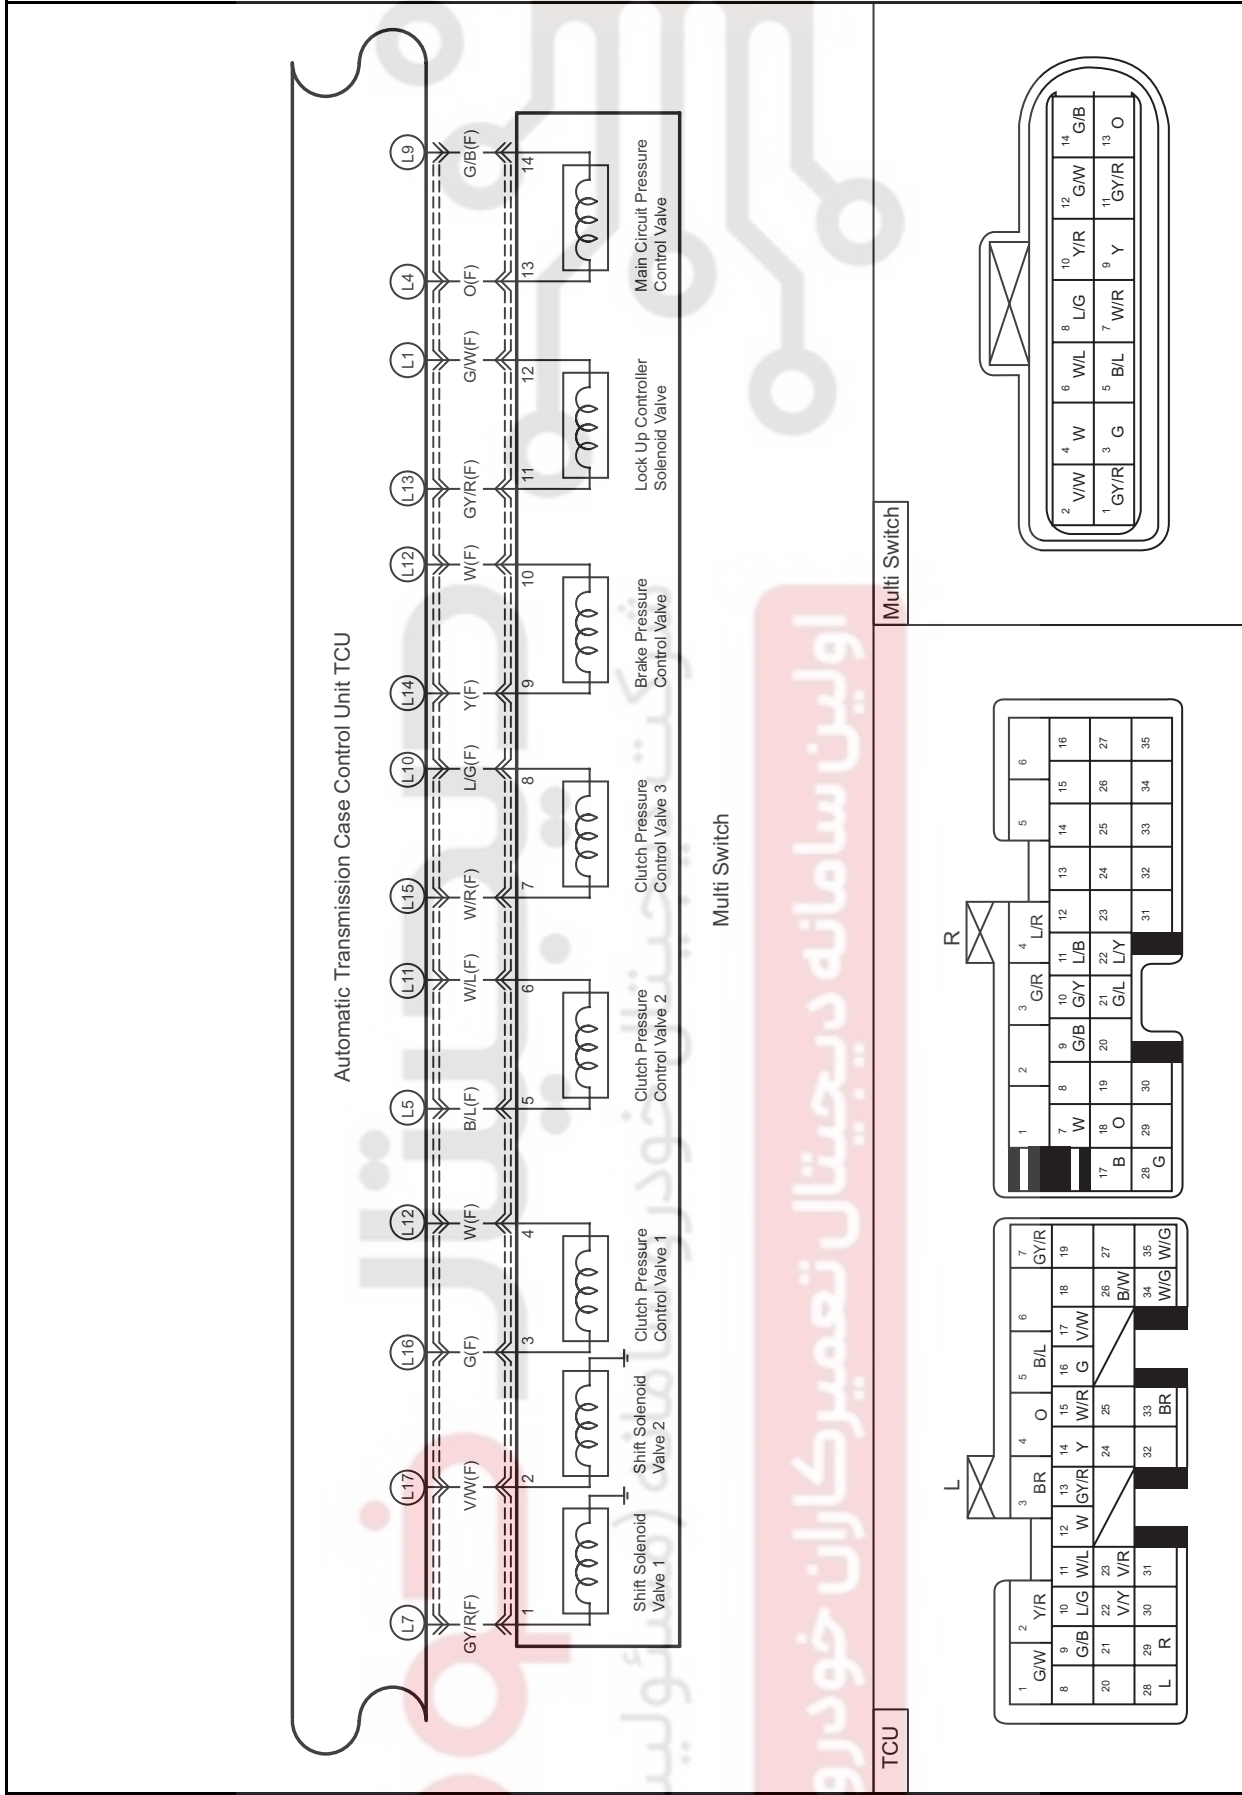

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Wire Harness Symbol: (F) (E) (I) (B)

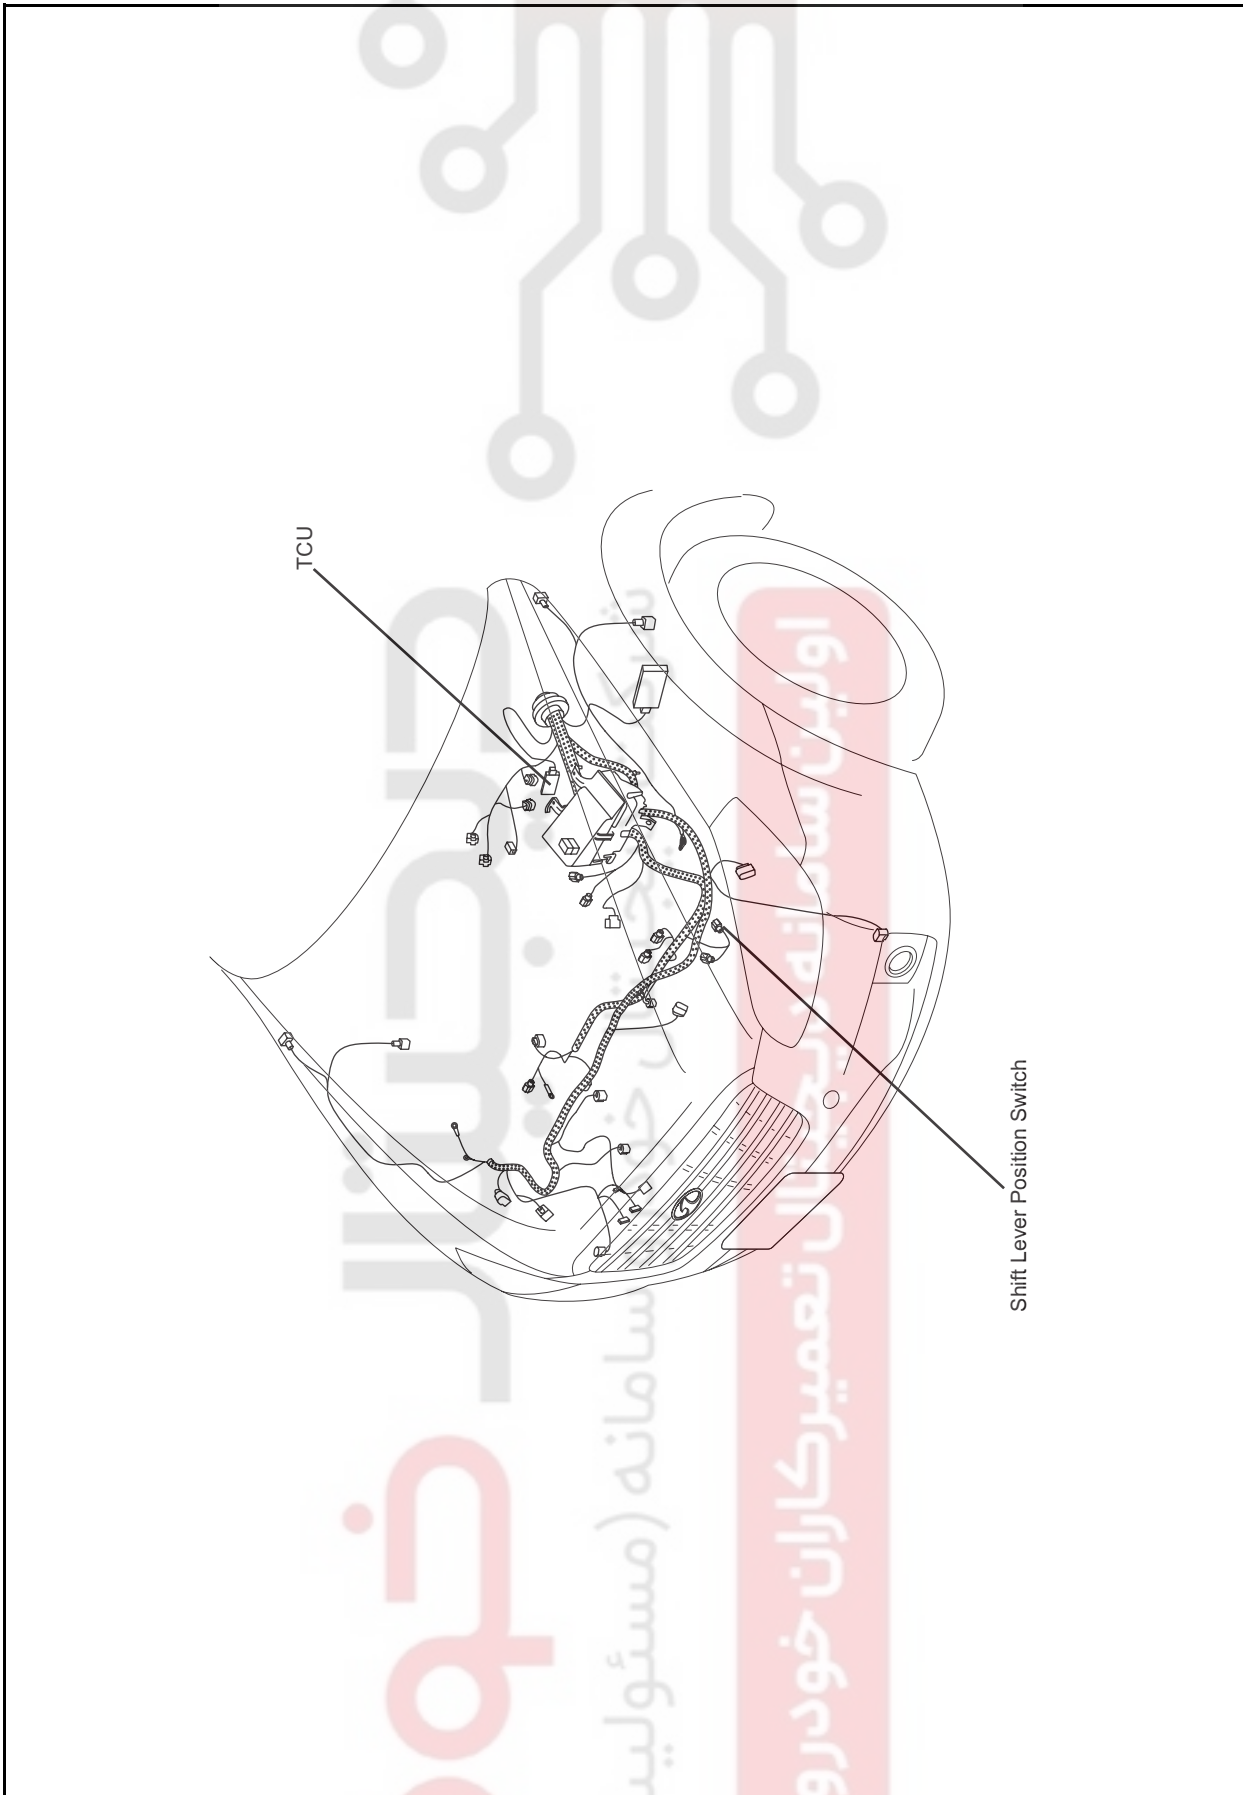


AT-CS-2

AT


AT Automatic Transmission CS Control System

AT-CS-3

AT Transmission Case Control System

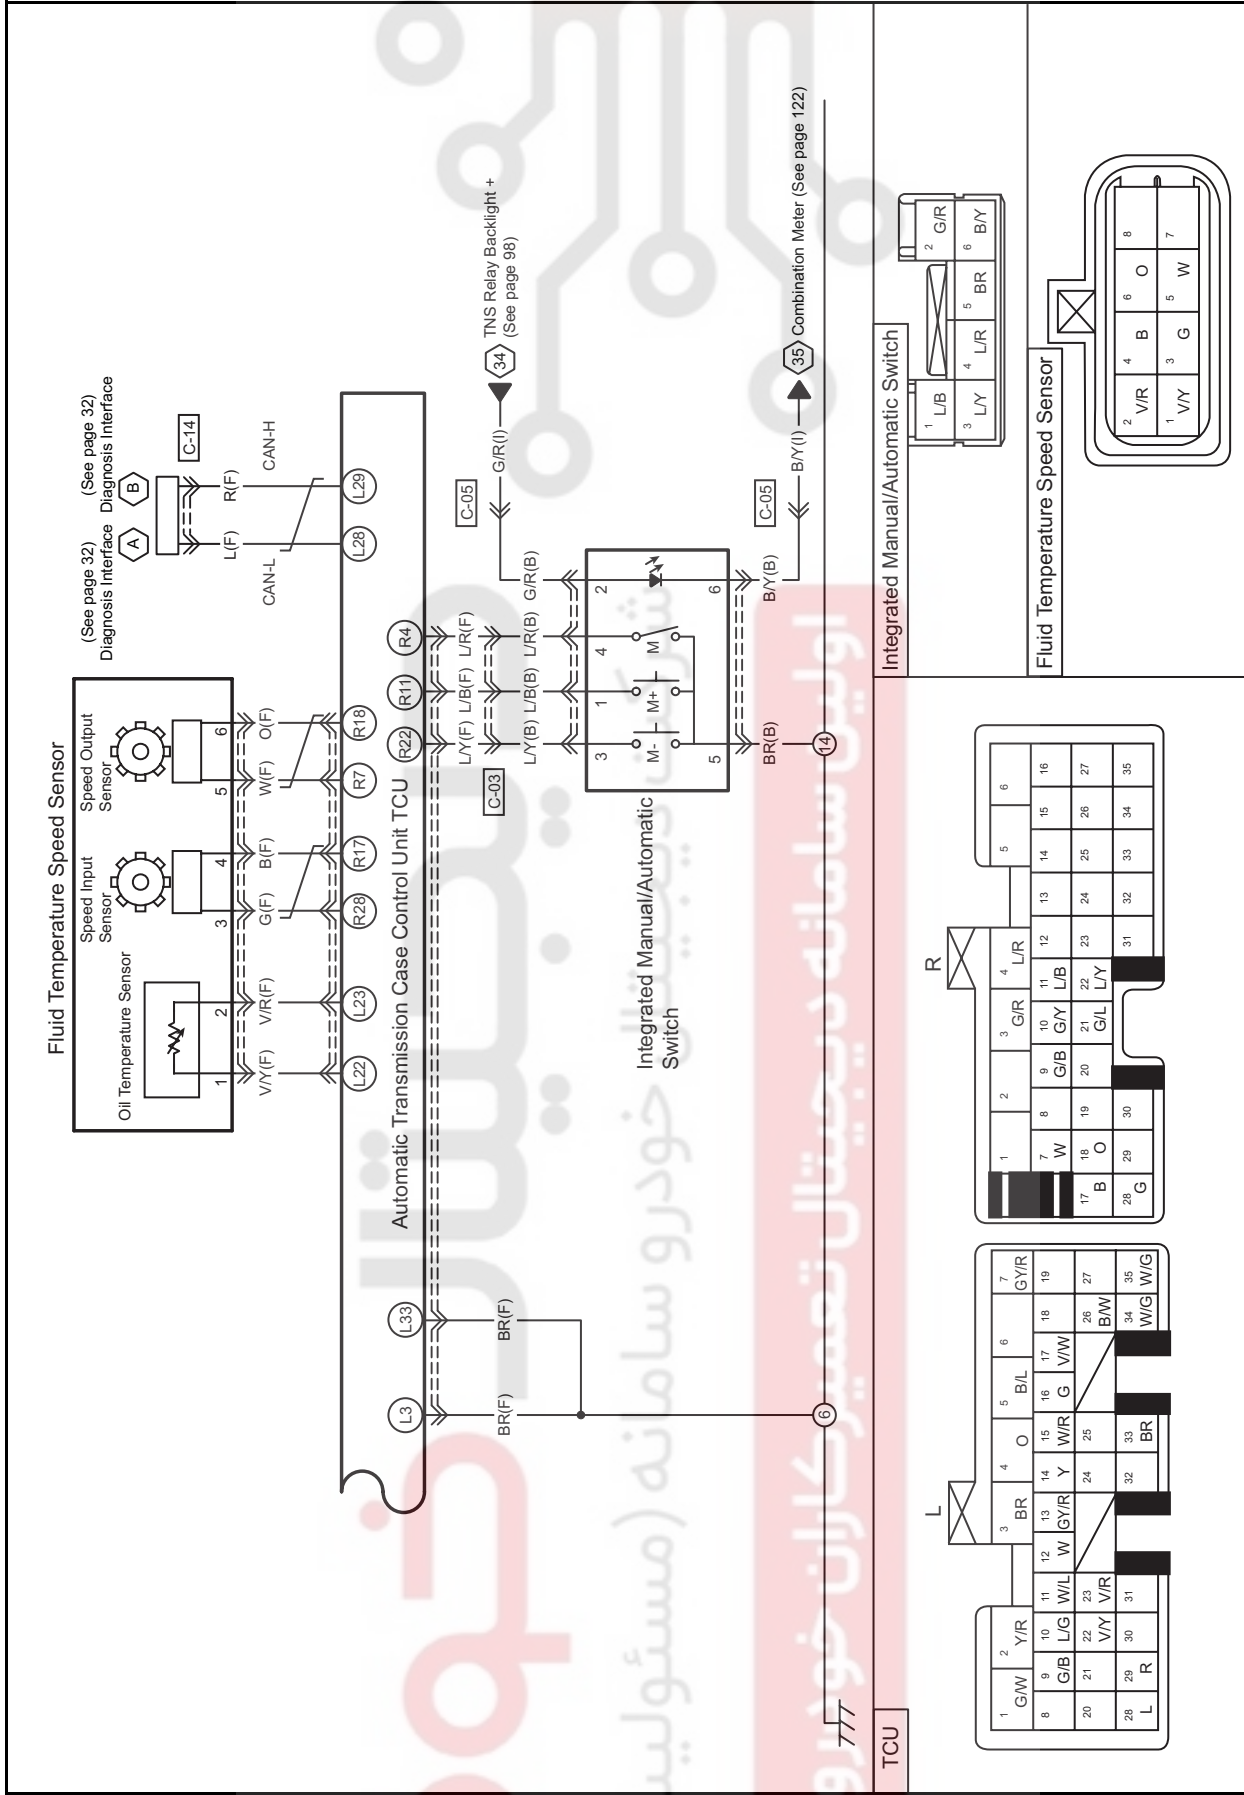

Wire Harness Symbol: (F) (E) (I) (B)

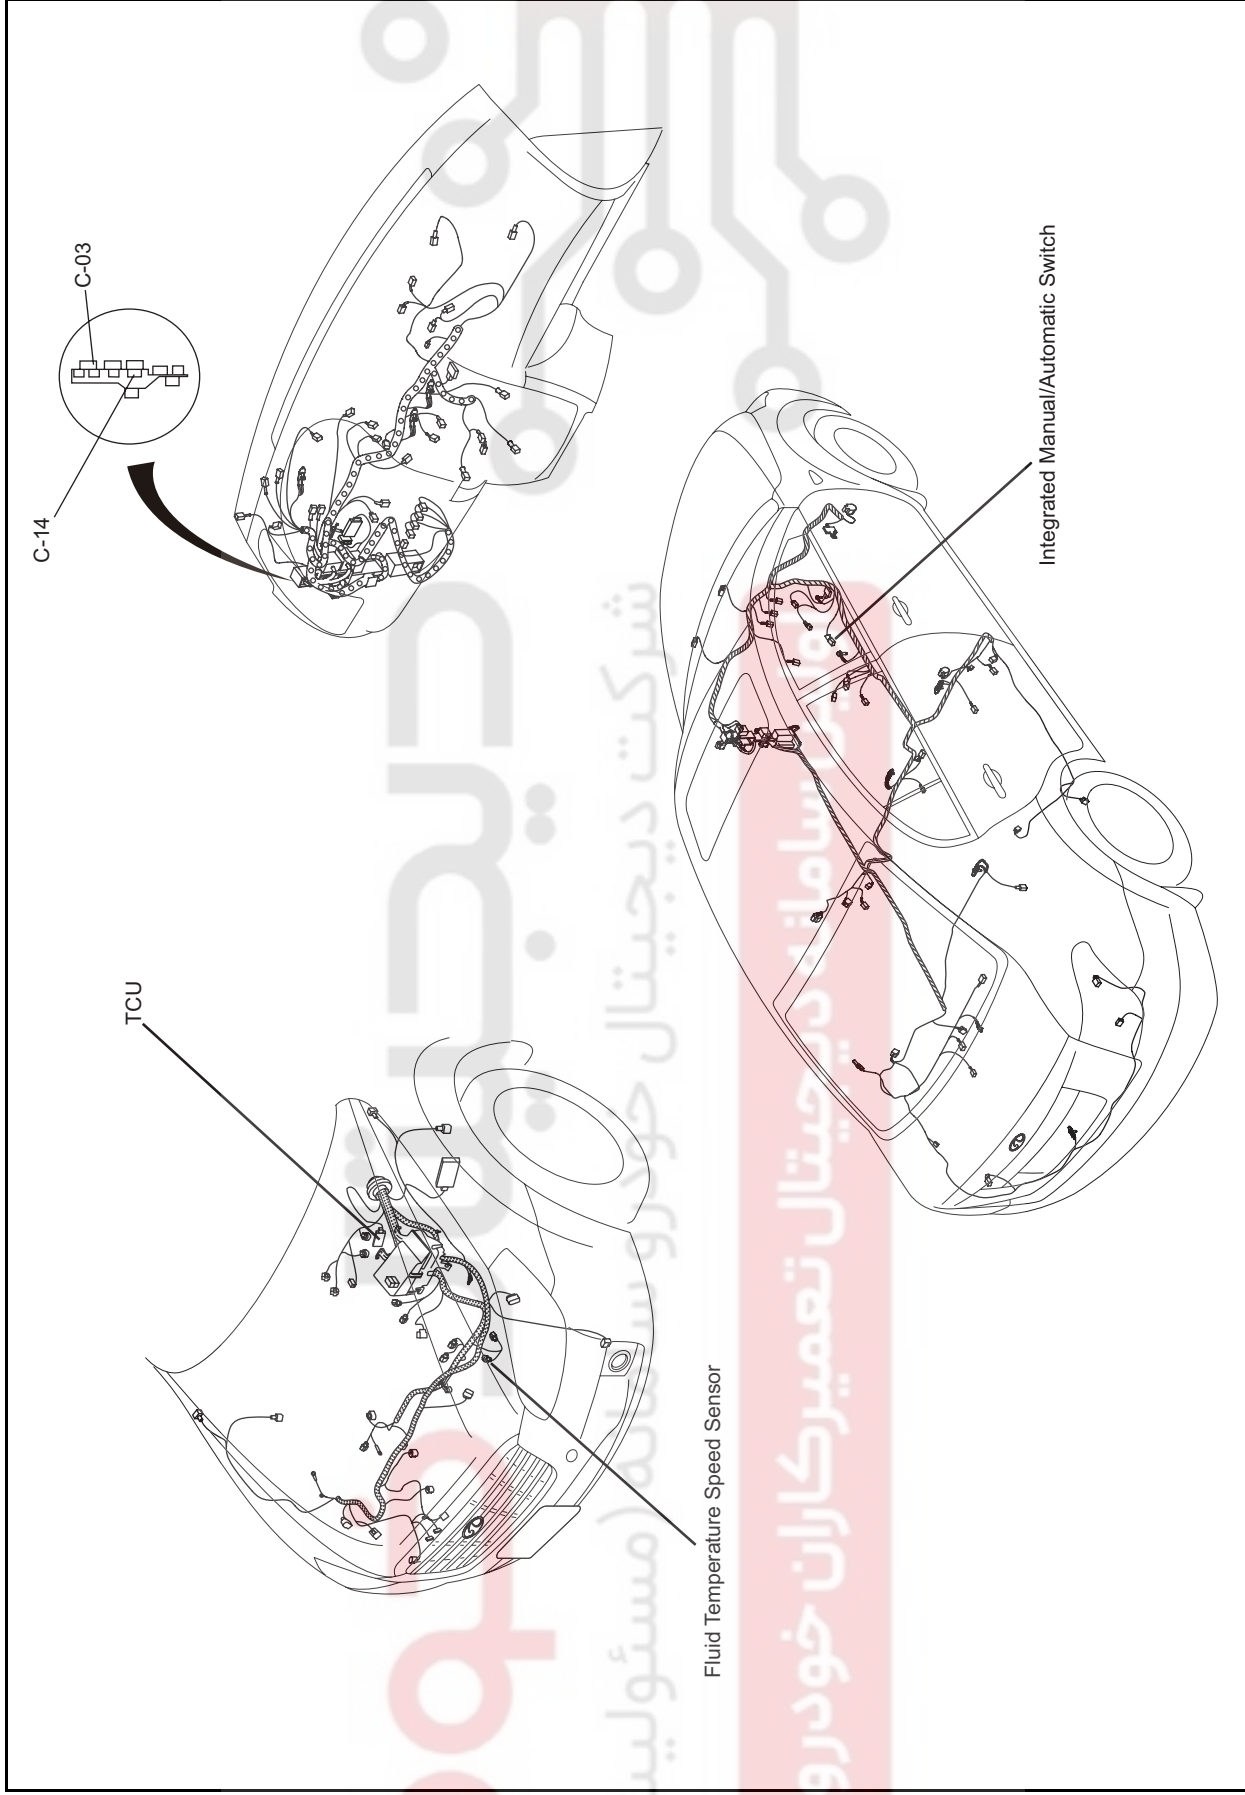


AT Automatic Transmission CS Control System

AT-CS-3

AT


ABS Anti-lock Brake System  
BR-ABS-1

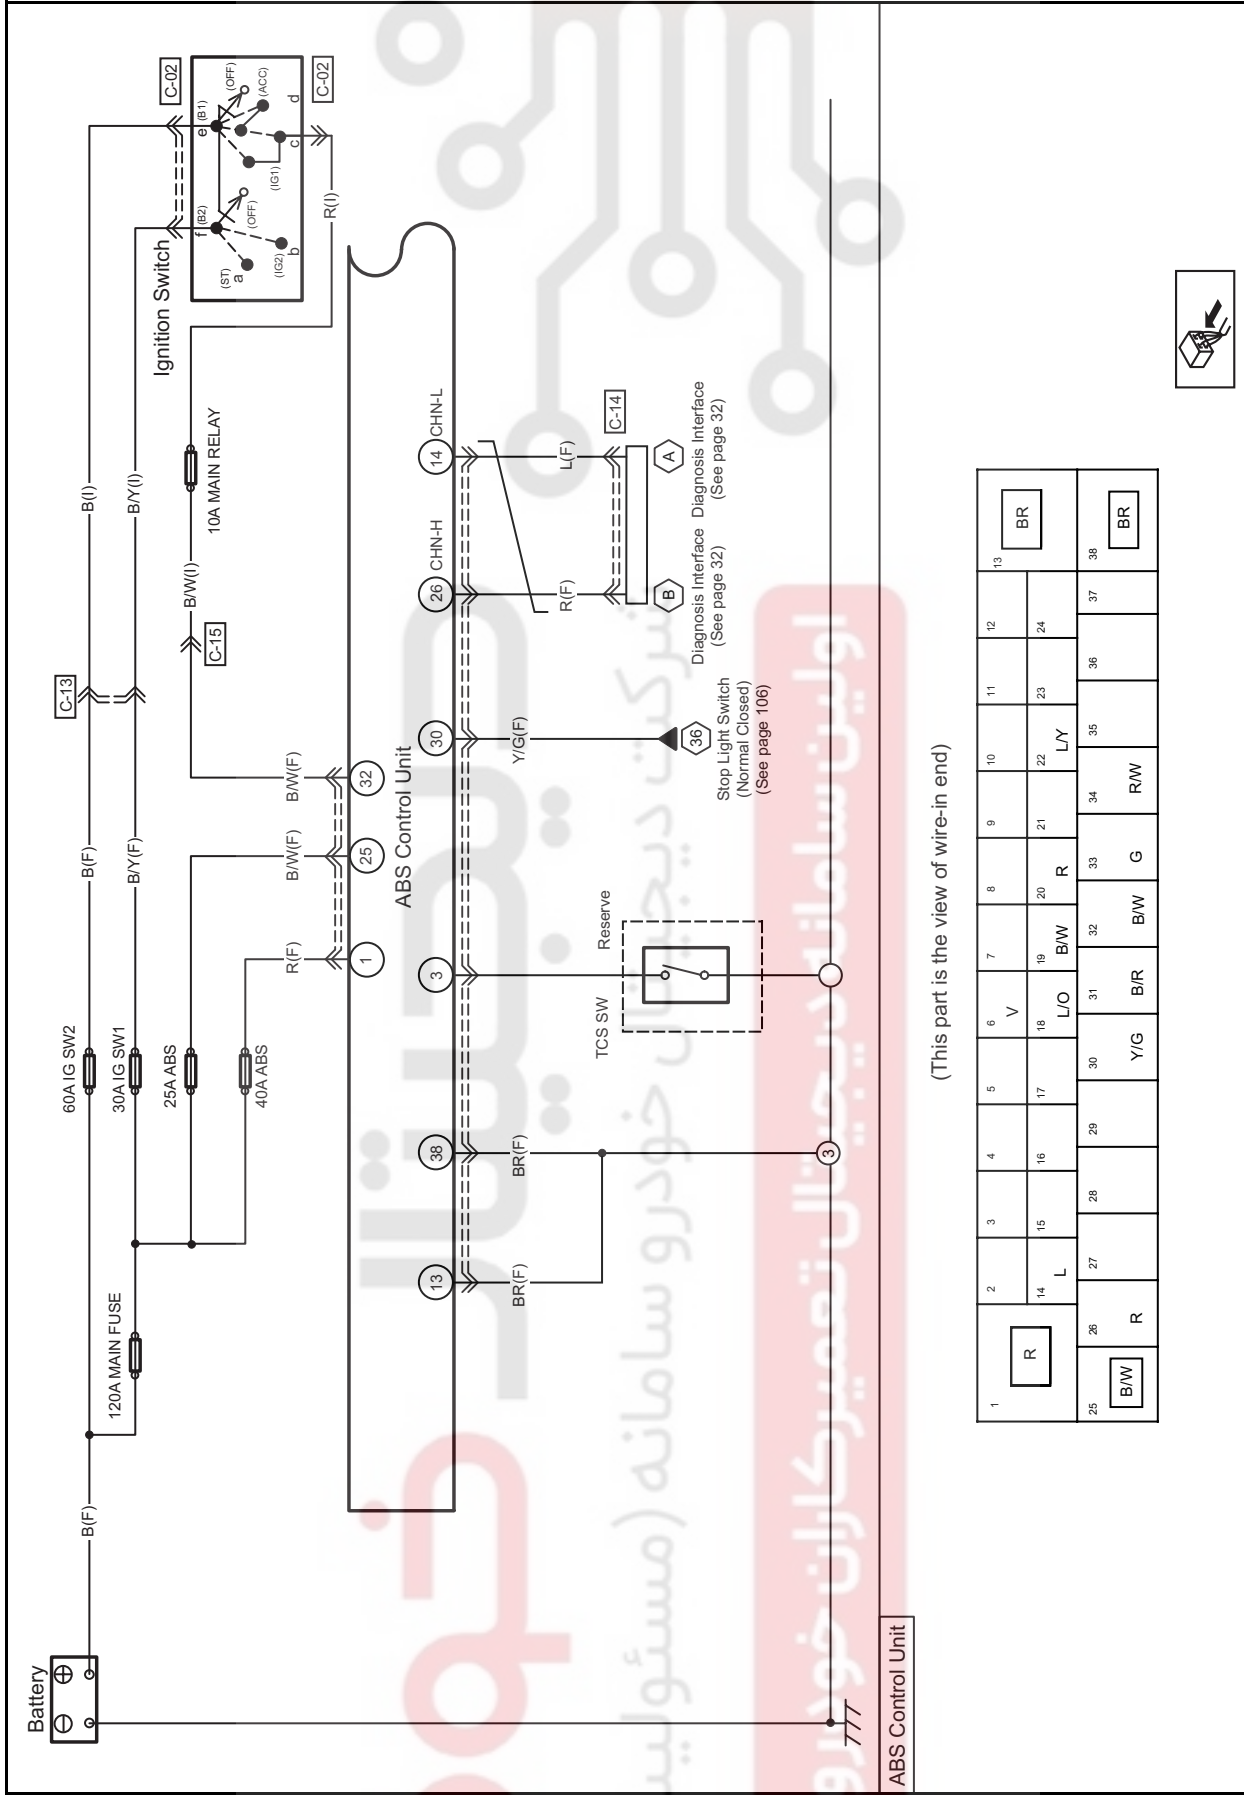

(This part is the view of wire-in end)

|    |     |   |    |    |    |    |    |     |     |     |    |     |     |    |    |
|----|-----|---|----|----|----|----|----|-----|-----|-----|----|-----|-----|----|----|
| 1  | 2   | 3 | 4  | 5  | 6  | 7  | 8  | 9   | 10  | 11  | 12 | 13  |     |    |    |
|    | R   |   |    | V  |    |    |    |     |     |     |    | BR  |     |    |    |
| 25 | B/W | R | 26 | 27 | 28 | 29 | 30 | 31  | 32  | 33  | 34 | 35  | 36  | 37 | 38 |
|    |     |   |    |    |    |    |    | Y/G | B/R | B/W | G  | R/W |     |    | BR |
|    |     | L | 14 | 15 | 16 | 17 | 18 | L/O | B/W | R   | 20 | 21  | 22  | 23 | 24 |
|    |     |   |    |    |    |    |    |     |     |     |    |     | L/Y |    |    |

Wire Harness Symbol: (F) (E) (I) (B)

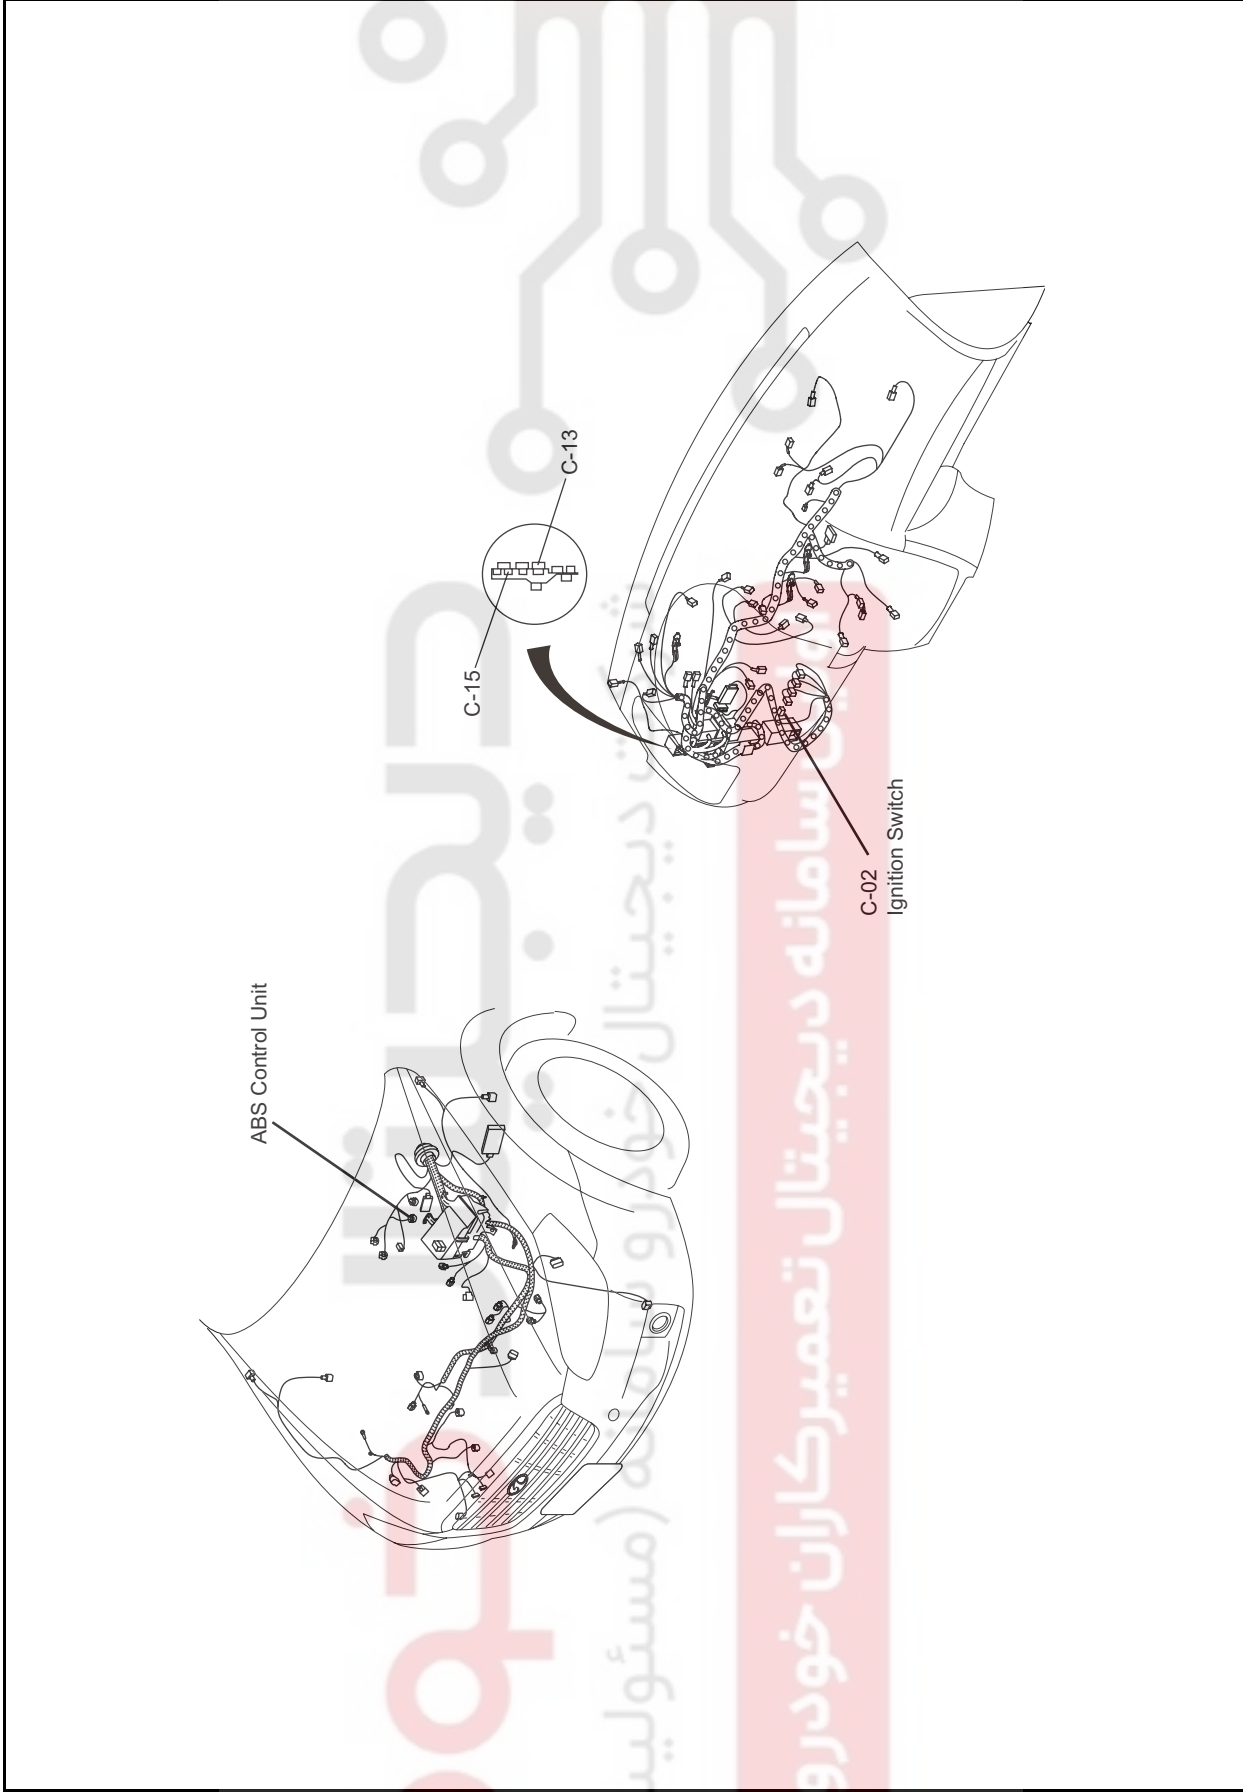

BR-ABS-1

BR

BR Brake ABS Anti-lock Control System



Wire Harness Symbol: (F) (E) (I) (B)




BR-ABS-2

BR

BR Brake ABS Anti-lock Control System

AC-CS-1


Automatic Air Conditioner

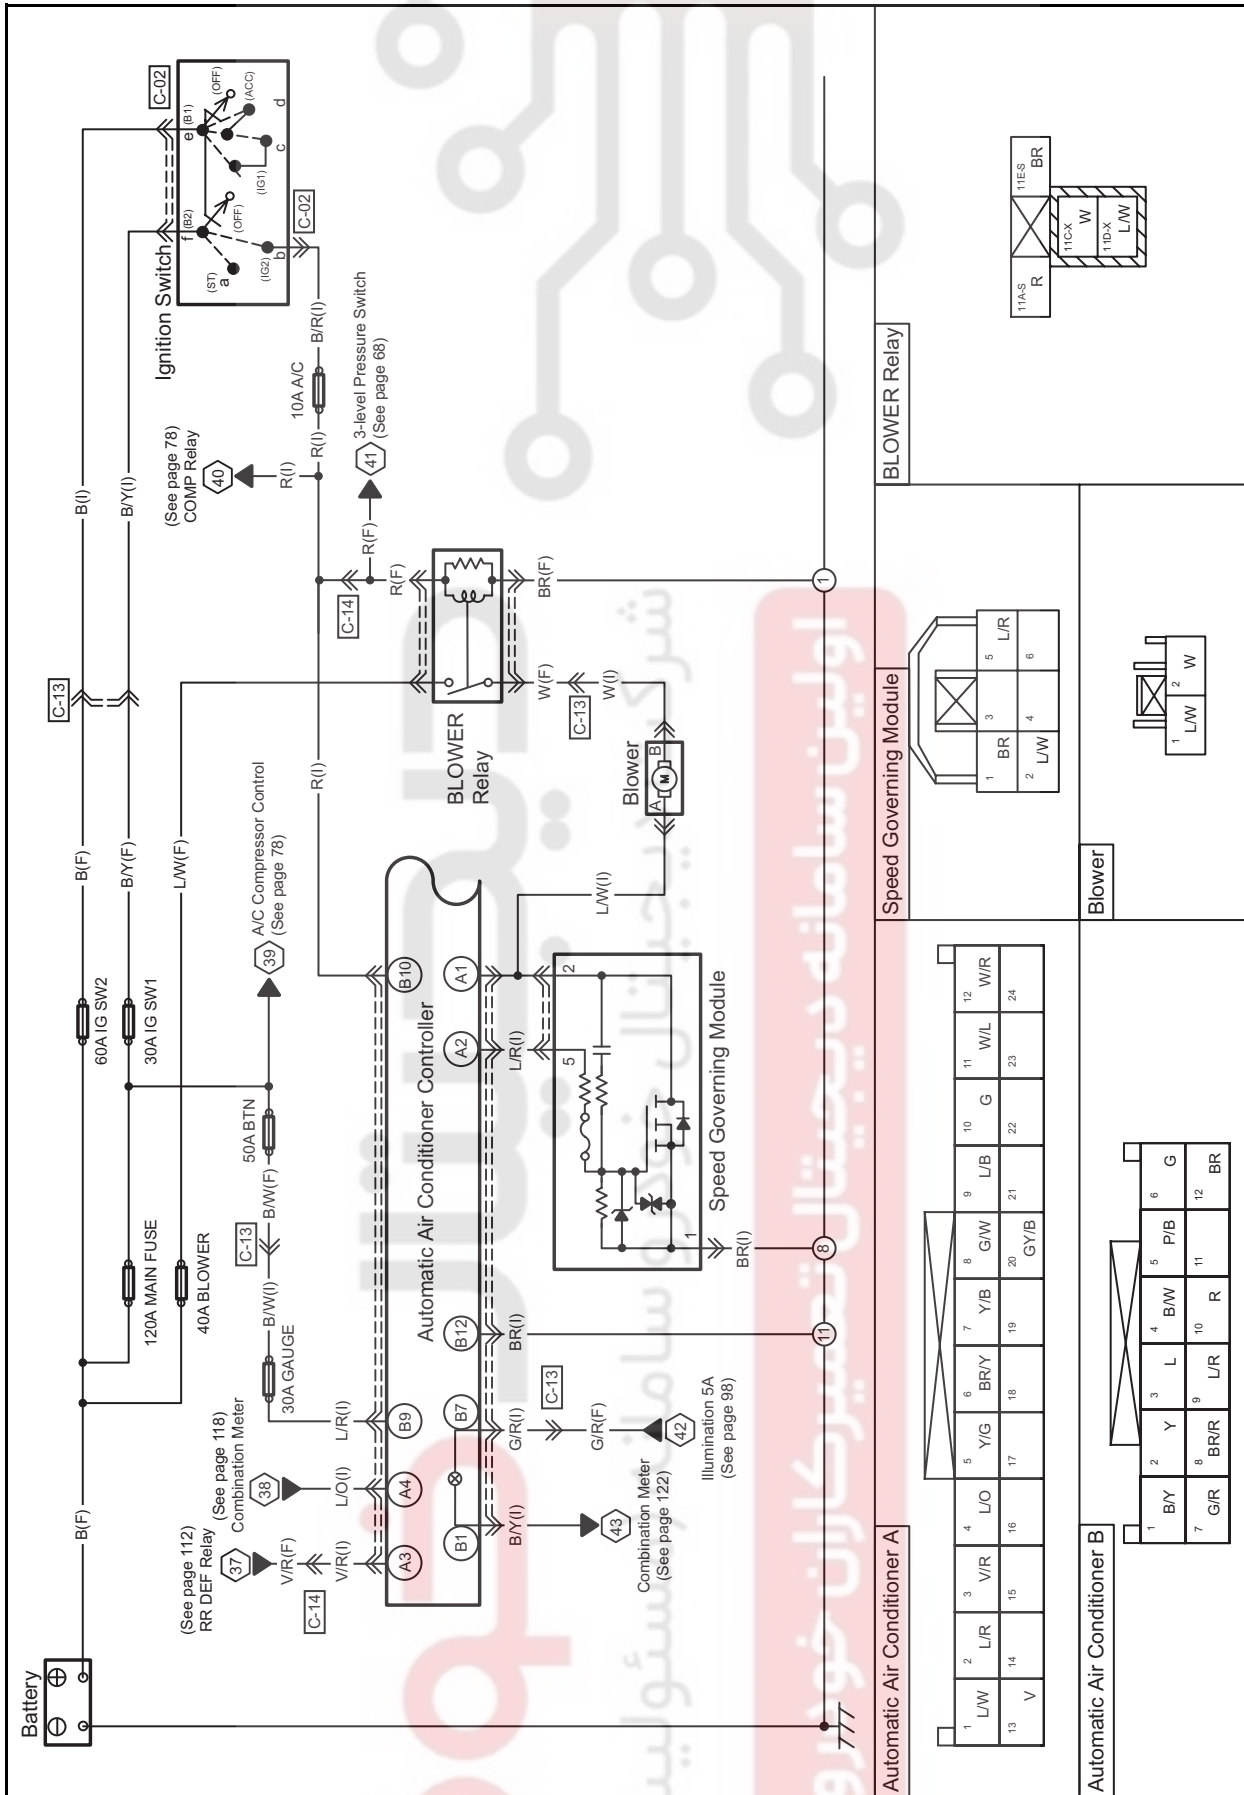

Automatic Air Conditioner A

|    |     |    |     |    |     |    |     |    |     |    |      |    |     |    |      |    |     |    |   |    |     |    |     |
|----|-----|----|-----|----|-----|----|-----|----|-----|----|------|----|-----|----|------|----|-----|----|---|----|-----|----|-----|
| 1  | L/W | 2  | L/R | 3  | V/R | 4  | L/O | 5  | Y/G | 6  | BR/Y | 7  | Y/B | 8  | G/W  | 9  | L/B | 10 | G | 11 | W/L | 12 | W/R |
| 13 | V   | 14 |     | 15 |     | 16 |     | 17 |     | 18 |      | 19 |     | 20 | GY/B | 21 |     | 22 |   | 23 |     | 24 |     |


Speed Governing Module

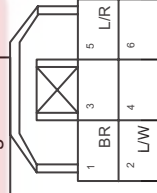


Automatic Air Conditioner B

|   |     |   |      |   |     |    |     |    |     |    |    |
|---|-----|---|------|---|-----|----|-----|----|-----|----|----|
| 1 | B/Y | 2 | Y    | 3 | L   | 4  | B/W | 5  | P/B | 6  | G  |
| 7 | G/R | 8 | BR/R | 9 | L/R | 10 | R   | 11 |     | 12 | BR |

 
Blower



BLOWER Relay

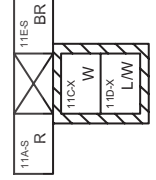

Wire Harness Symbol: (F) (E) (I) (B)

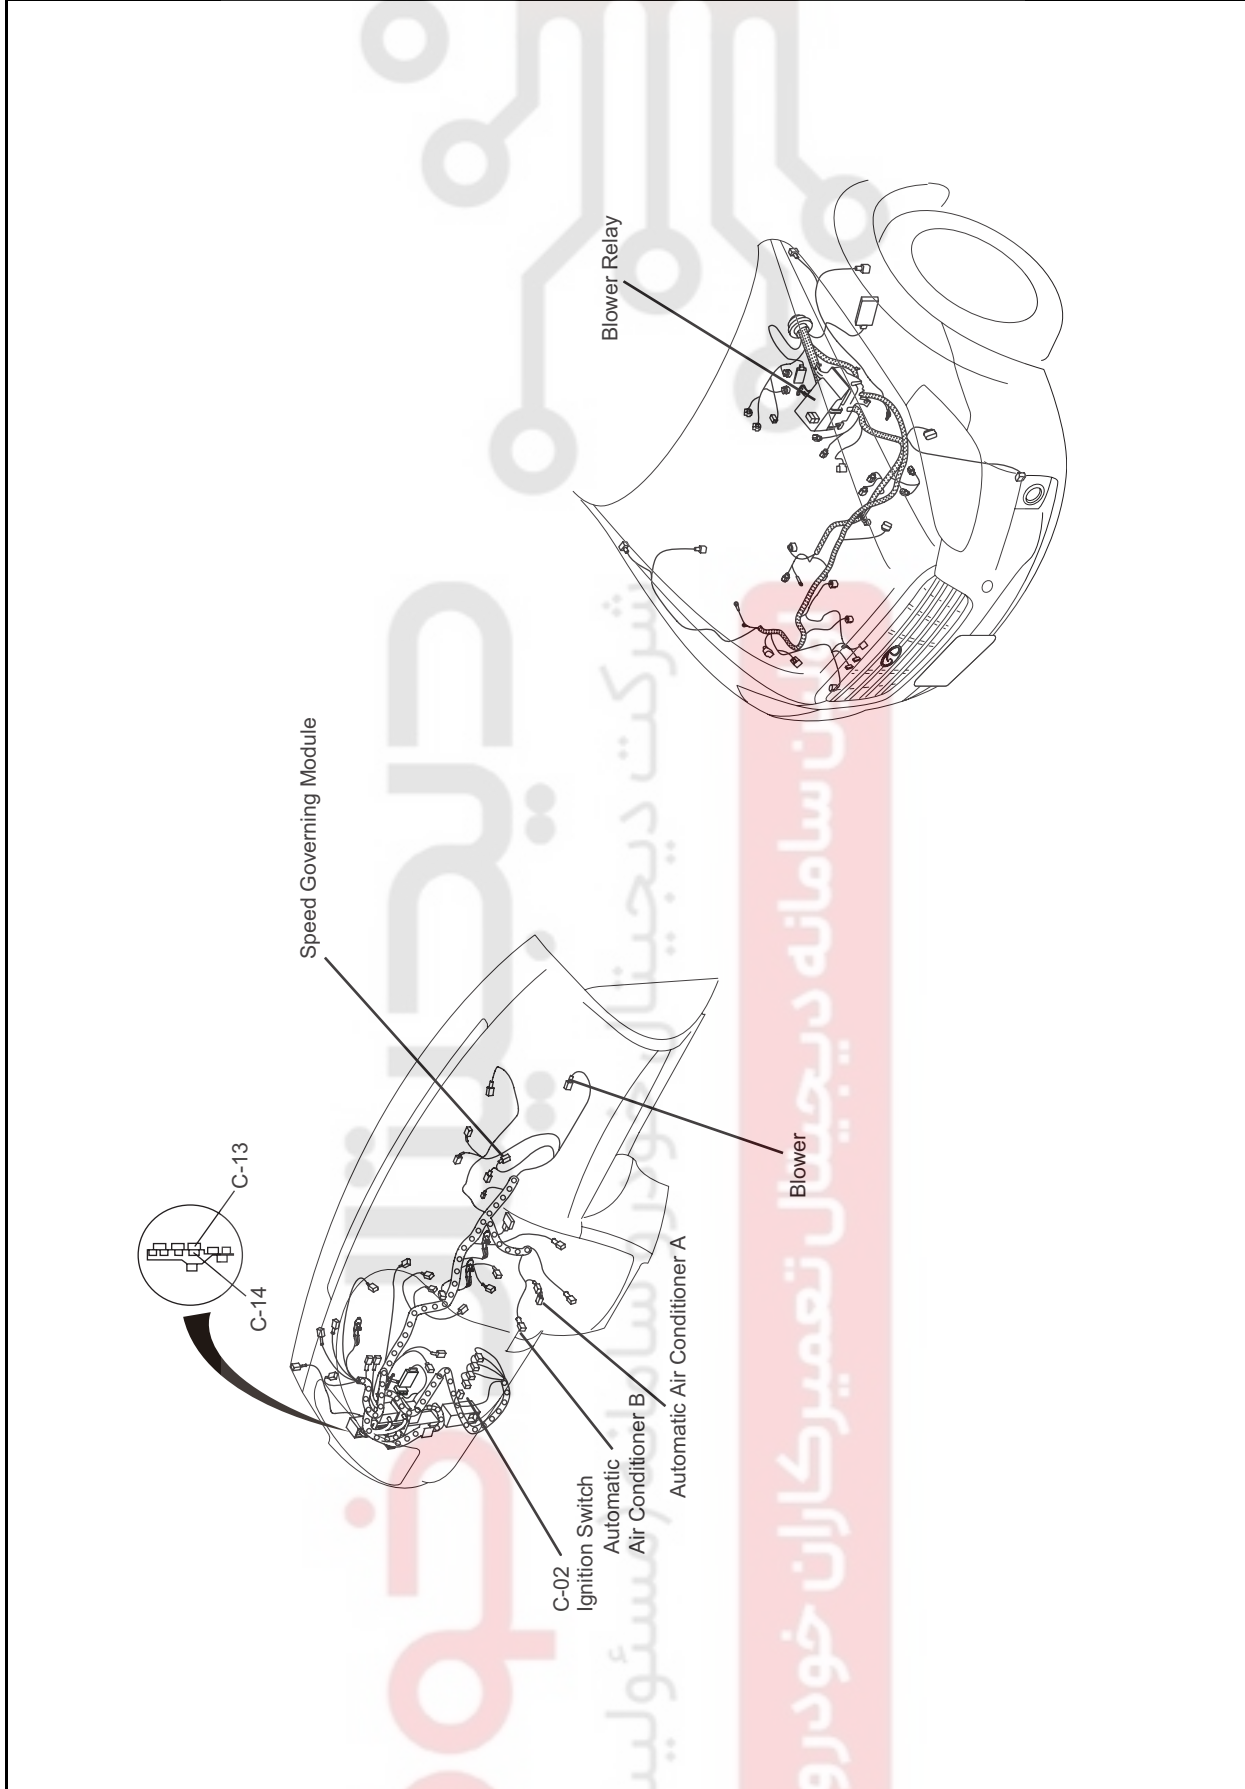


AC-CS-1

AC

AC Air Conditioner CS Control System

AC-CS-2


Automatic Air Conditioner

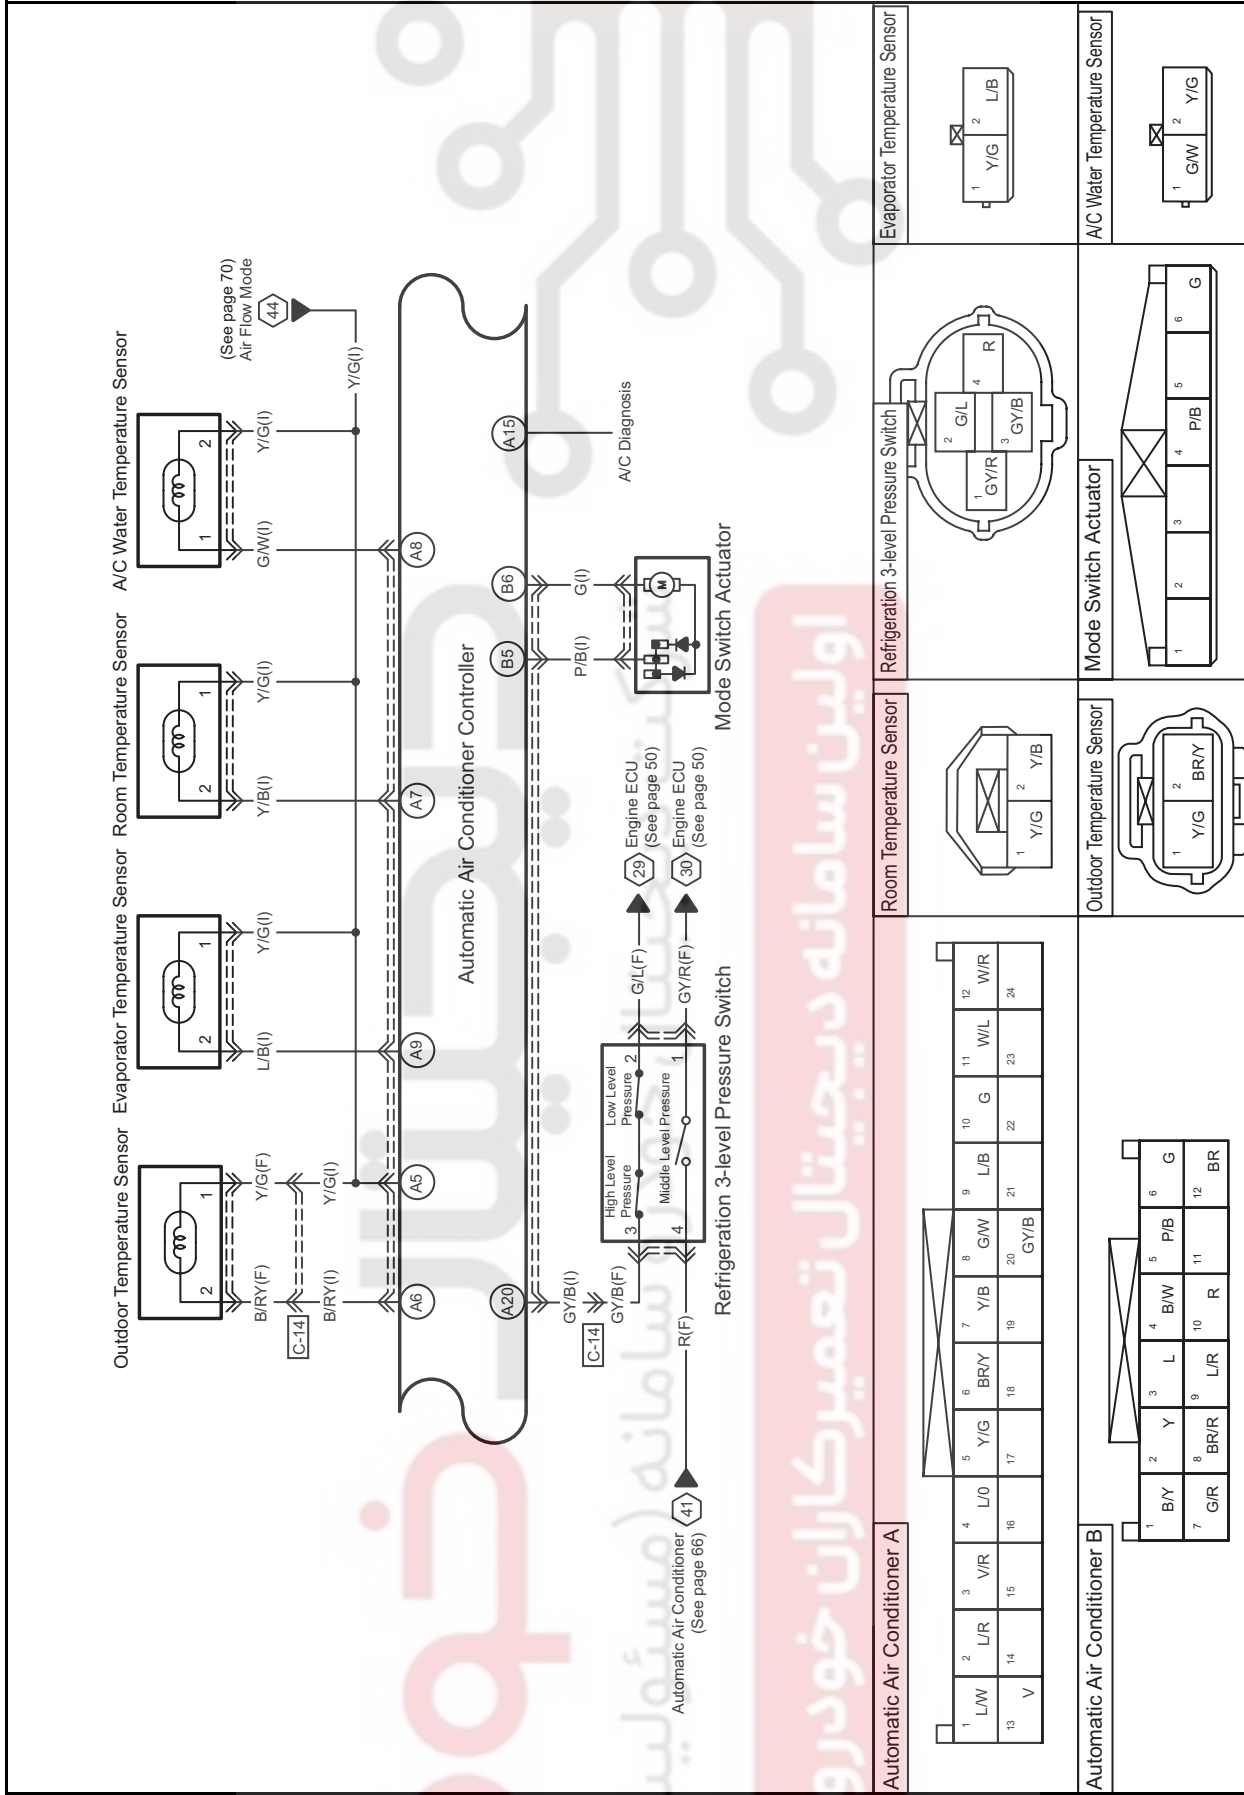

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

سامانه مسئولیت محدود

Wire Harness Symbol: (F) (E) (I) (B)

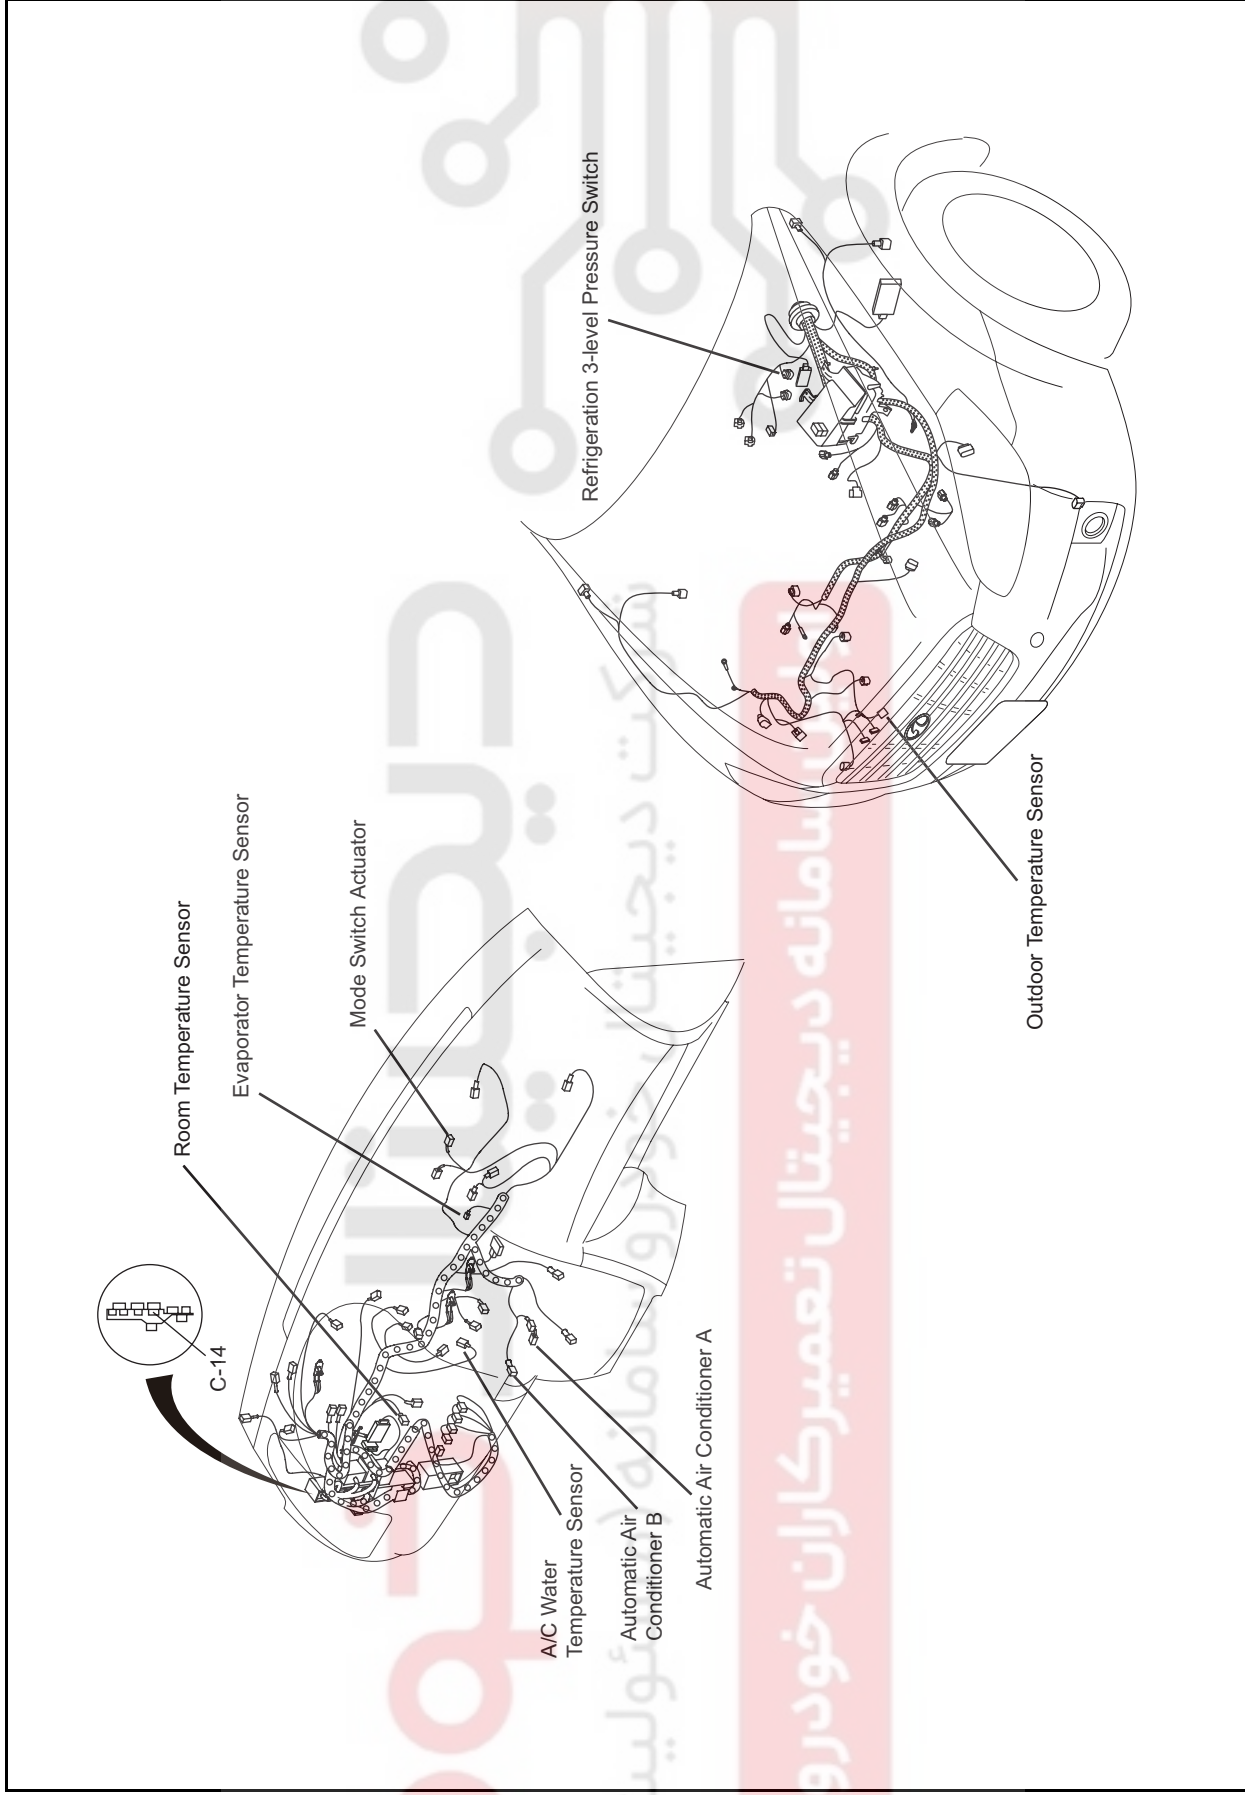


AC-CS-2

AC


AC Air Conditioner CS Control System

AC-CS-3

Automatic Air Conditioner

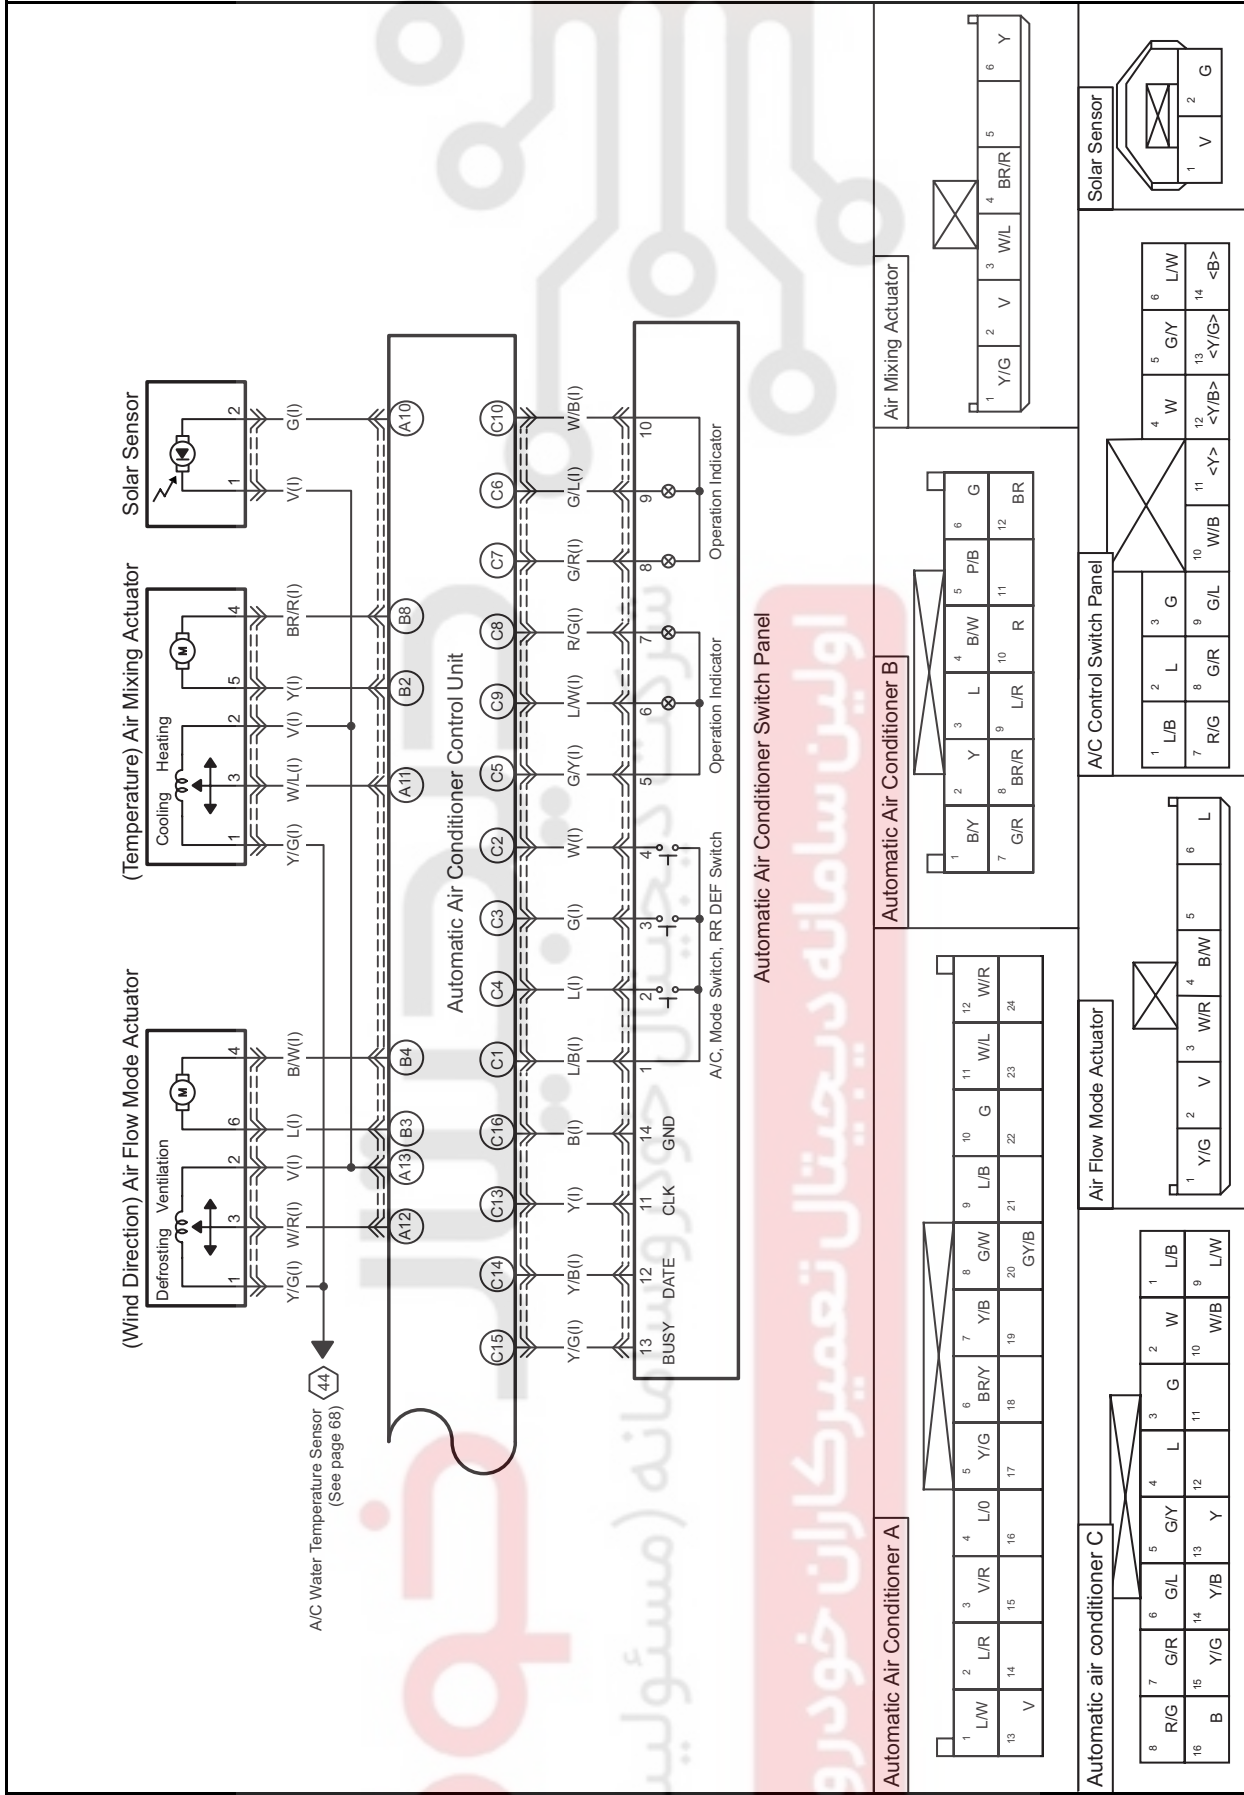

Wire Harness Symbol: (F) (E) (I) (B)

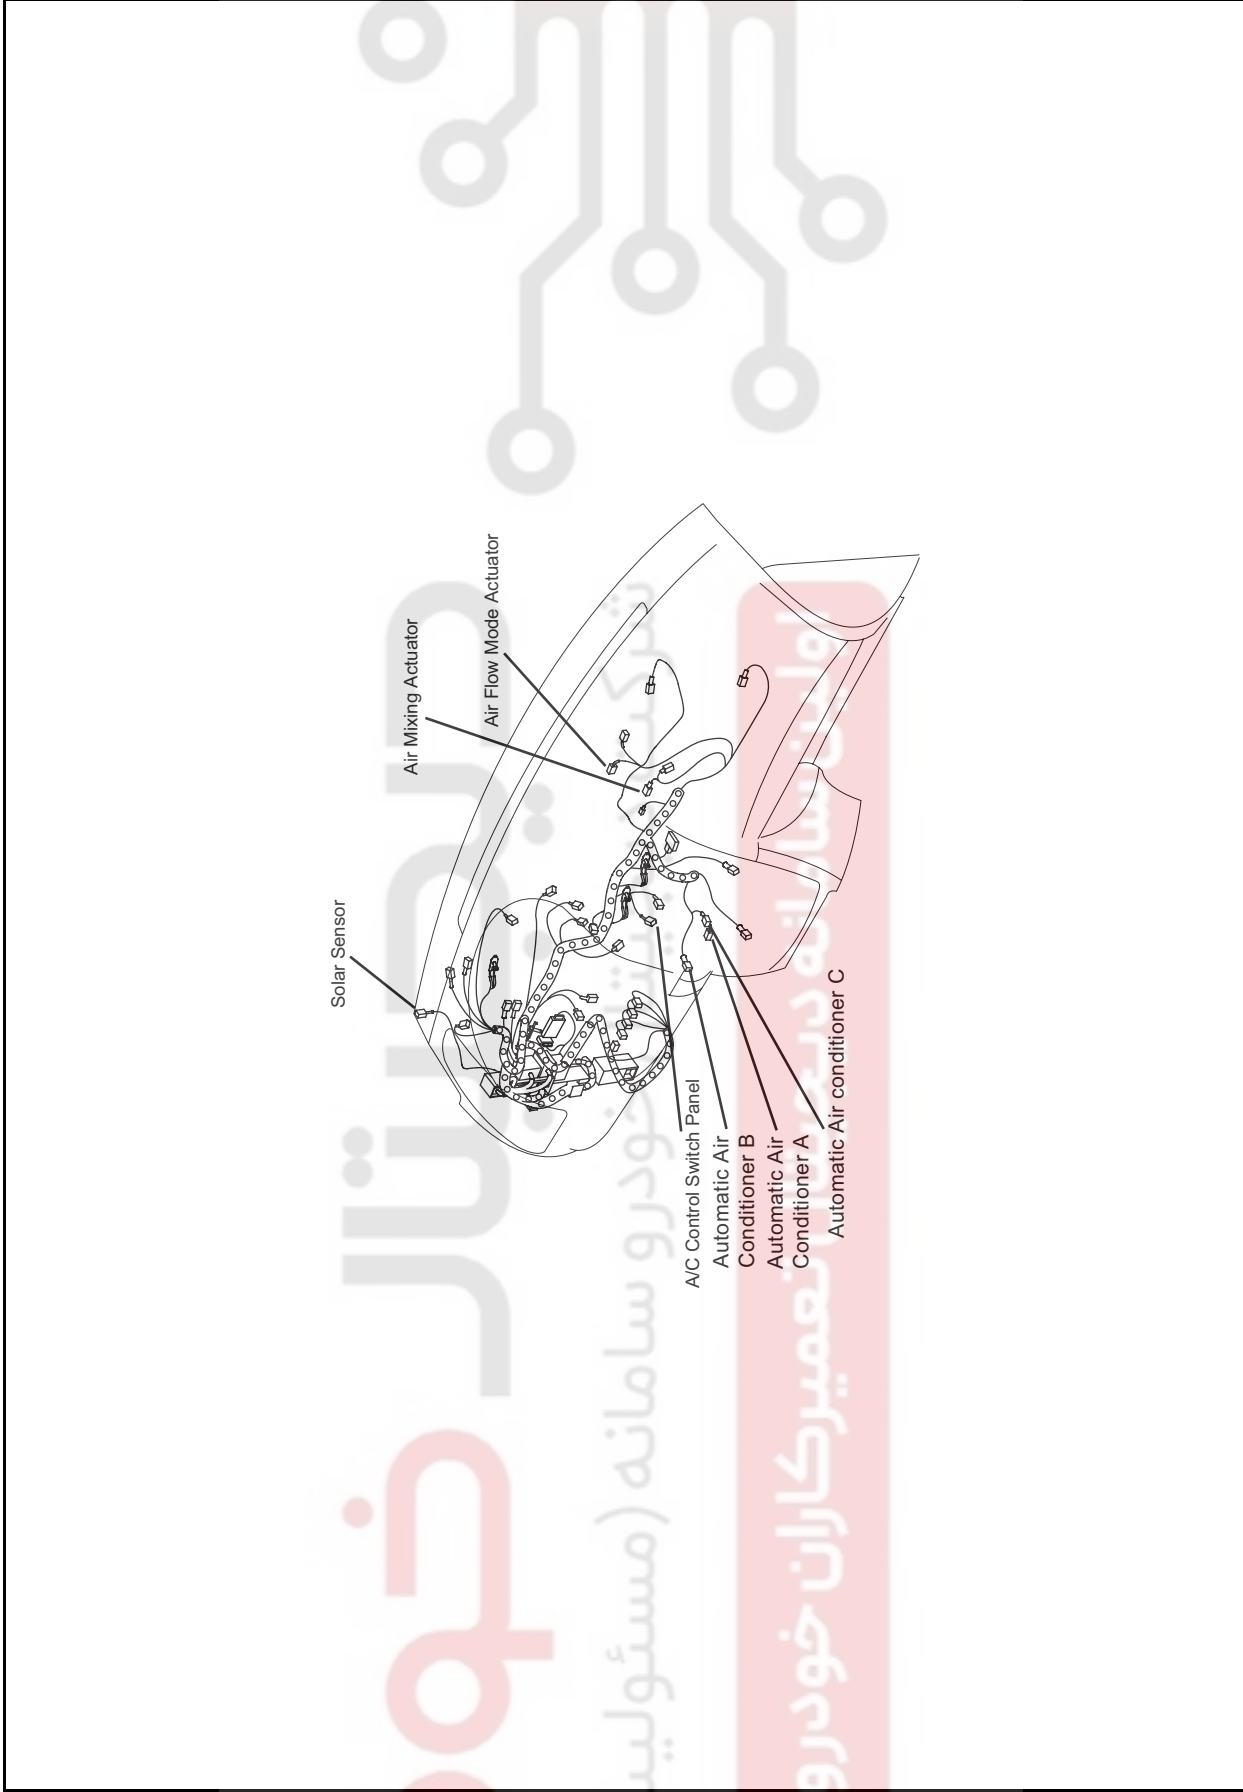


AC-CS-3

AC


AC Air Conditioner CS Control System

AC-CS-4

Manual Air Conditioner

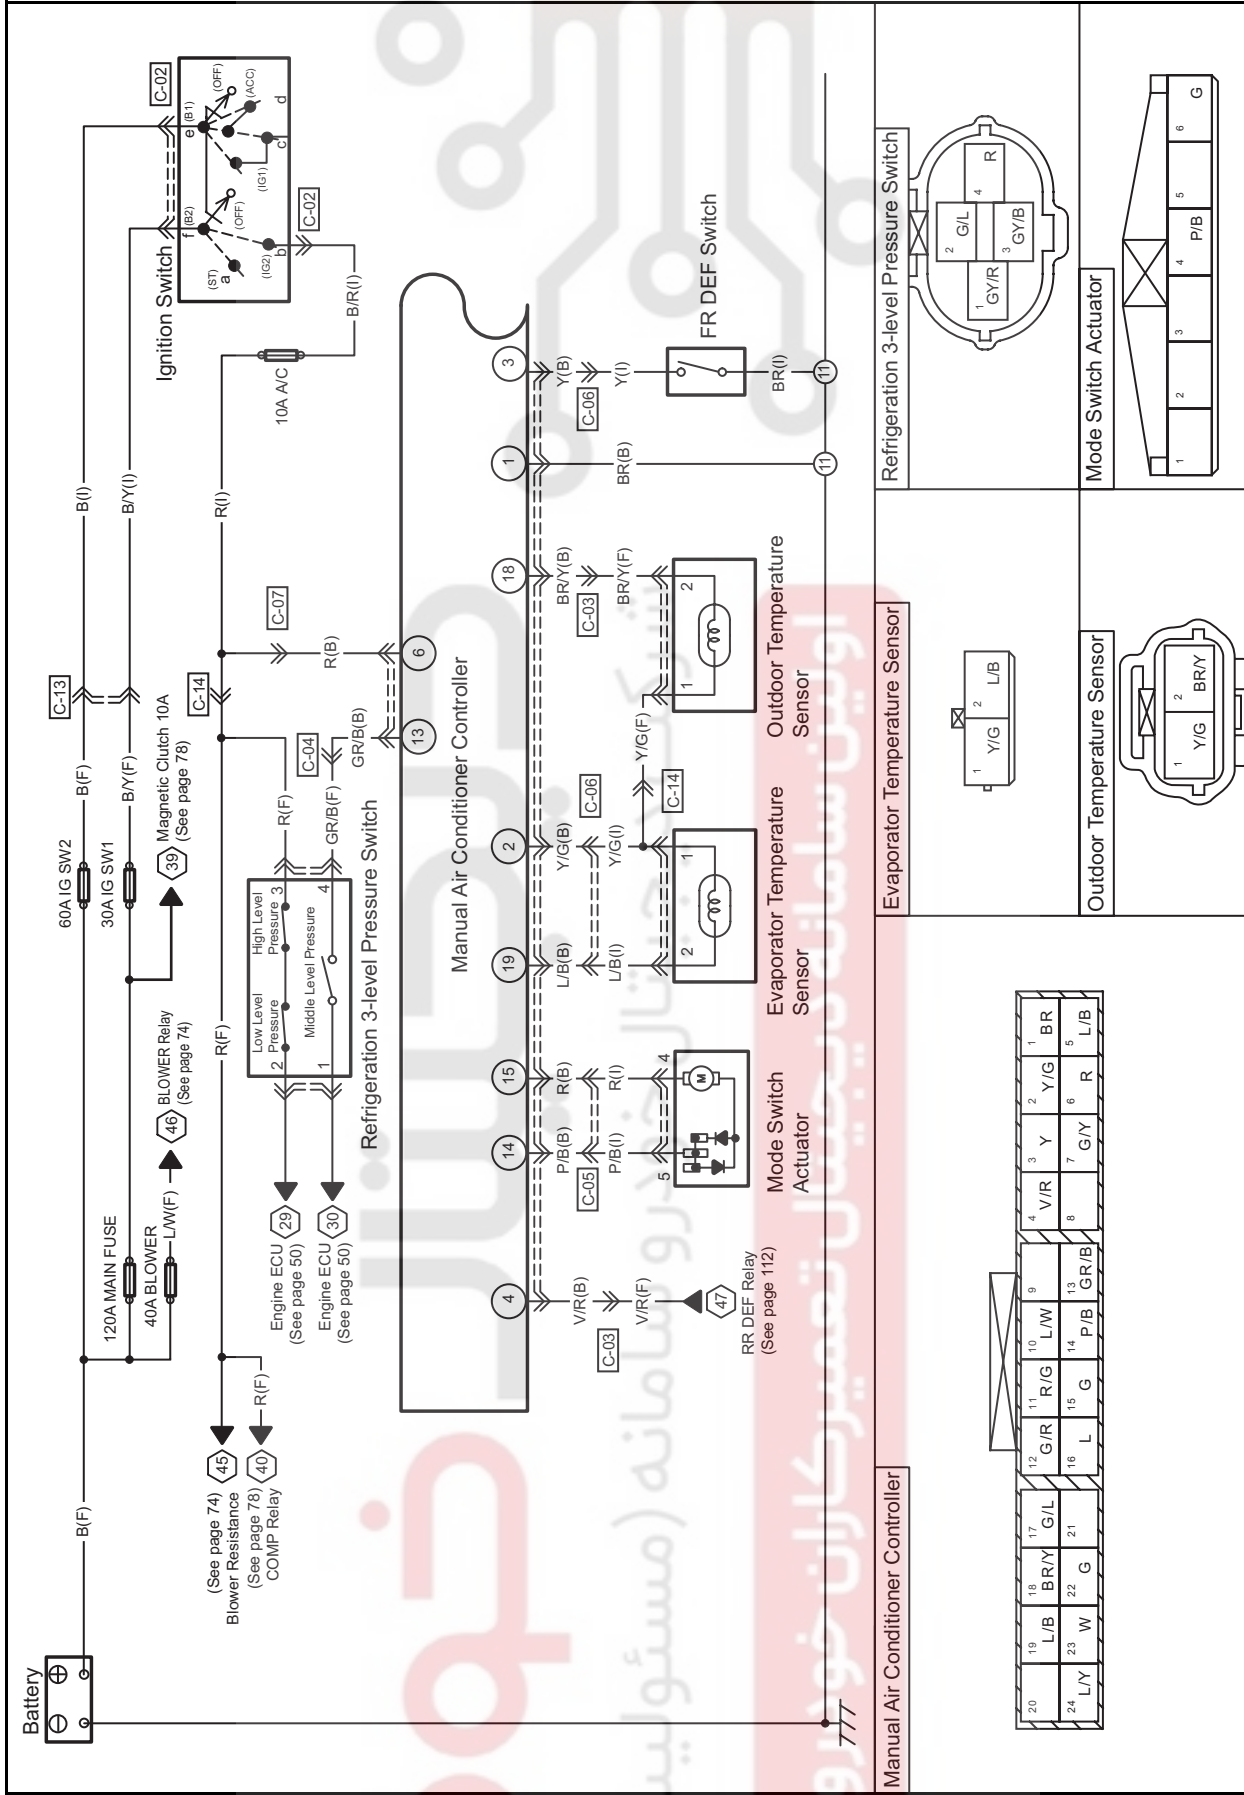

Wire Harness Symbol: (F) (E) (I) (B)

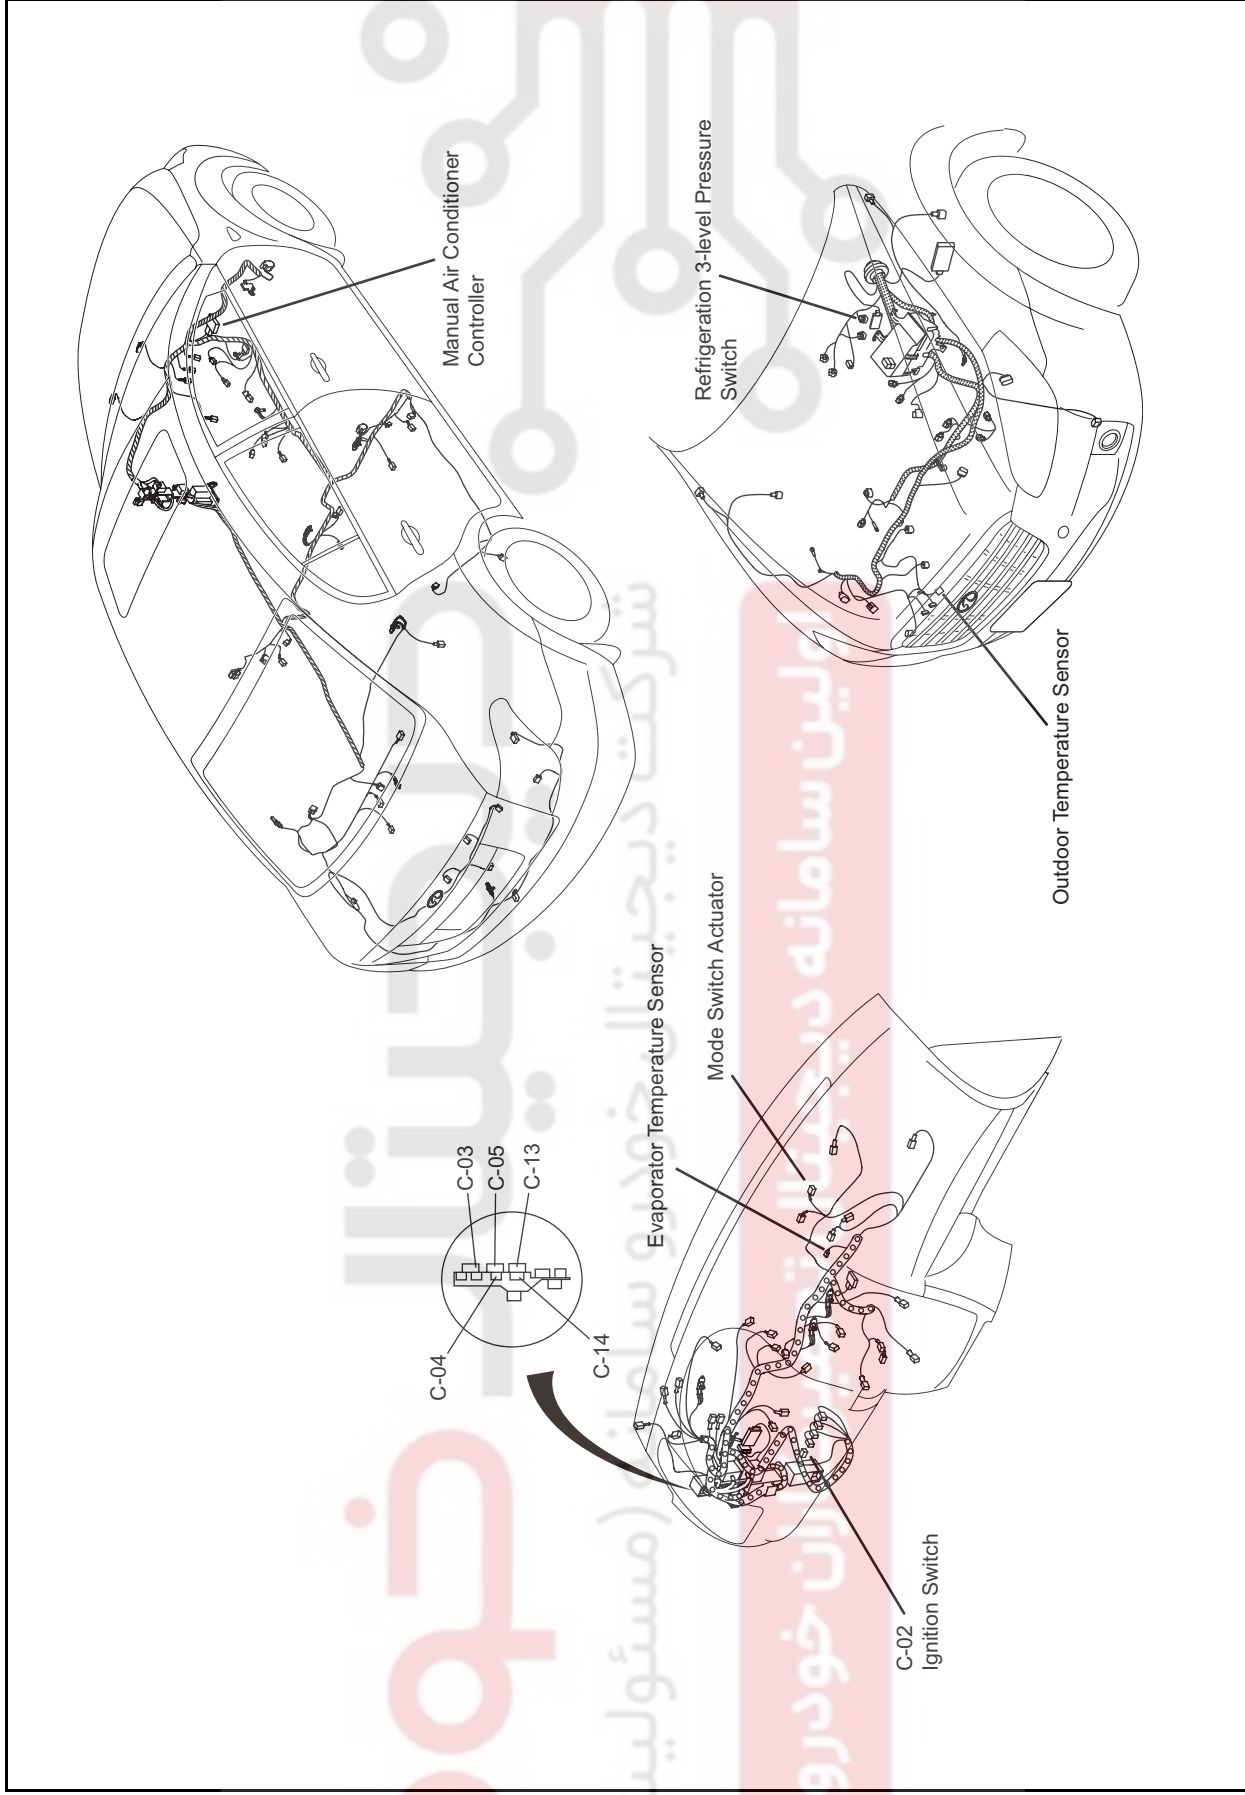


AC-CS-4

AC


AC Air Conditioner CS Control System

AC-CS-5

Manual Air Conditioner

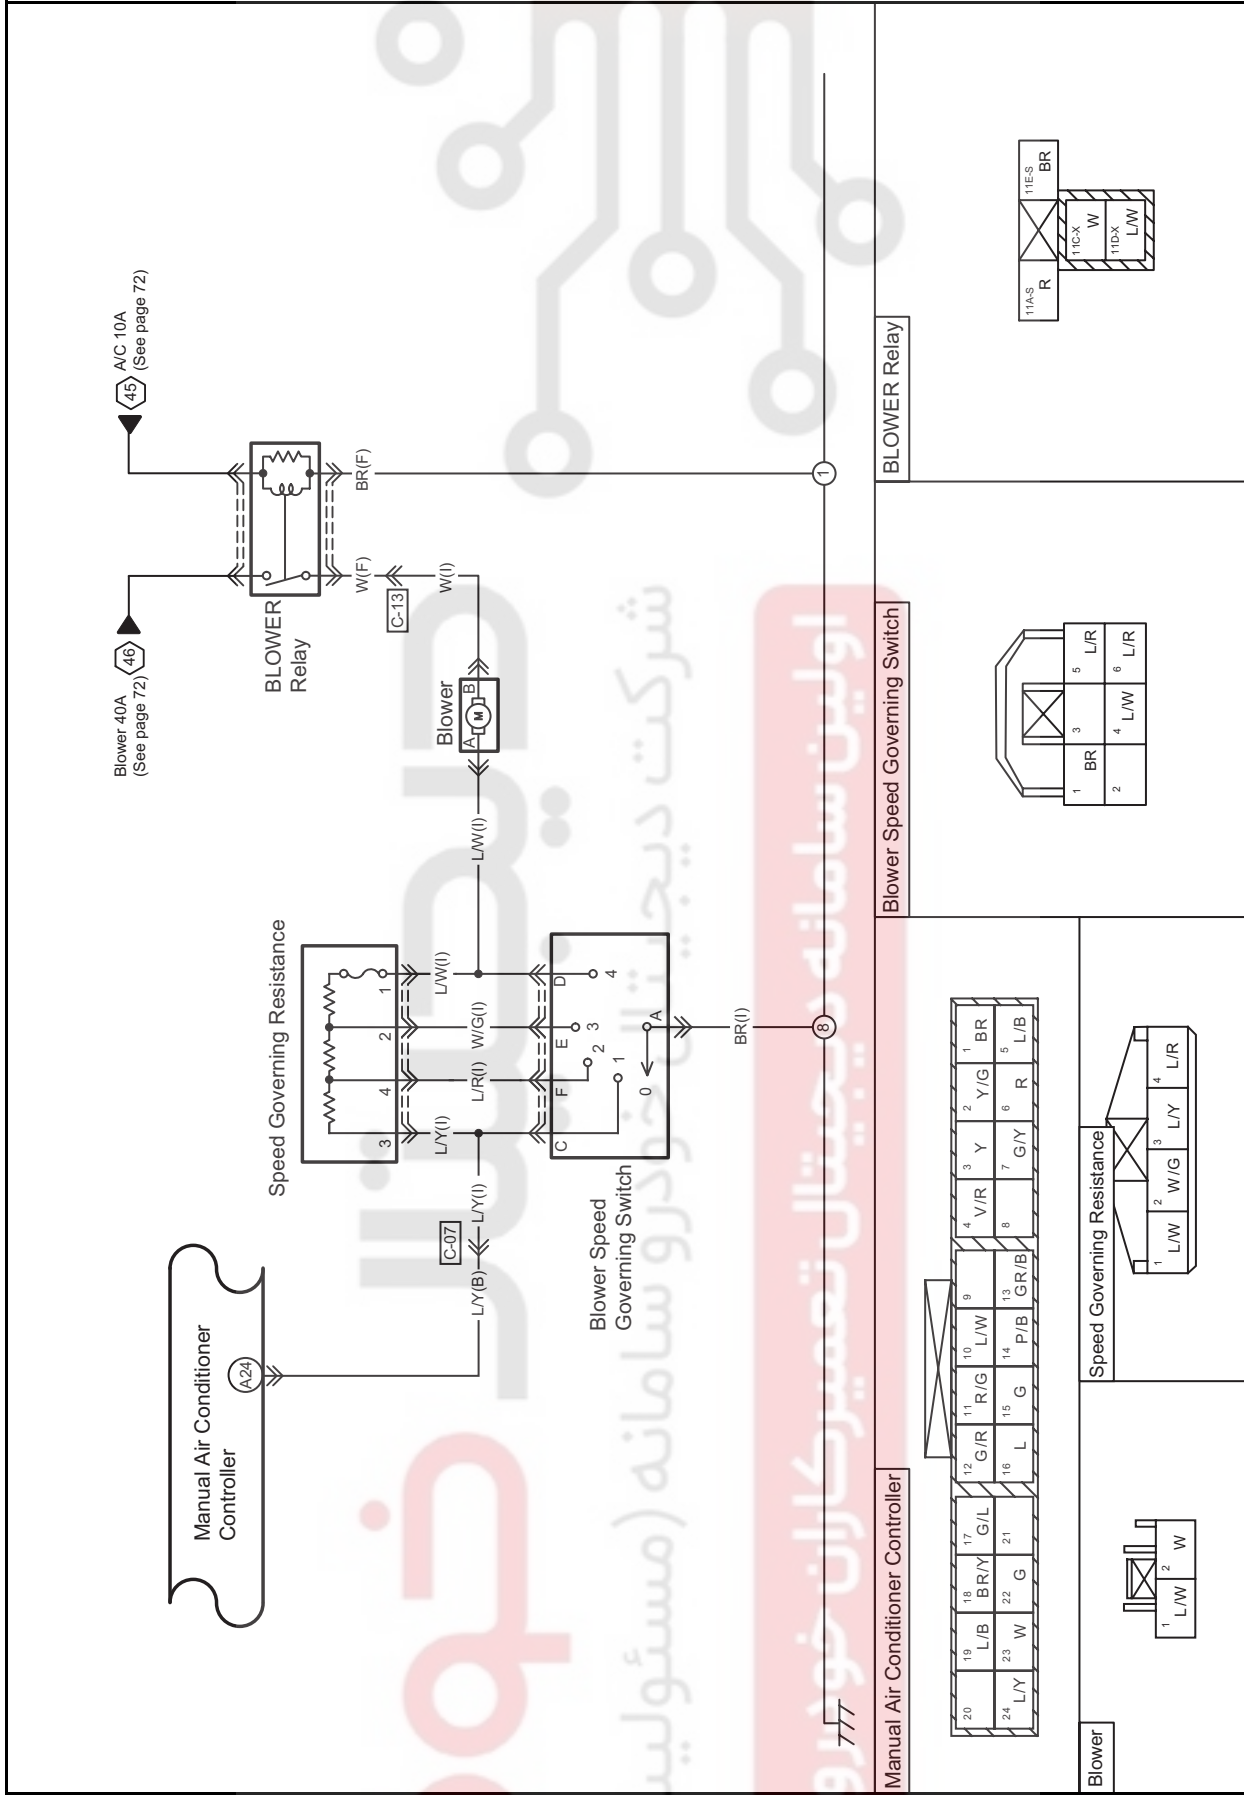

Wire Harness Symbol: (F) (E) (I) (B)

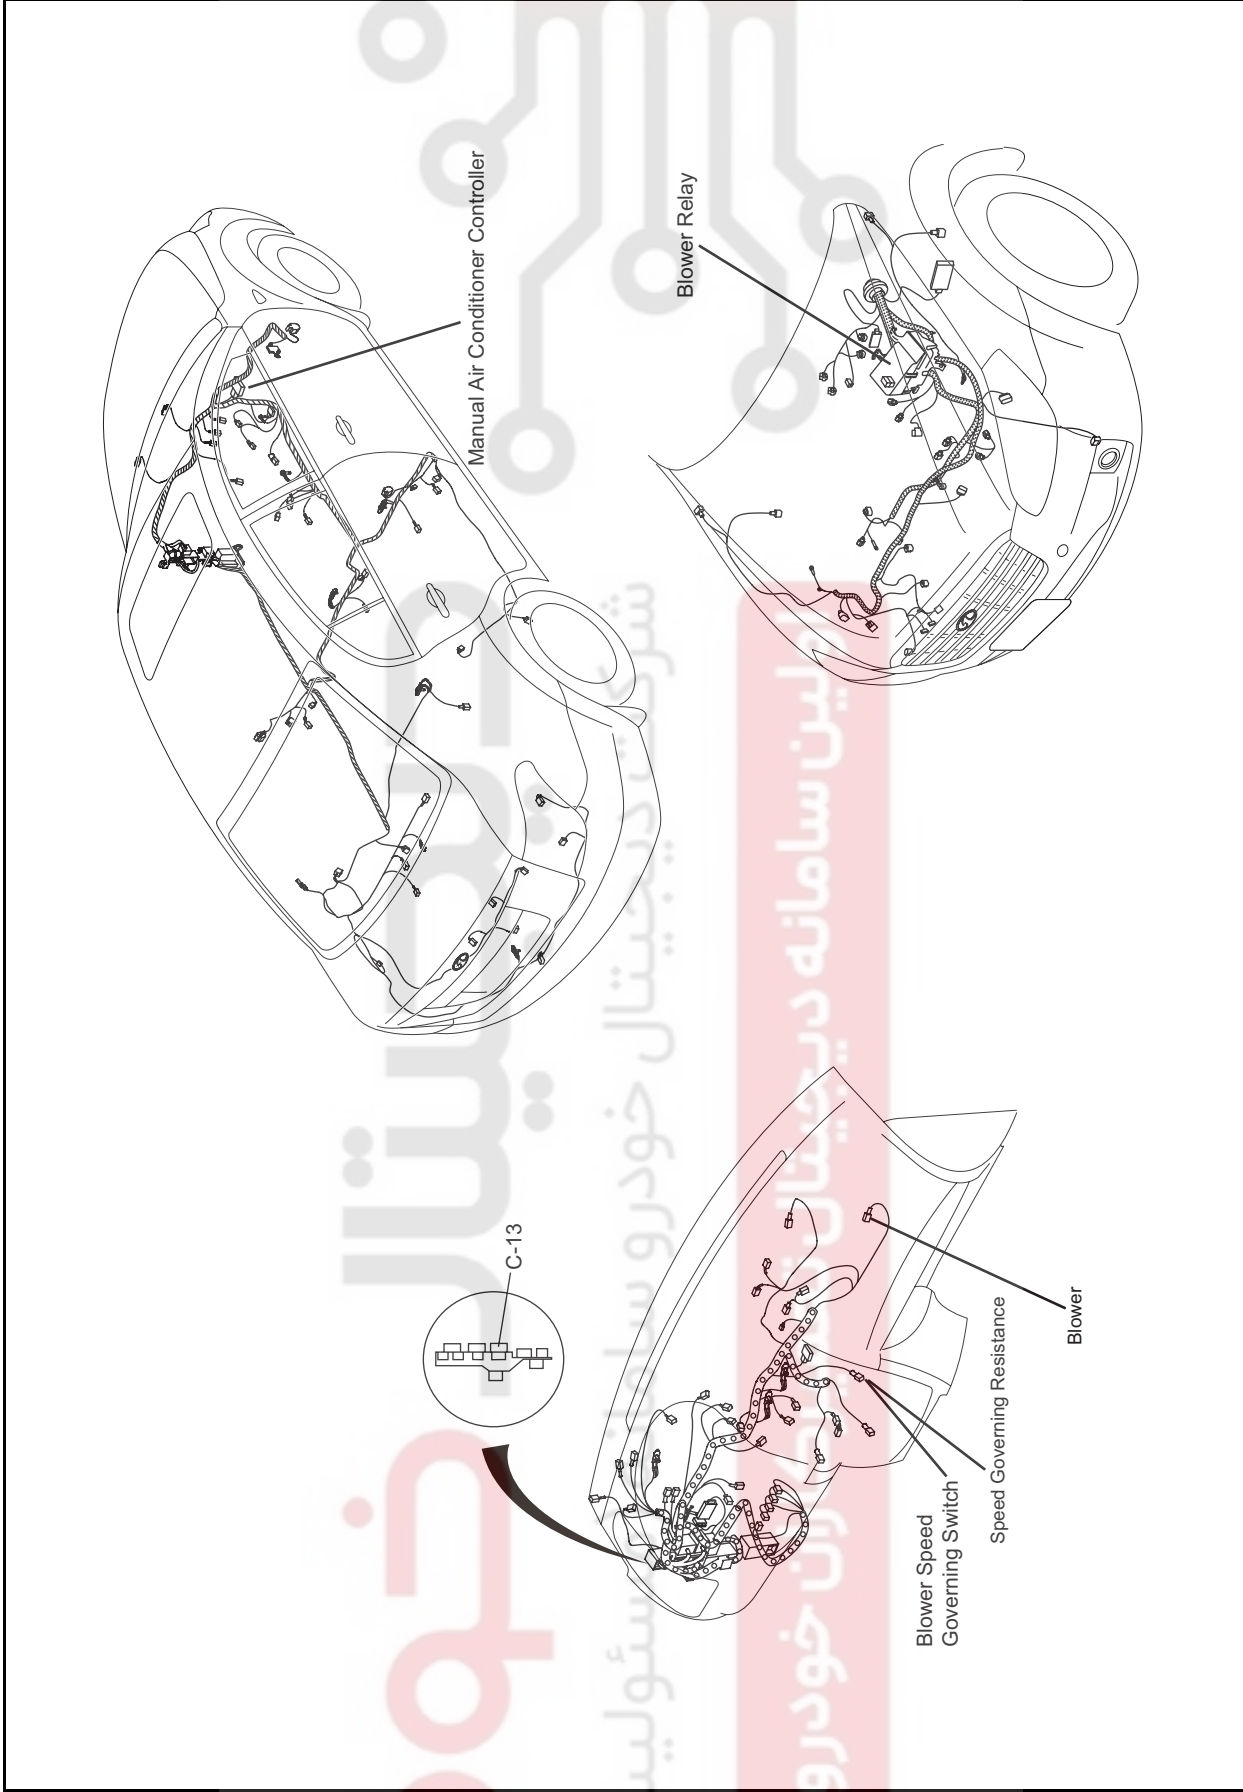


AC Air Conditioner CS Control System

AC-CS-5

AC

AC-CS-6

Manual Air Conditioner

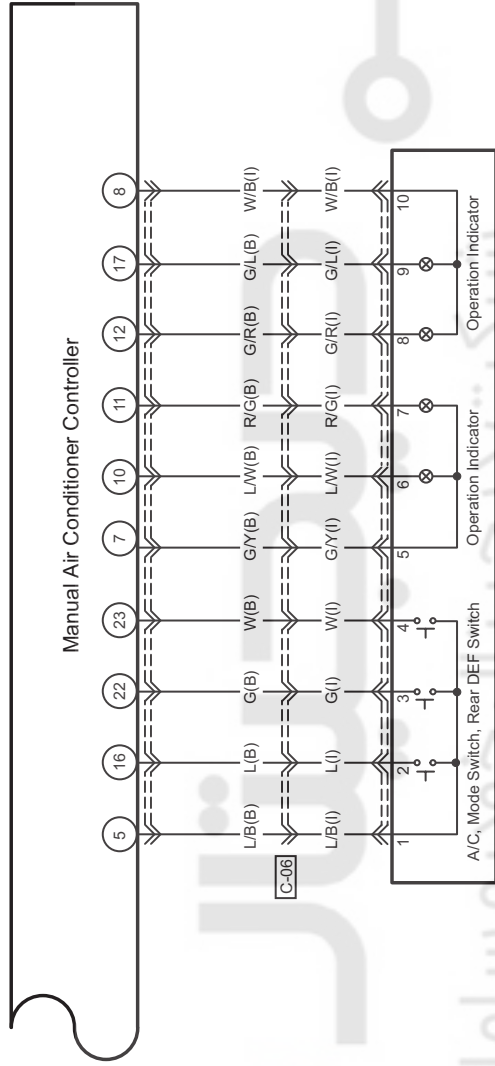

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران


Manual Air Conditioner Switch Panel

Manual Air Conditioner Controller

|   |     |   |     |   |     |    |     |    |     |    |     |
|---|-----|---|-----|---|-----|----|-----|----|-----|----|-----|
| 1 | L/B | 2 | L   | 3 | G   | 4  | W   | 5  | G/Y | 6  | L/W |
| 7 | R/G | 8 | G/R | 9 | G/L | 10 | W/B | 11 |     | 12 |     |
|   |     |   |     |   |     |    |     |    |     |    |     |

|    |     |    |     |    |      |    |     |    |     |
|----|-----|----|-----|----|------|----|-----|----|-----|
| 1  | BR  | 2  | Y/G | 3  | Y    | 4  | V/R | 5  | BR  |
| 6  | R   | 7  | G/Y | 8  |      | 9  |     | 10 | L/W |
| 11 | R/G | 12 | G/R | 13 | G/B  | 14 | P/B | 15 | L   |
| 16 | L   | 17 | G/L | 18 | BR/Y | 19 | L/B | 20 | L/Y |
| 21 | G   | 22 | G   | 23 | W    | 24 |     |    |     |

Wire Harness Symbol: (F) (E) (I) (B)

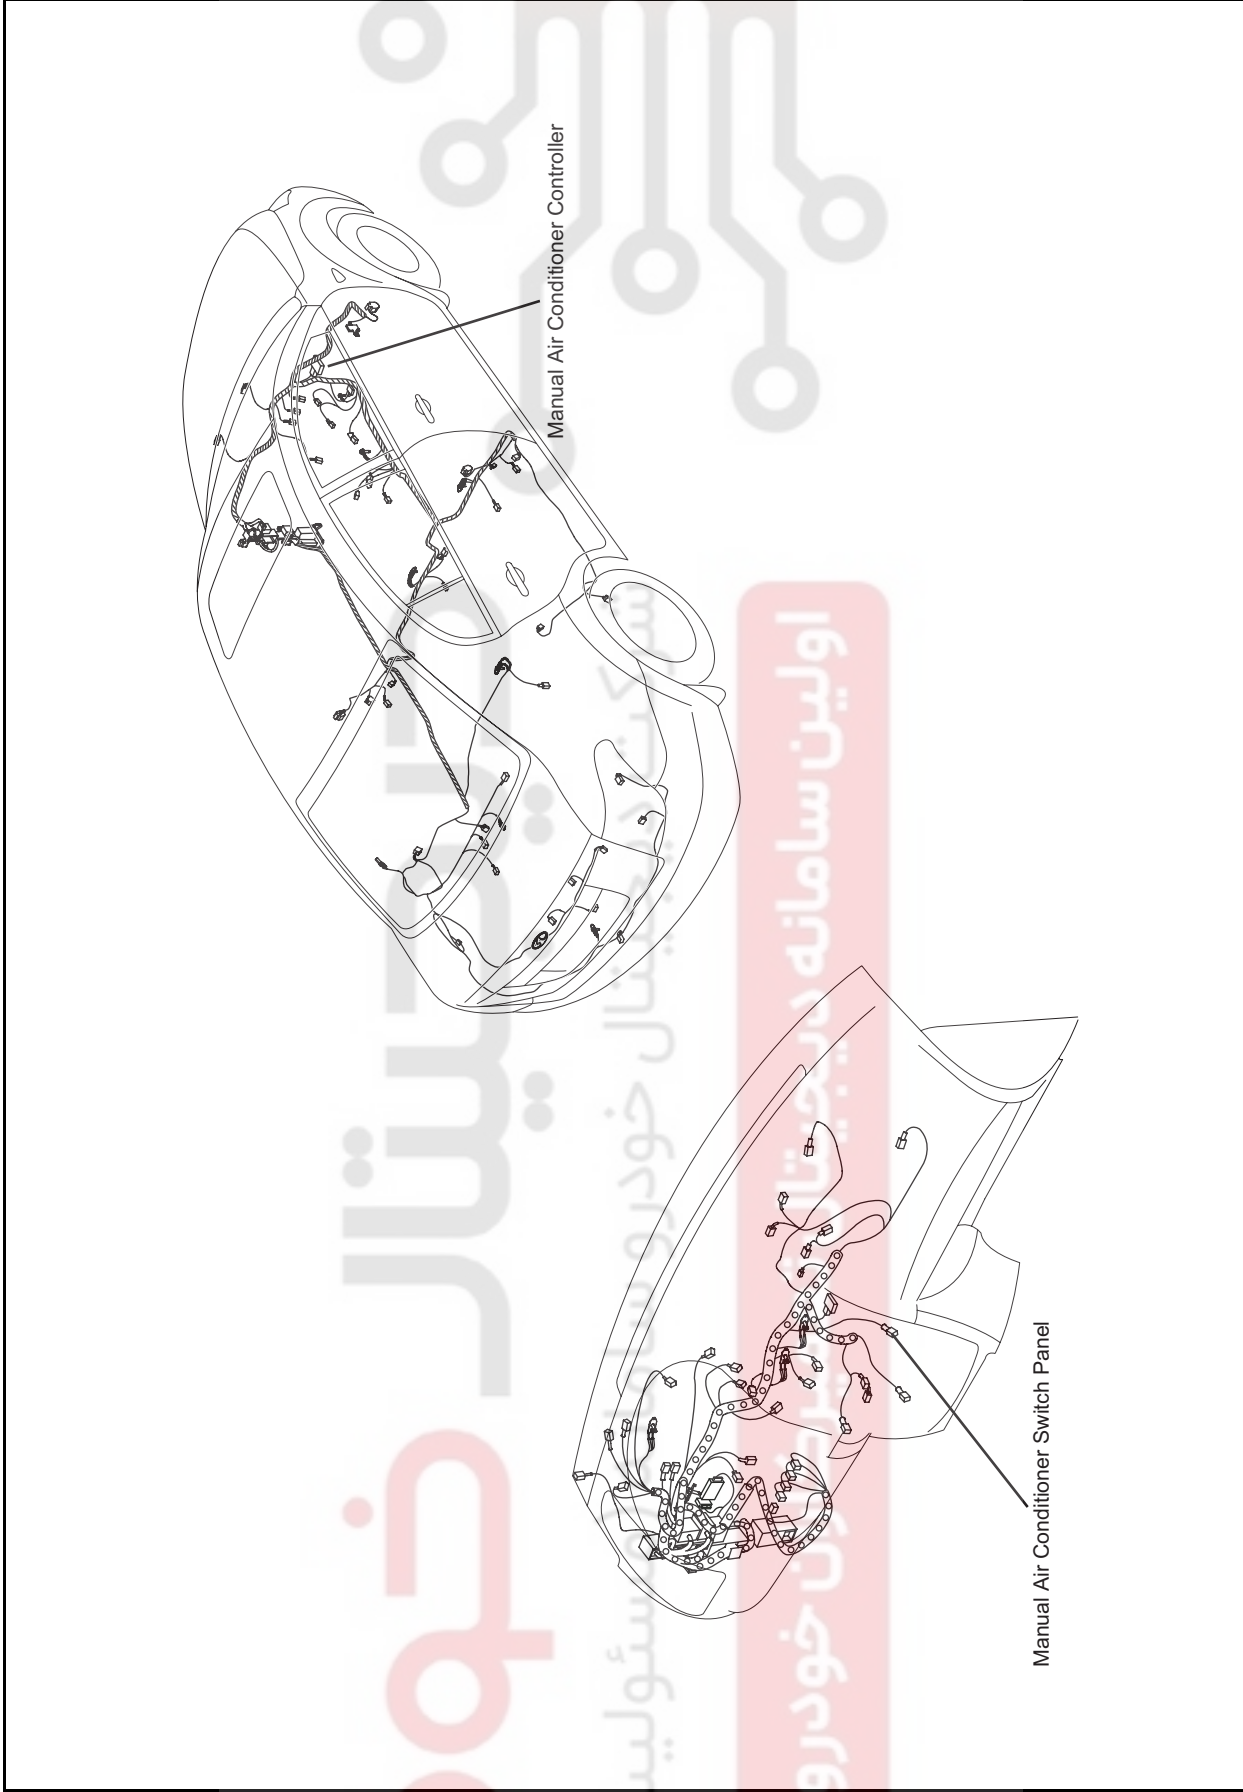




AC-CS-6

AC

AC Air Conditioner CS Control System

AC-CS-7

Compressor Control

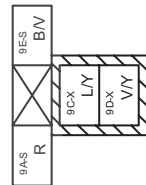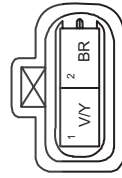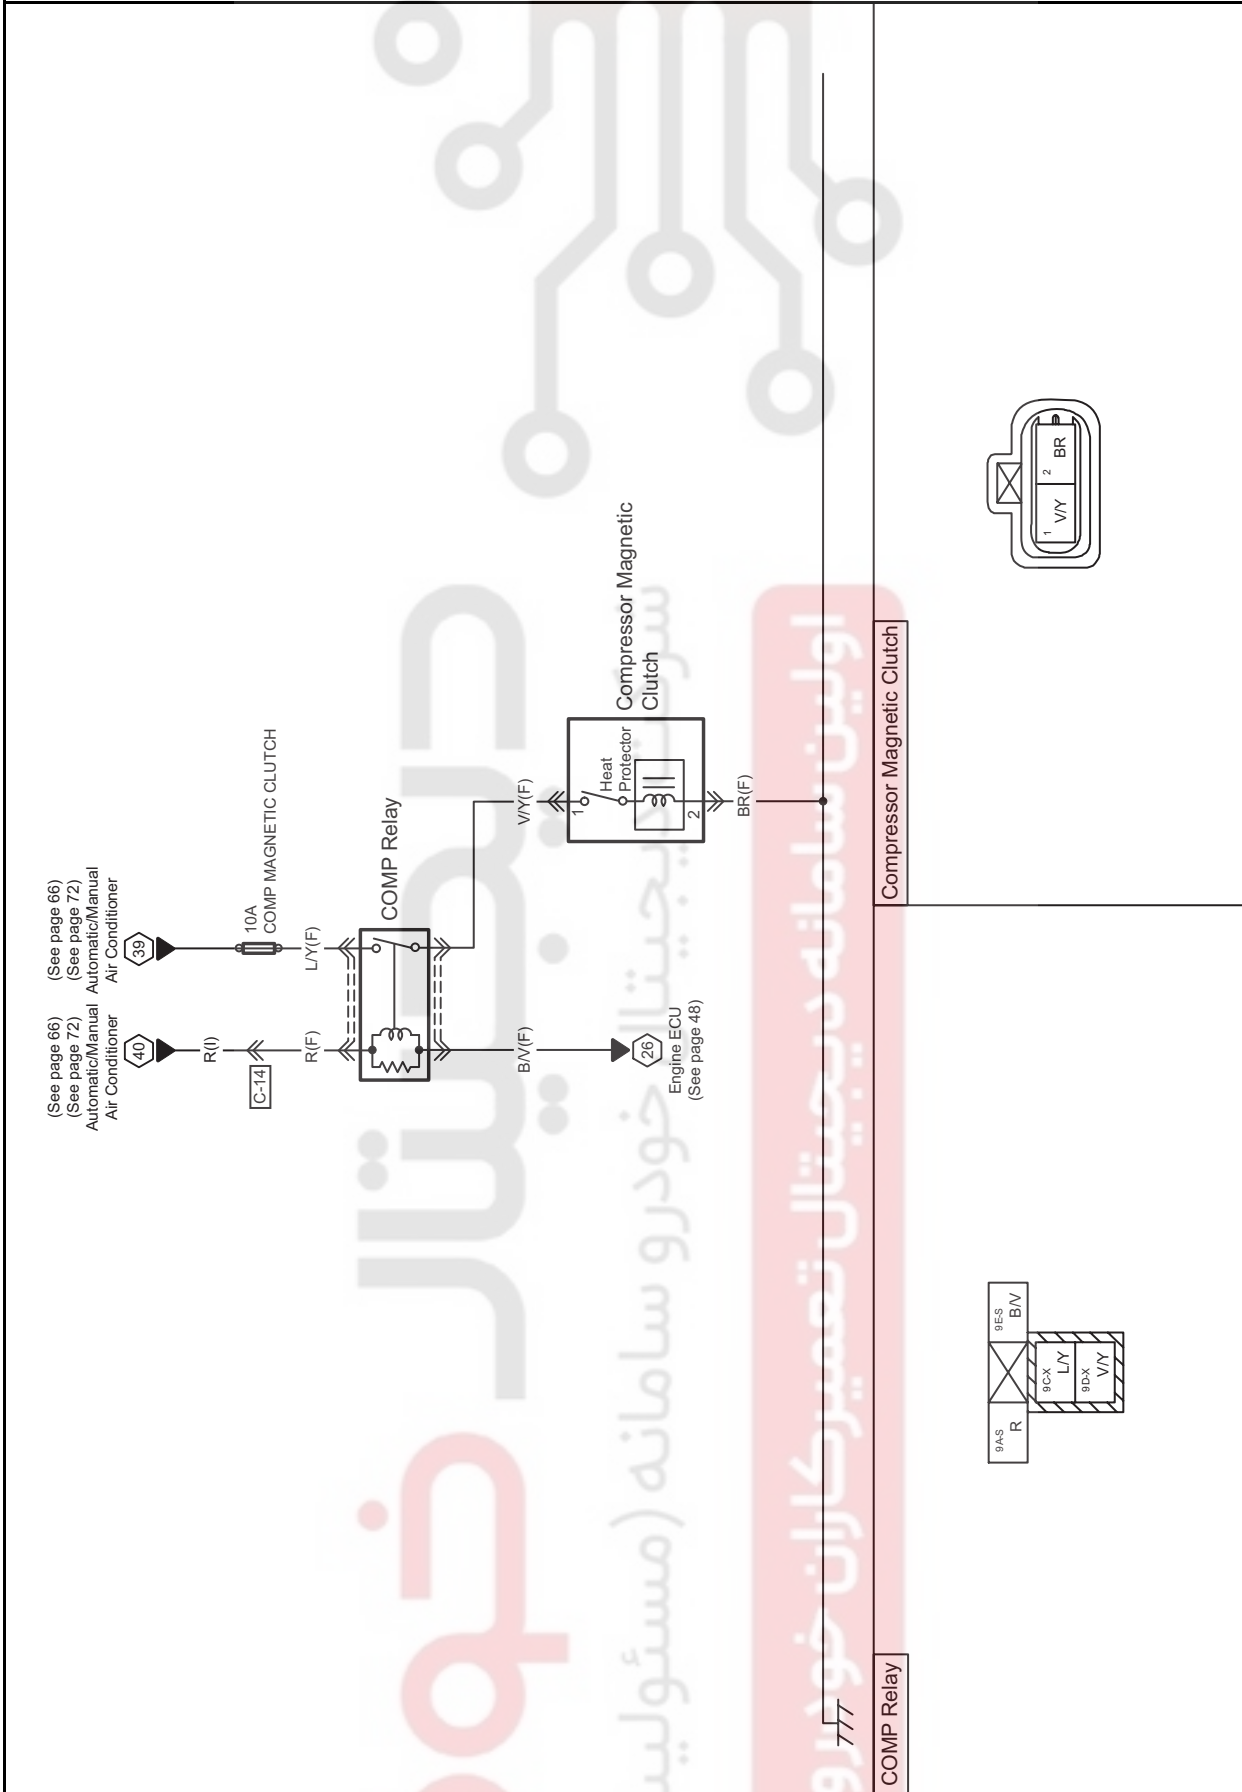

Wire Harness Symbol: (F) (E) (I) (B)



AC-CS-7

AC Air Conditioner CS Control System


AC

**Airbag System**

**Service Caution**


**Check of Airbag Set**

Using a test device to check airbag set can lead to airbag set operation (deploy) which may cause serious injury. Don't use test device to check airbag set. Be sure to use on-board diagnostic function to diagnose airbag set.

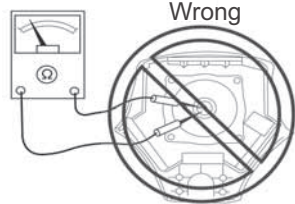


**Check of Operation of Airbag Set**

If the airbag set may operate (deploy) unexpectedly, operating an effective (undeployed) one which faces your body may cause serious injury. When you carry an effective (undeployed) airbag set, its deploying side should not be toward your body, so as to reduce the risk of injuring in case the airbag set operates (deploys) unexpectedly.

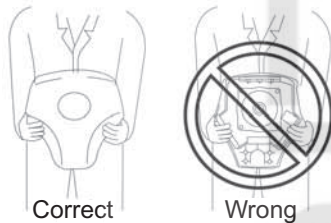

It is very dangerous if the deploying side of an effective (undeployed) airbag set faces down when it is placed on the ground. That may cause serious injury if the airbag set operates (deploys) unexpectedly. Be sure that the deploying side of the effective (undeployed) airbag set faces up when placing it.

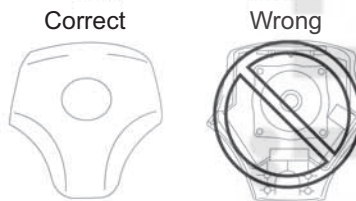

**Operation of Side Airbag Set**

When the side airbag set operates (deploys) due to collision, the internal parts (pad, frame, trim strip) of the seatback may be damaged. If the airbag can't operate (deploy) normally in the seatback due to reused seatback, it may cause serious accident. Be sure to replace both of the side airbag sets and seatback (pad, frame, trim strip) with new ones after the side airbags has operated (deployed). Confirm that the seats can function properly and the wire harness isn't stuck after repairing.

**SRS Control Module Operation**

If removing SRS control module or disconnecting the connector of SRS control module with the ignition switch ON, the sensor in SRS control module will be activated, thus the airbag and seat belt pretensioner will operate (deploy), which may cause serious injury. Be sure to turn the ignition switch to LOCK position, cut off the battery negative lead, then wait 1 minute or more to make the spare power of SRS control module drain its stored electricity before removing SRS control module or disconnecting the connector of SRS control module.

It is very dangerous that the SRS control module connector isn't attached to the vehicle firmly when connecting it. The sensor in SRS control module can send an electrical signal to airbag set and seat belt with pretensioner. Airbag and seat belt with pretensioner will operate (deploy), which can cause serious injury. So, install the SRS control module to the vehicle firmly before connecting the connector.

The sensor is installed in SRS control module, so once the airbag and seat belt with pretensioner operate (deploy) due to collision or other reasons, they must be replaced with new components even if there is no visible external damage or deformation on the used SRS control module. There may be internal damage in the used SRS control module, which can cause abnormal operation. If the SRS control module is reused, the airbag and seat belt with pretensioner may not function (deploy) properly, which may result in serious accident. Be sure to replace the SRS control module with a new one. Don't perform bench test or self-check to SRS control module.

Airbag Service Caution/Repair Caution

**Operation of Side Airbag Sensor**

If removing side airbag sensor or disconnecting the connector of side airbag sensor with the ignition switch ON, the side airbag sensor may be activated and it will operate (deploy), which may cause serious injury.


Be sure to turn the ignition switch to LOCK position, disconnect the battery negative lead, and then wait 1 minute or more to make the spare power of SRS control module drain its stored electricity before removing the side airbag sensor or disconnecting the connector of side airbag sensor.

If the side airbag sensor is shocked or the sensor is disassembled, the side airbag may operate (deploy) unexpectedly, and cause injury, or the system may not function properly and cause serious accident at same time. Don't make the airbag sensor be shocked and don't disassemble the sensor.

A sensor is installed in the side airbag, so once the airbag operates (deploys) due to collision or other reasons, it must be replaced with new component even if there is no visible external damage or deformation on the used side airbag. If the side airbag is reused, it may not function properly (deploy), which may cause serious accident. Be sure to replace the side airbag sensor with a new one periodically. Don't perform bench test or self-checking for side airbag sensor.

**Check of Seat Belt with Pretensioner**


Using a test device to check the seat belt with pretensioner can lead to seat belt with pretensioner operation (deployment) which may cause serious injury. Don't check the seat belt with pretensioner with test device. On-board diagnostic function should be used to check the airbag set for malfunction.

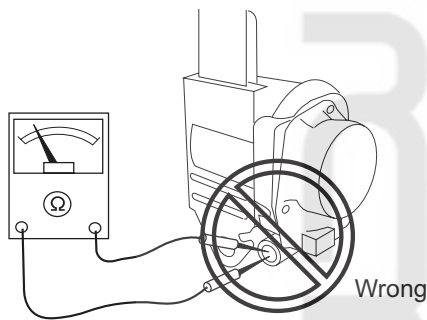

**Repair Caution**

**Removing of Airbag System Set**


Removing airbag system components may cause that it can not function (deploy) properly. Don't remove any airbag system component.

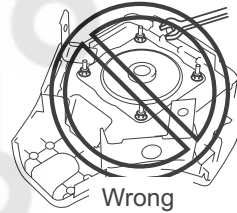

**Reusing Airbag Set and Seat Belt with Pretensioner**

Oil, grease or water attached on the airbag set may cause that airbag and seat belt with pretensioner can't operate (deploy) properly when an accident occurs. Don't attach oil, grease, or water on the airbag set or the seat belt with pretensioner.

The connectors of the airbag set and the seat belt with pretensioner may be damaged if inserting a screw driver or similar object into them, and airbag set or seat belt with pretensioner can't function (deploy) properly which cause serious injury. Don't insert any foreign object into the connectors of the airbag set and the seat belt with pretensioner.

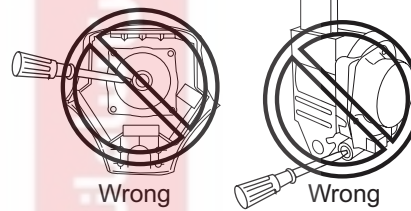


**Reusing of Airbag Set and Seat belt with pretensioner**

Even if the airbag set or seat belt with pretensioner hasn't operated (deployed) during collision and there is no sign of external damage, there may be damage to internal parts which may cause abnormal operation. Be sure to use diagnostic on-board to diagnose the airbag set or the seat belt with pretensioner to confirm there is no malfunction before reusing an effective (undepolyed) airbag set and seat belt with pretensioner.

**Repair of Airbag Electrical Wiring**


Improper repair to airbag wire harness may cause airbag set and seat belt with pretensioner to operate (deploy) unexpectedly. Be sure to replace it with new wire harness if there is malfunction in the airbag wire harness.

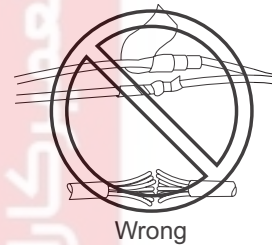

**RS**

RS-SRS-1

Airbag Control System

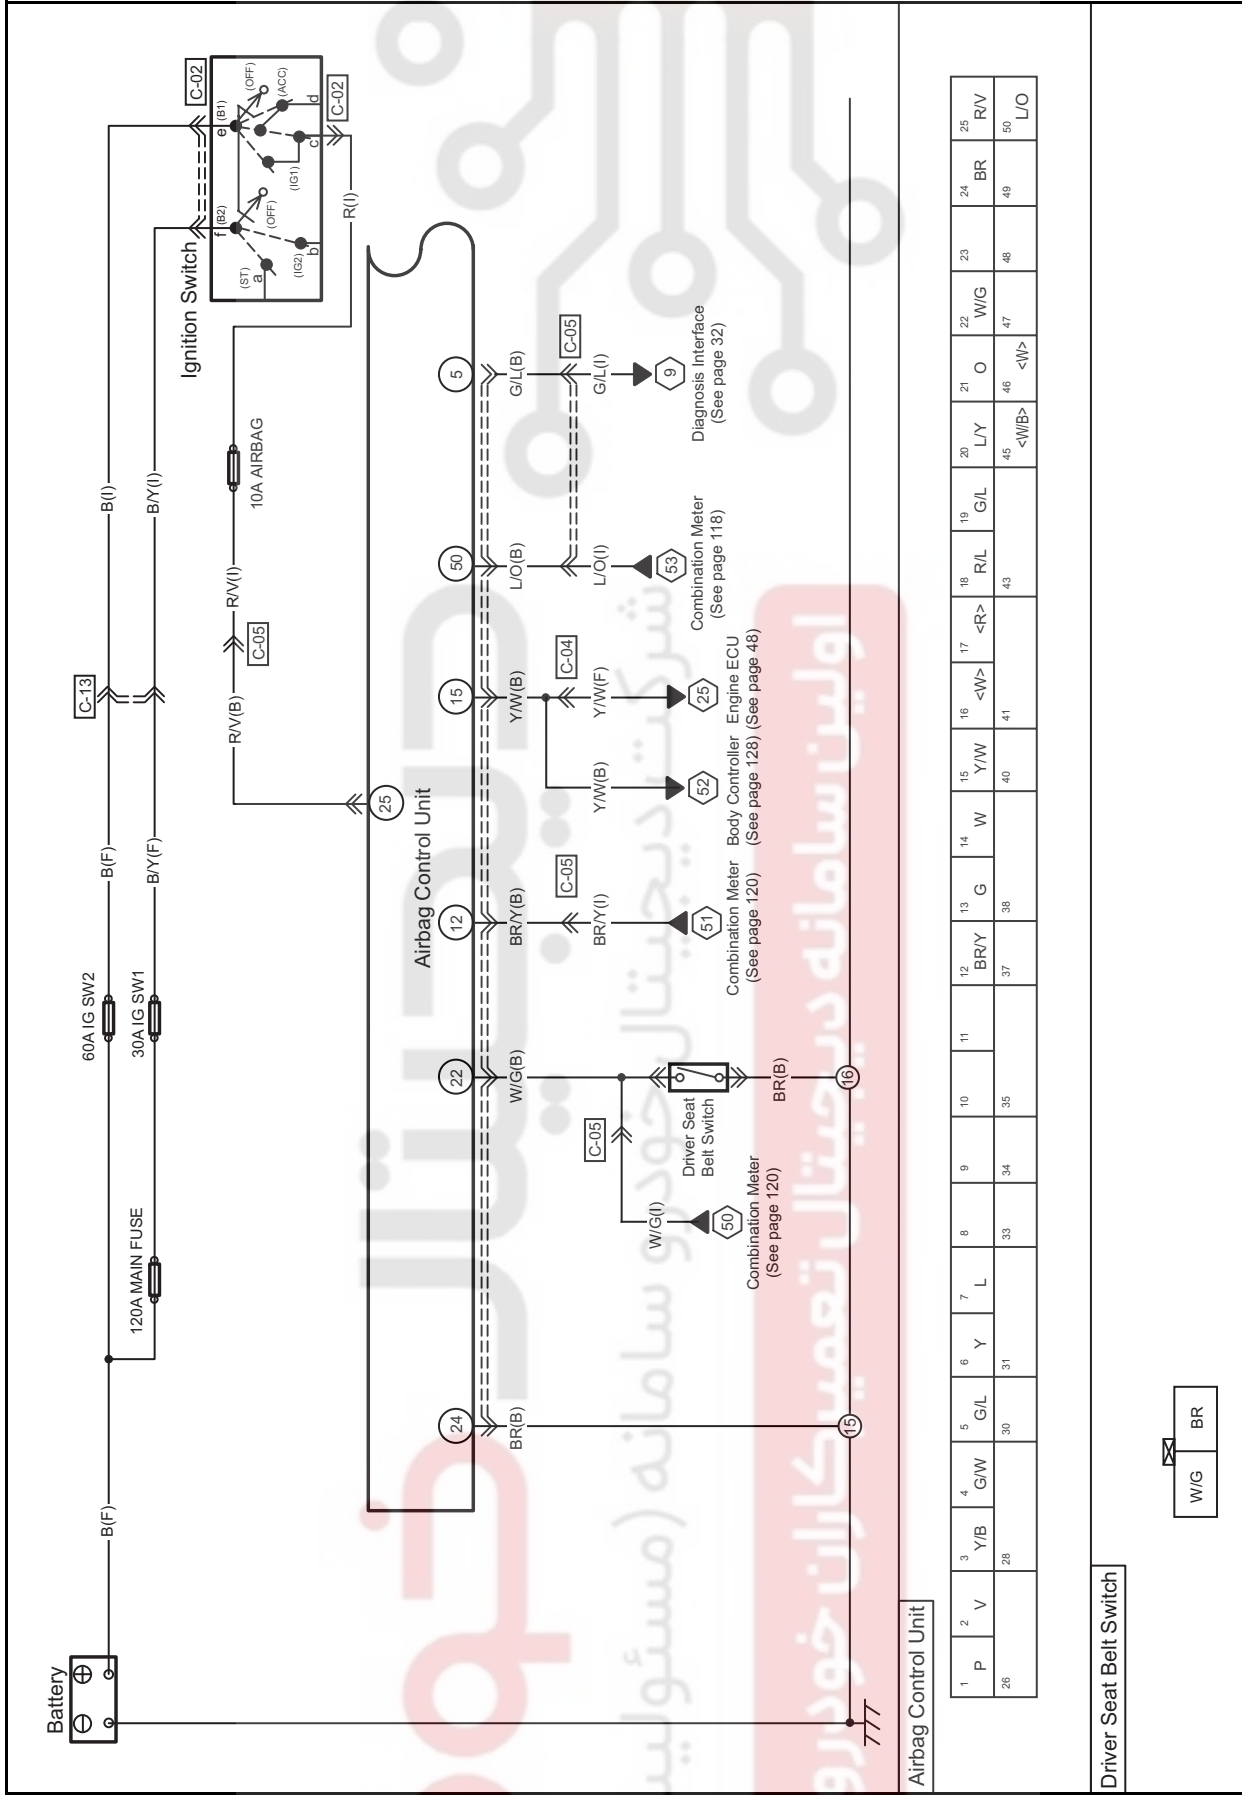


|    |   |   |   |    |     |    |     |    |     |    |   |    |   |    |  |    |  |    |  |    |  |    |      |    |   |    |   |    |     |    |     |    |     |    |     |    |     |    |     |    |   |    |     |    |  |    |    |    |     |    |  |    |  |
|----|---|---|---|----|-----|----|-----|----|-----|----|---|----|---|----|--|----|--|----|--|----|--|----|------|----|---|----|---|----|-----|----|-----|----|-----|----|-----|----|-----|----|-----|----|---|----|-----|----|--|----|----|----|-----|----|--|----|--|
| 1  | P | 2 | V | 3  | Y/B | 4  | G/W | 5  | G/L | 6  | Y | 7  | L | 8  |  | 9  |  | 10 |  | 11 |  | 12 | BR/Y | 13 | G | 14 | W | 15 | Y/W | 16 | <W> | 17 | <R> | 18 | R/L | 19 | G/L | 20 | L/Y | 21 | O | 22 | W/G | 23 |  | 24 | BR | 25 | R/V |    |  |    |  |
| 26 |   |   |   | 28 |     | 30 |     | 33 |     | 34 |   | 35 |   | 38 |  | 40 |  | 41 |  | 43 |  | 45 |      | 46 |   | 47 |   | 48 |     | 49 |     | 50 |     | 51 |     | 52 |     | 53 |     | 54 |   | 55 |     | 56 |  | 57 |    | 58 |     | 59 |  | 60 |  |

Driver Seat Belt Switch



Wire Harness Symbol: (F) (E) (I) (B)

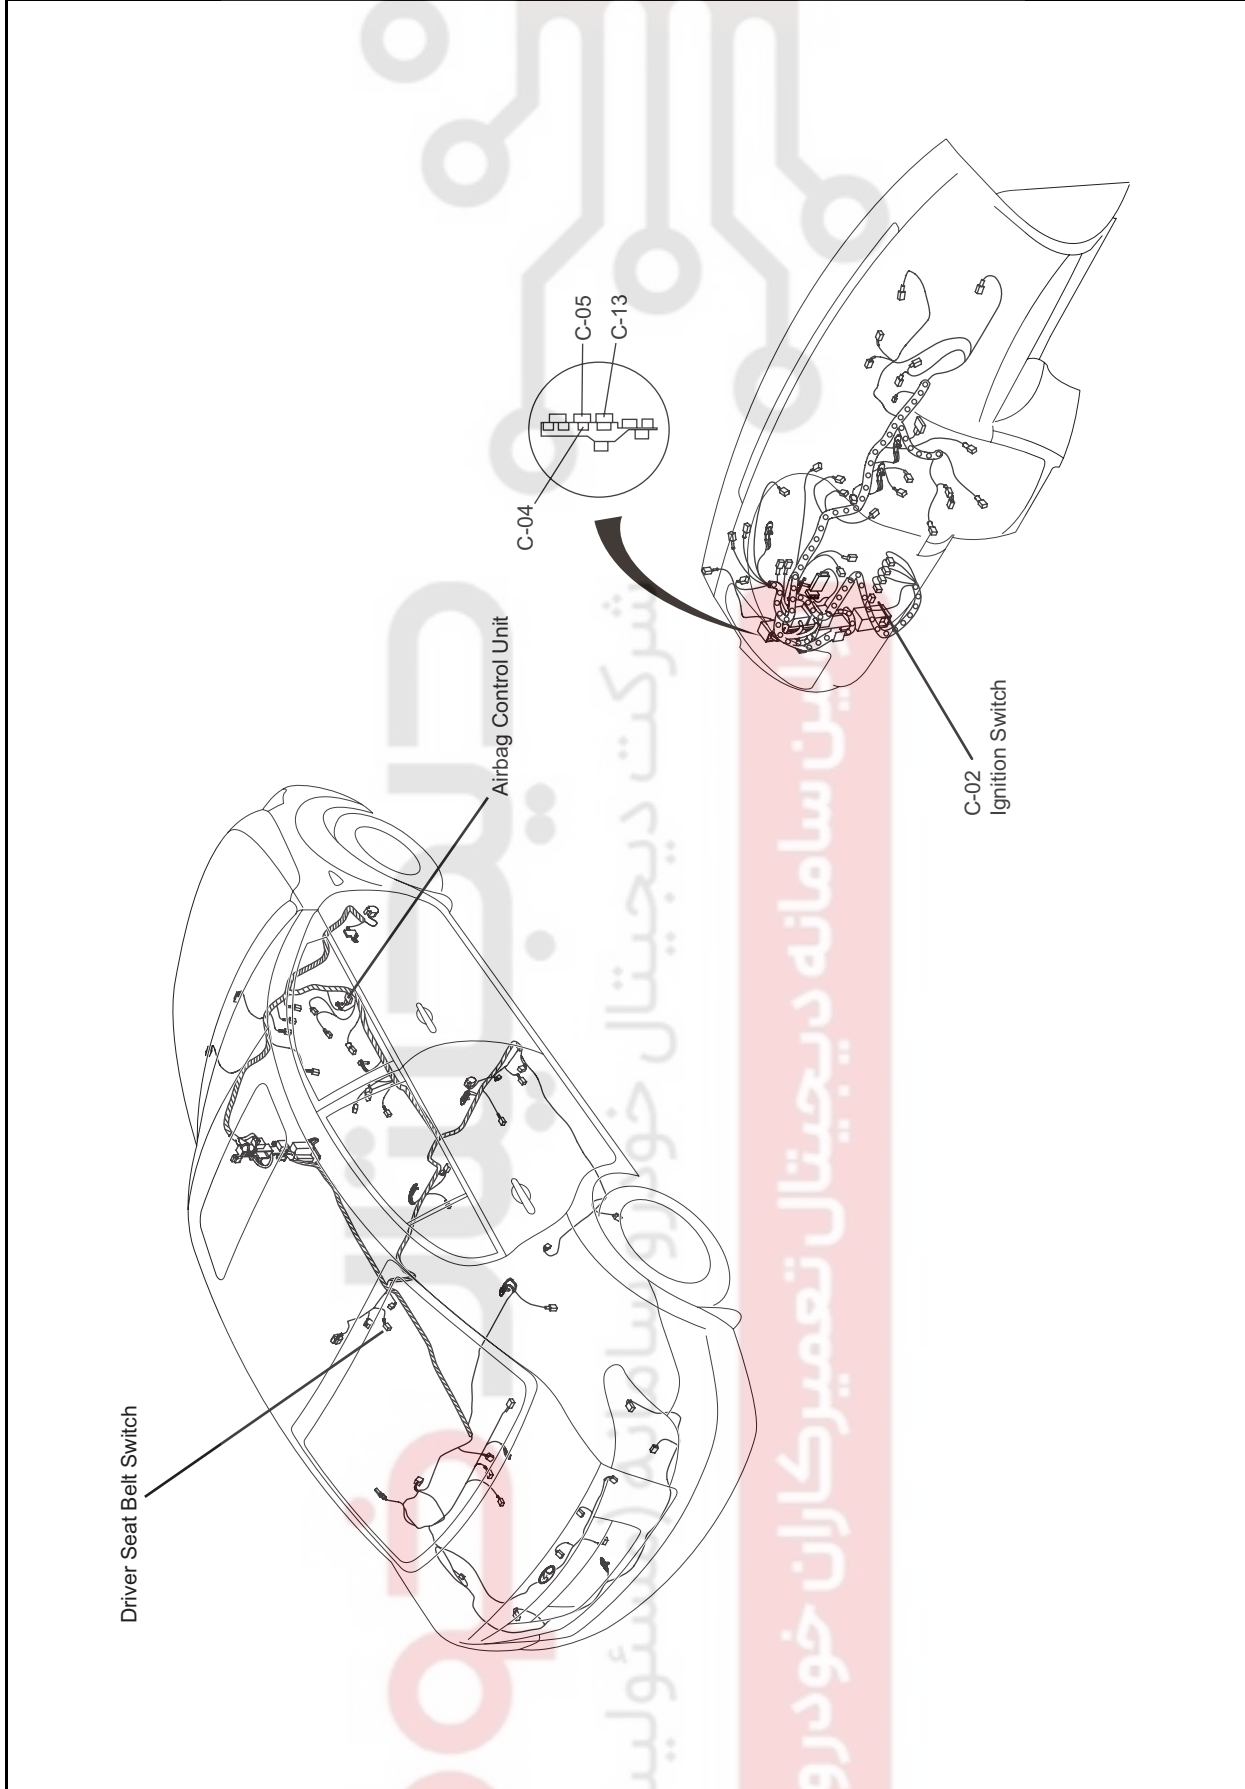


RS-SRS-1

RS


RS Restraint System SRS Airbag System

RS-SRS-2

Airbag Control System

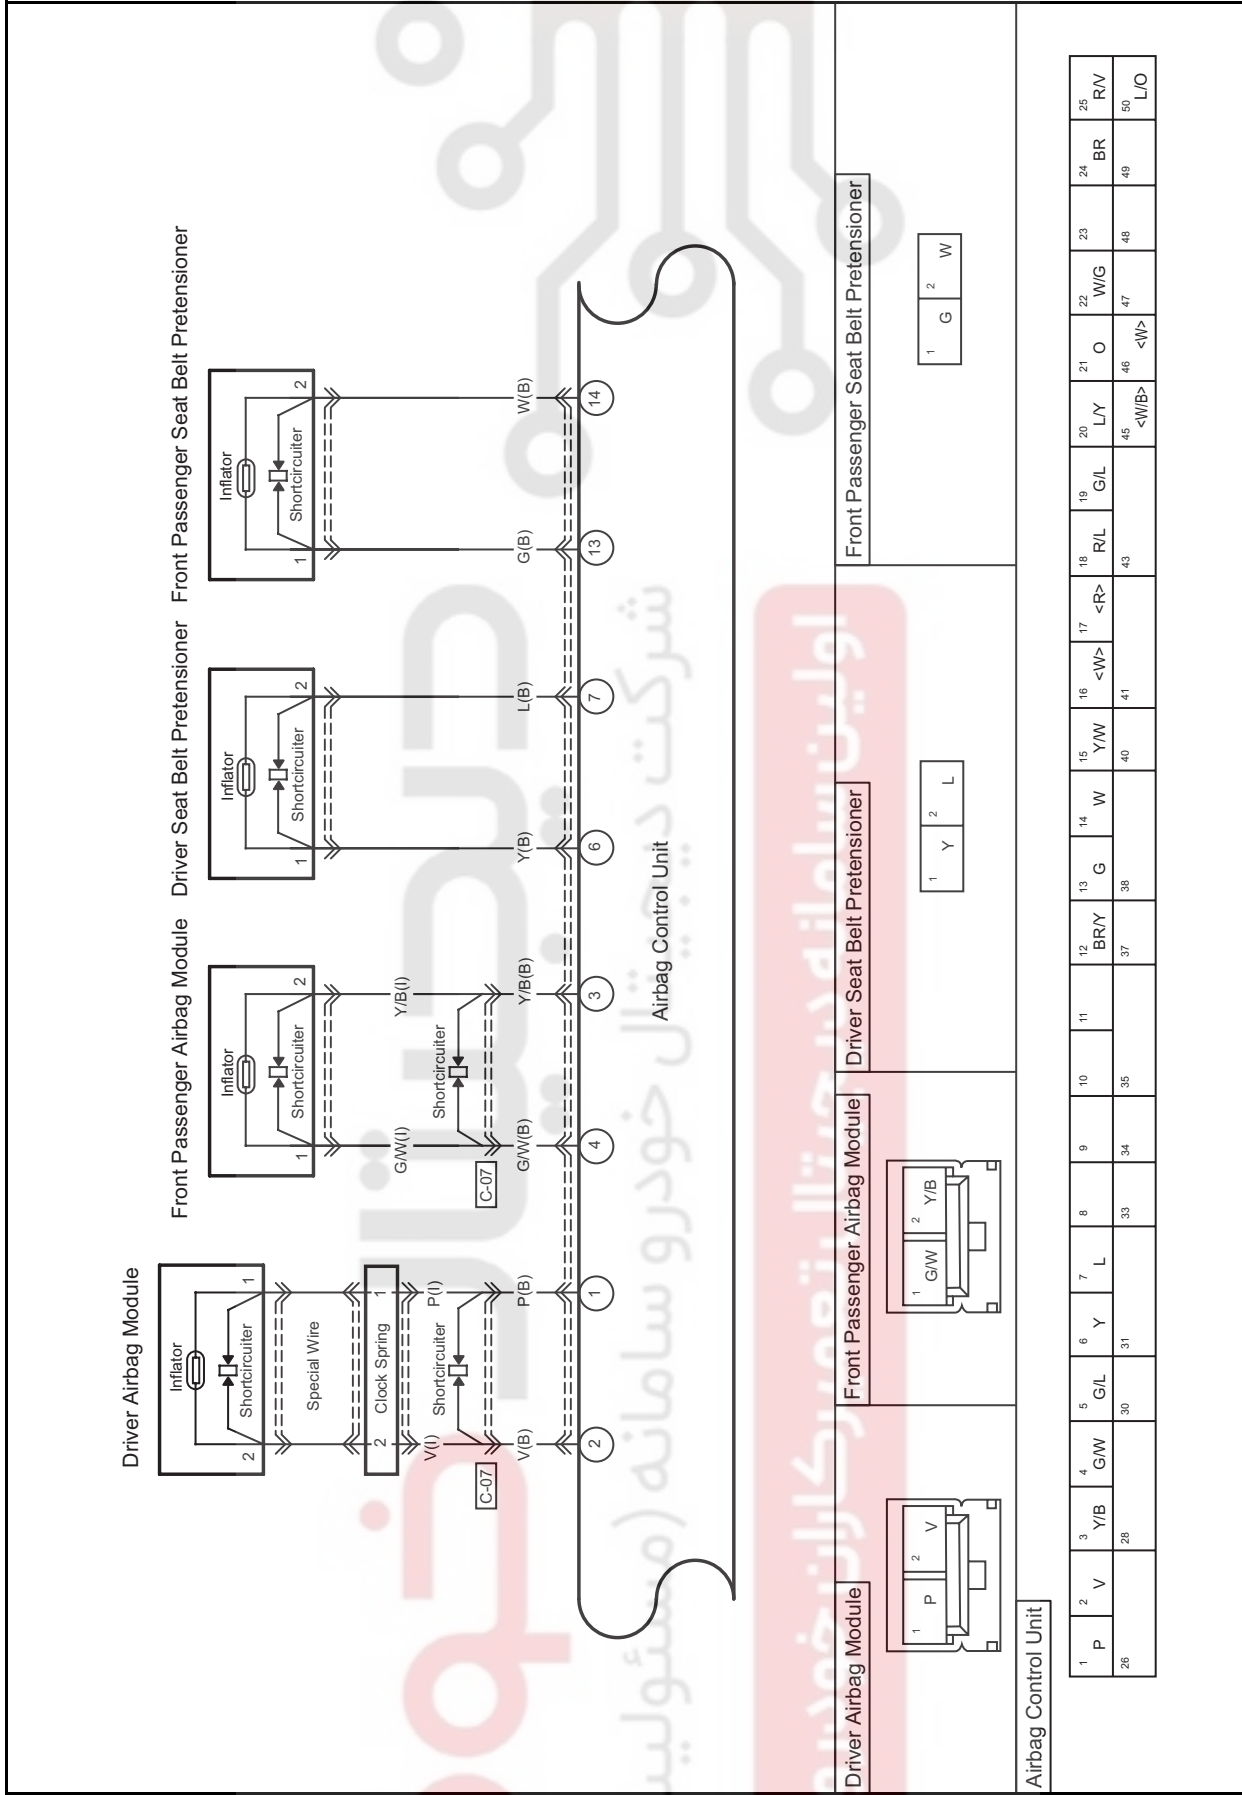

Wire Harness Symbol: (F) (E) (I) (B)

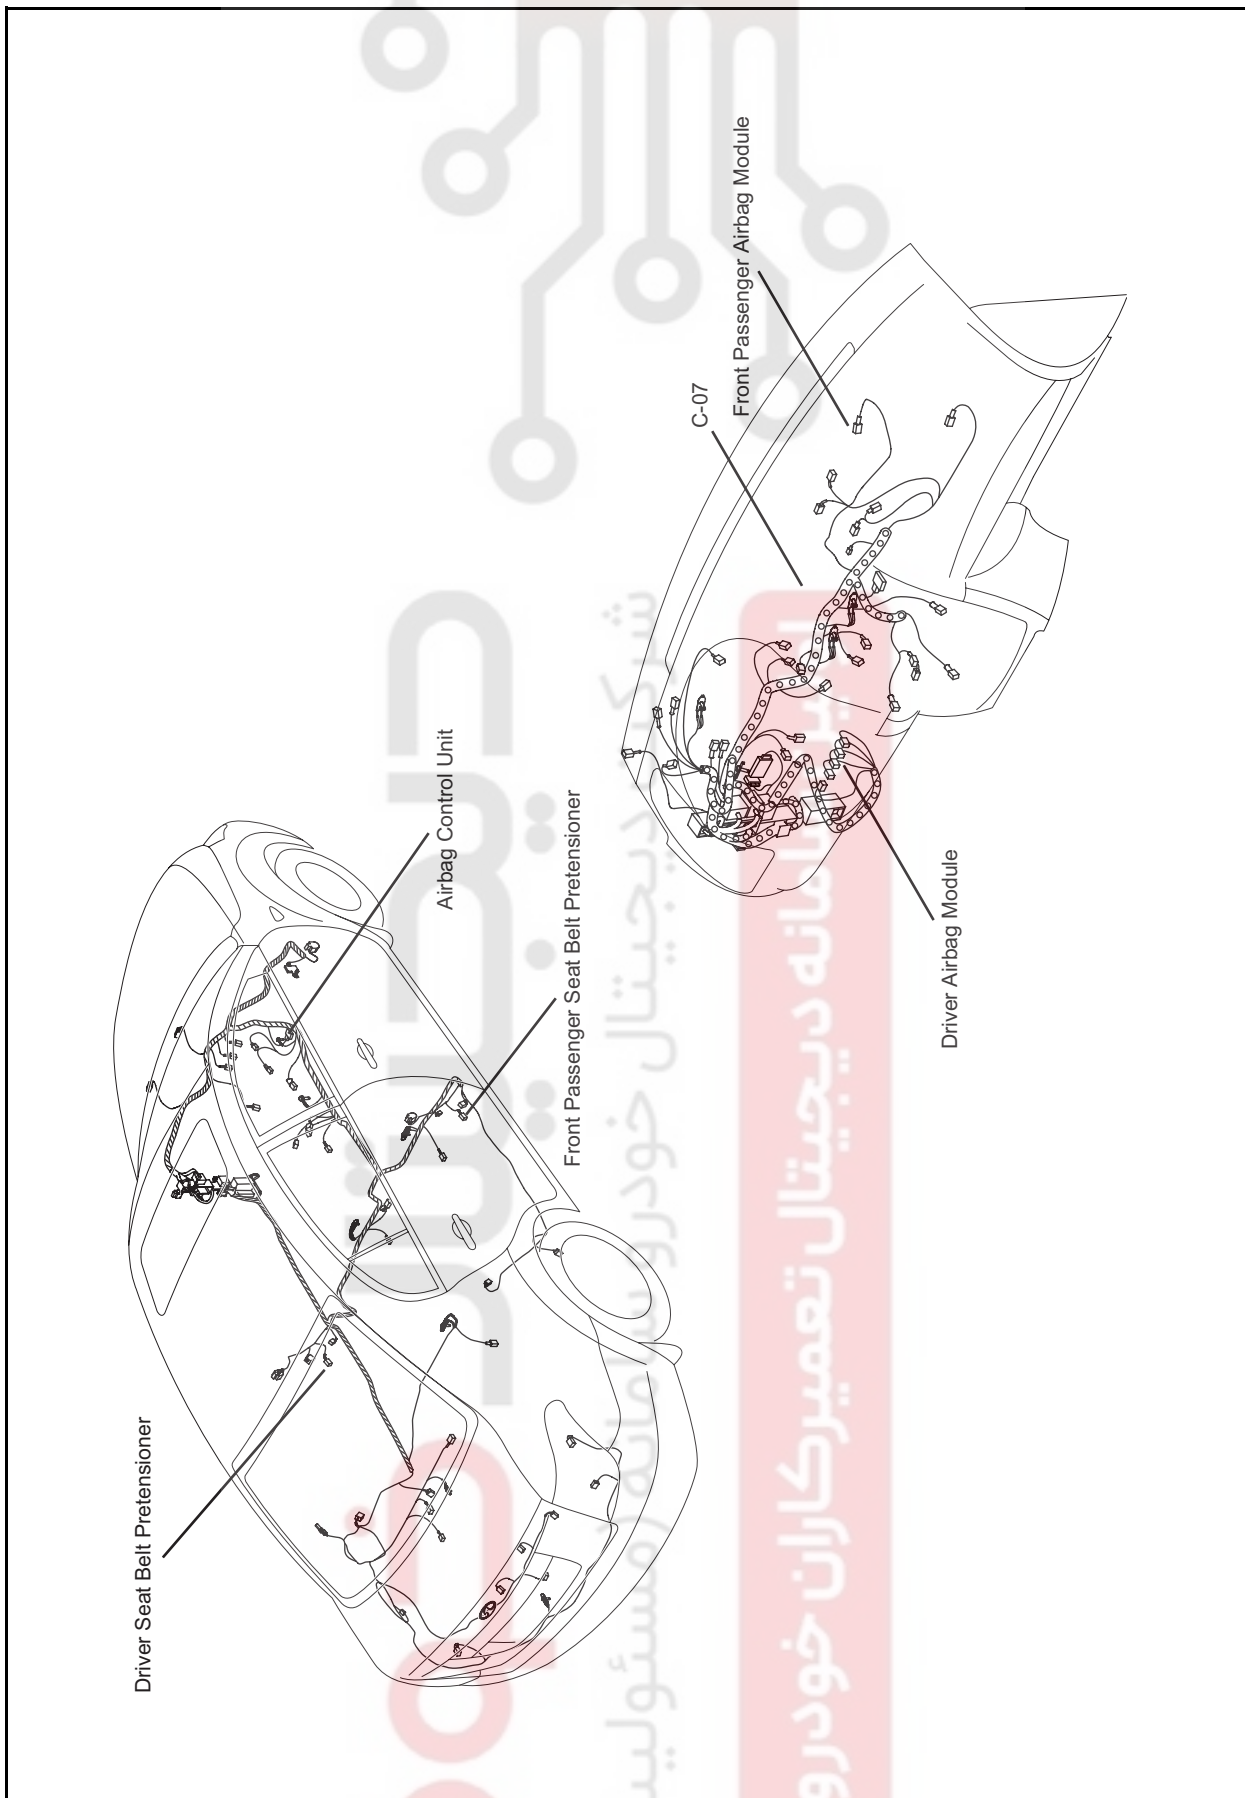


RS-SRS-2

RS


RS Restraint System SRS Airbag System

RS-SRS-3

Airbag Control System

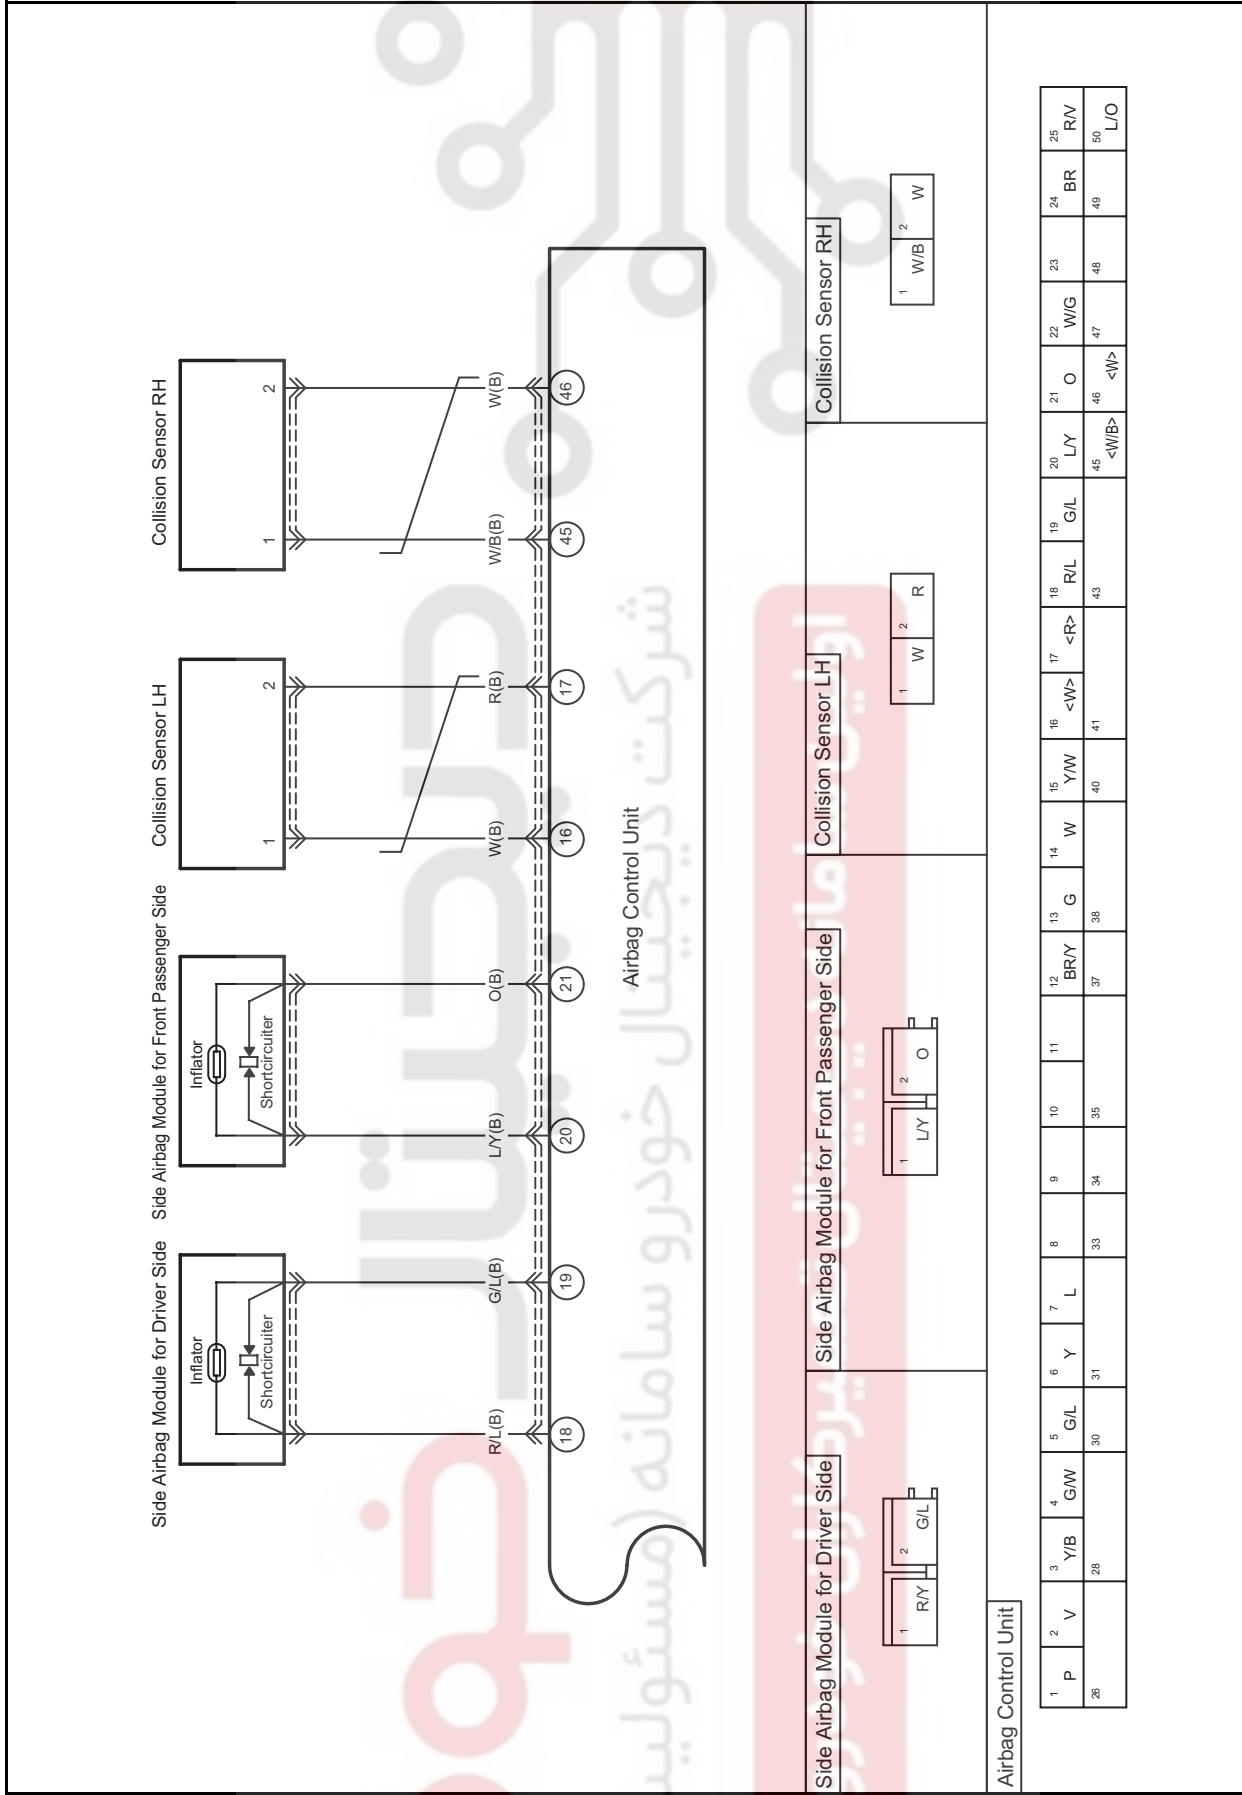

Wire Harness Symbol: (F) (E) (I) (B)

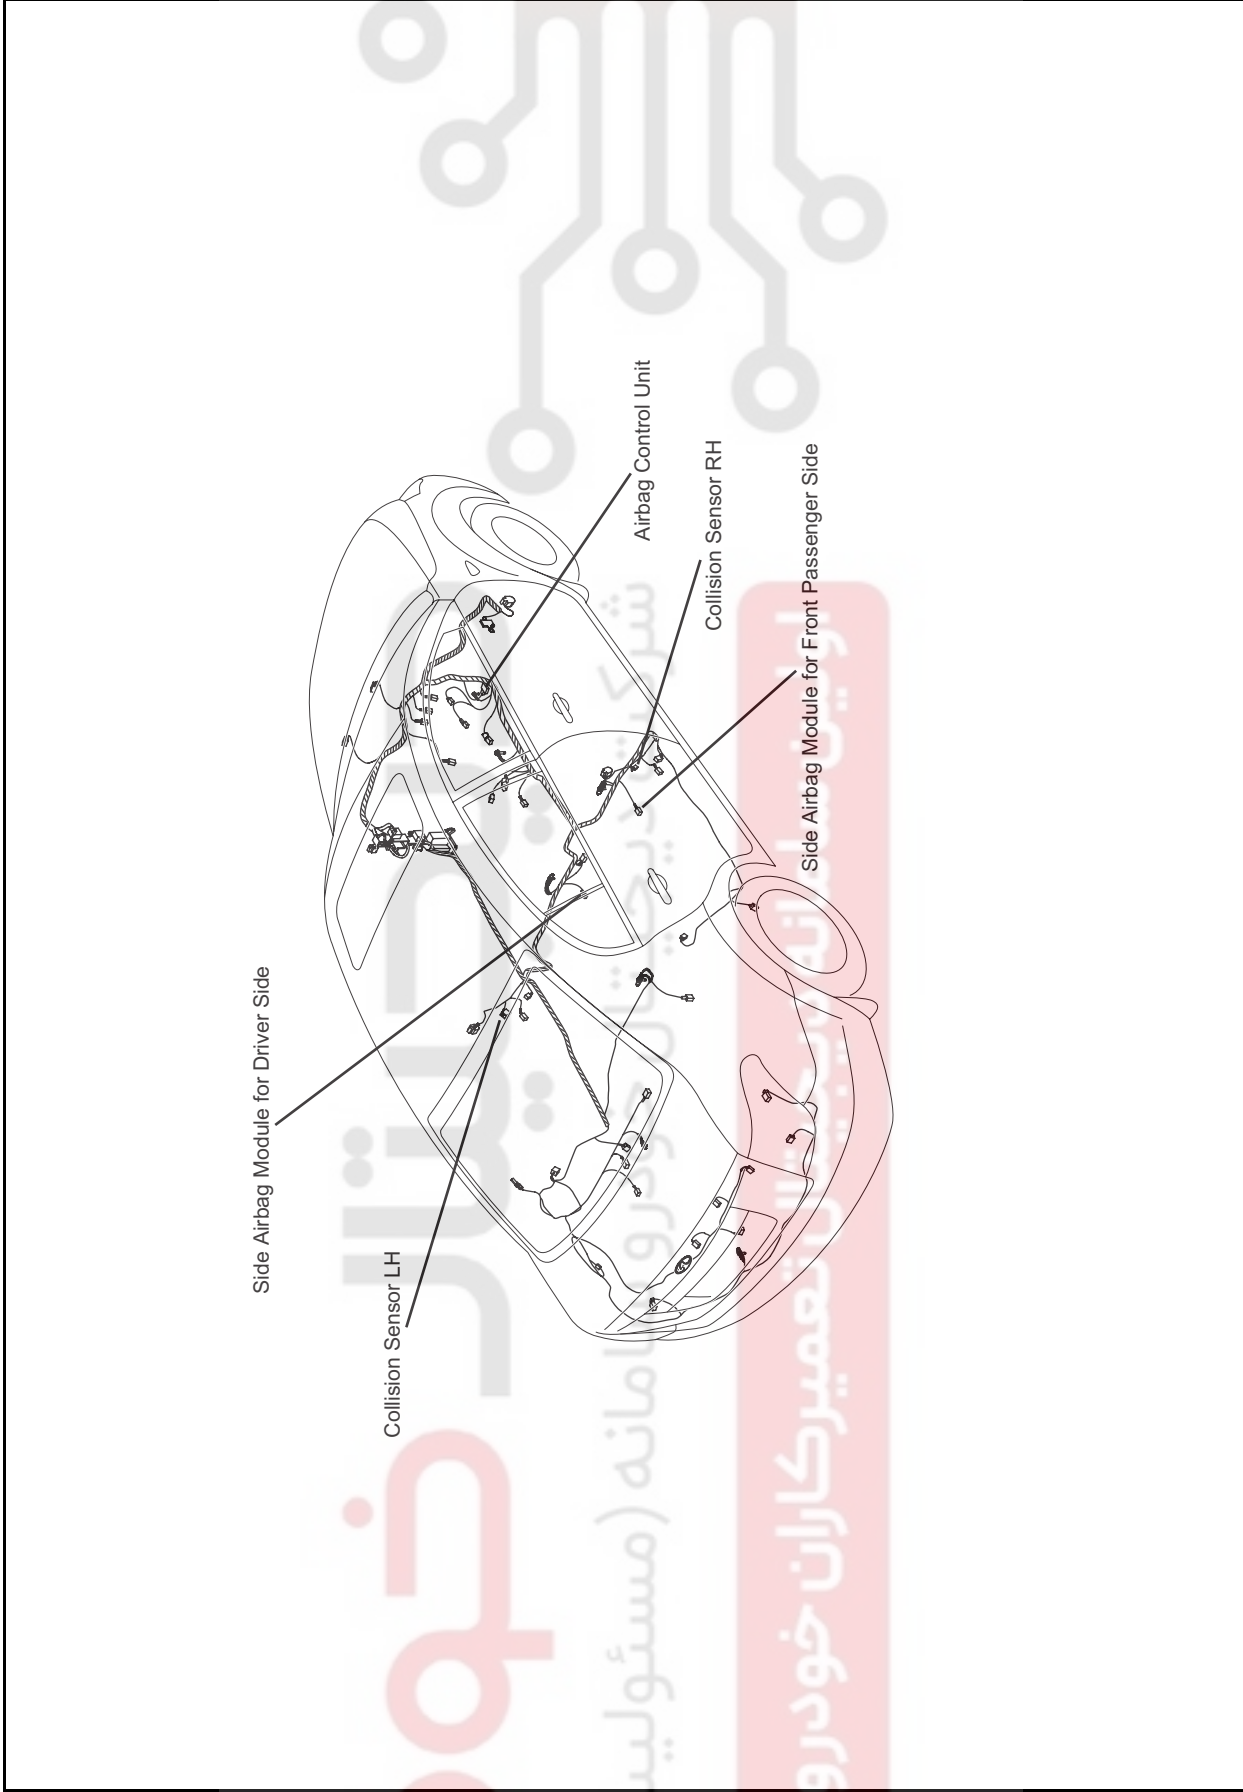


RS-SRS-3


RS

RS Restraint System SRS Airbag System

Power Window System BO-WM-1

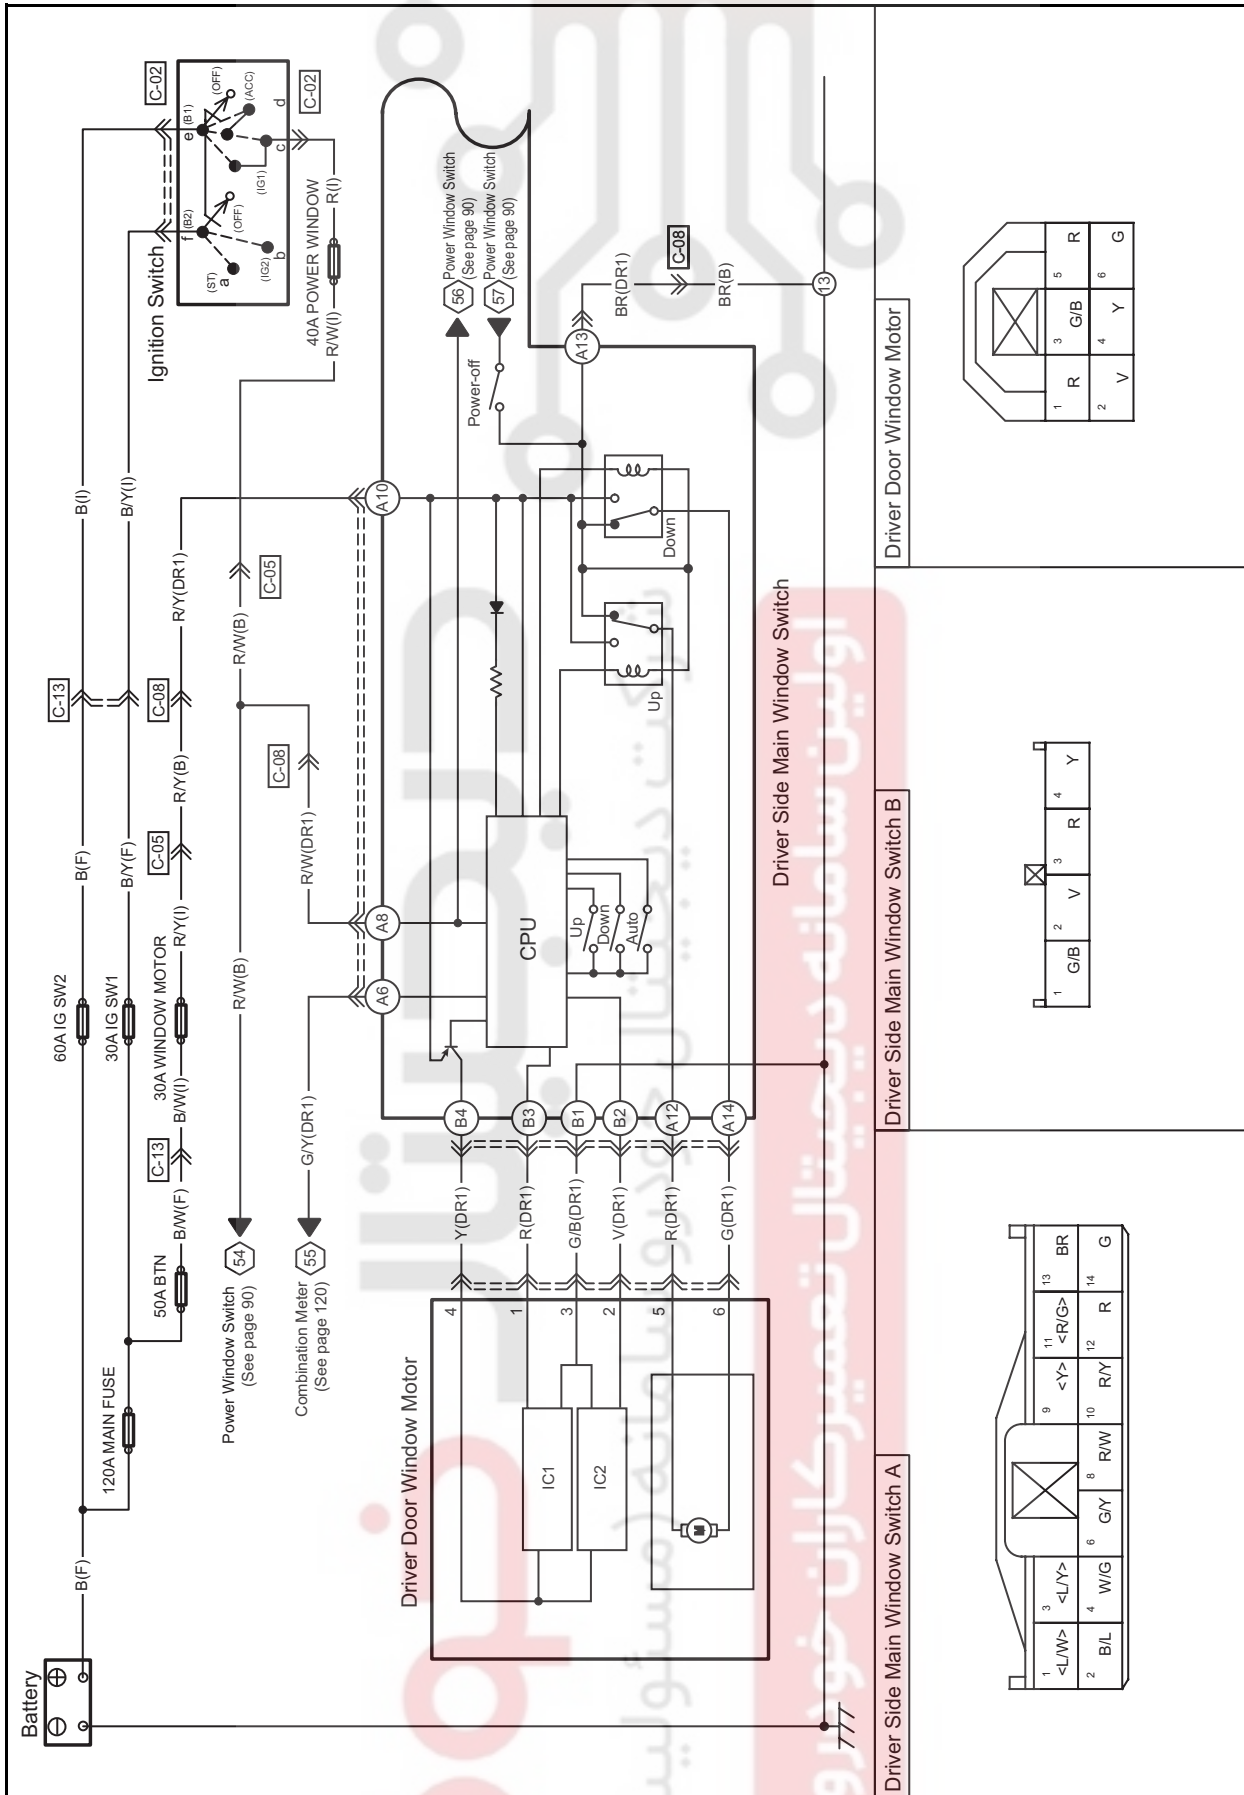

Wire Harness Symbol: (F) (E) (I) (B)

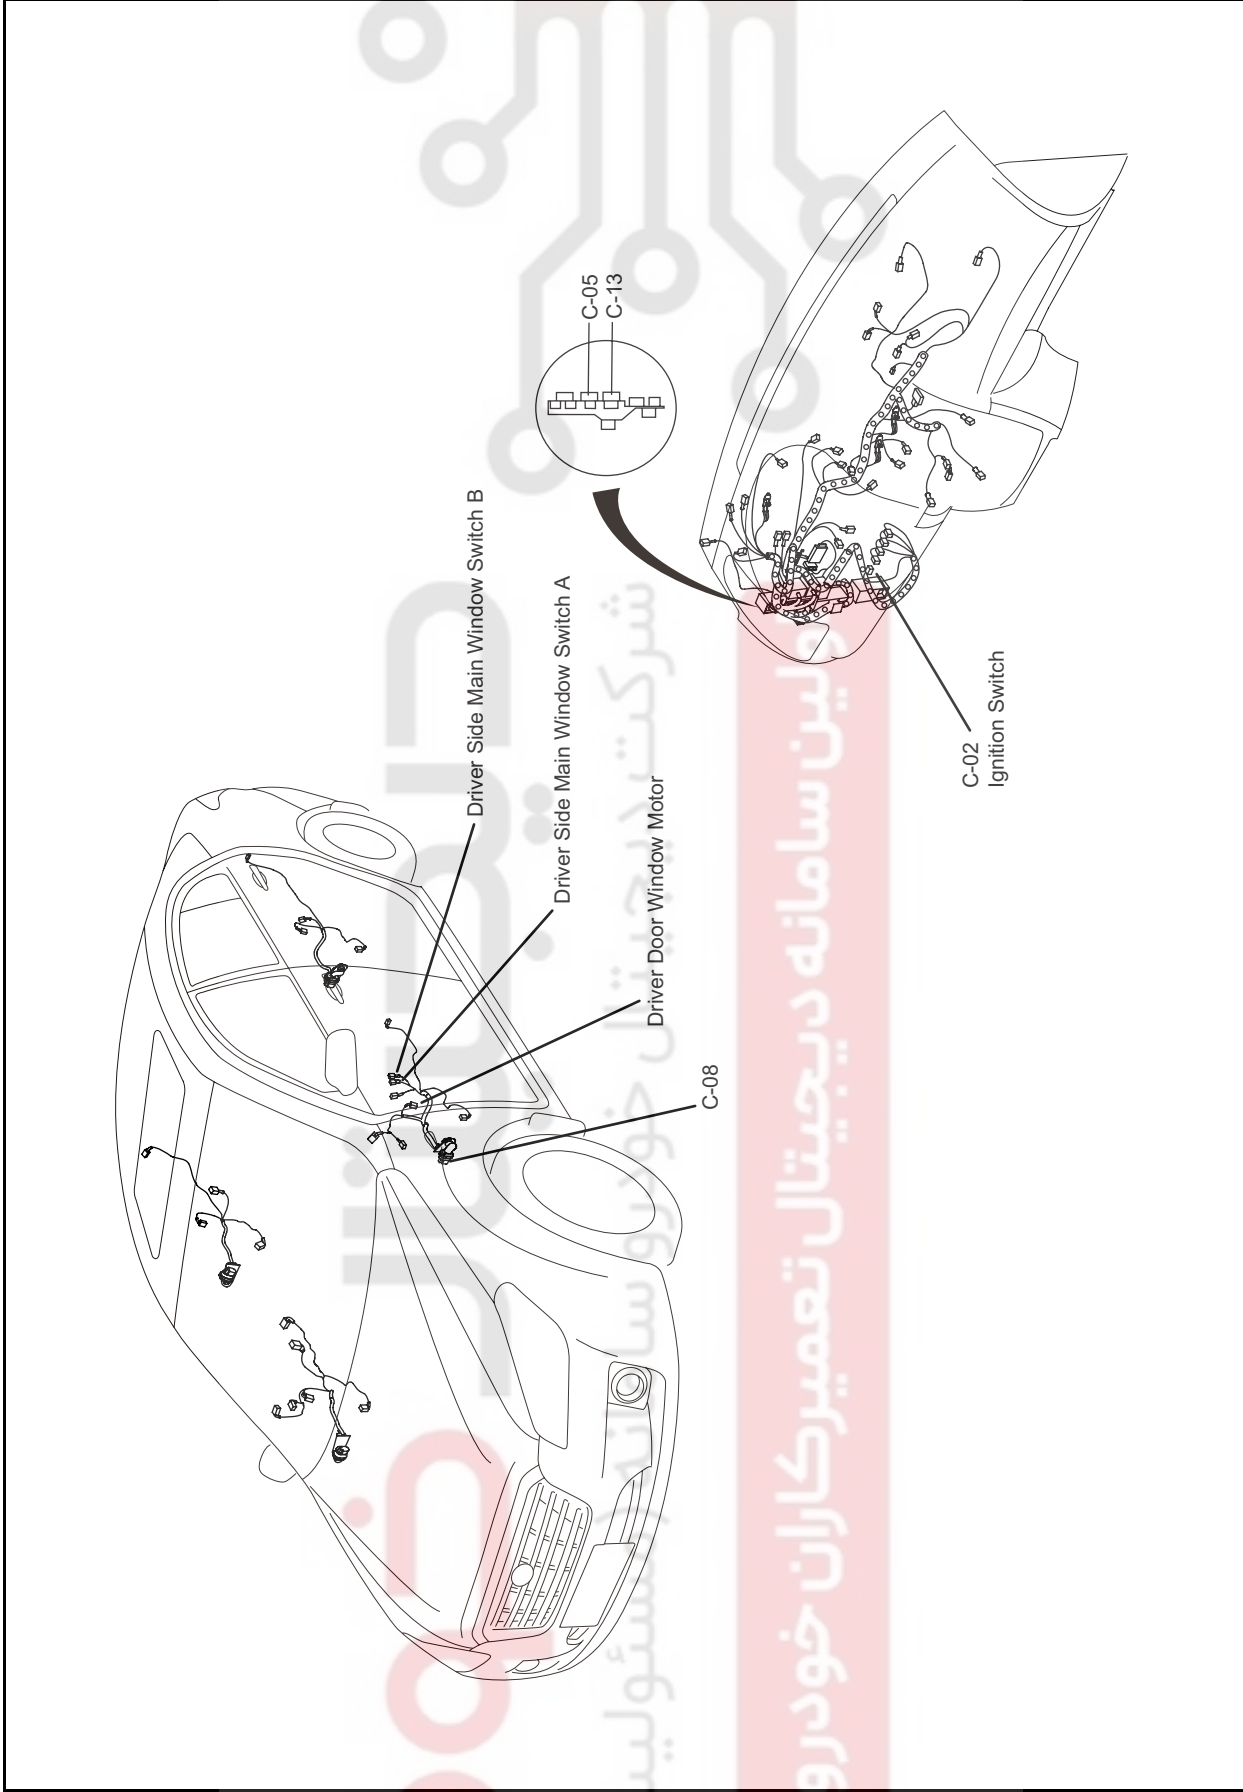


BO Body and Accessory WM Window Glass/Window/Mirror

BO-WM-1


BO

BO-WM-2

Power Window System

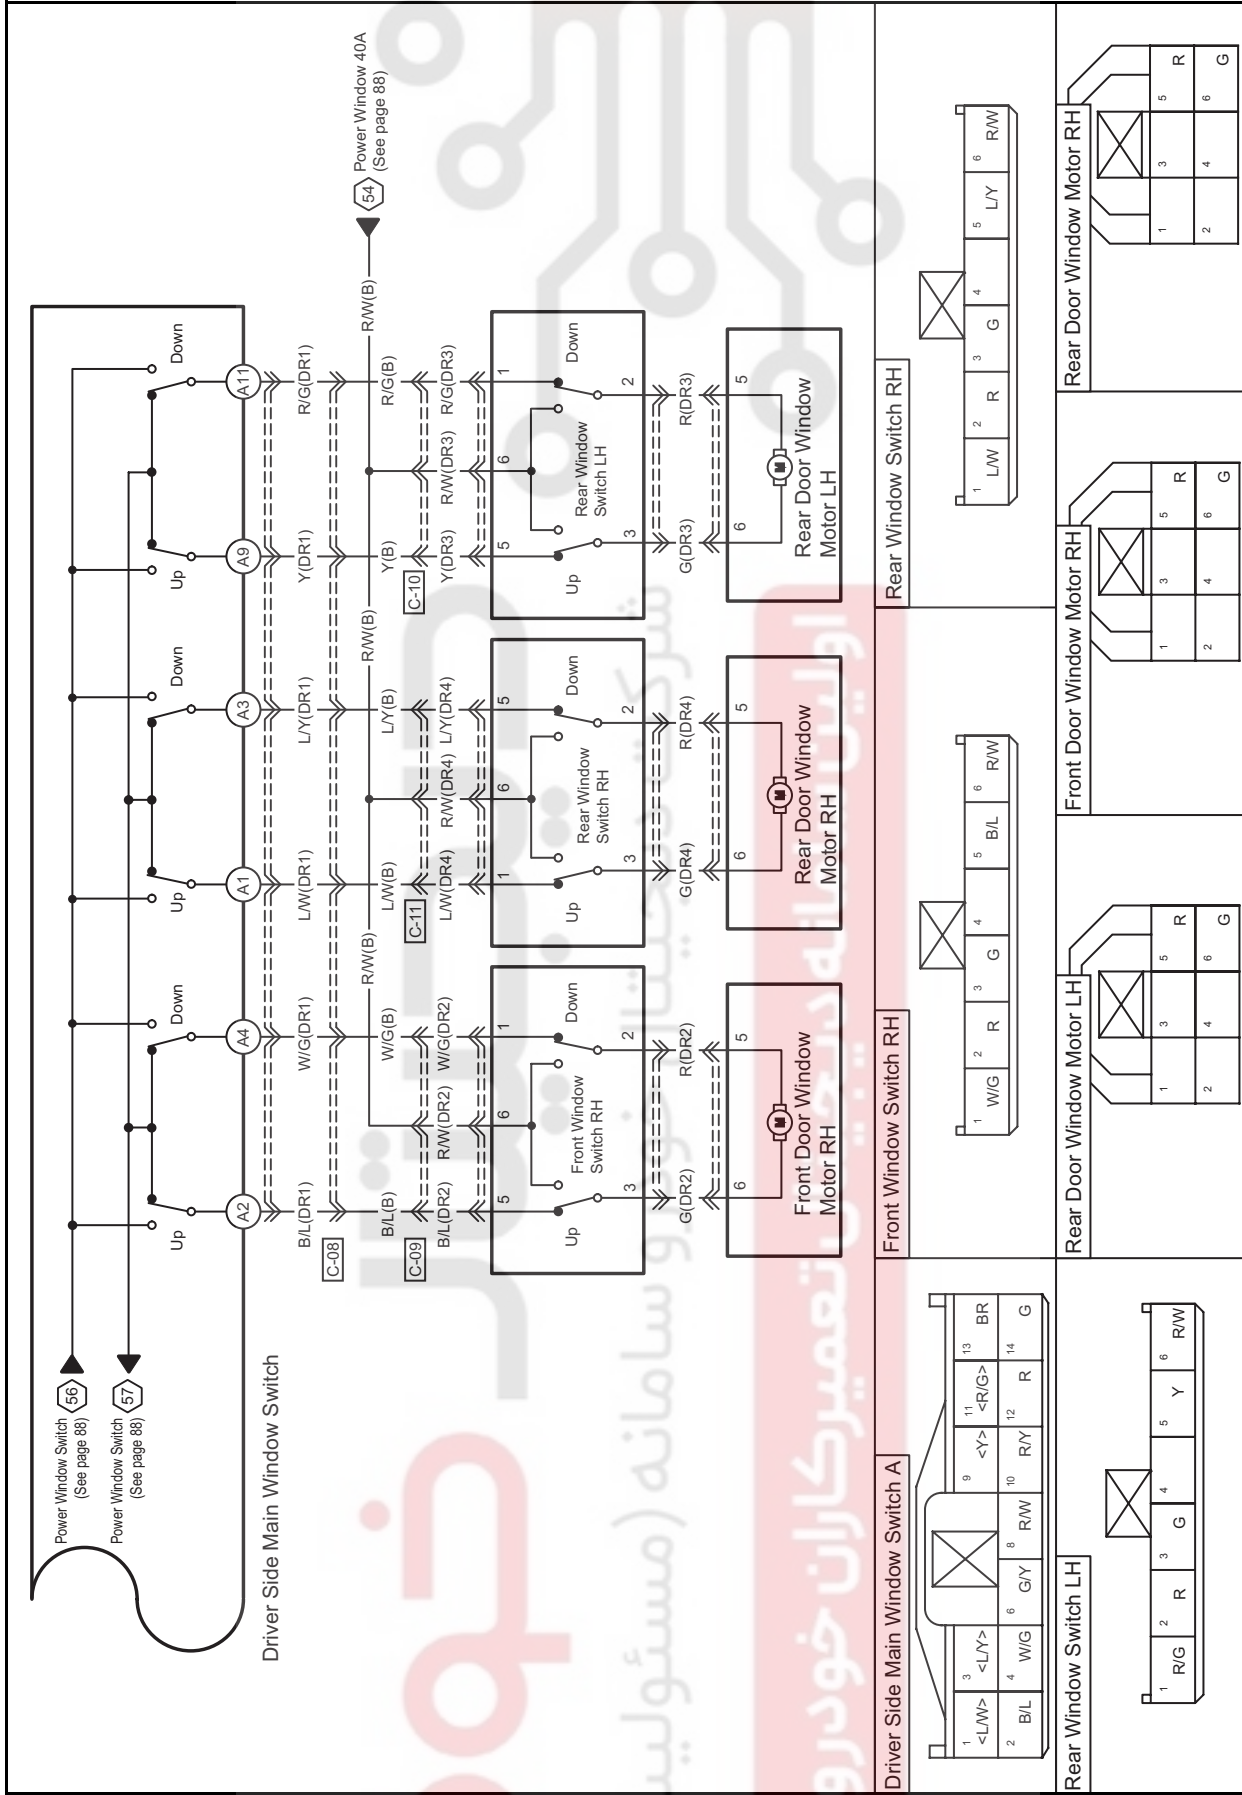

Wire Harness Symbol: (F) (E) (I) (B)

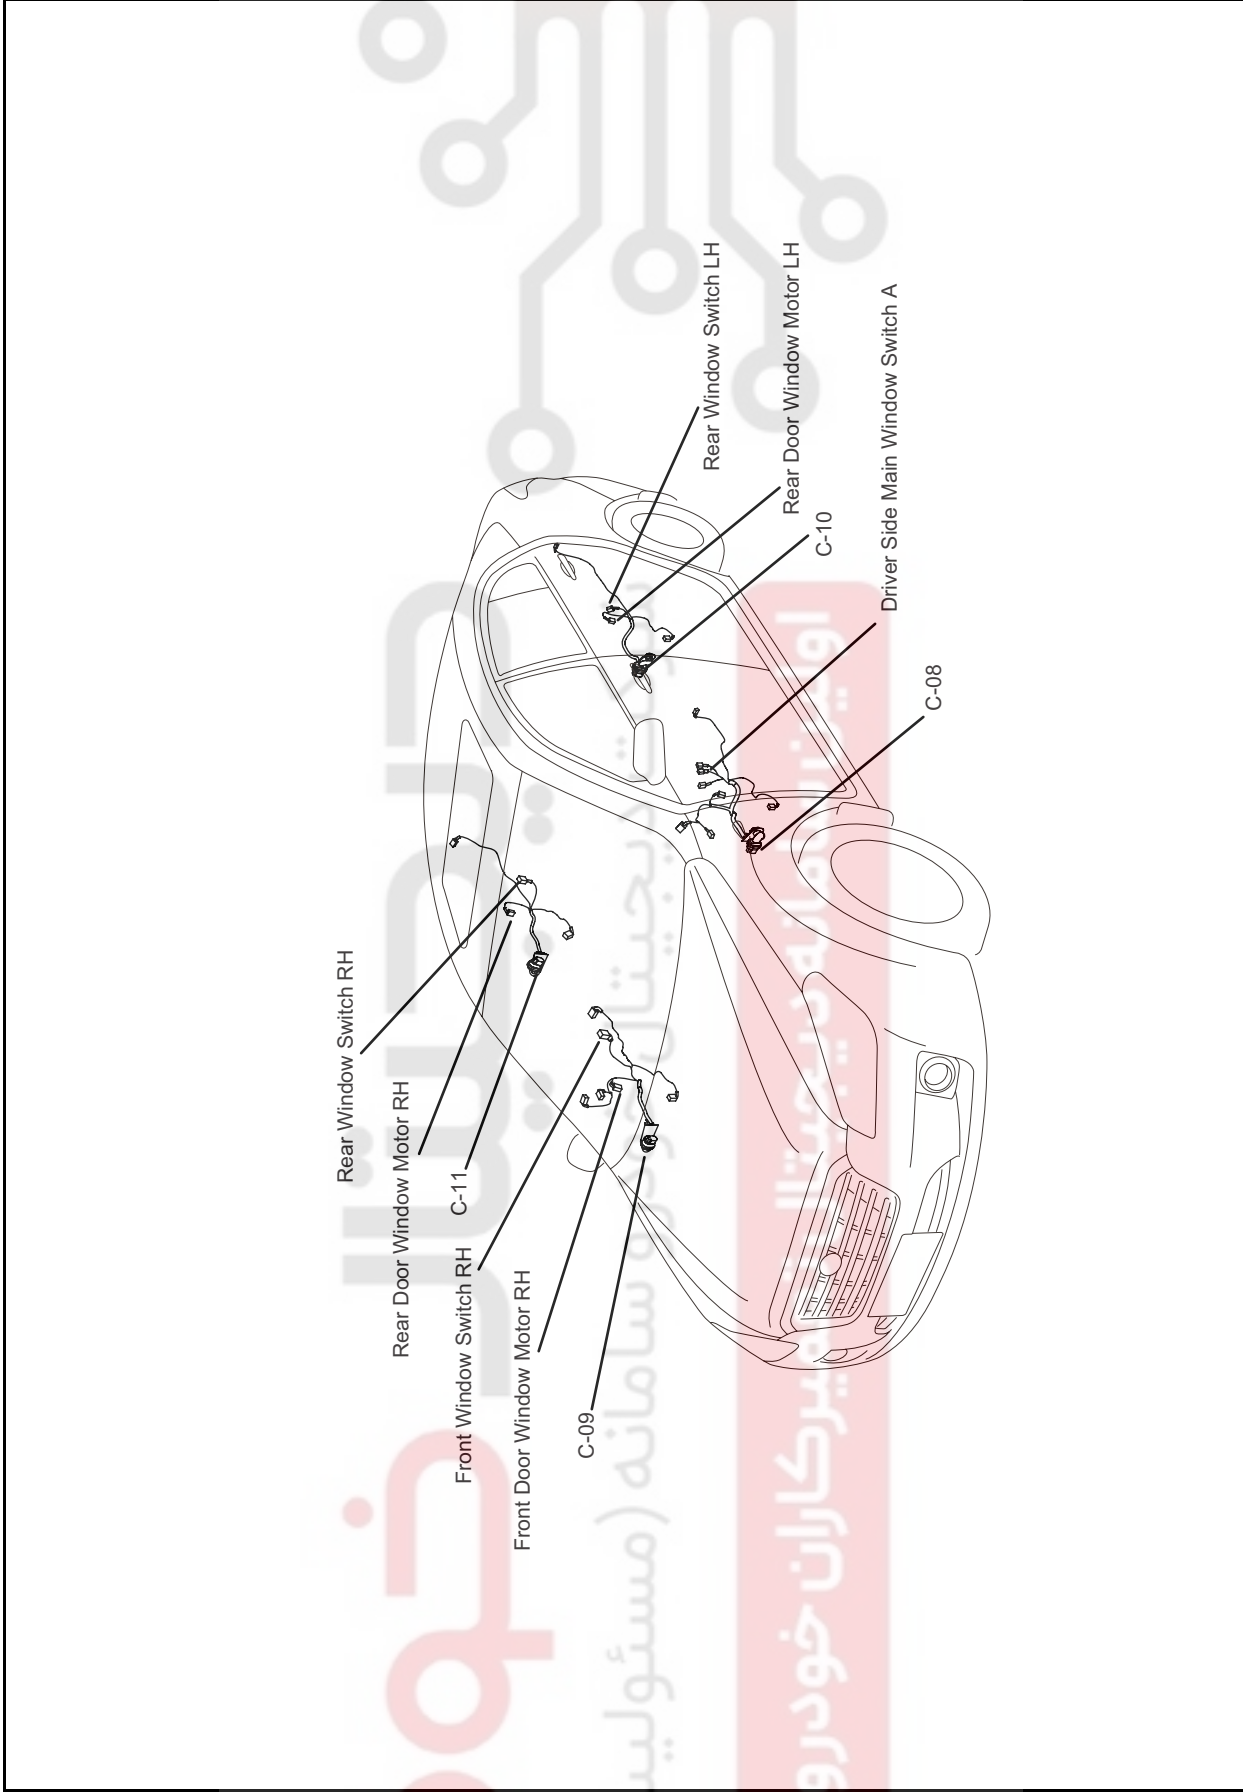


BO Body and Accessory WM Window Glass/Window/Mirror

BO-WM-2

BO



Wire Harness Symbol: (F) (E) (I) (B)

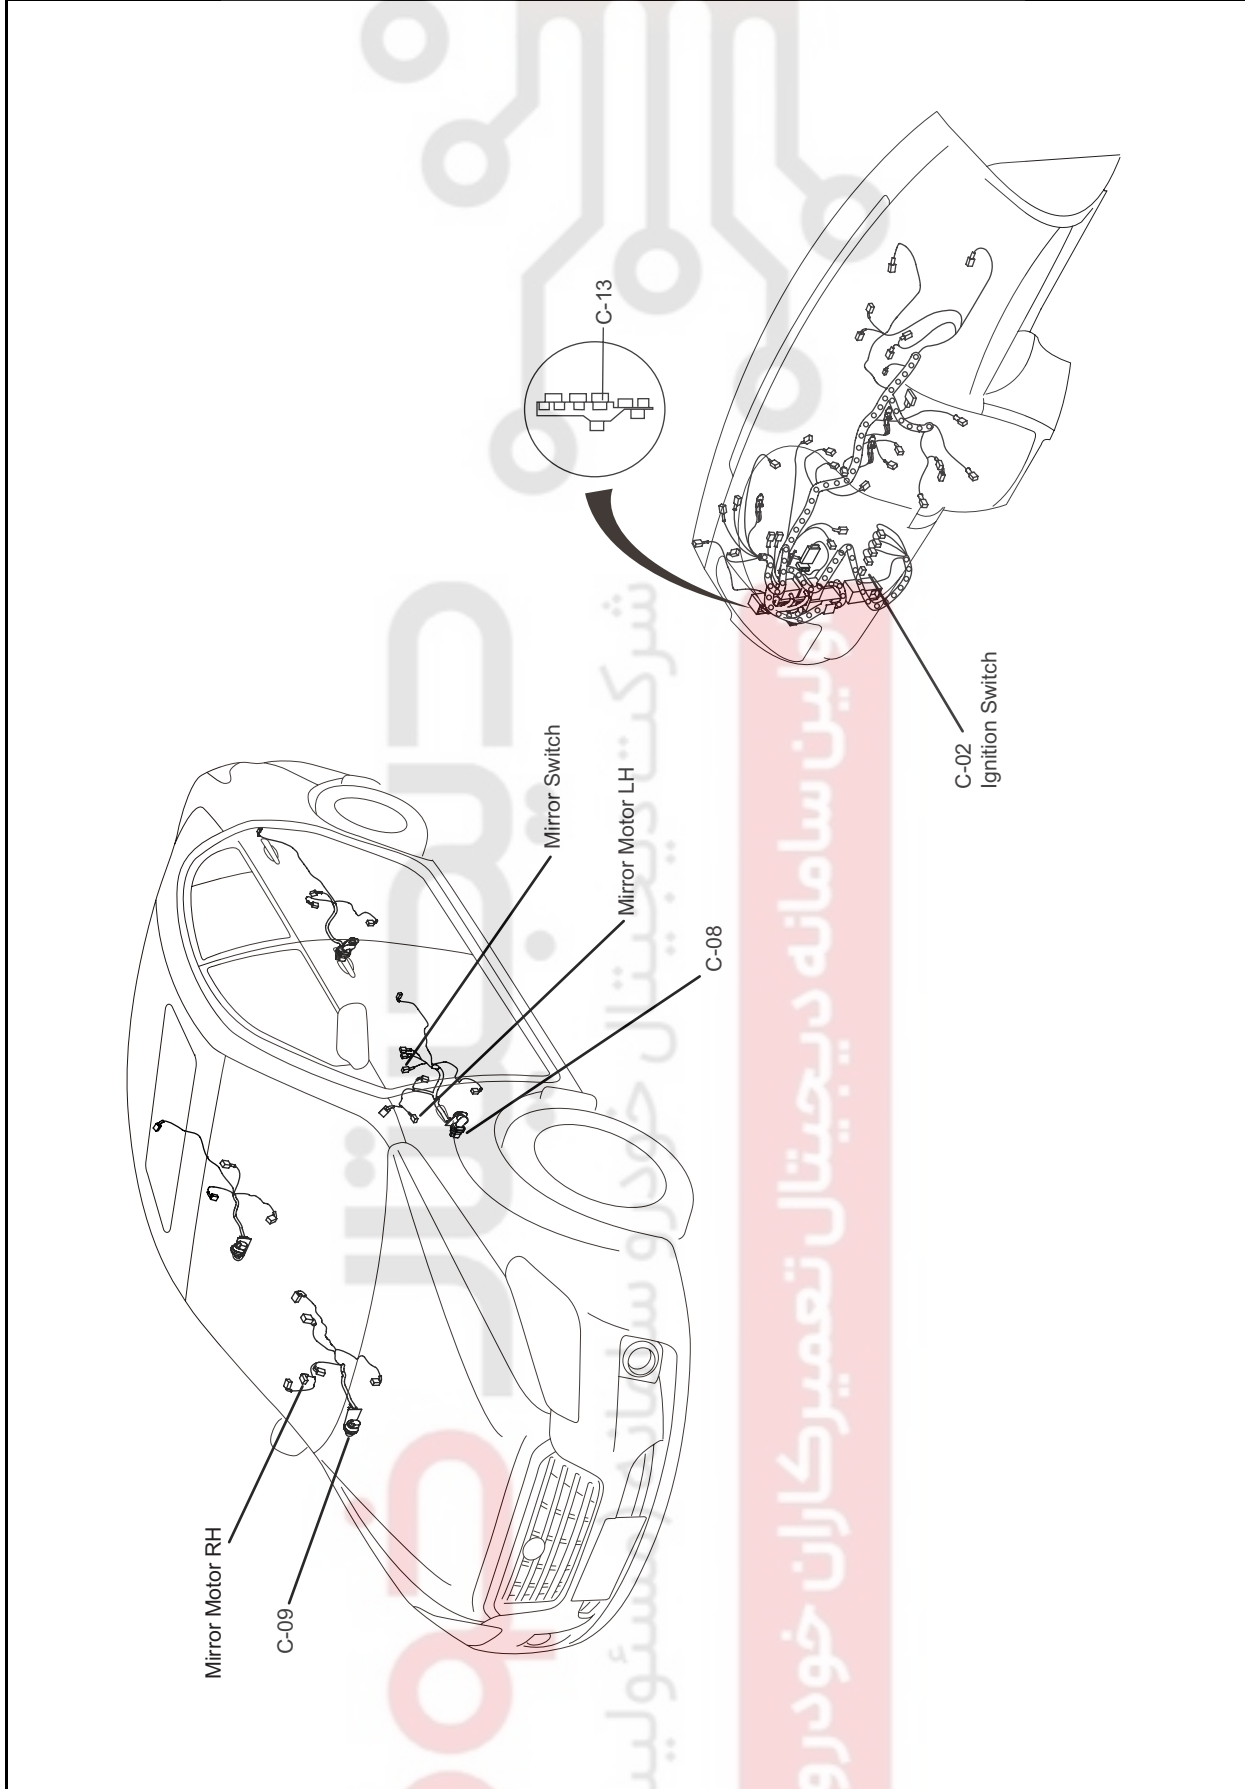


BO-WM-3

BO

BO Body and Accessory WM Window Glass/Window/Mirror



Wire Harness Symbol: (F) (E) (I) (B)

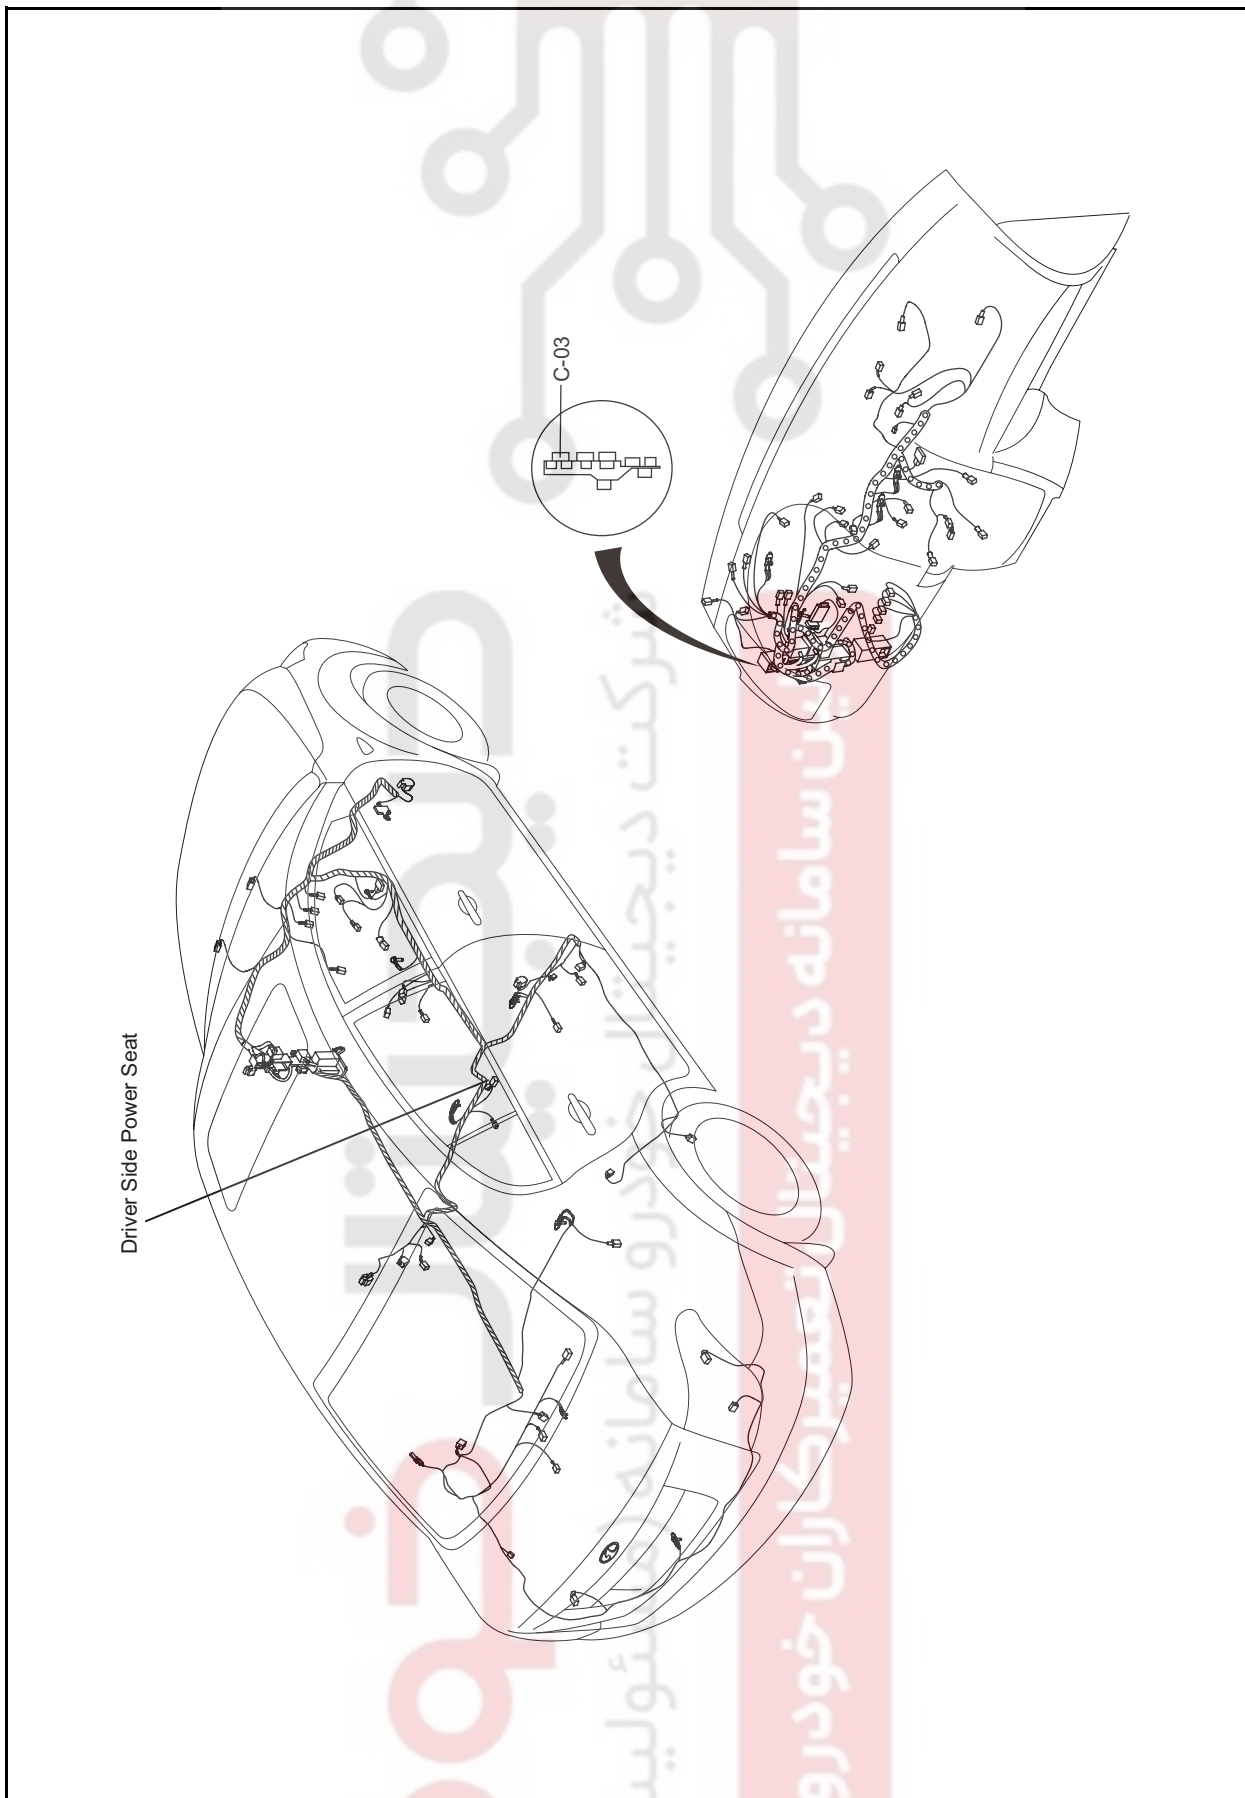

Driver Side Power Seat


 

BO-SE-1

BO


BO Body and Accessory SE Seat

BO-RF-1

Roof

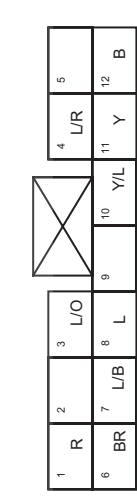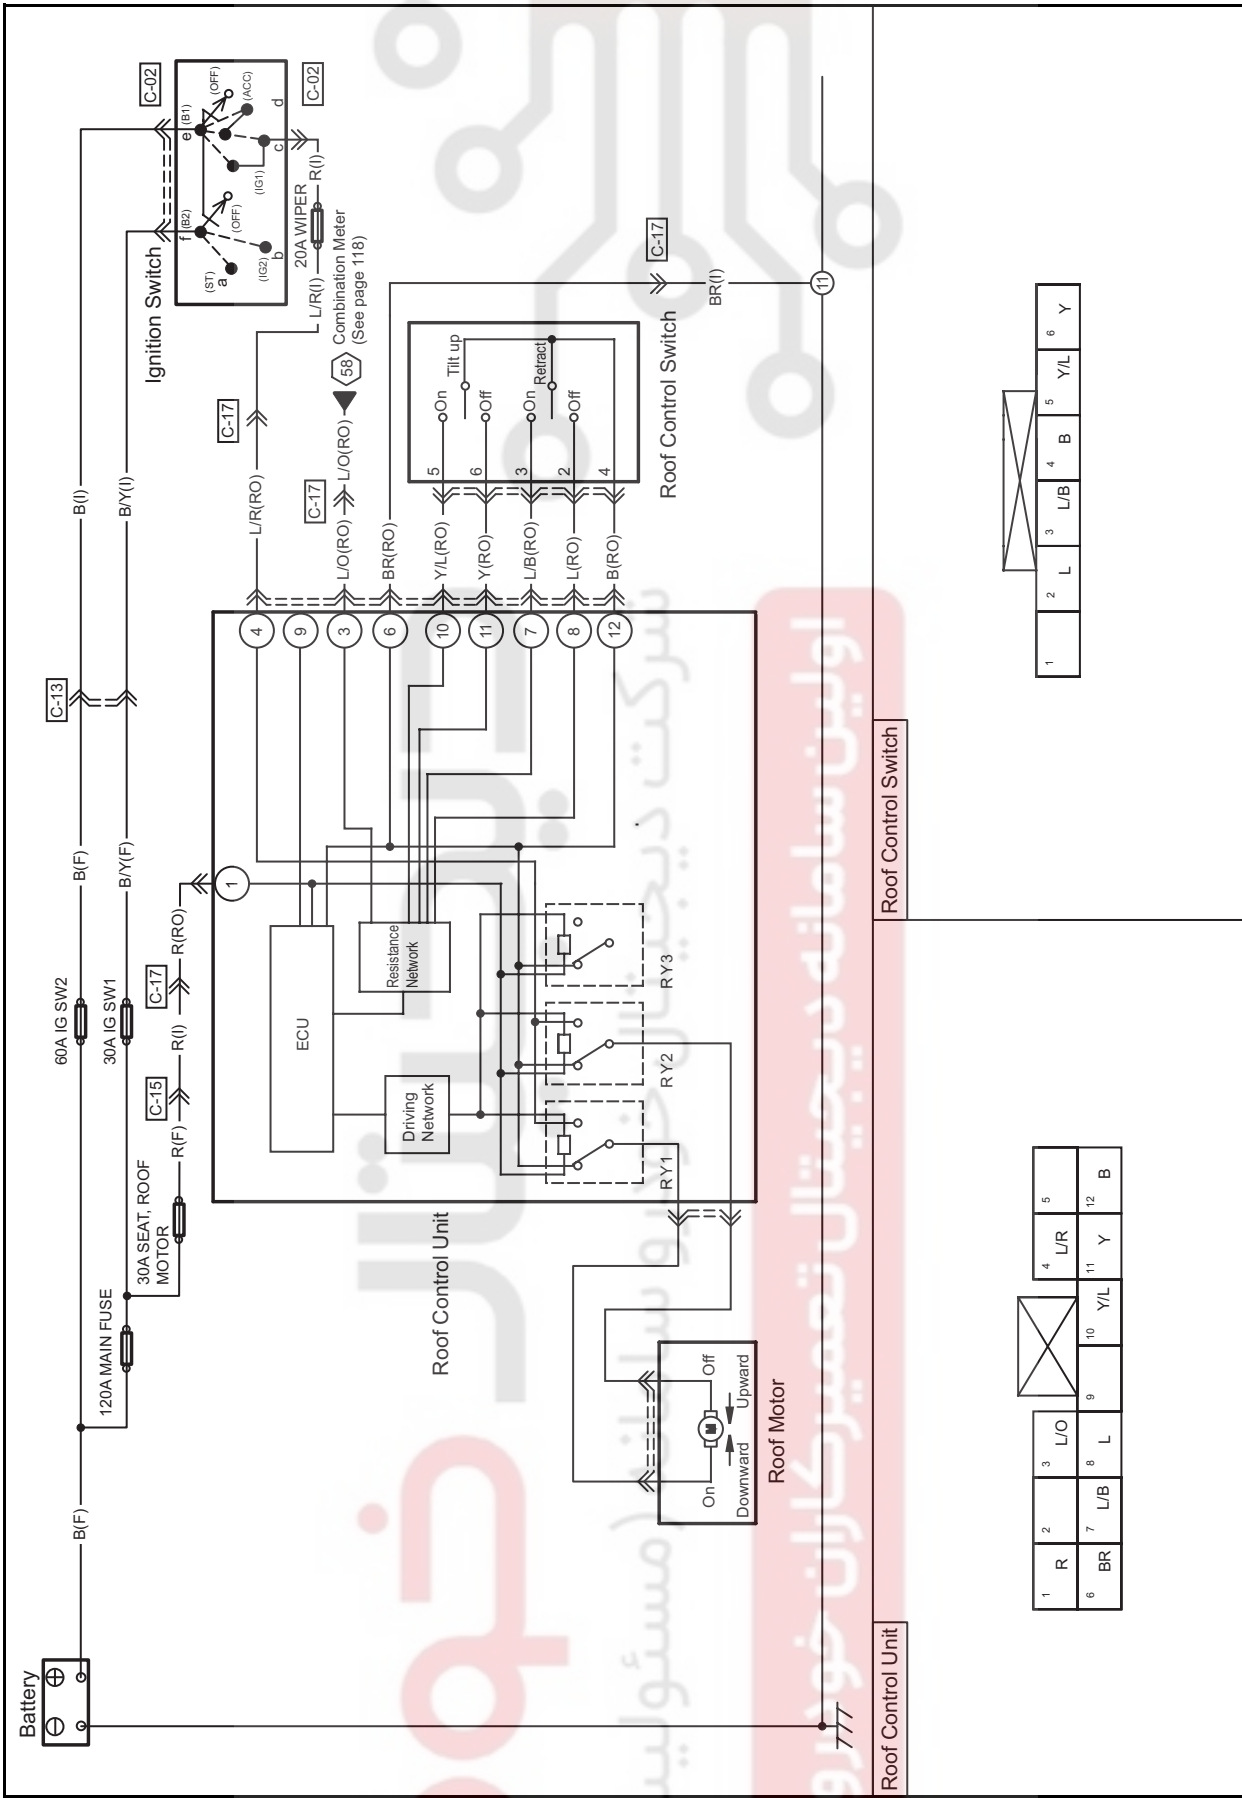

Wire Harness Symbol: (F) (E) (I) (B)

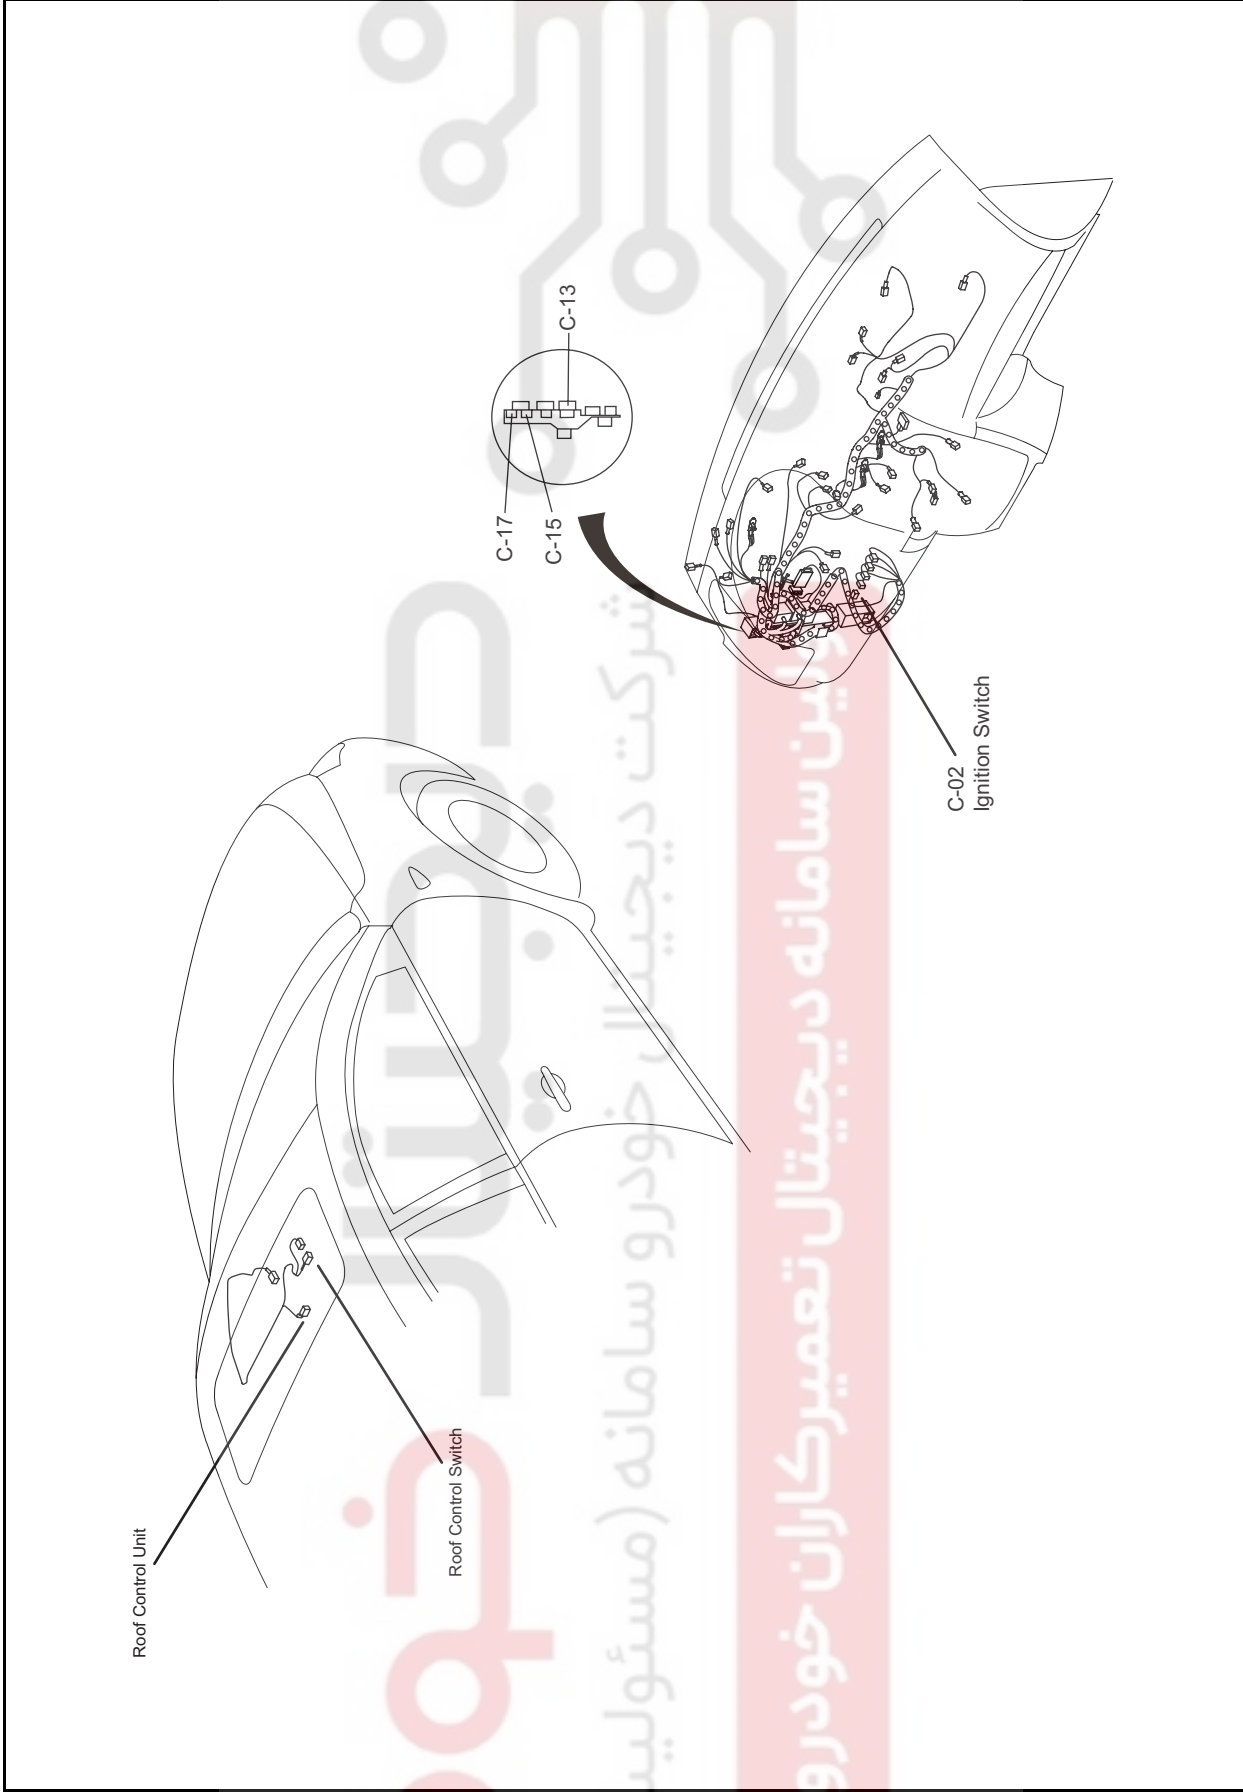


BO-RF-1

BO


BO Body and Accessory RF Roof

BO-LI-1

Headlight

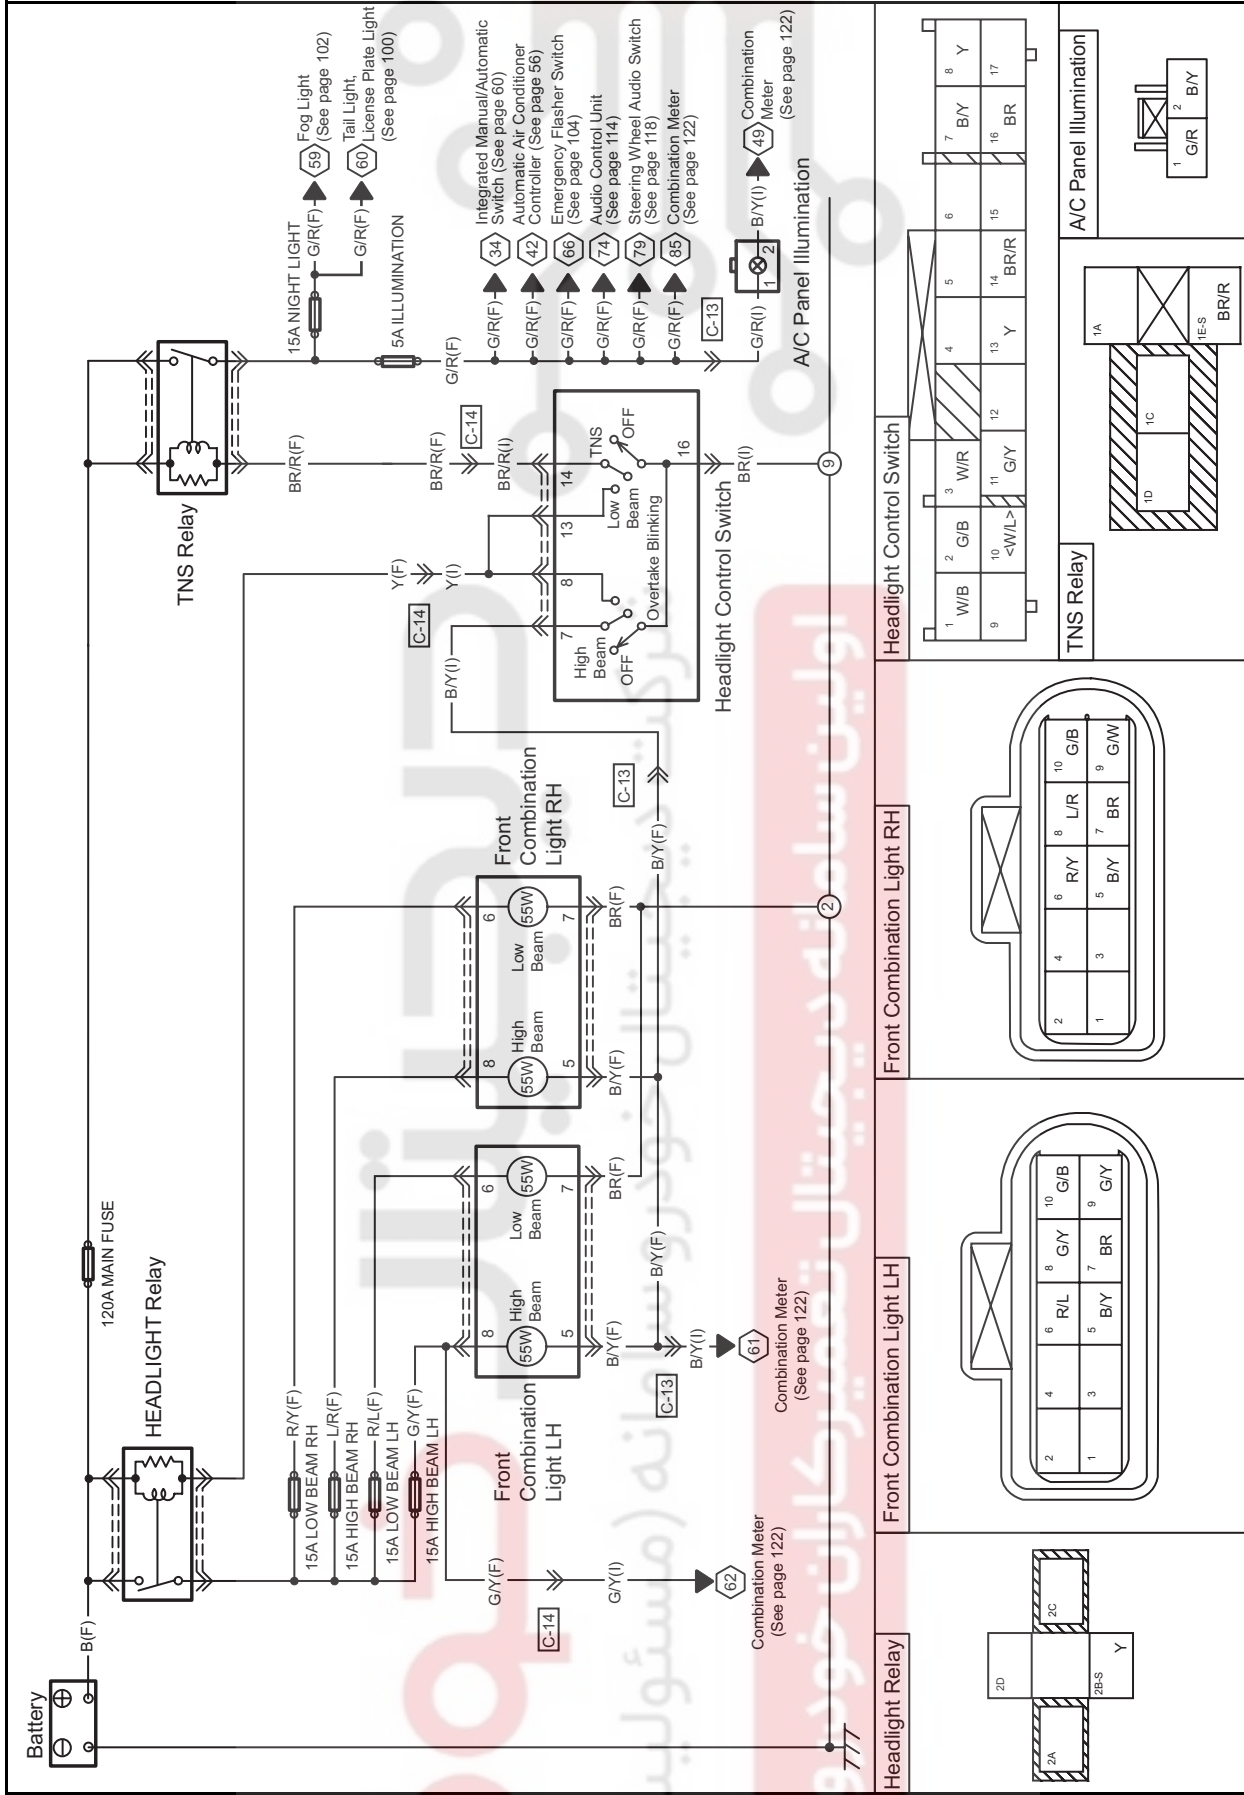

Wire Harness Symbol: (F) (E) (I) (B)

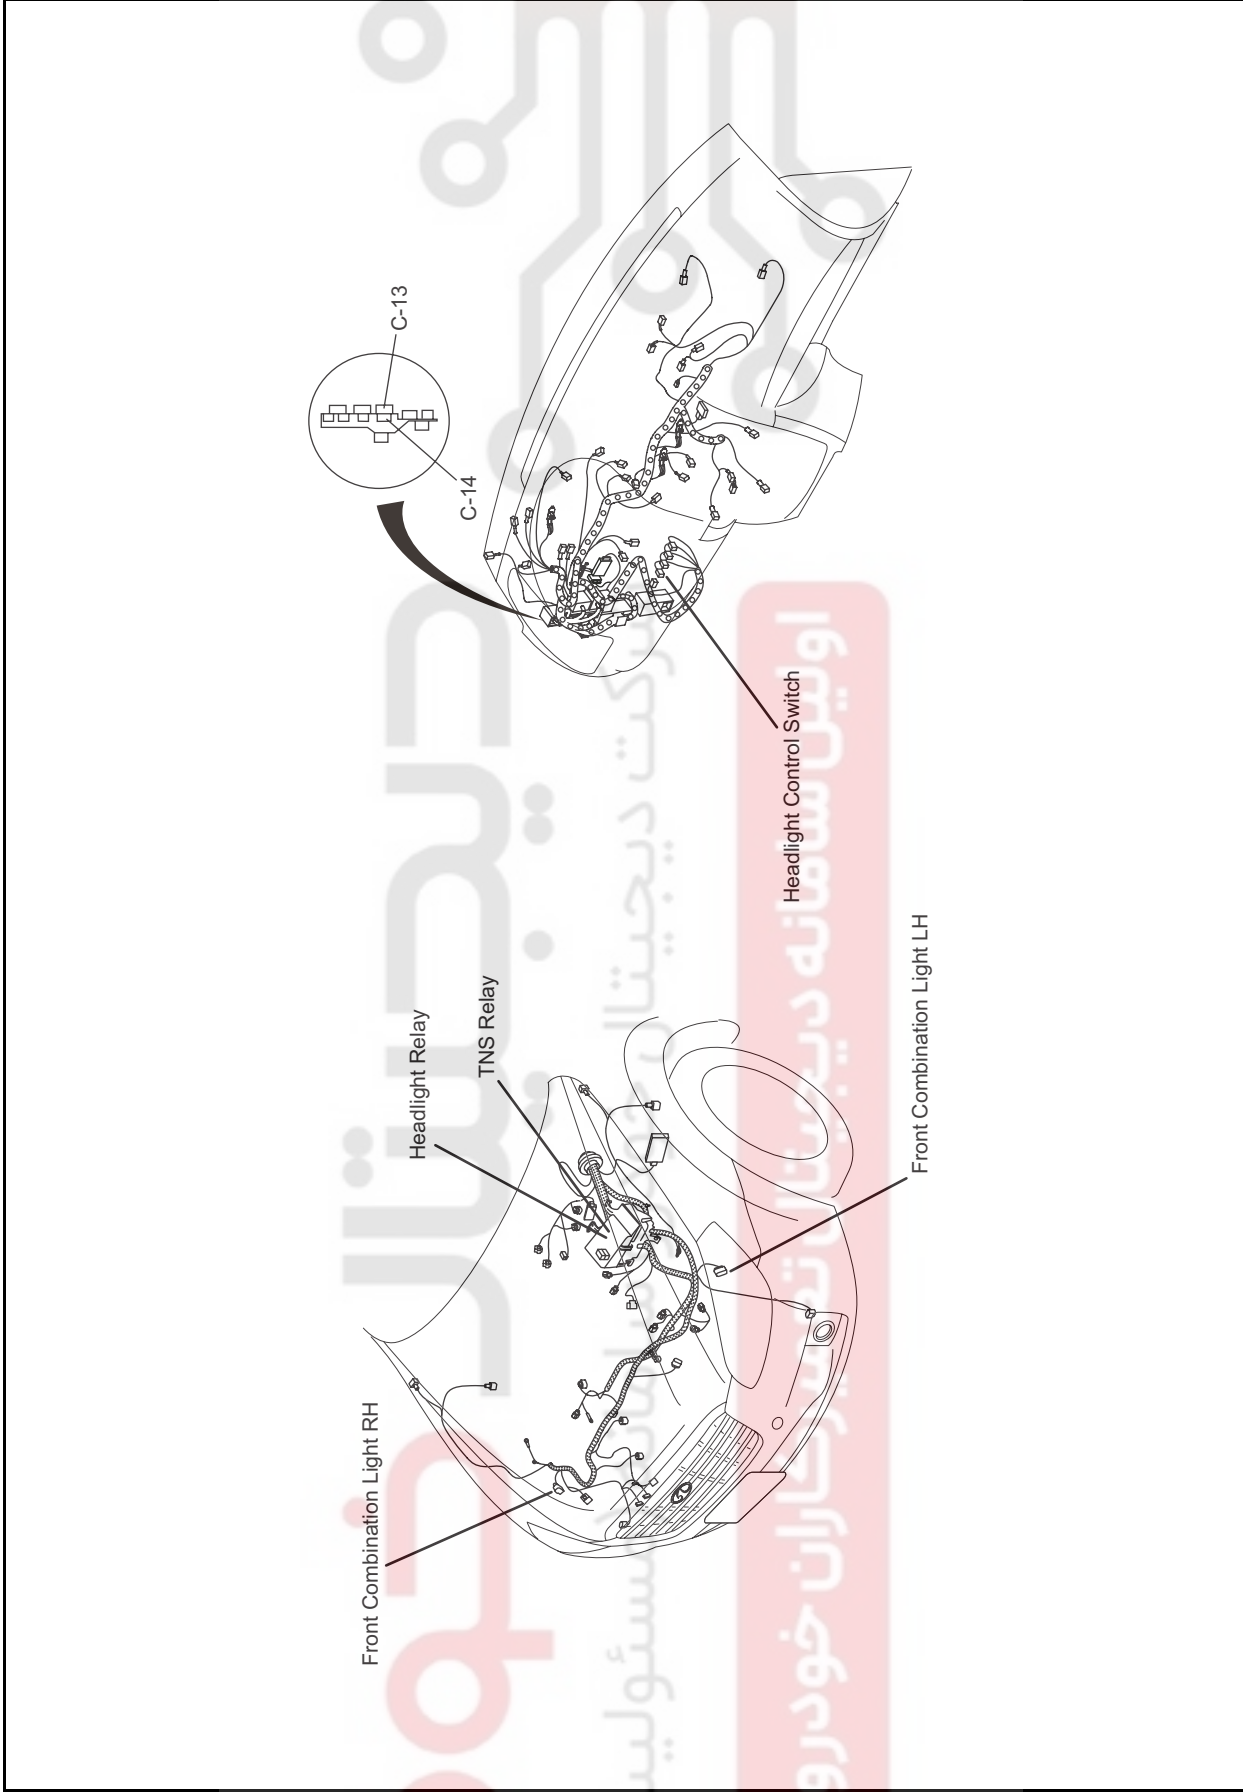



BO-LI-1

BO

BO Body and Accessory LI Lighting System



Wire Harness Symbol: (F) (E) (I) (B)

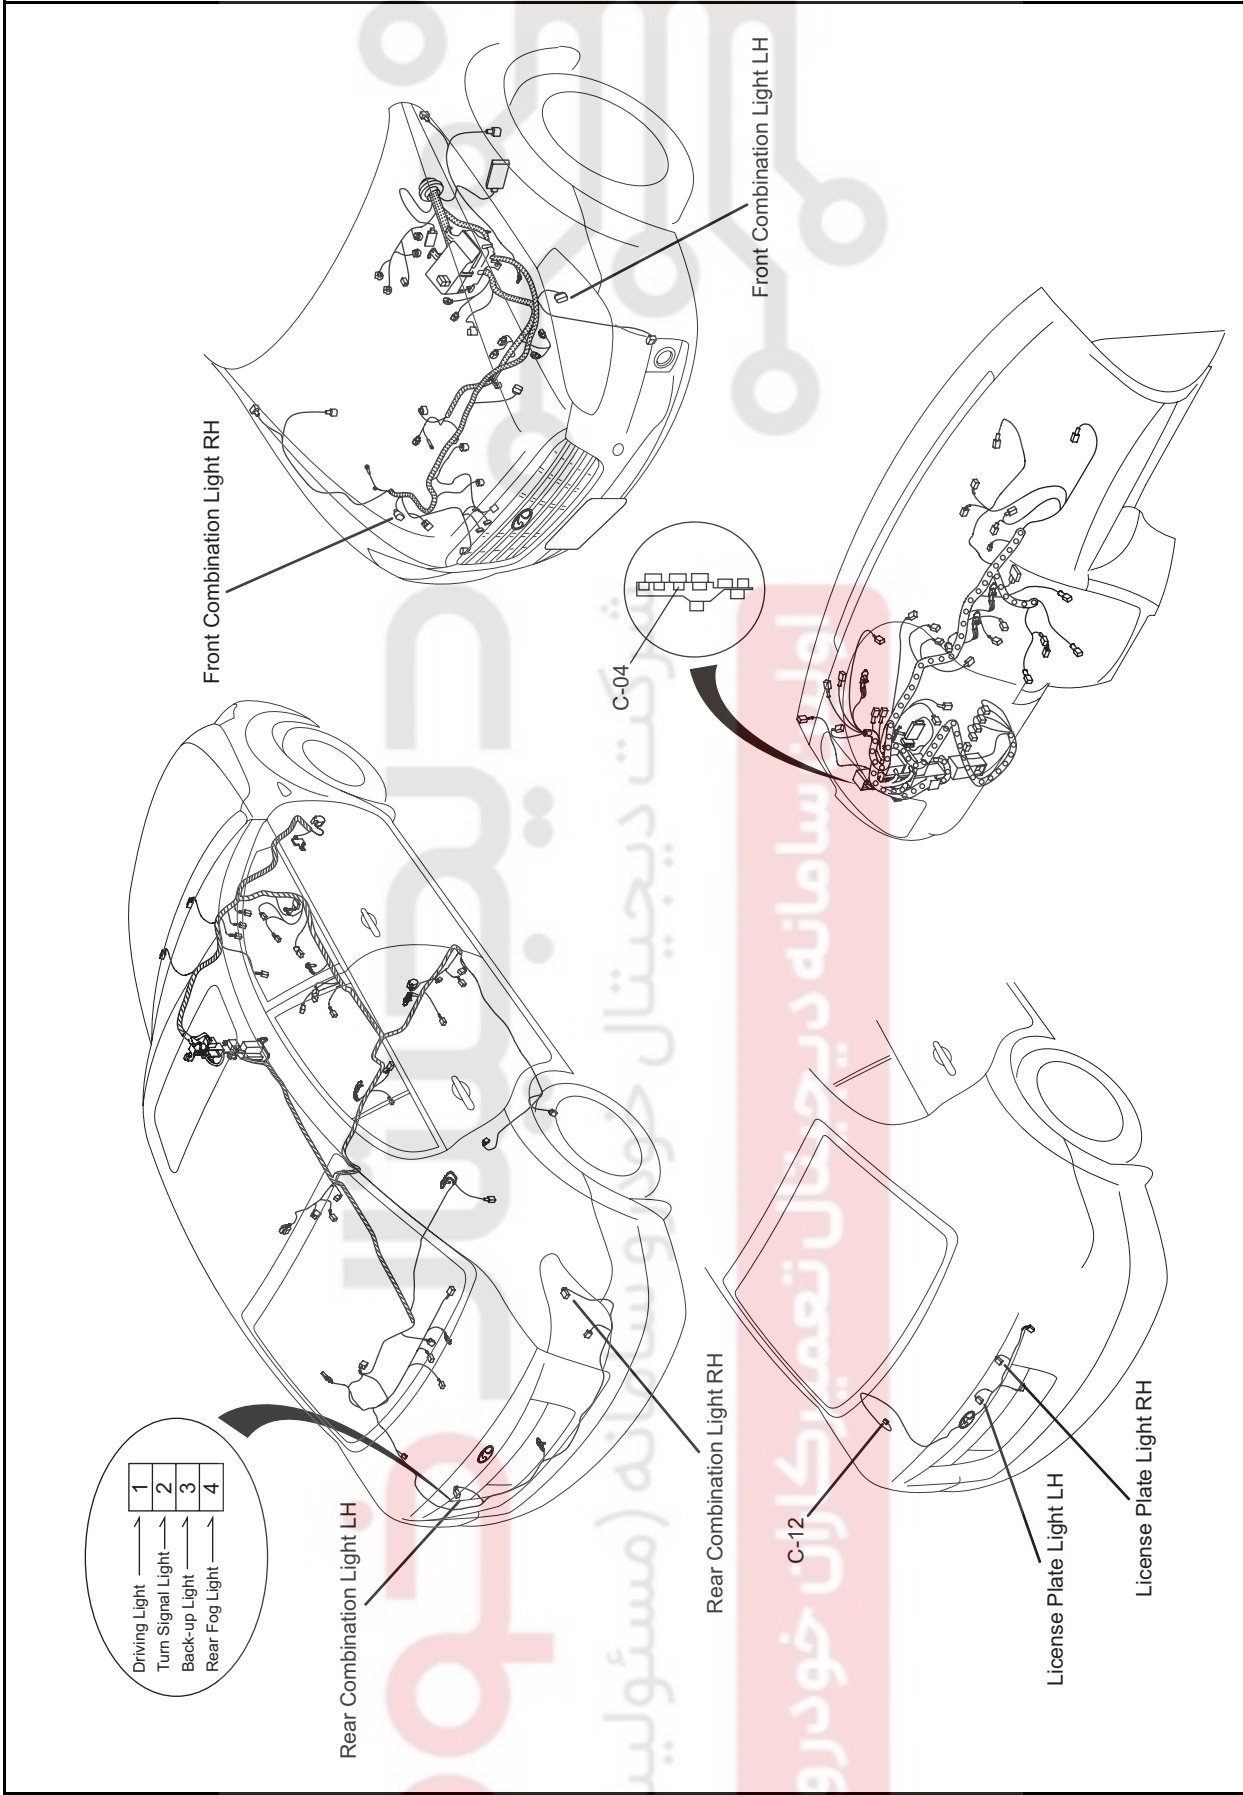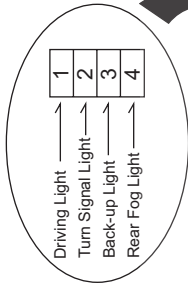


BO-LI-2

BO

BO Body and Accessory LI Lighting System


Front Fog Light Rear Fog Light BO-LI-3

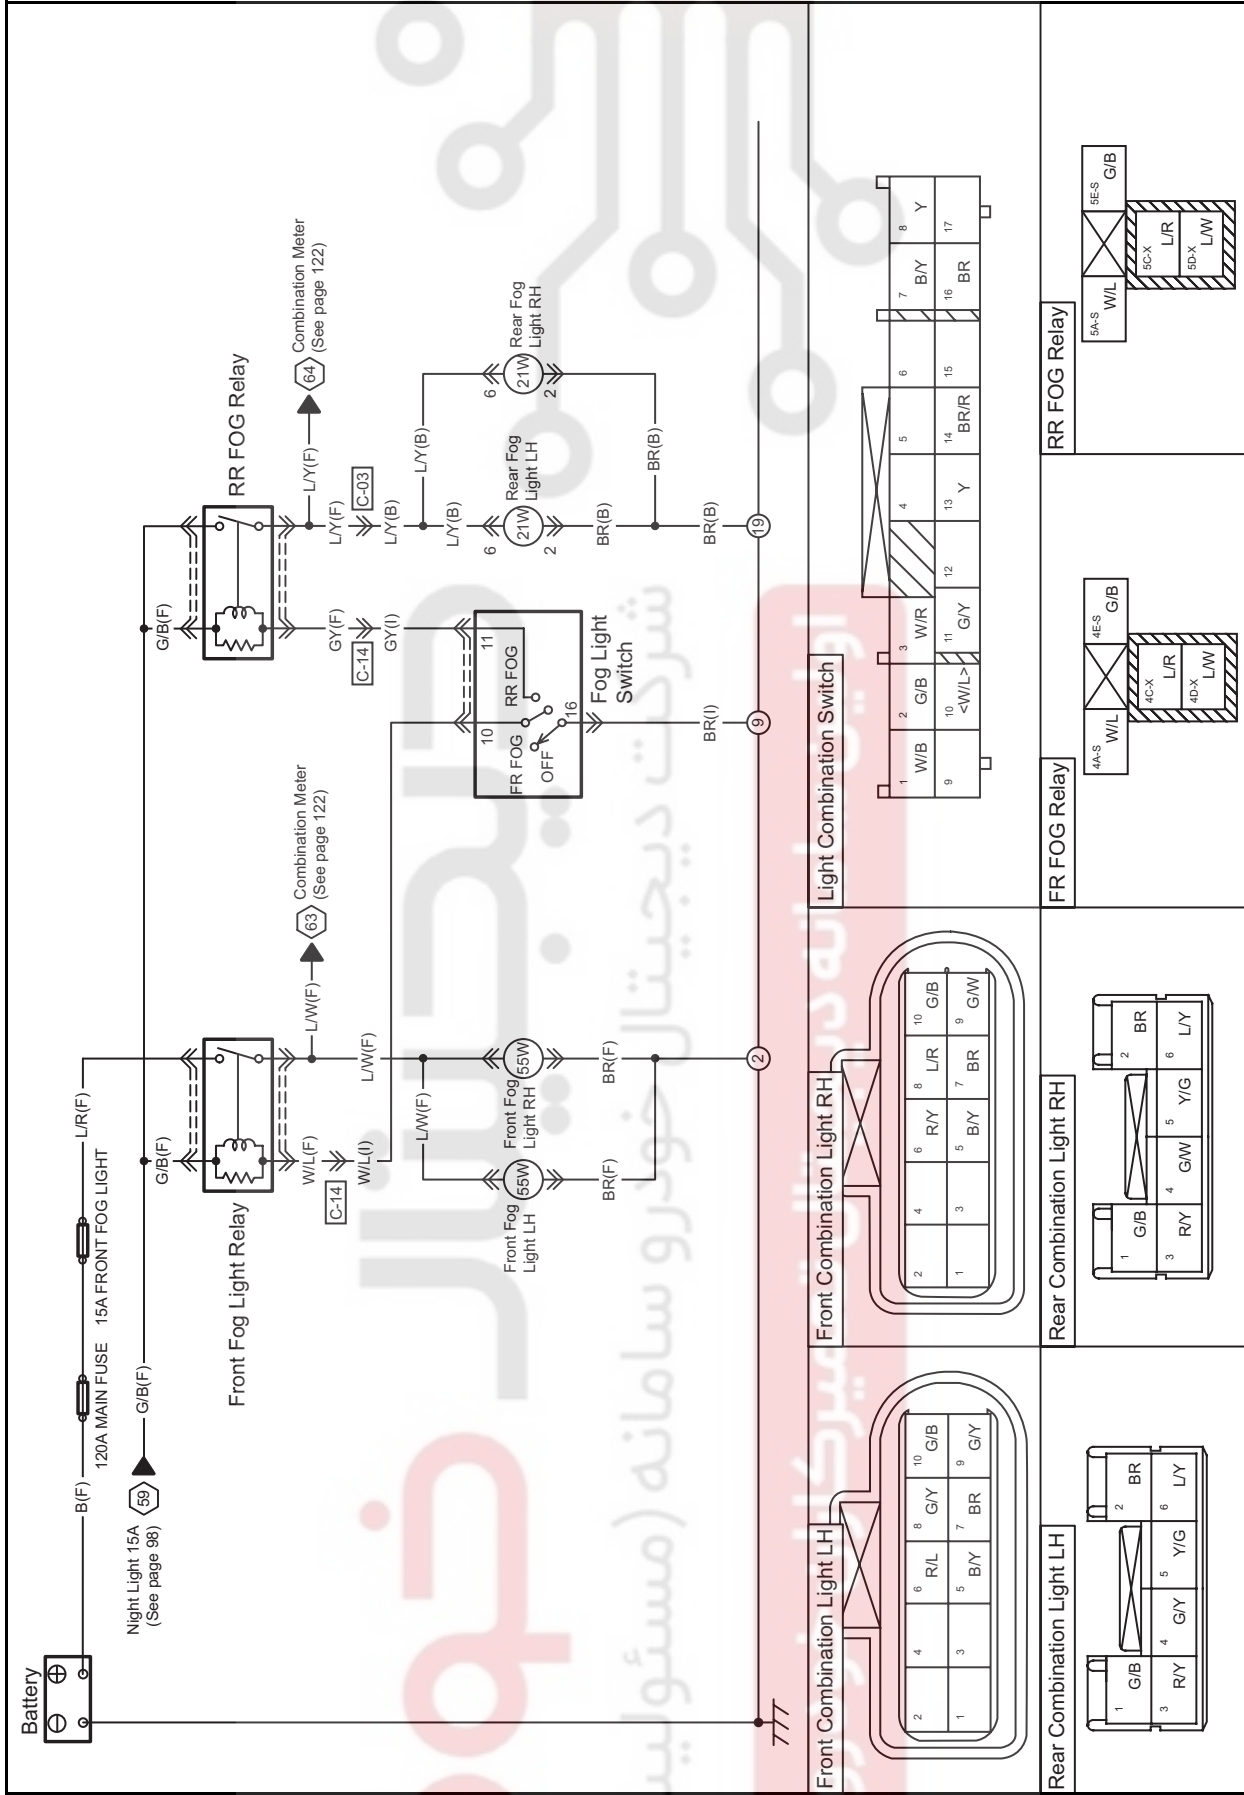

Wire Harness Symbol: (F) (E) (I) (B)

|   |
|---|
| 1 |
| 2 |
| 3 |
| 4 |

Stop Light →  
Turn Signal Light →  
Back-up Light →  
Rear Fog Light →

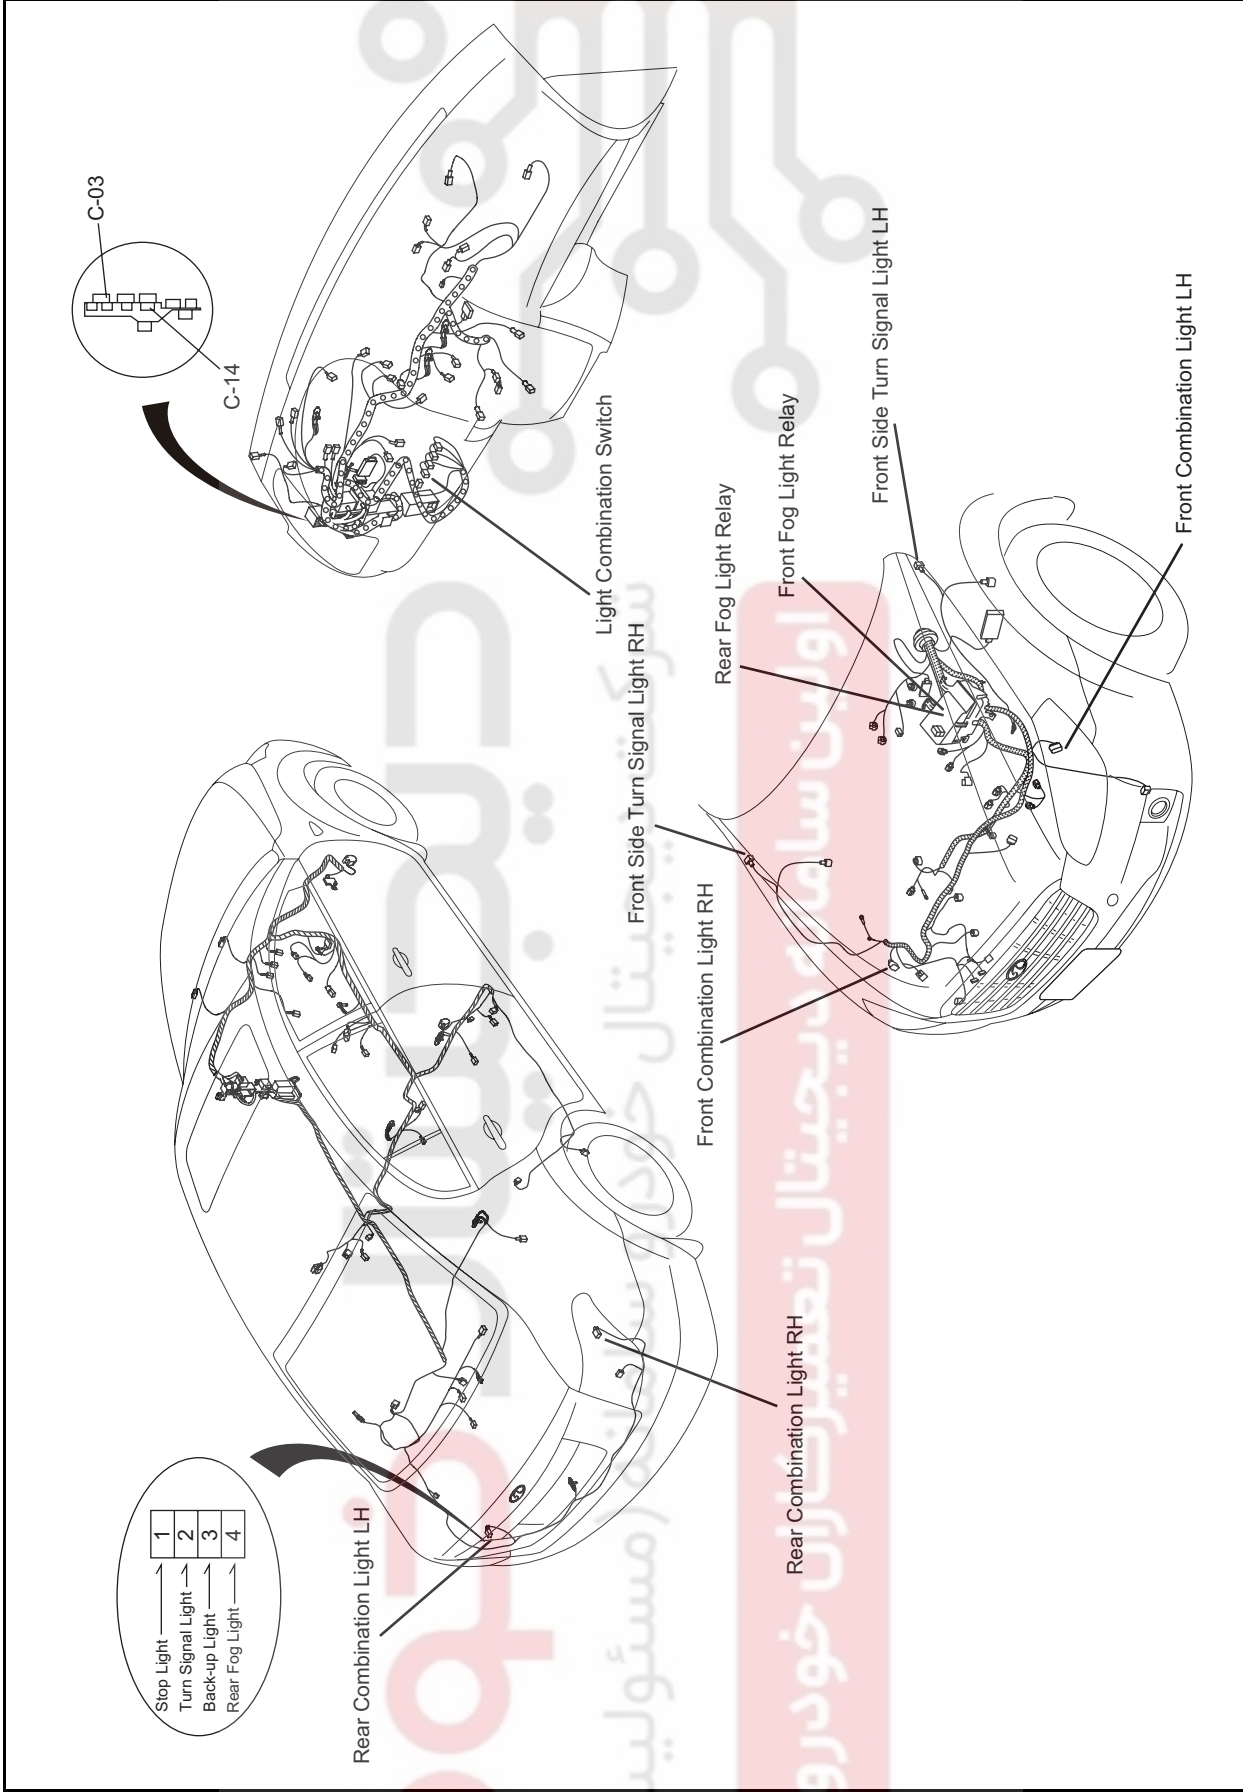


BO Body and Accessory LI Lighting System

BO-LI-3

BO


BO-LI-4

Turn Signal Light and Emergency Flasher

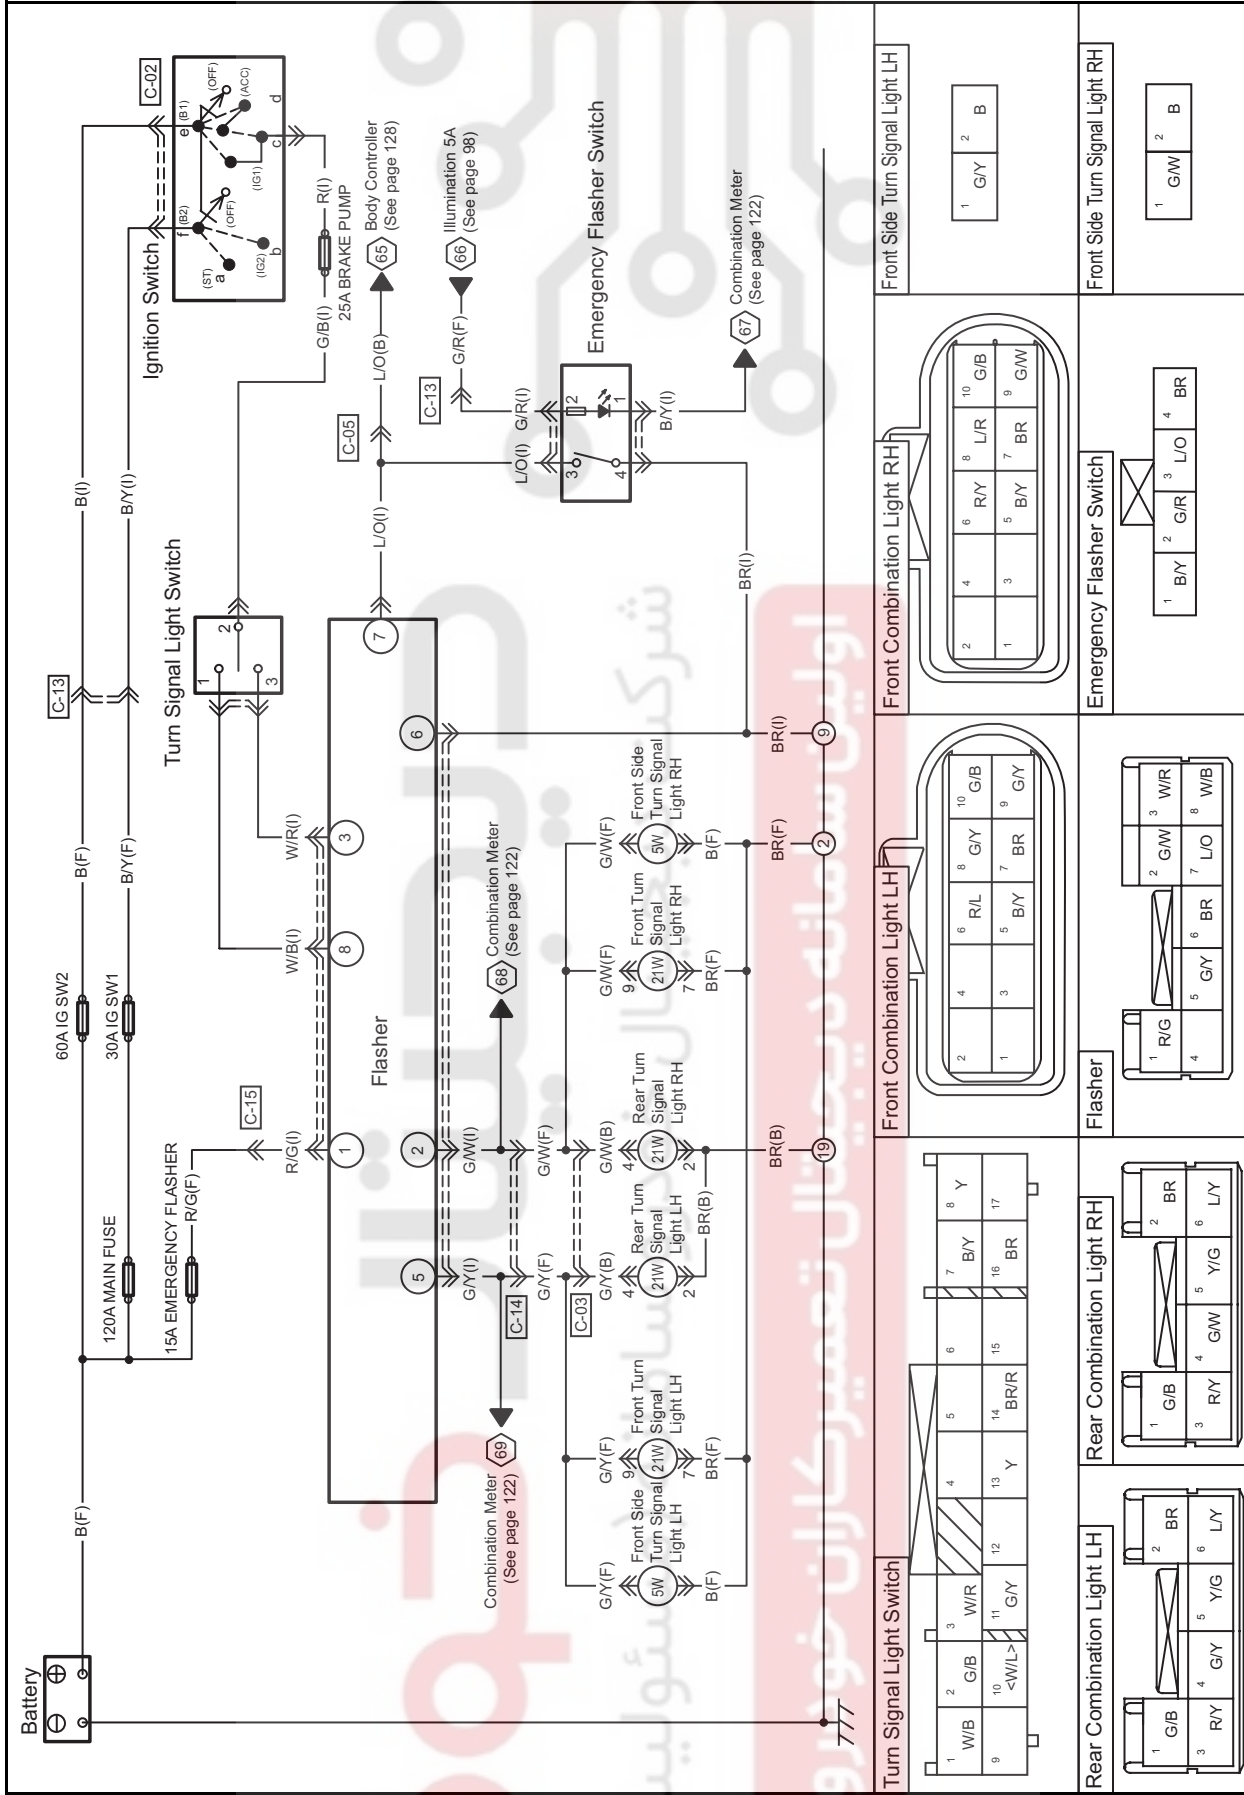

Wire Harness Symbol: (F) (E) (I) (B)

|   |                   |
|---|-------------------|
| 1 | Stop Light        |
| 2 | Turn Signal Light |
| 3 | Back-up Light     |
| 4 | Rear Fog Light    |

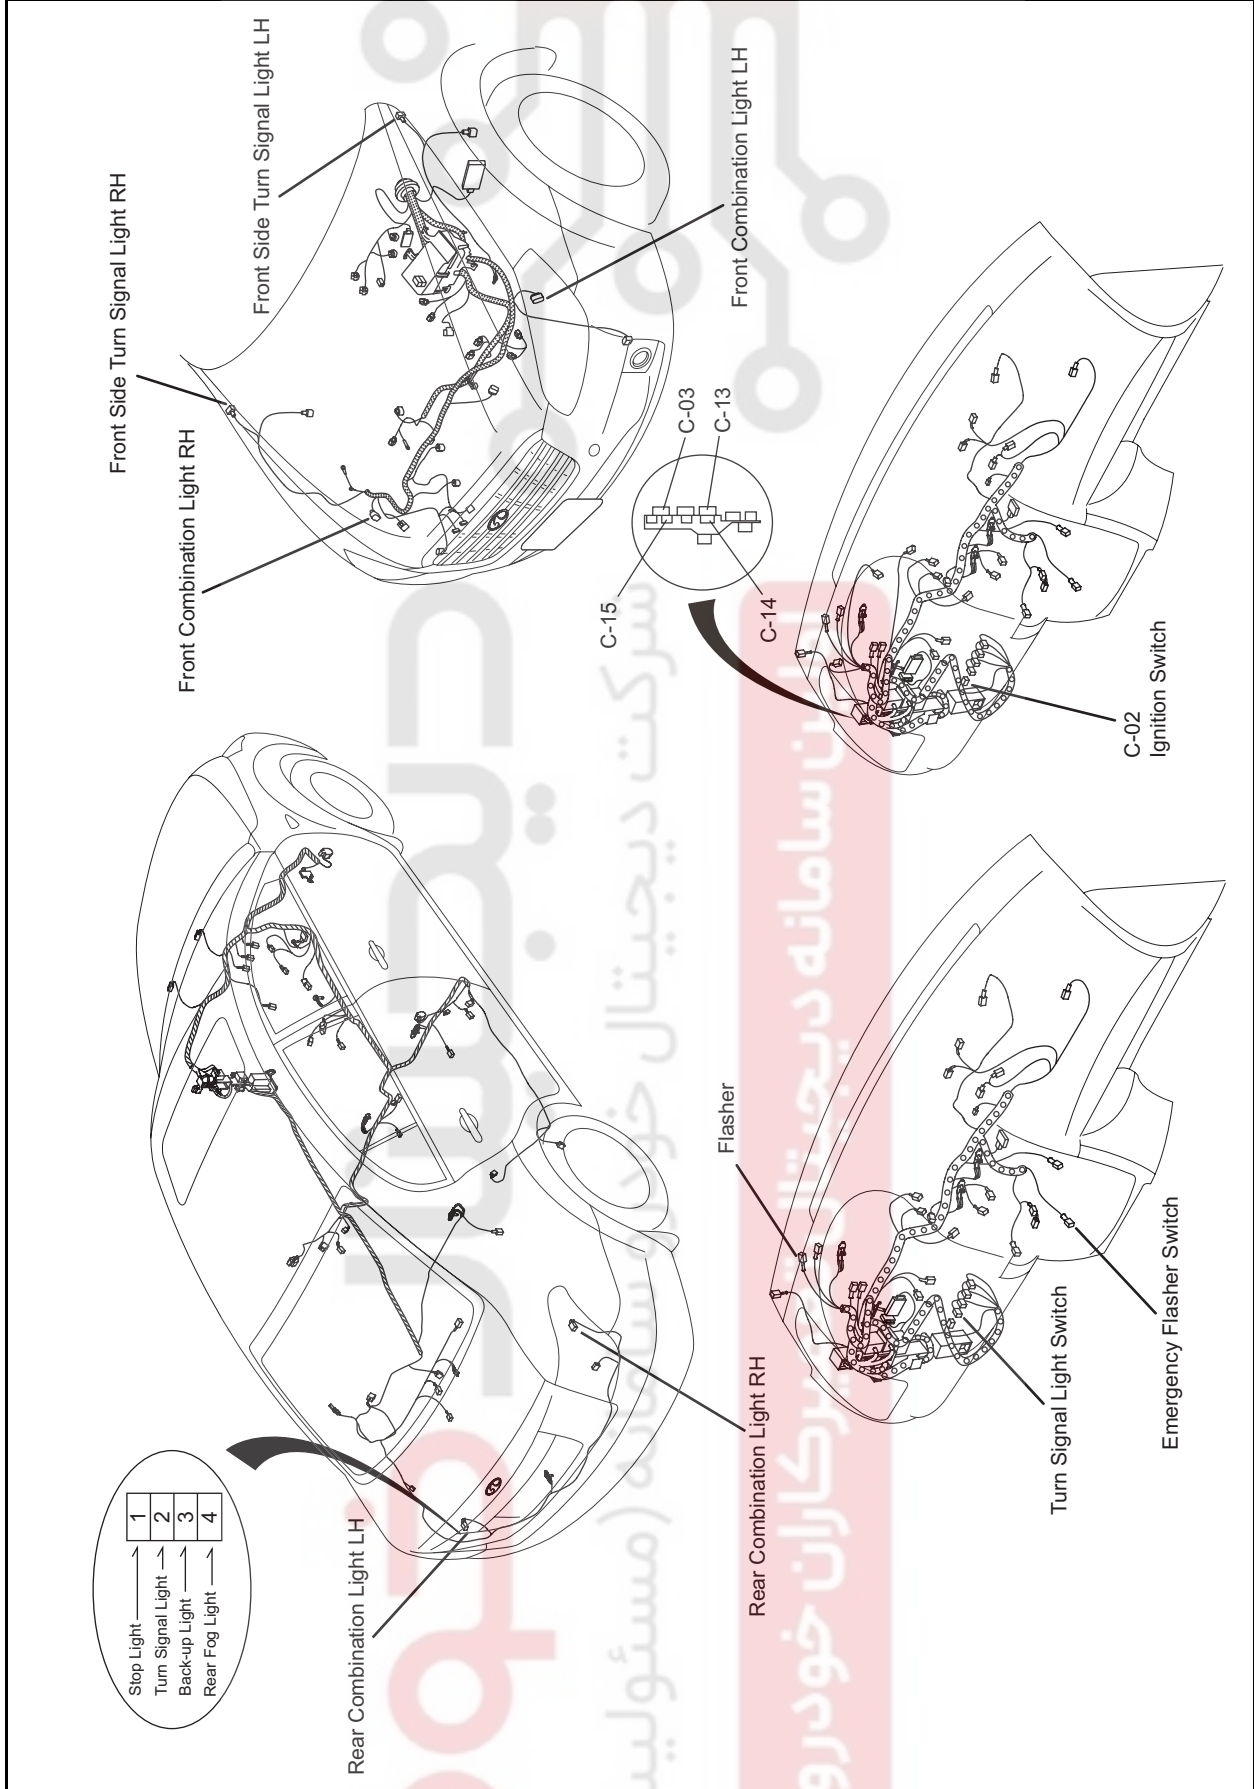


BO-LI-4

BO



BO Body and Accessory LI Lighting System

BO-LI-5

Stop Light

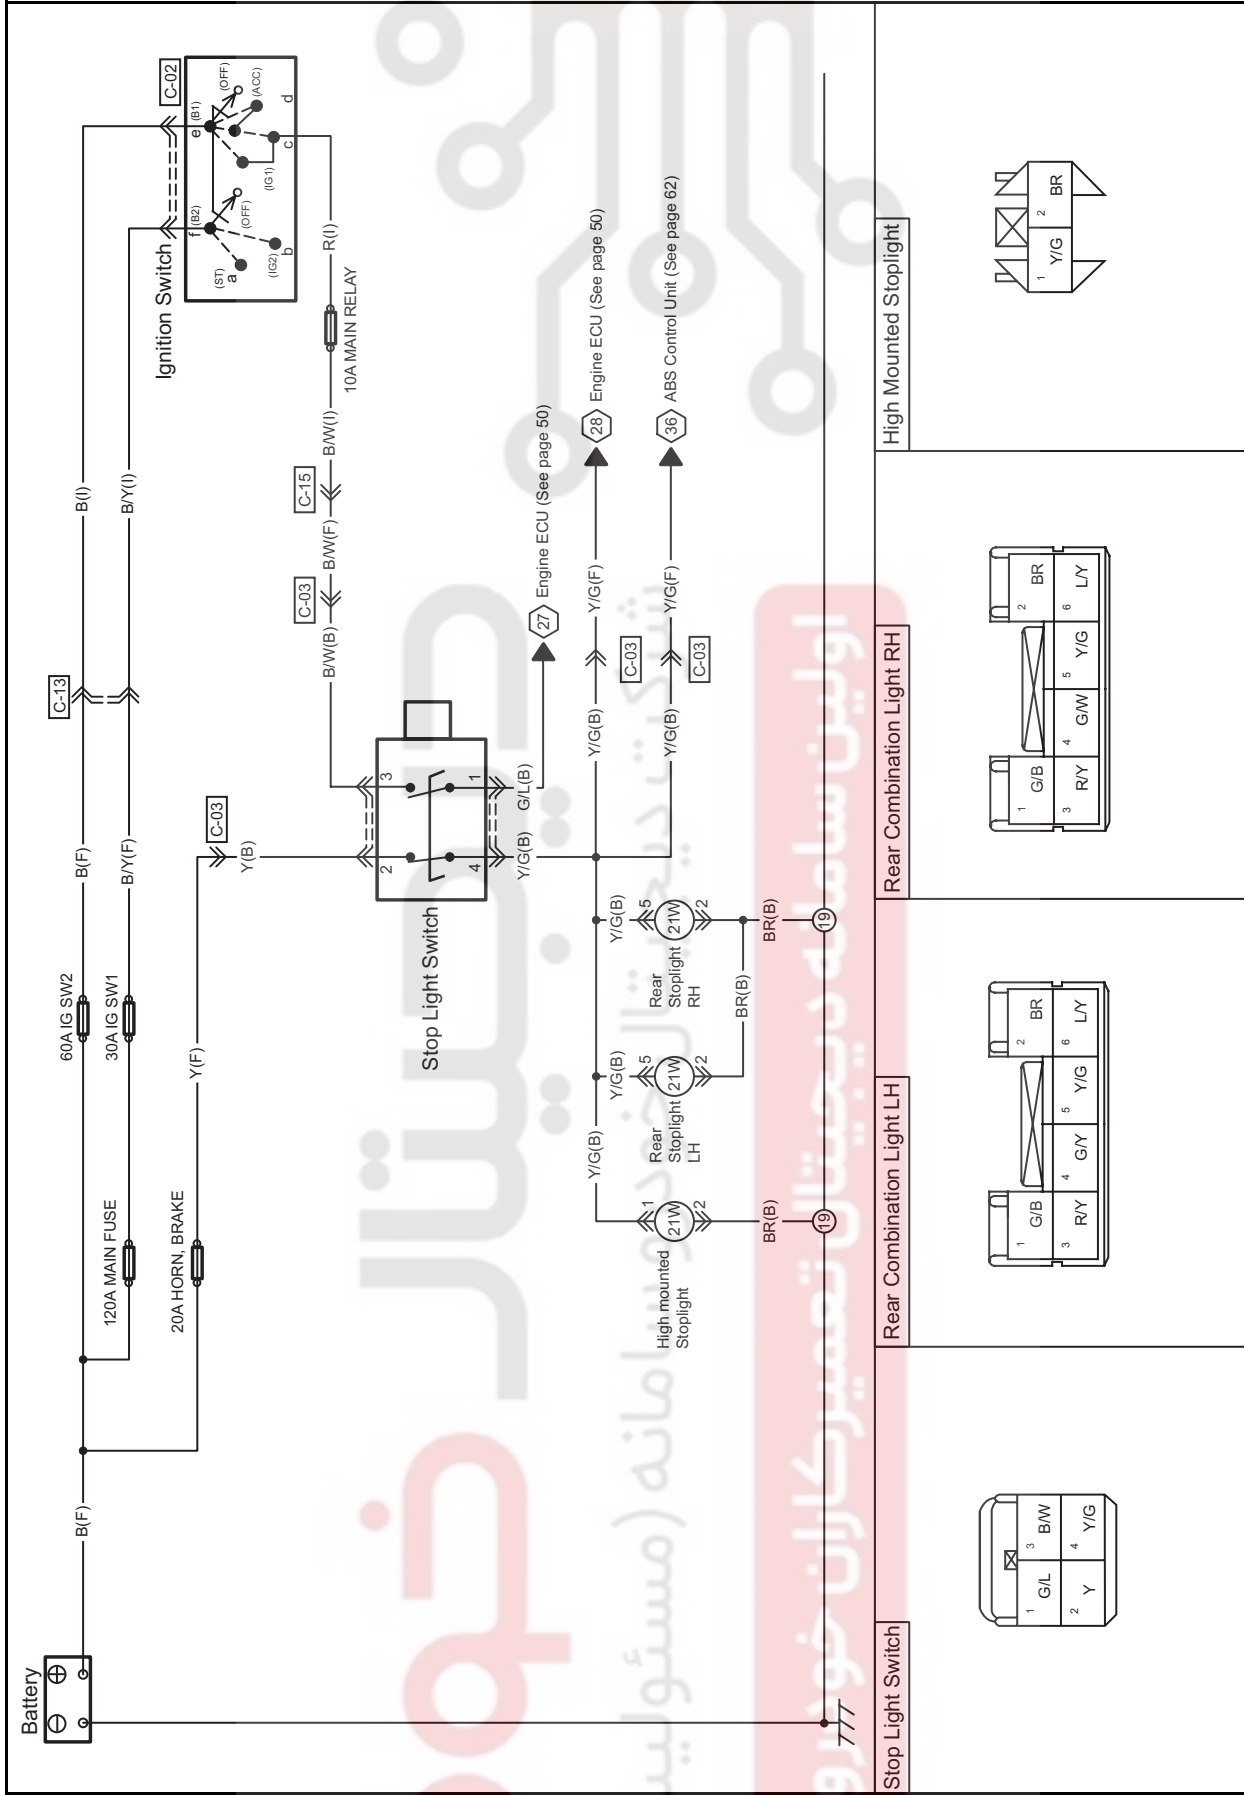

Wire Harness Symbol: (F) (E) (I) (B)

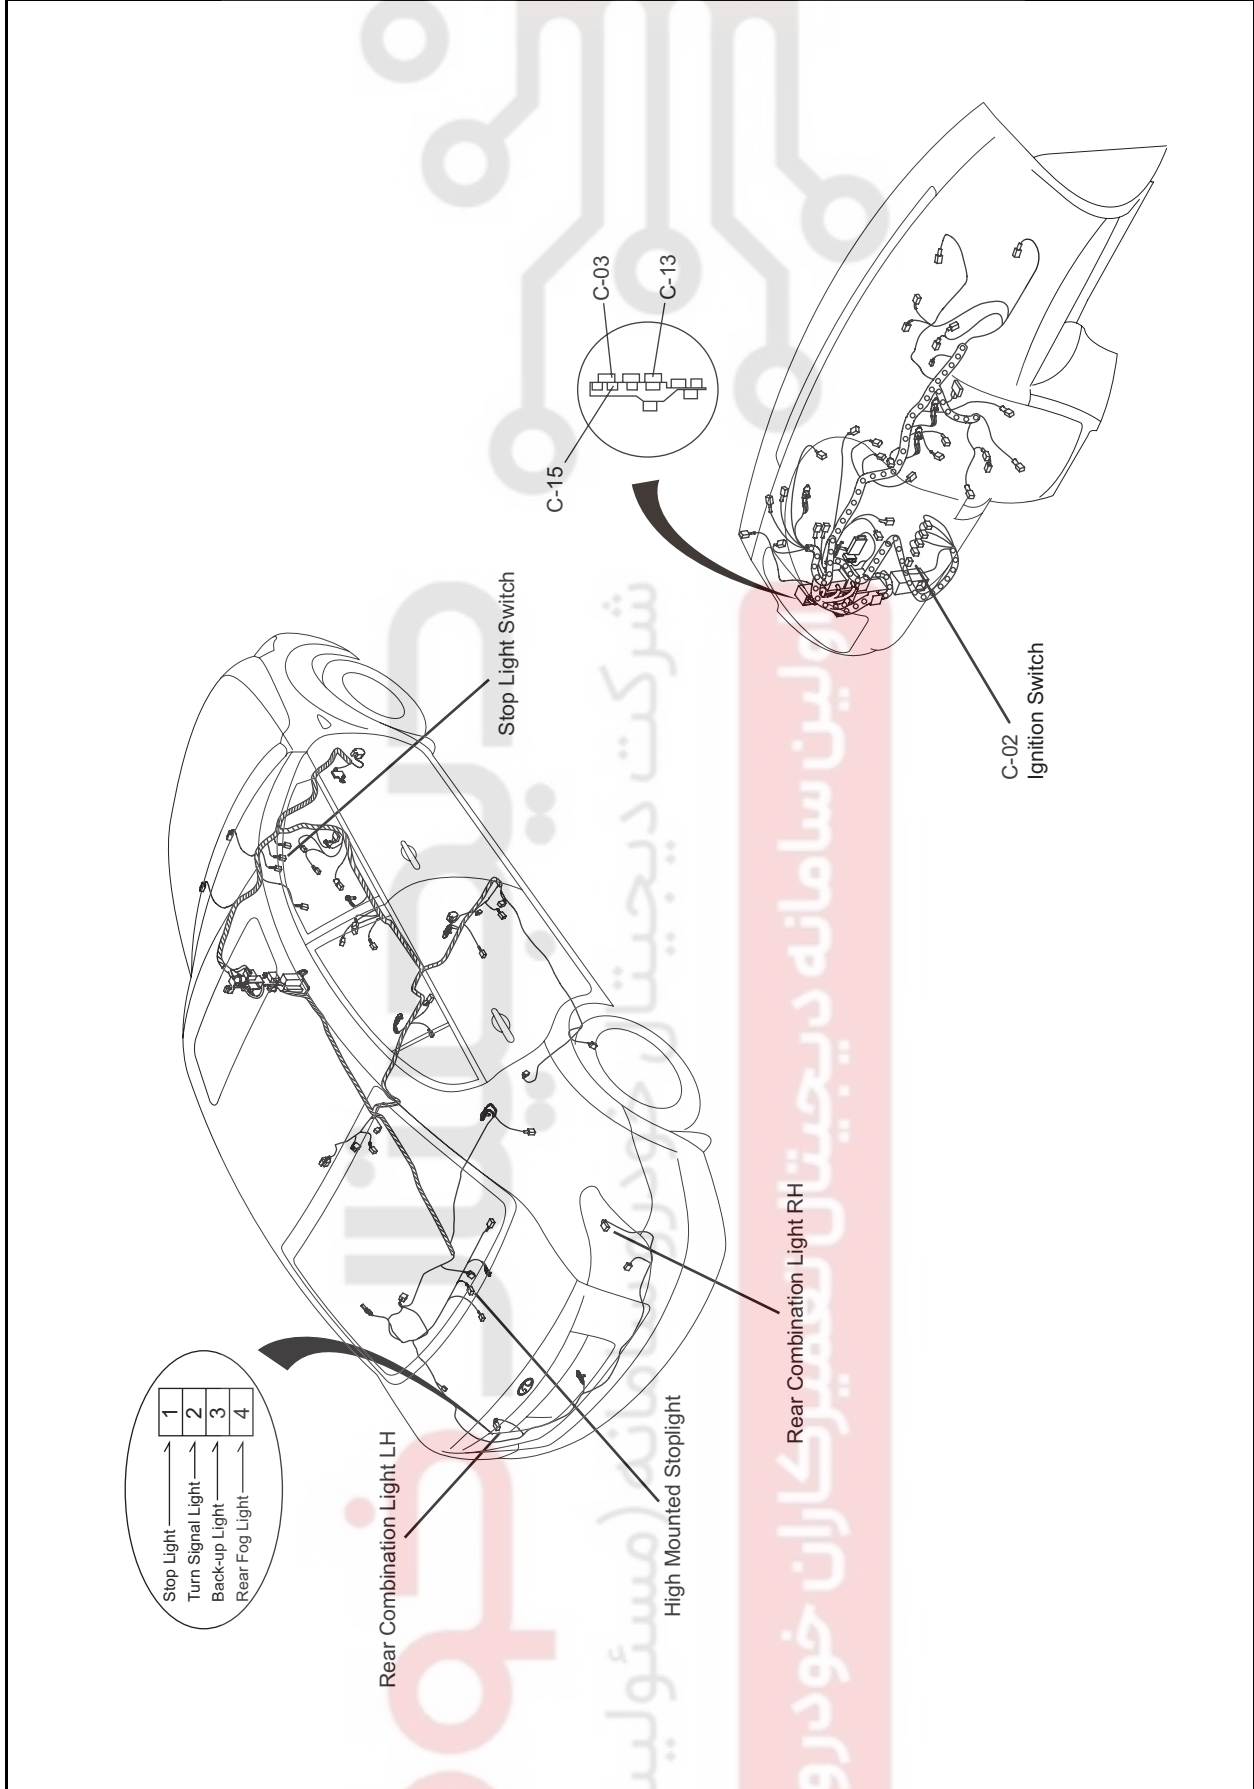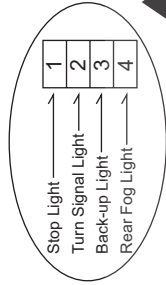


BO-LI-5


BO

BO Body and Accessory LI Lighting System

Cigarette Lighter, Luggage Compartment Light and Room Light BO-LI-6

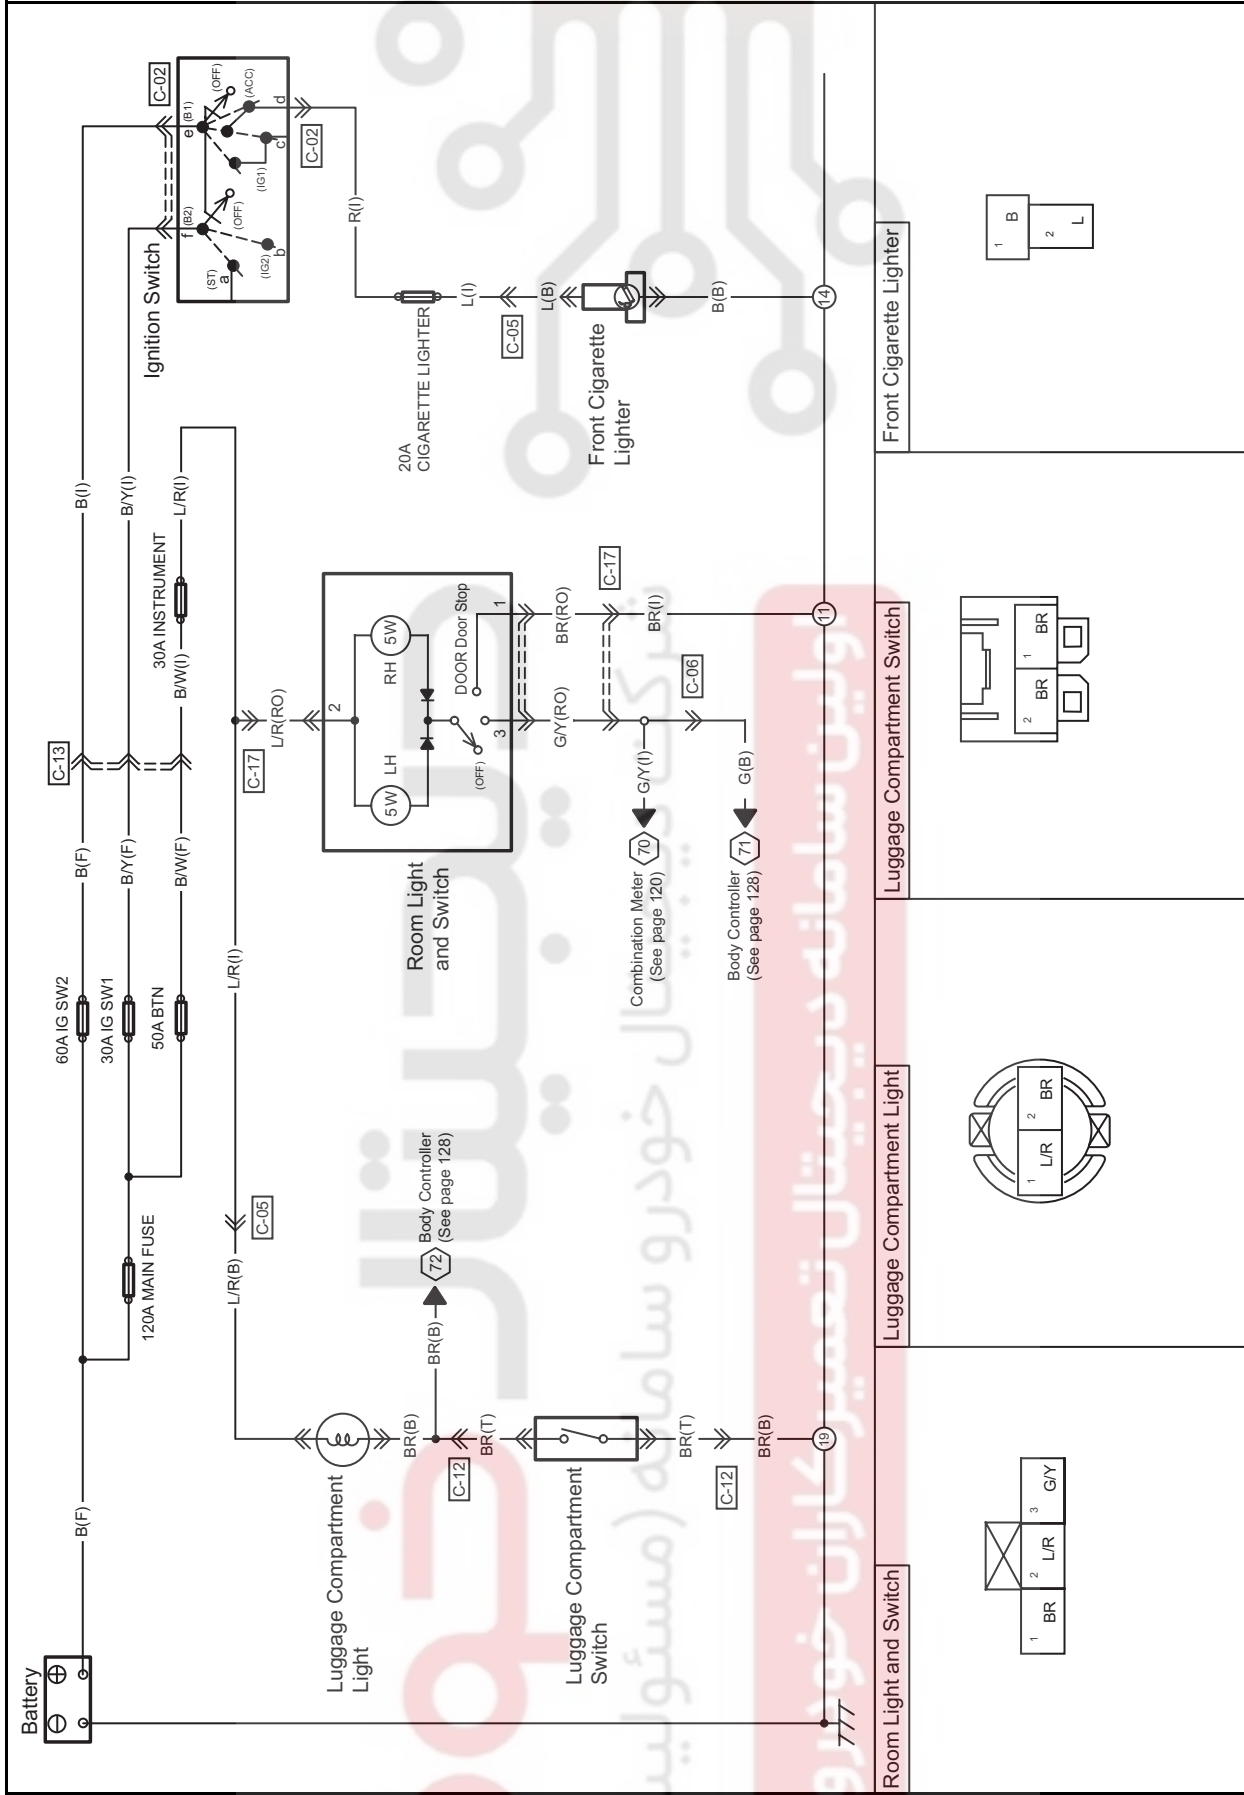

Wire Harness Symbol: (F) (E) (I) (B)

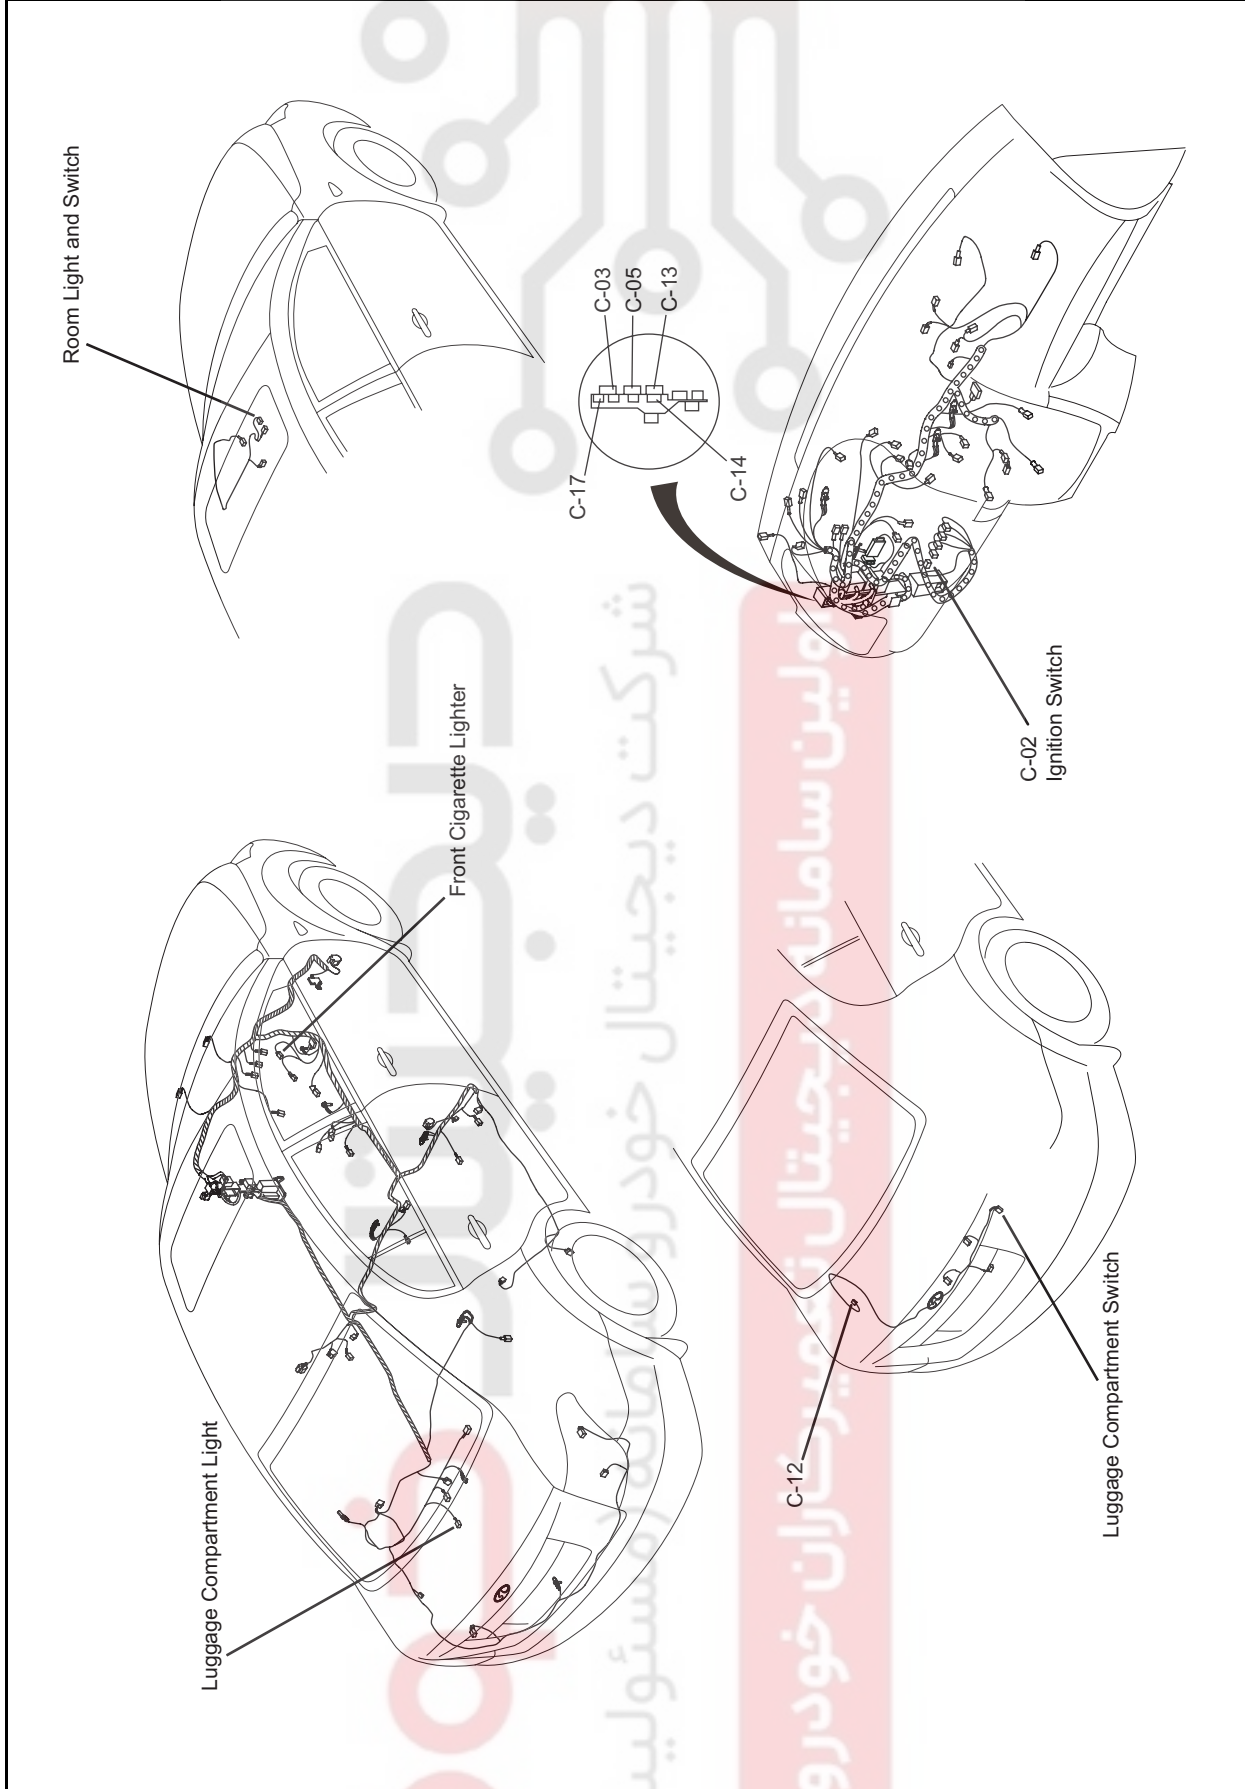


BO-LI-5


BO

BO Body and Accessory LI Lighting System

Windshield Wiper and Washer BO-WW-1

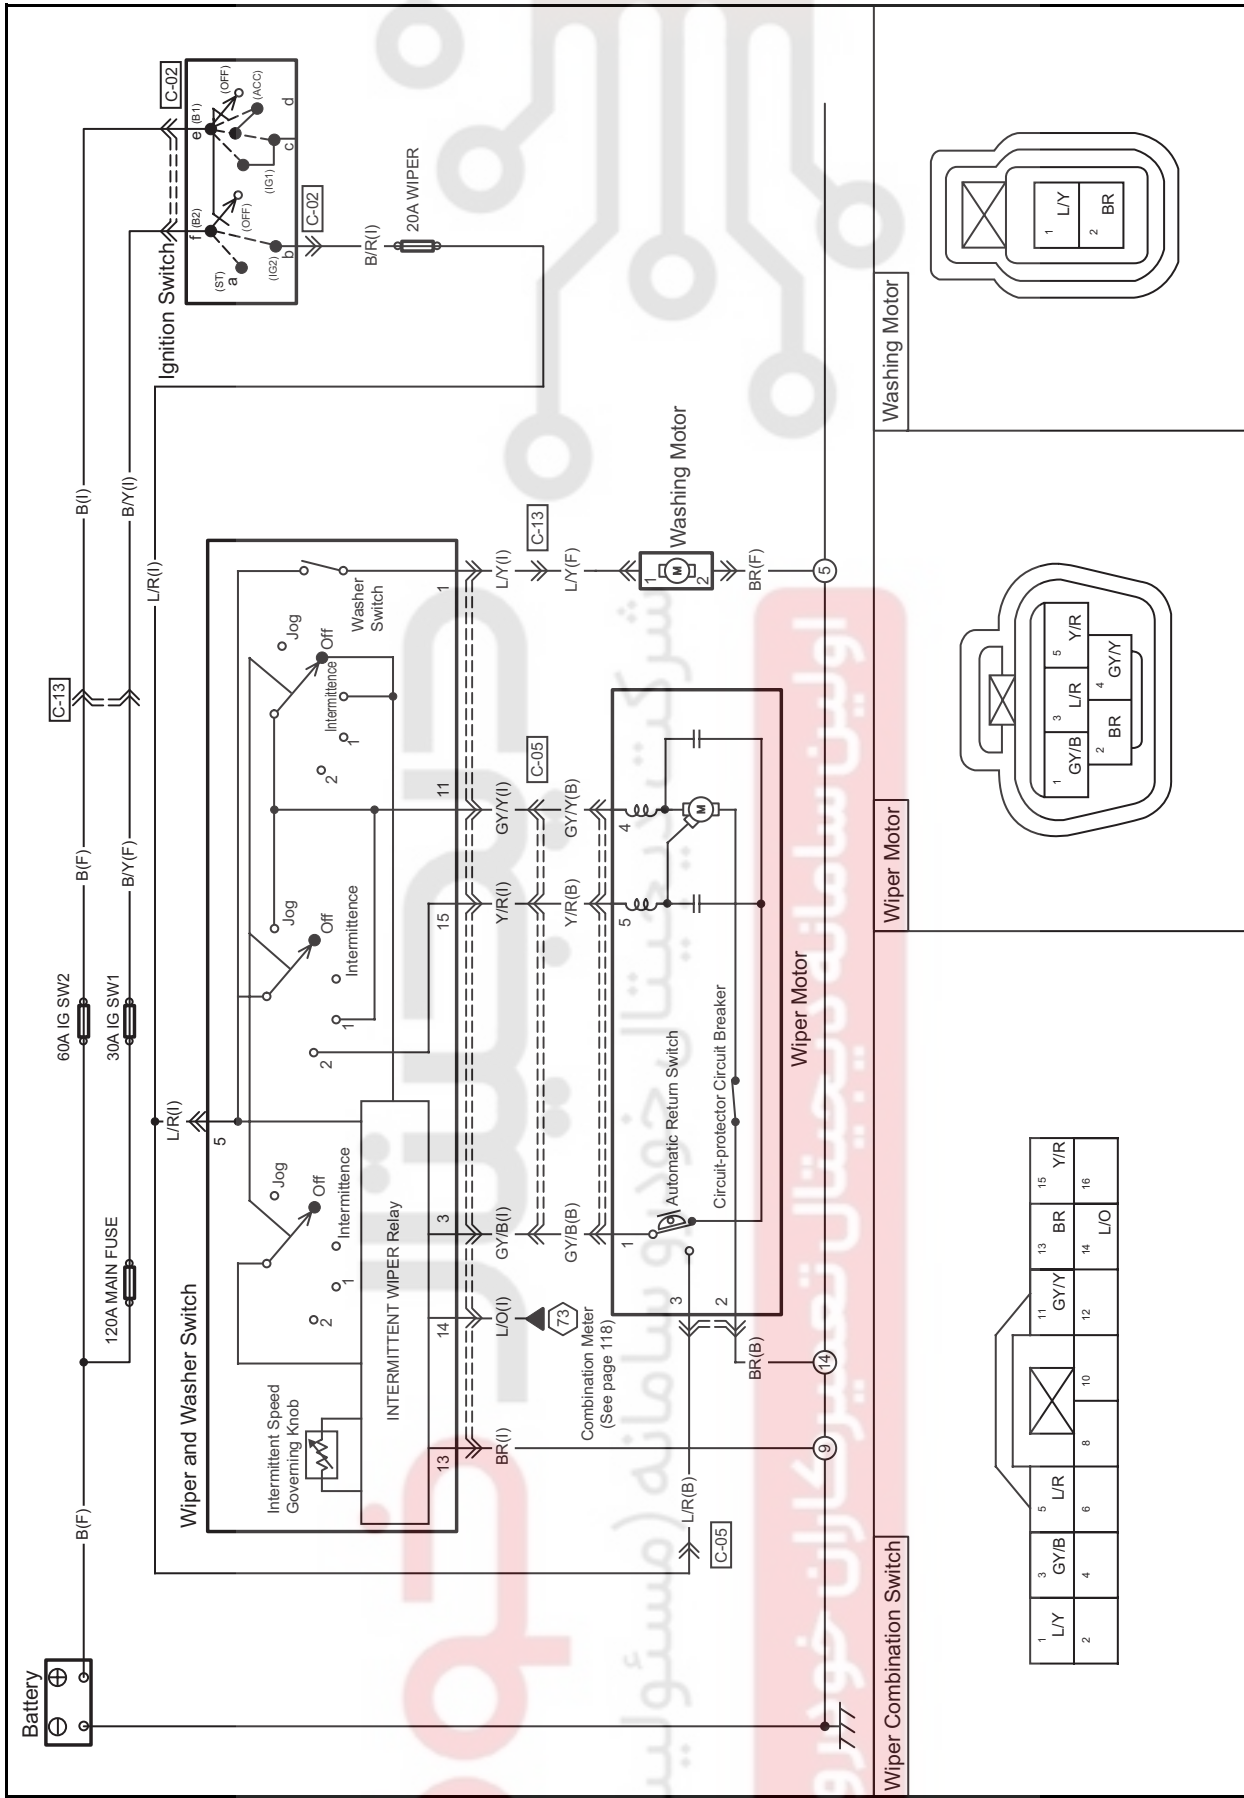

Wire Harness Symbol: (F) (E) (I) (B)

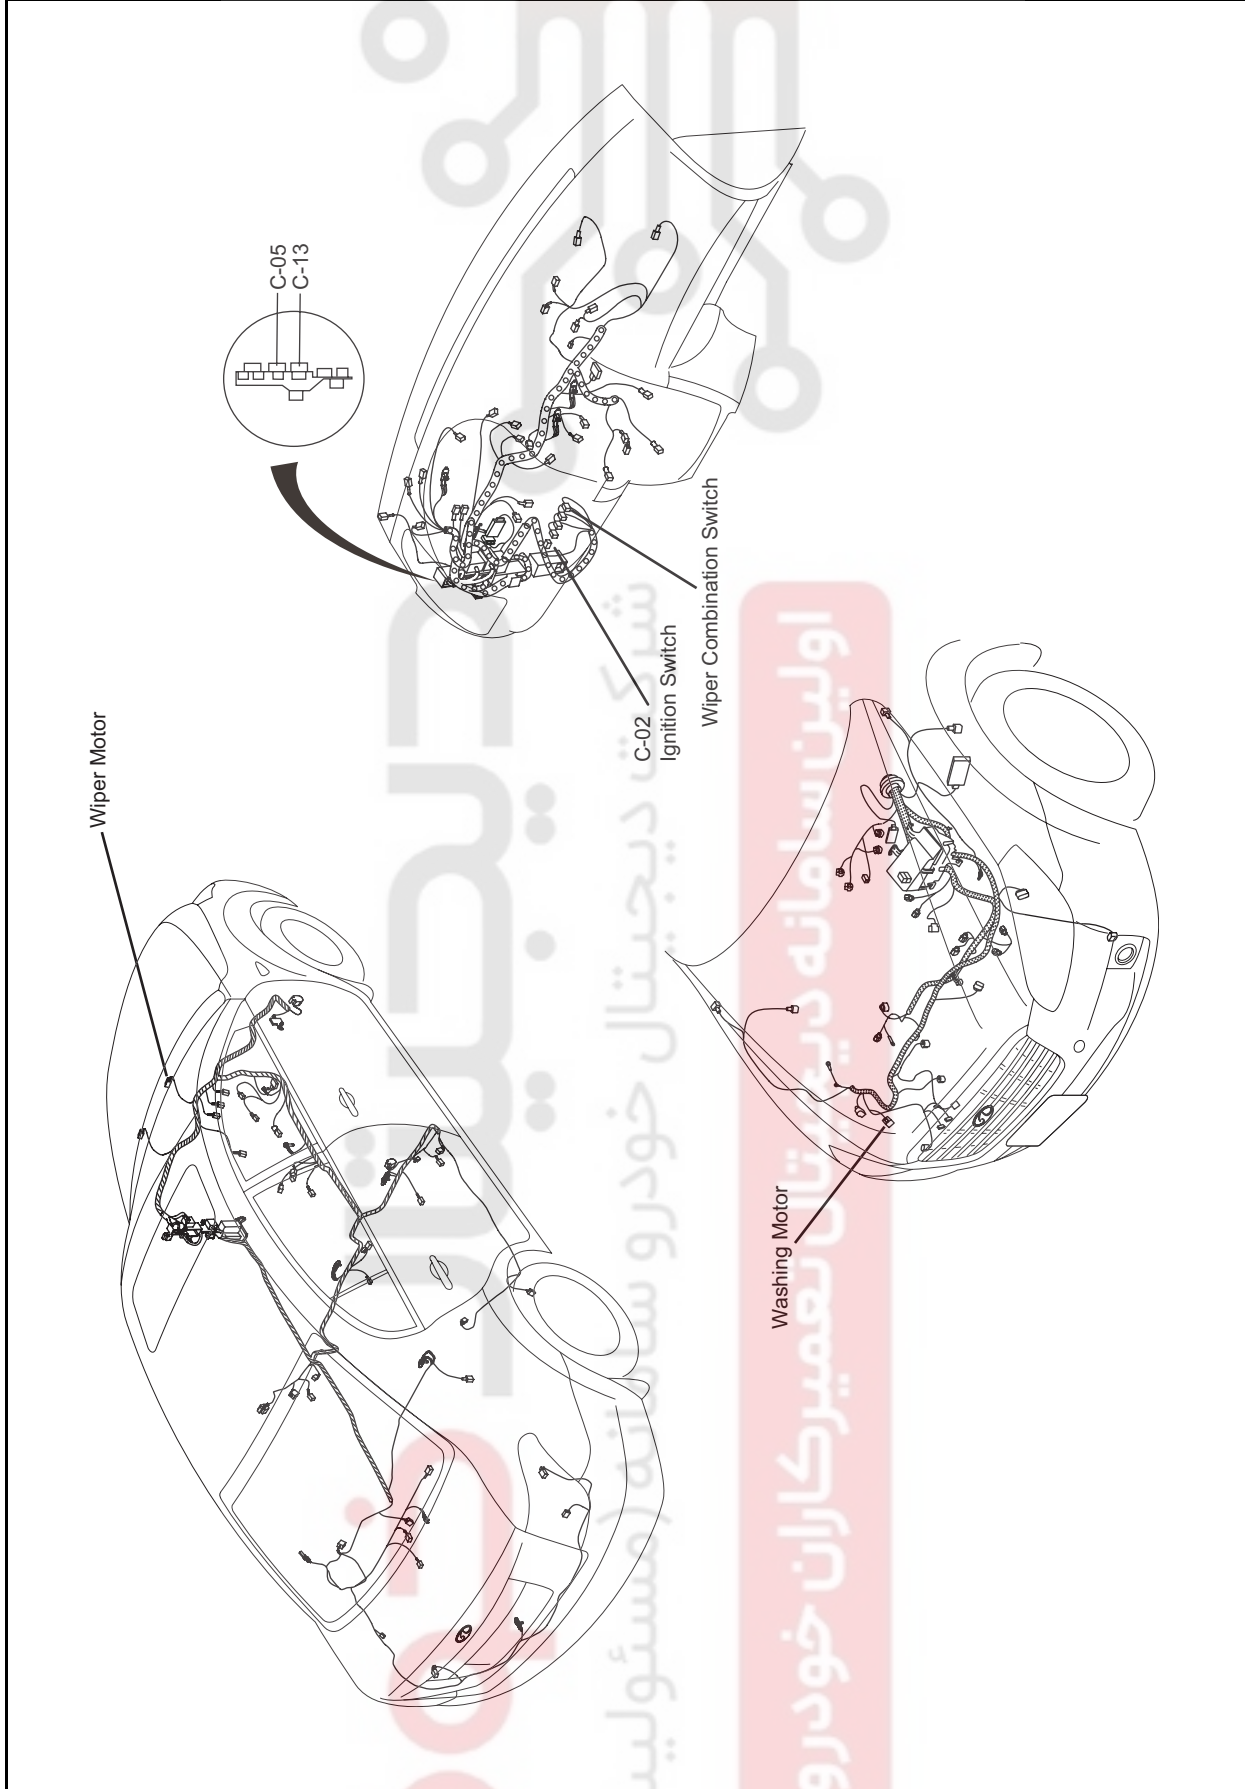


BO-WW-1

BO


BO Body and Accessory WW Wiper/Washer System

BO-WW-2

Rear Window Defroster

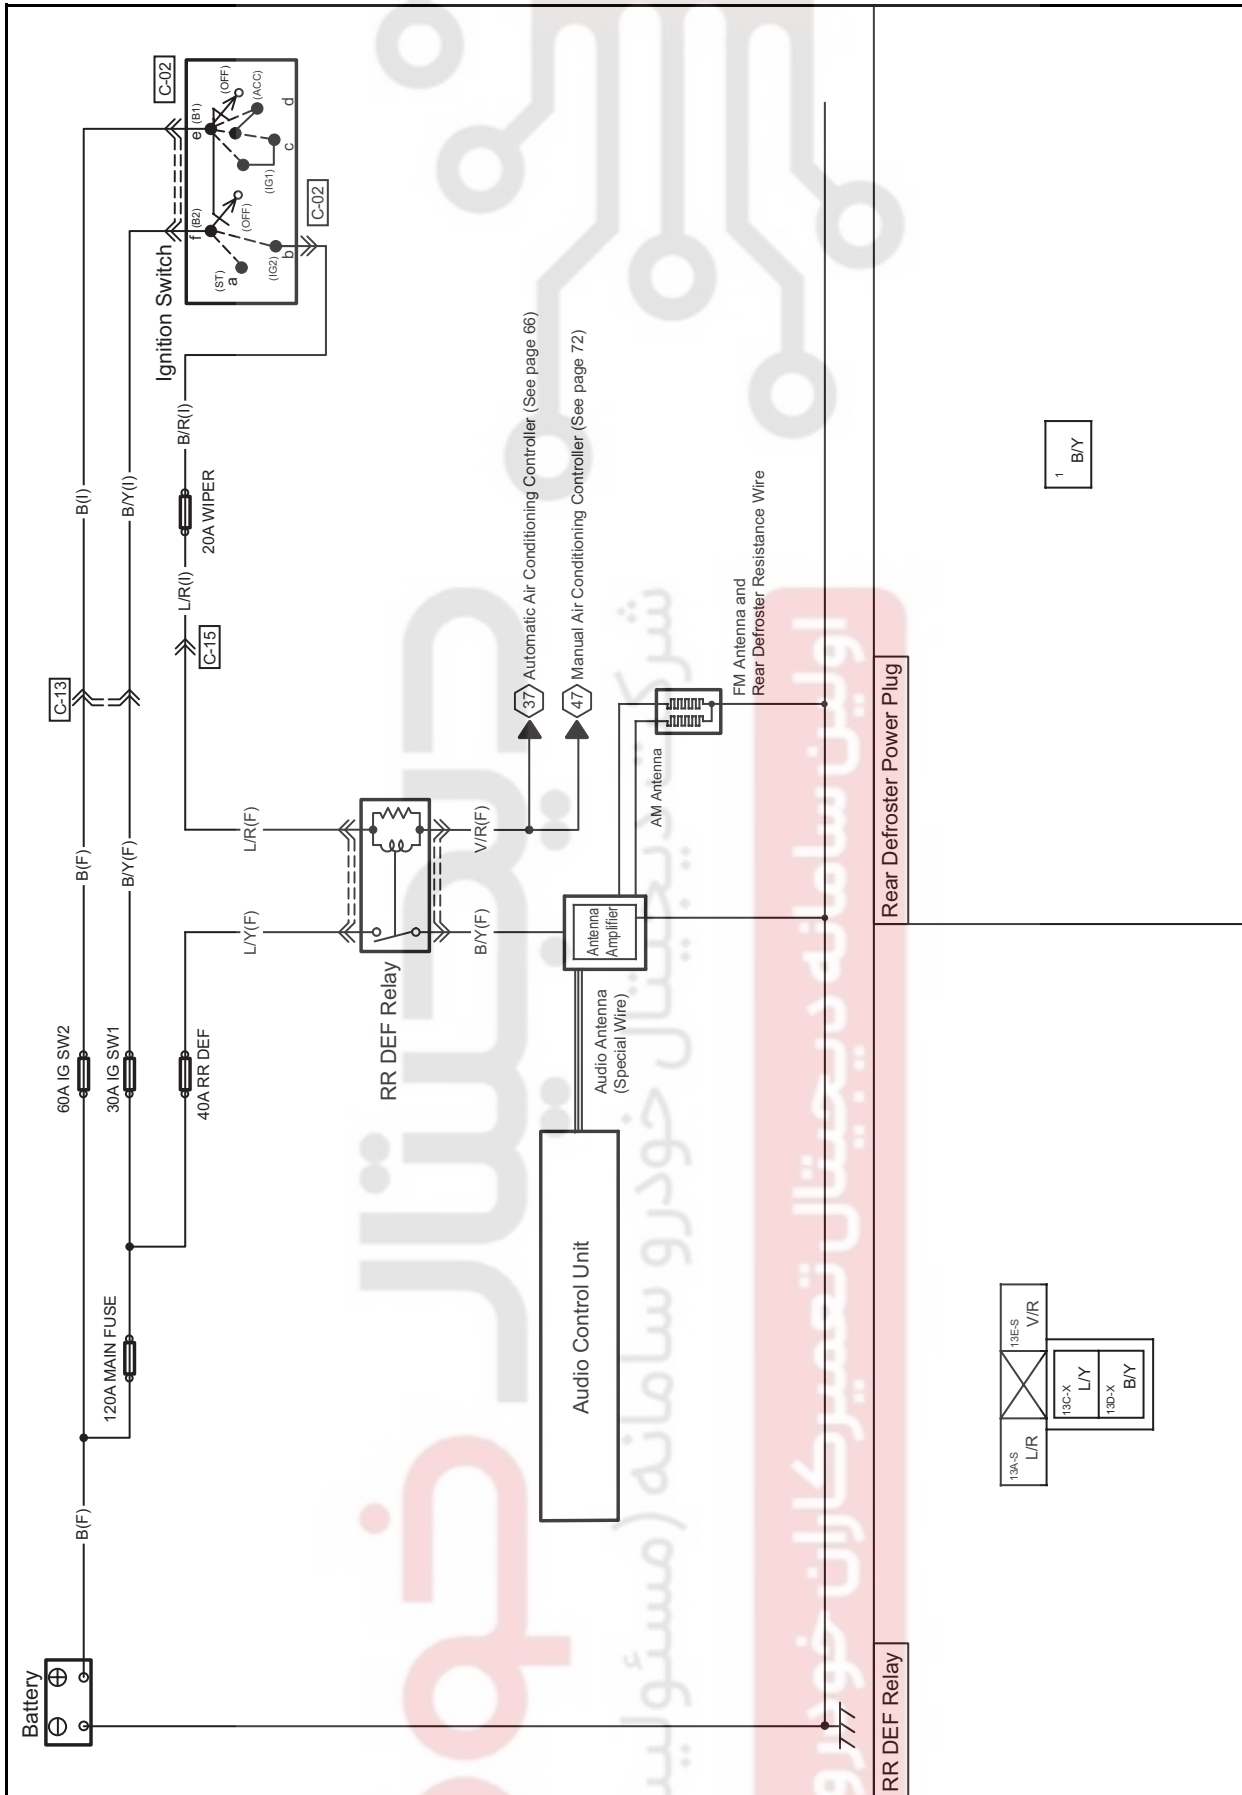

Wire Harness Symbol: (F) (E) (I) (B)

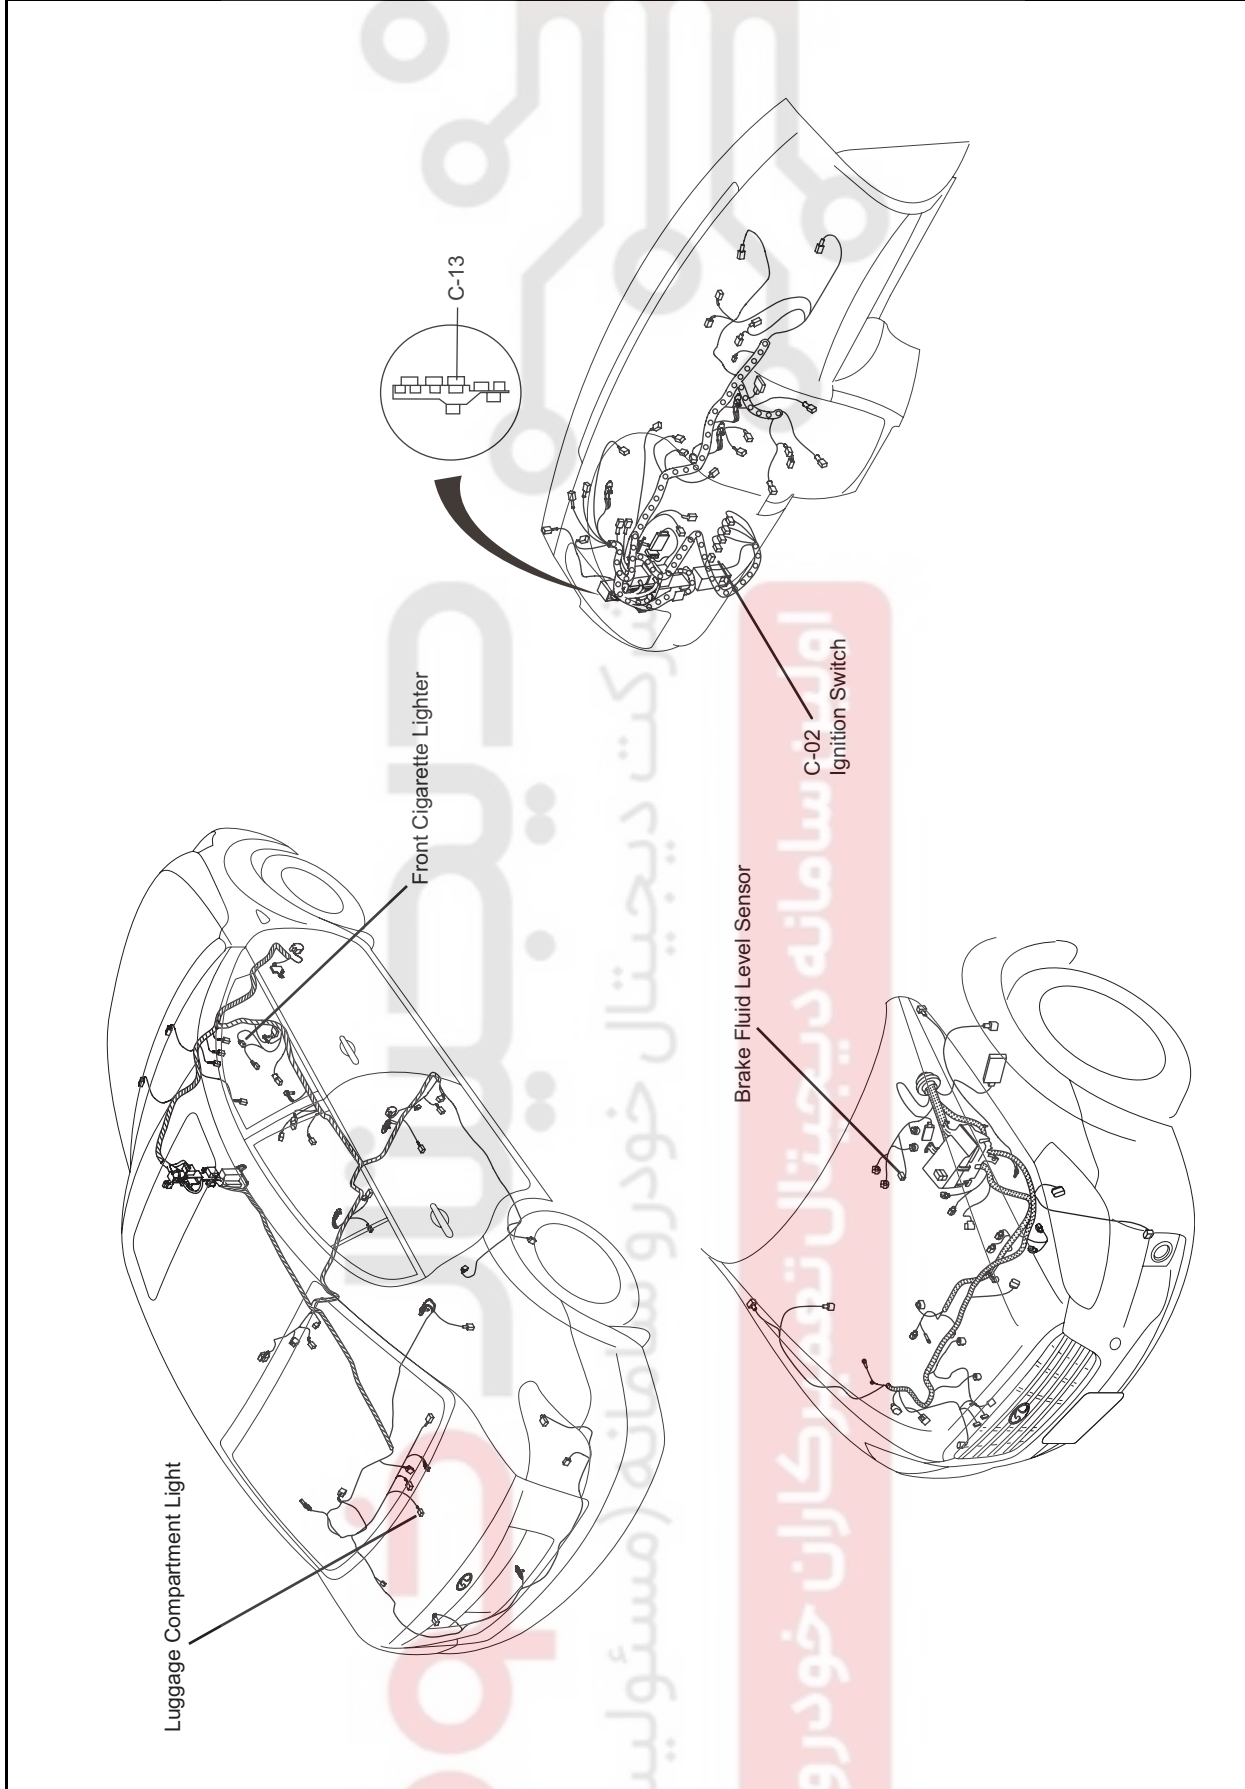


BO-WW-2

BO


BO Body and Accessory WW Wiper/Washer System

BO-ER-1

Audio System

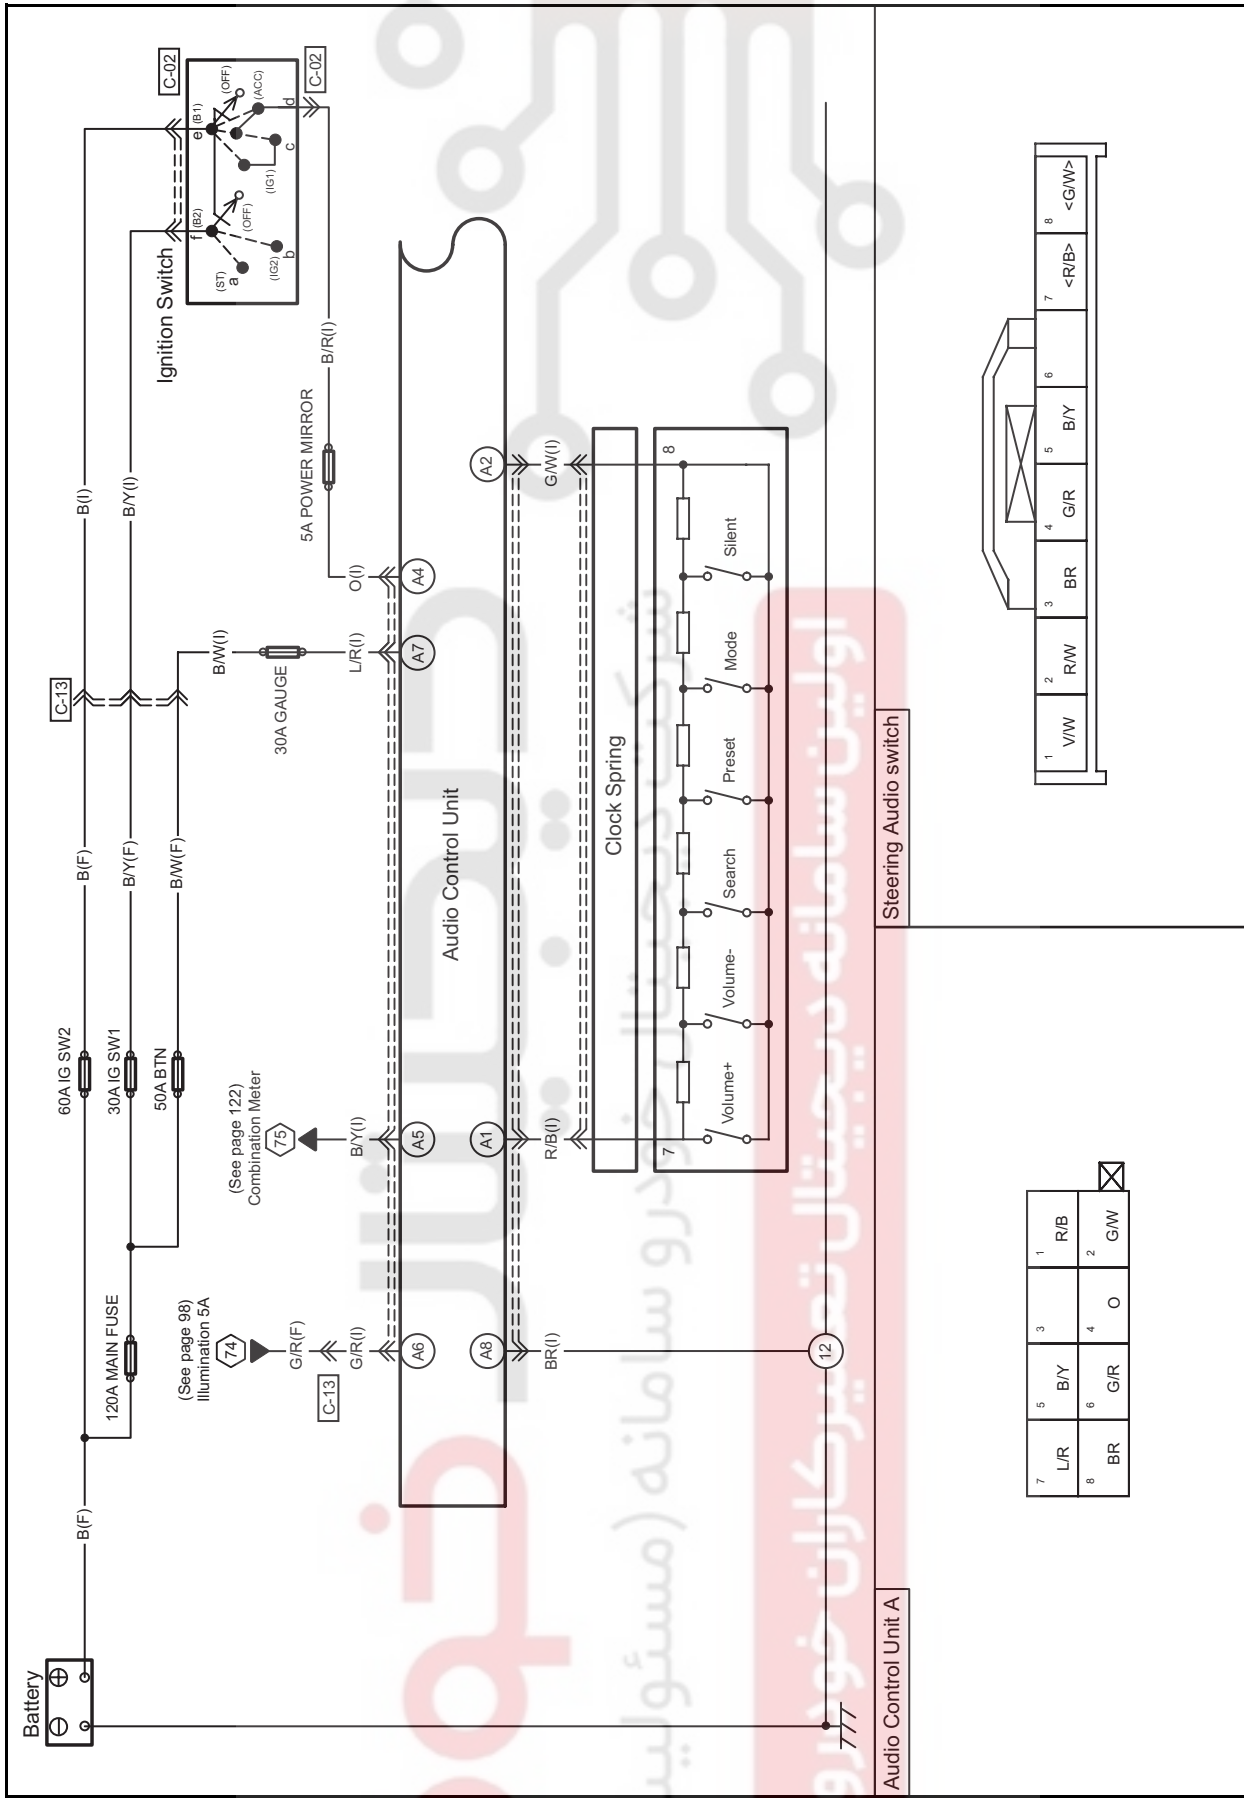

Wire Harness Symbol: (F) (E) (I) (B)

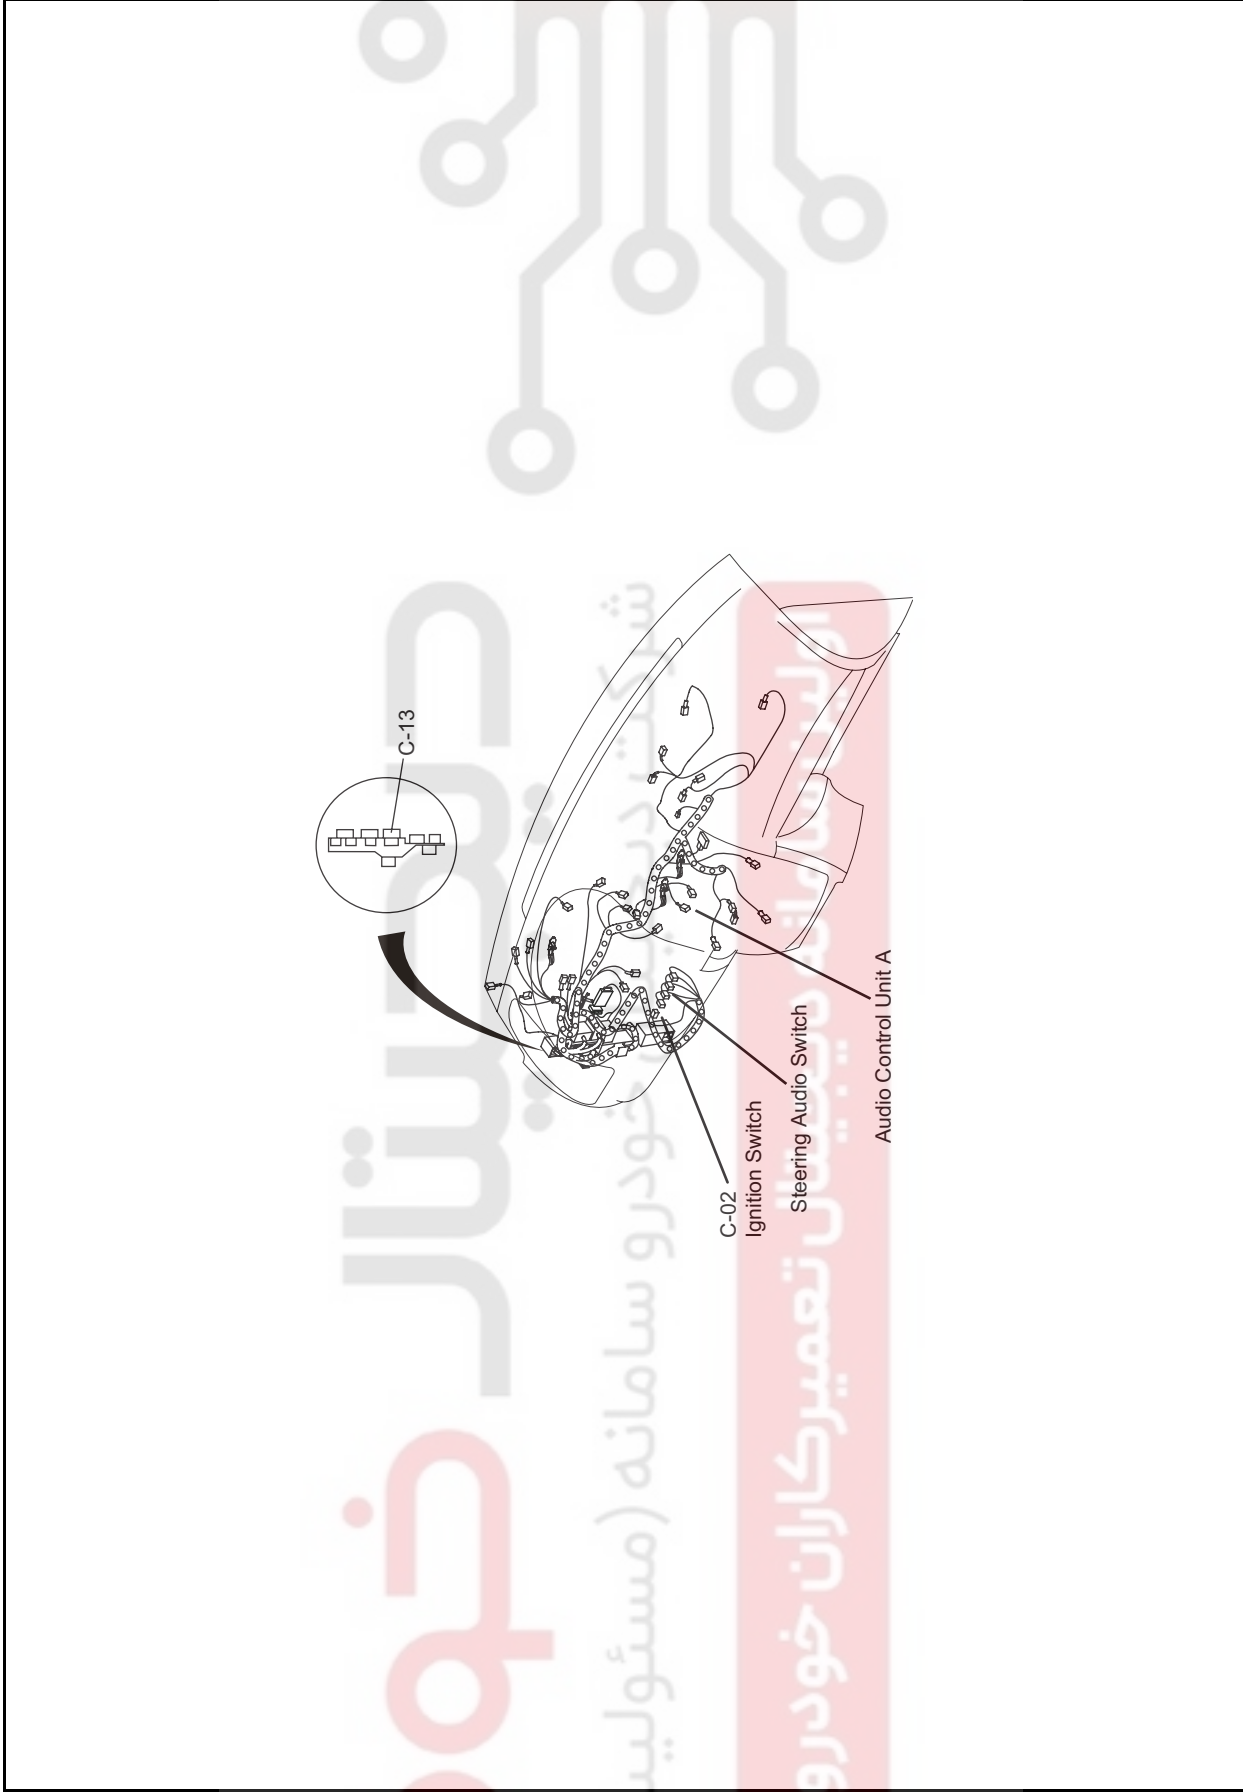


BO-ER-1

BO Body and Accessory ER Entertainment Unit


BO

BO-ER-2

Audio System

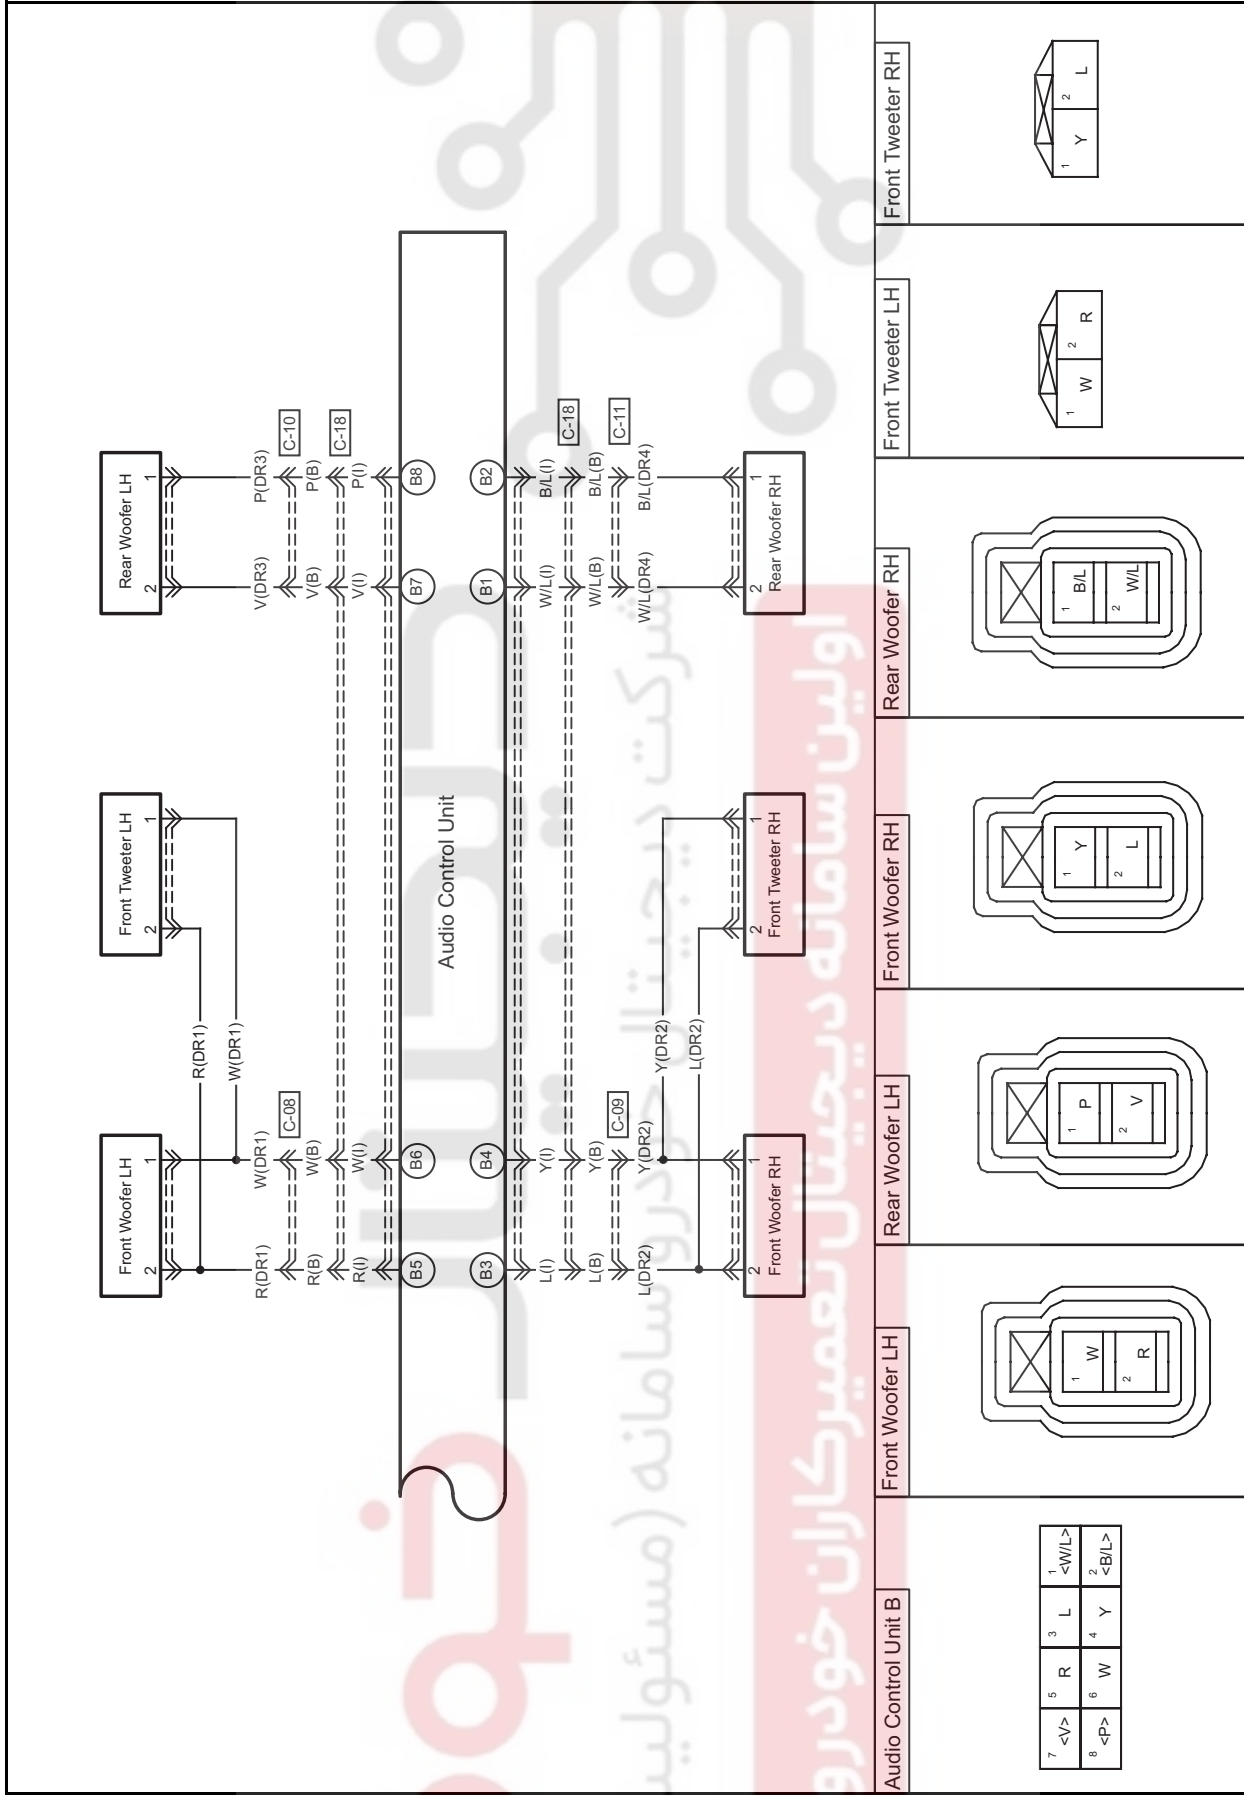

Wire Harness Symbol: (F) (E) (I) (B)

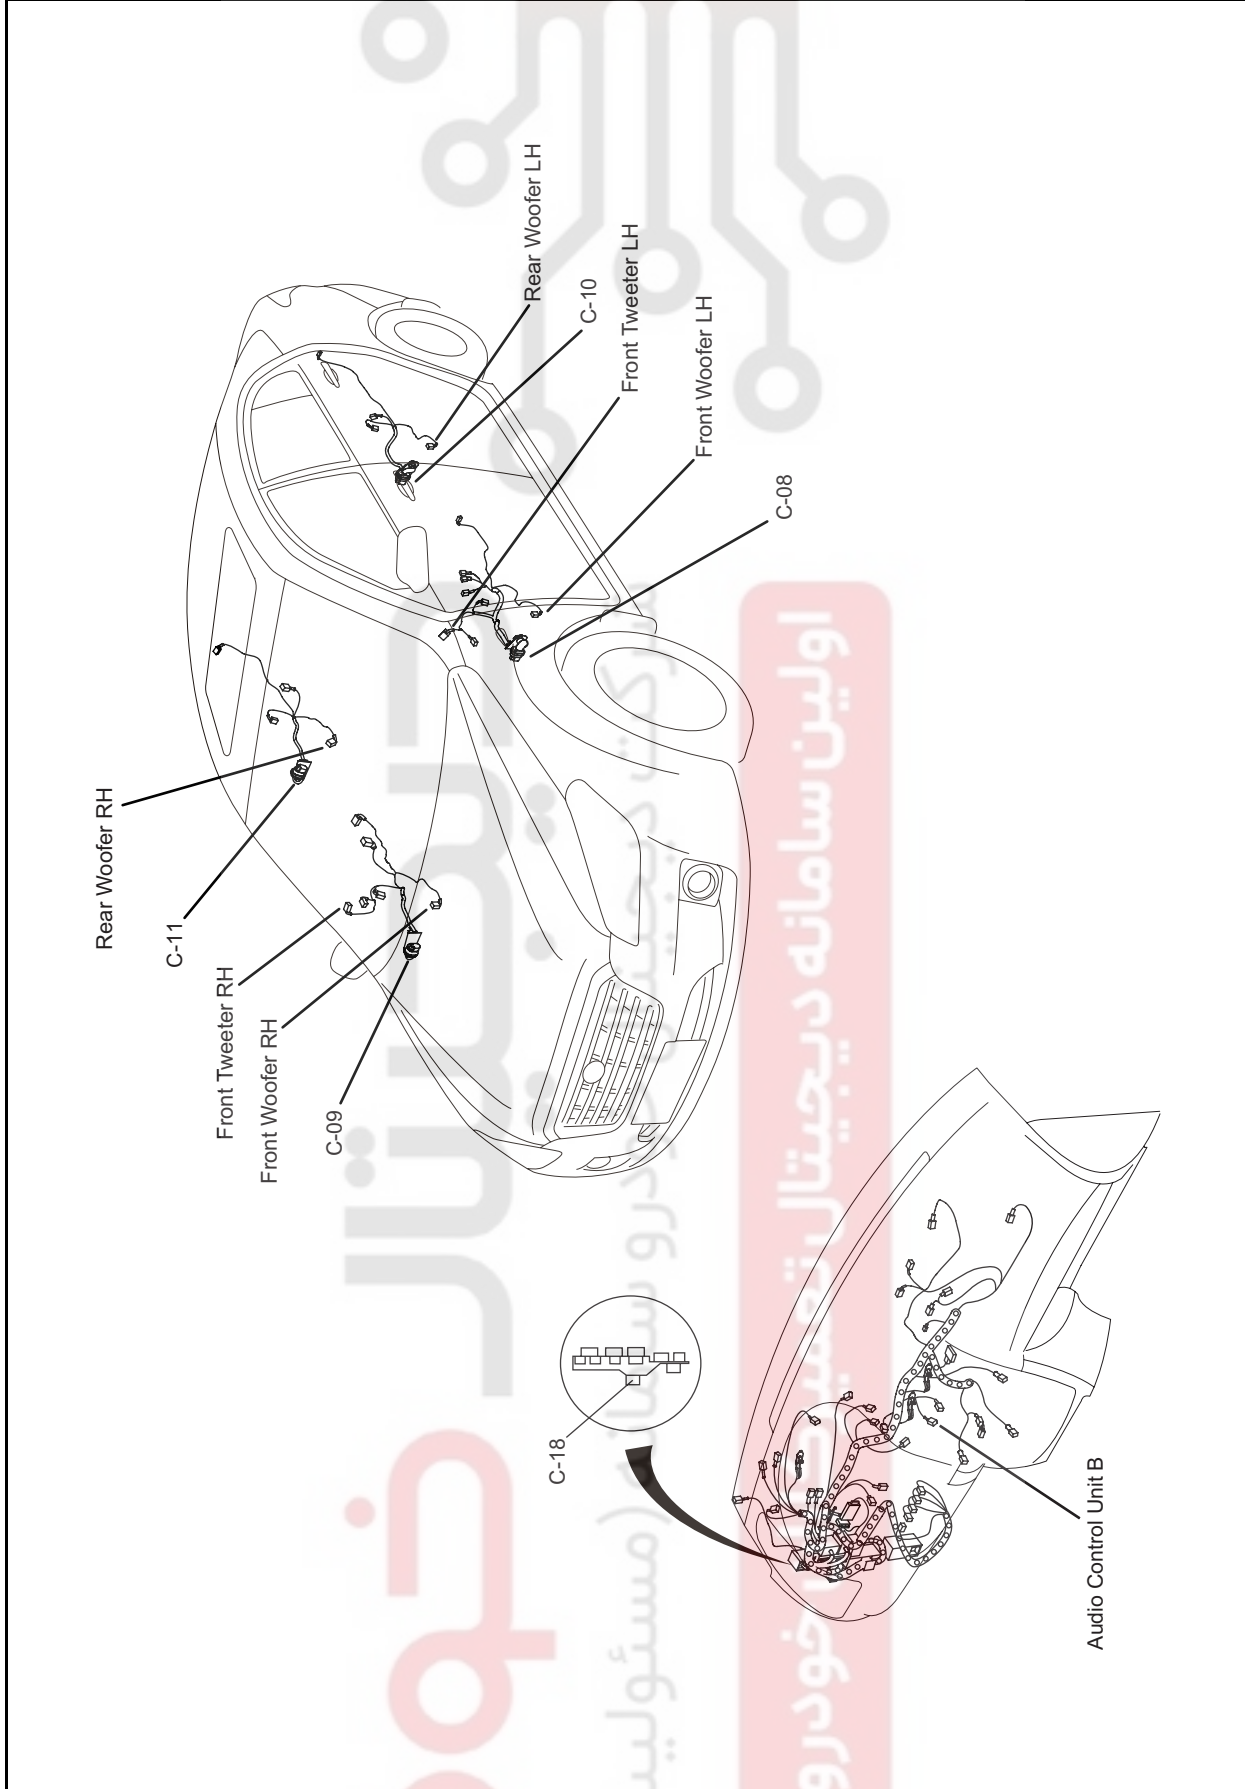


BO-ER-2

BO


BO Body and Accessory ER Entertainment Unit

BO-ME-1

Steering Switches and Combination Meter

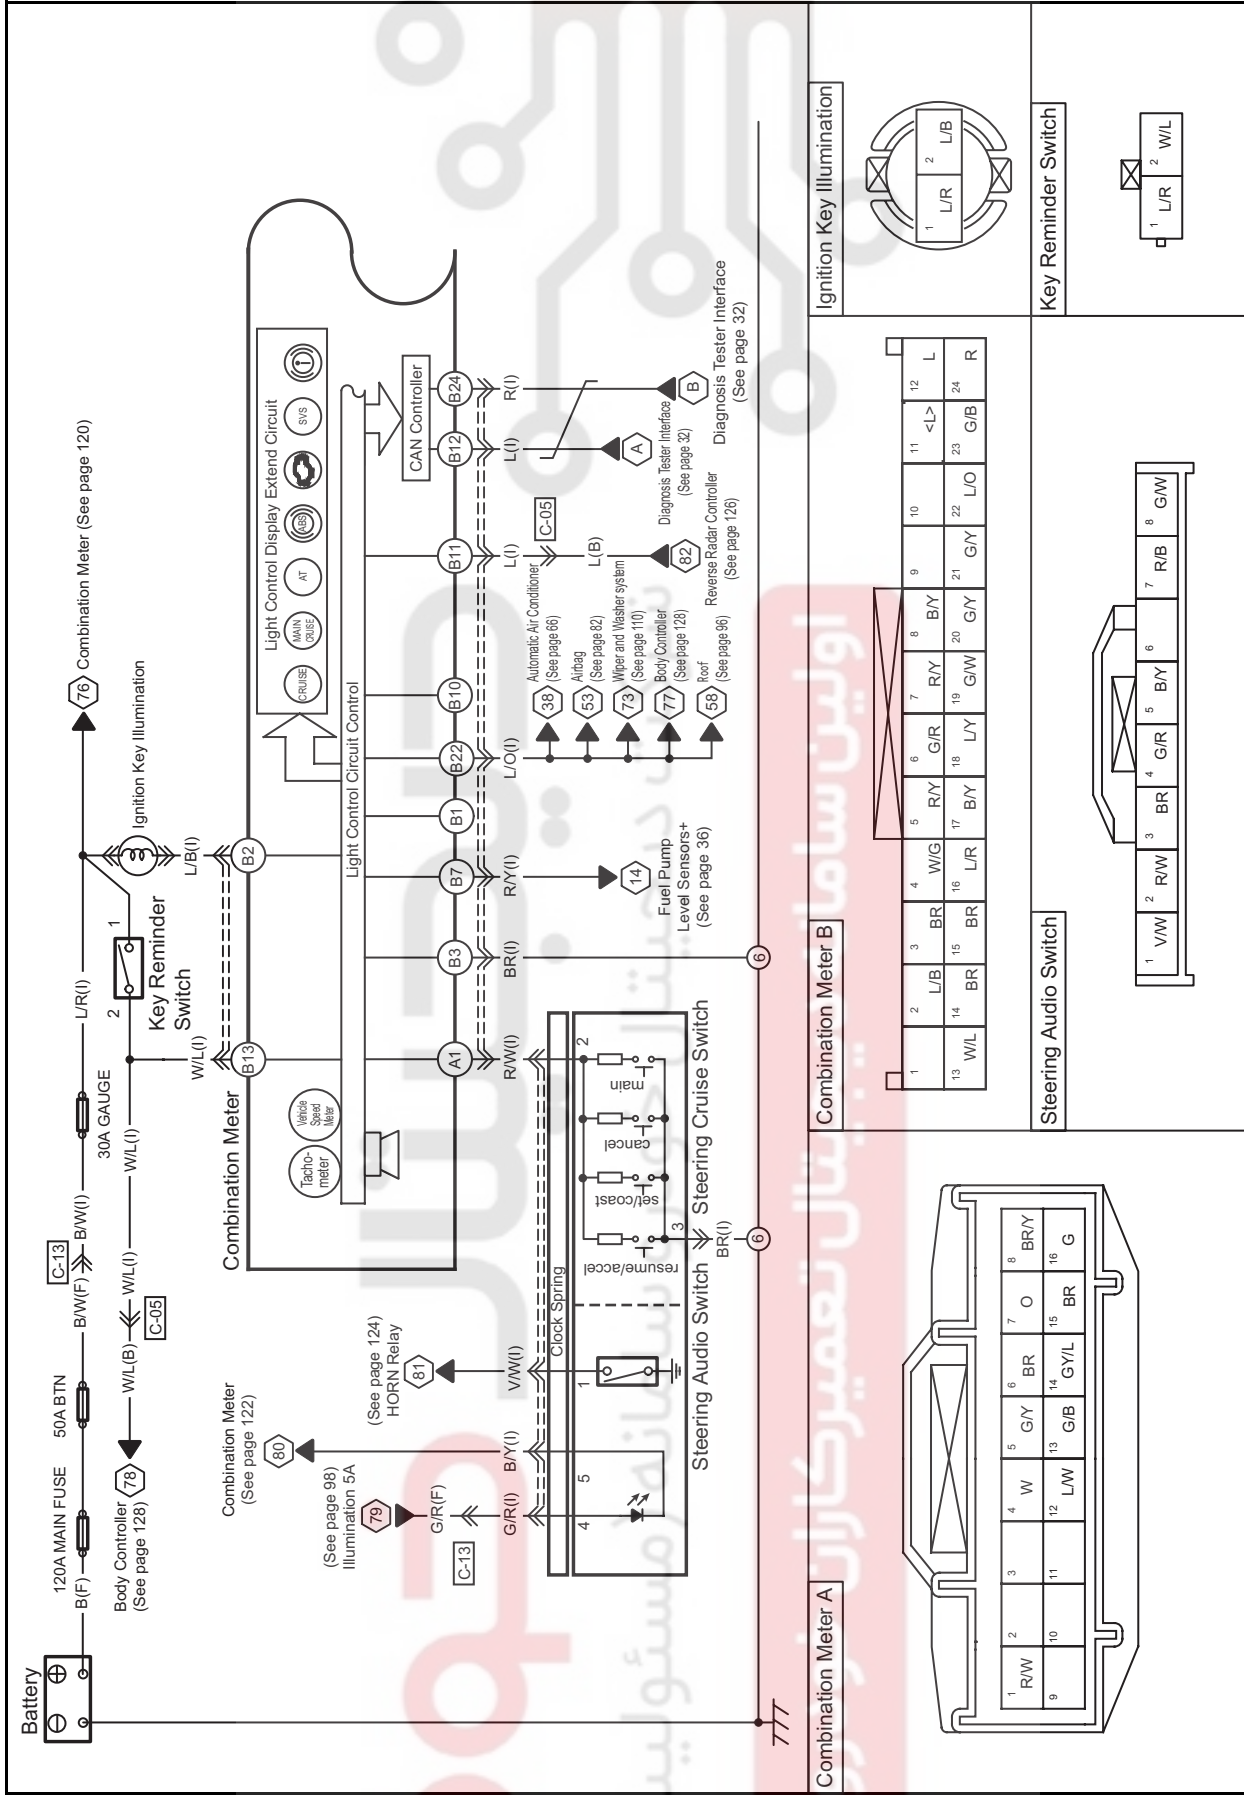

Wire Harness Symbol: (F) (E) (I) (B)

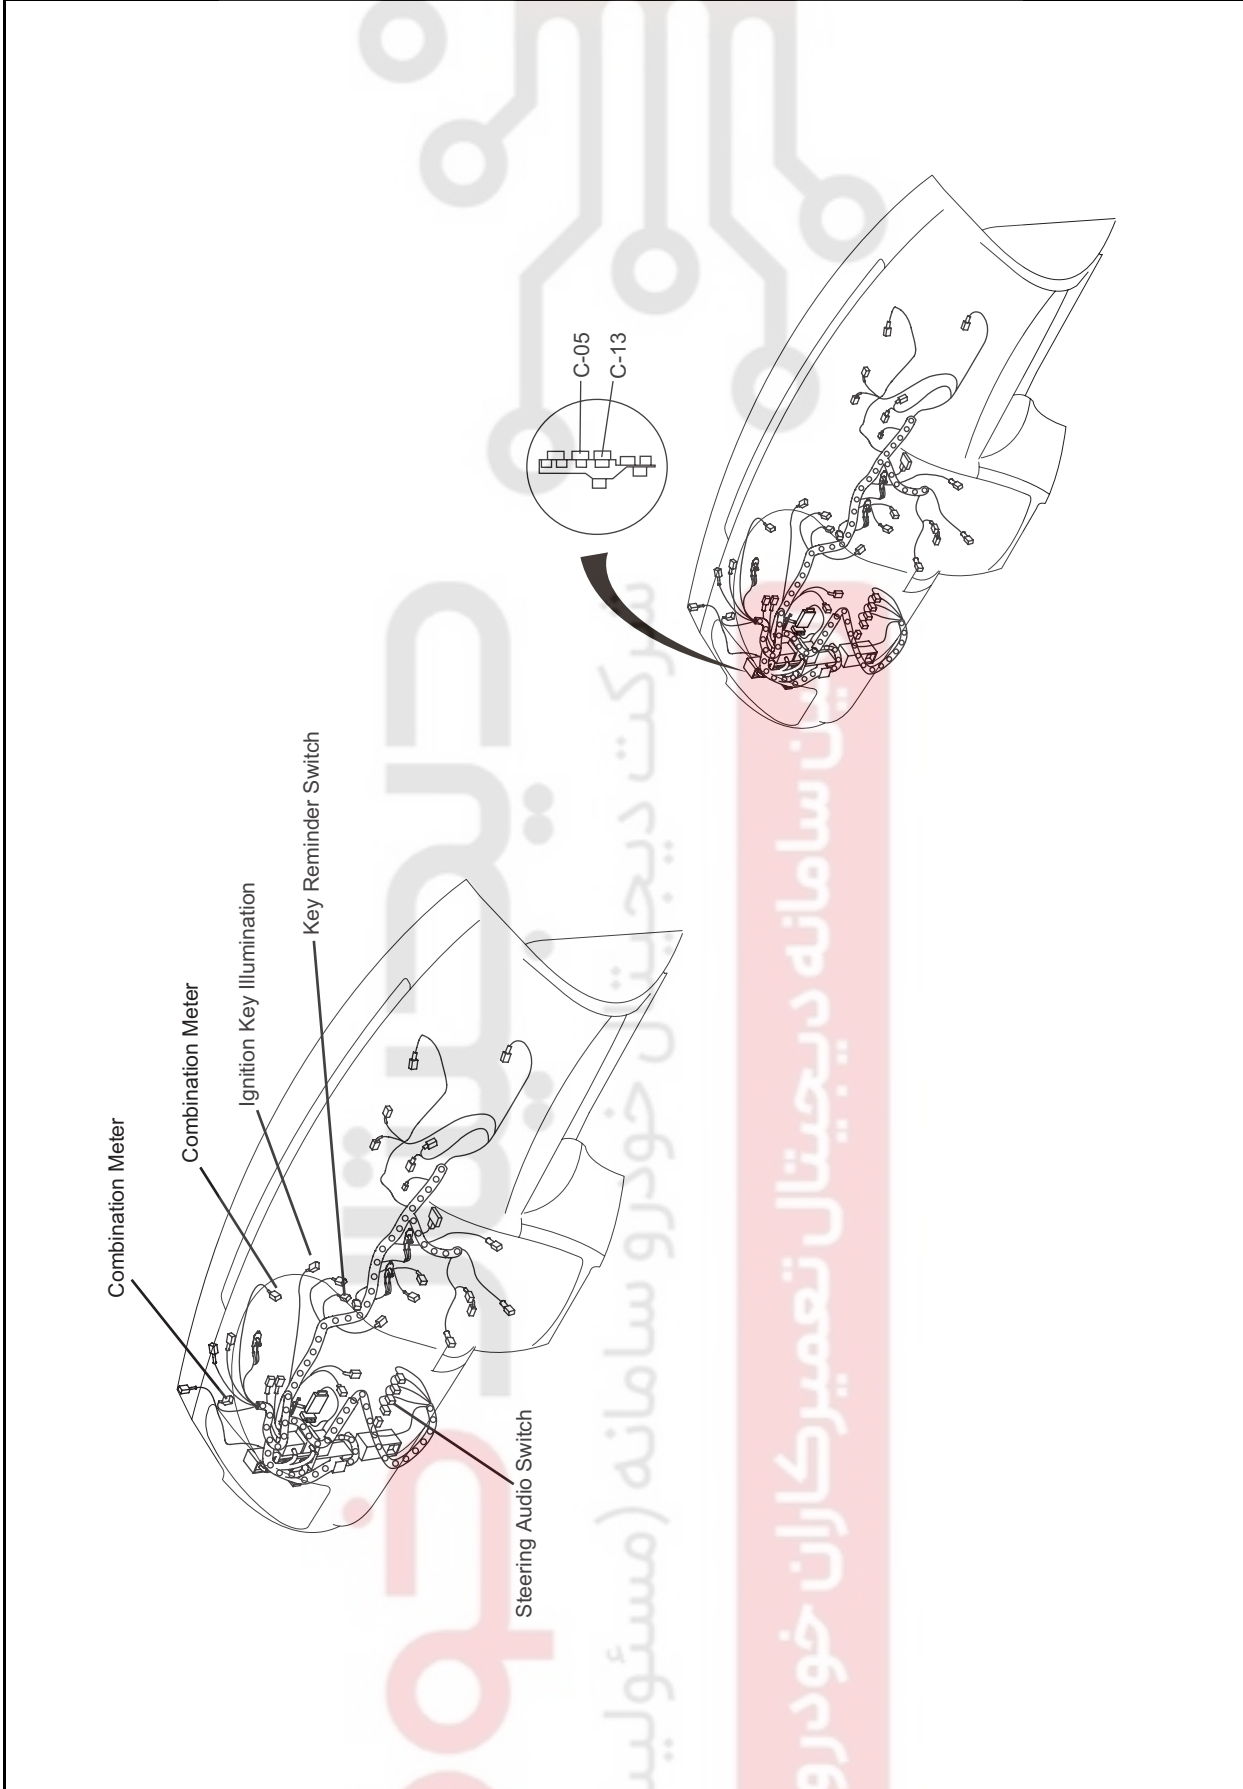


BO-ME-1

BO


BO Body and Accessory ME Meter/Driver Information

BO-ME-2

Steering Switches and Combination Meter

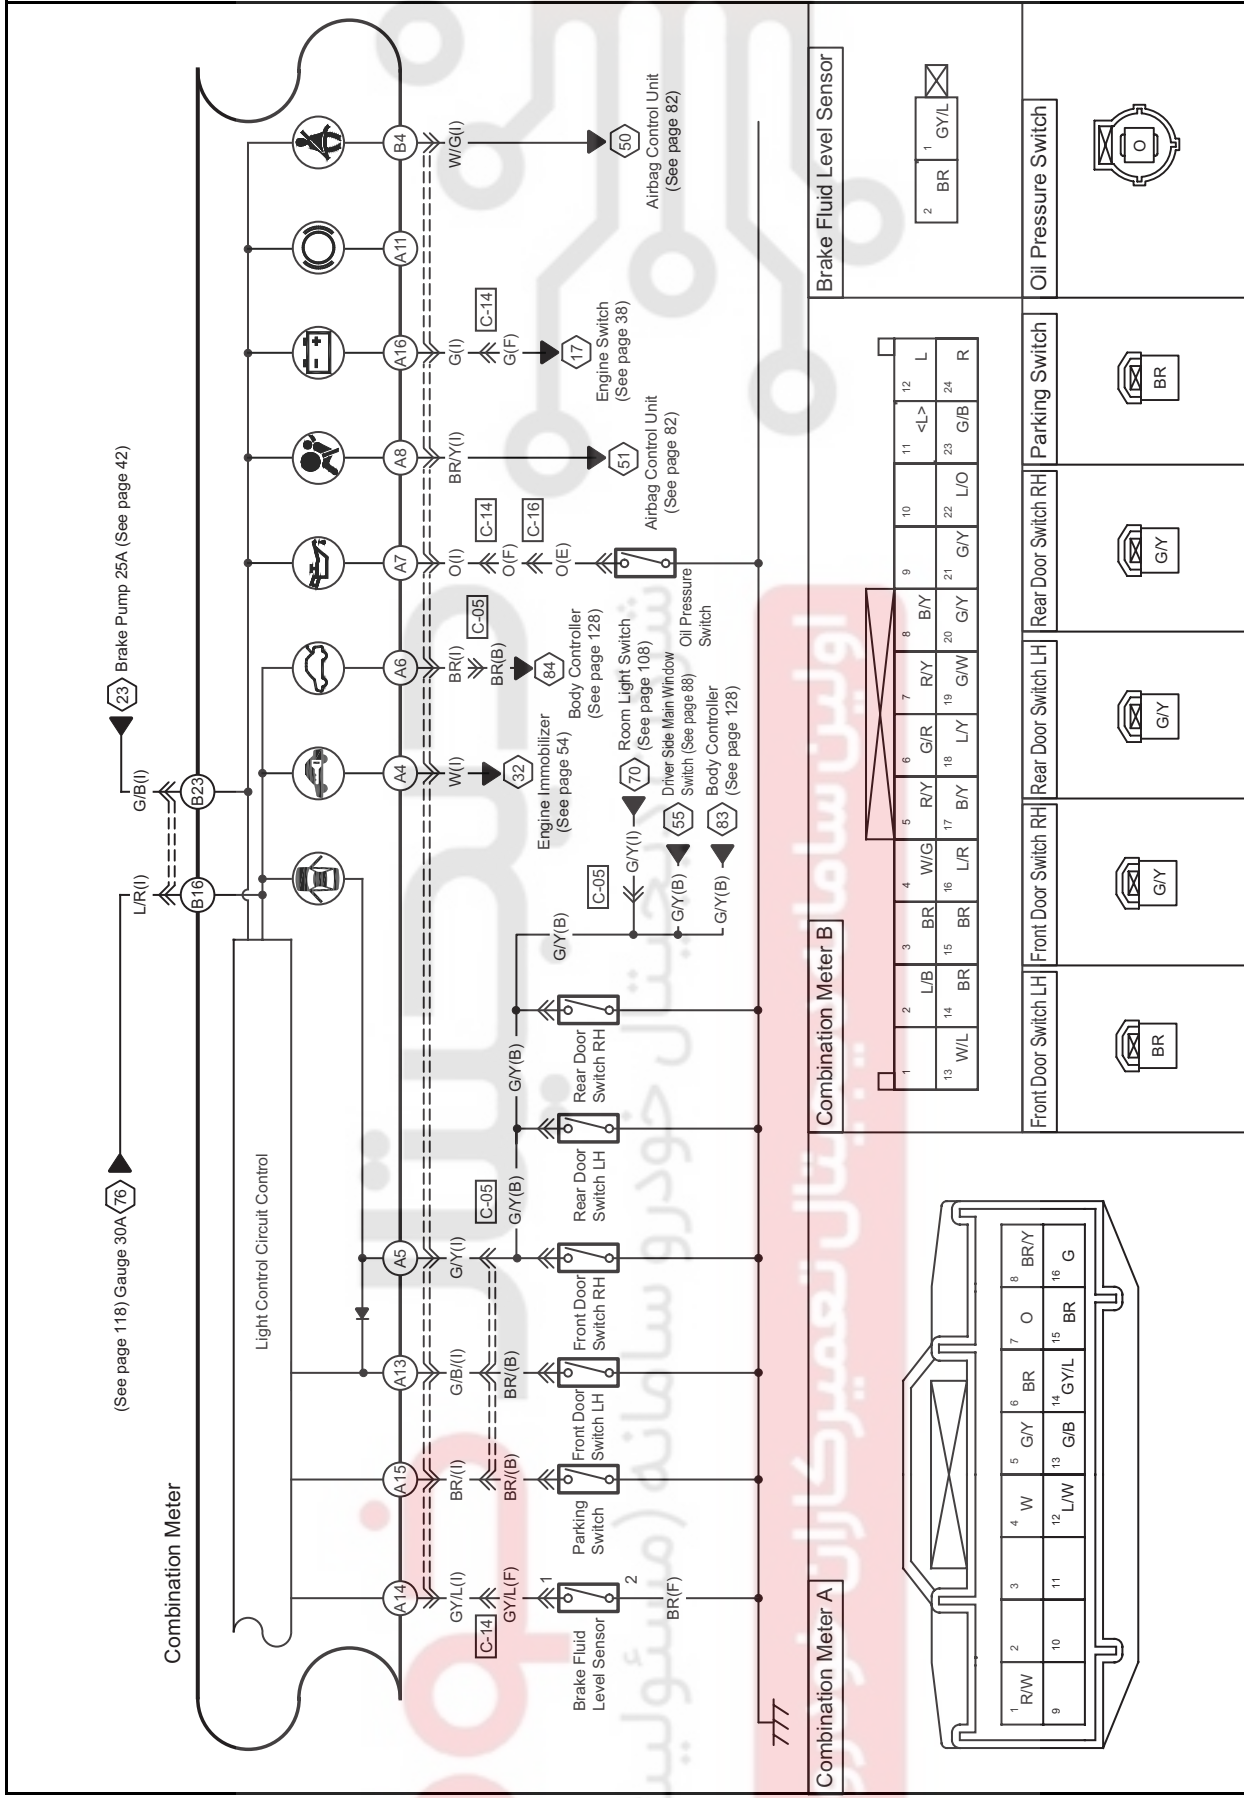

Wire Harness Symbol: (F) (E) (I) (B)

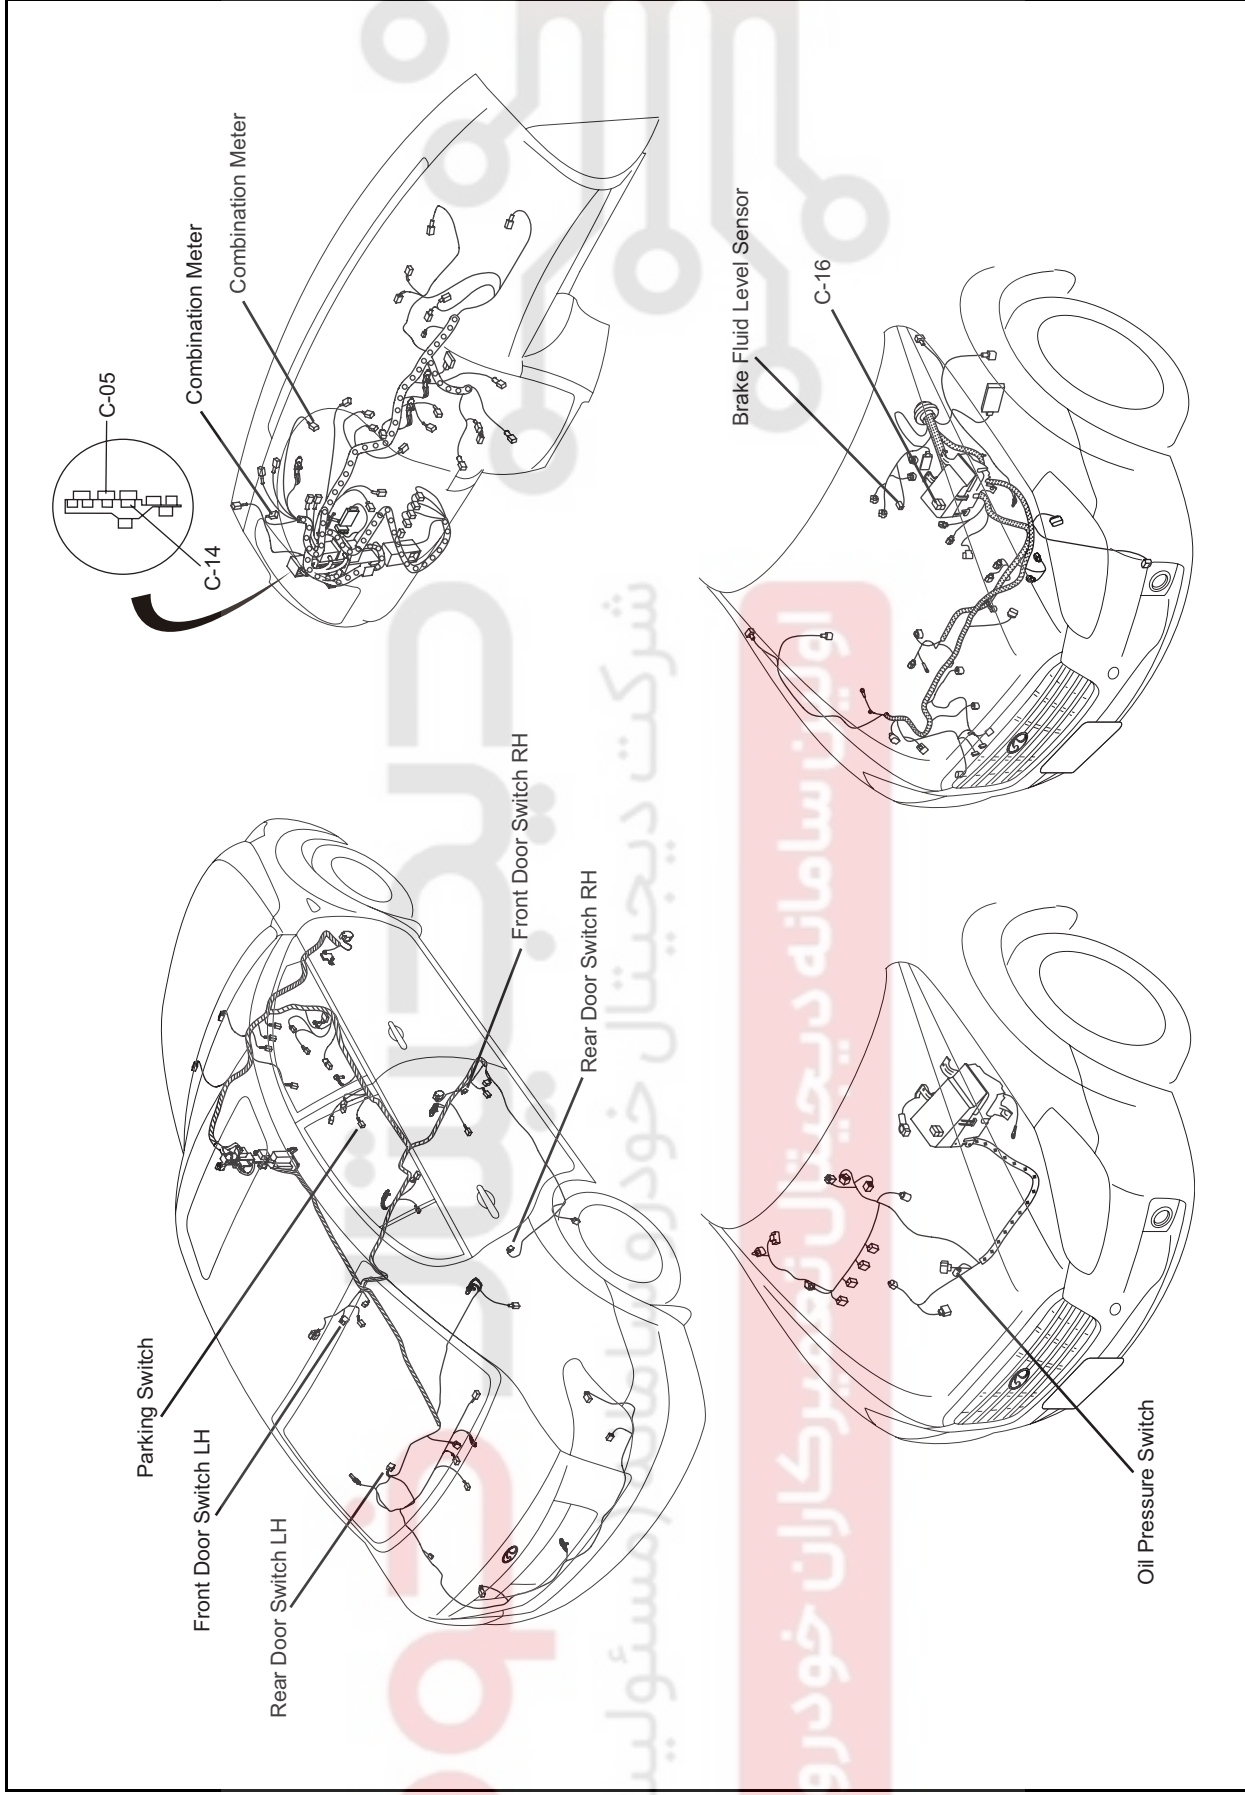


BO Body and Accessory ME Meter/Driver Information

BO-ME-2

BO



Wire Harness Symbol: (F) (E) (I) (B)

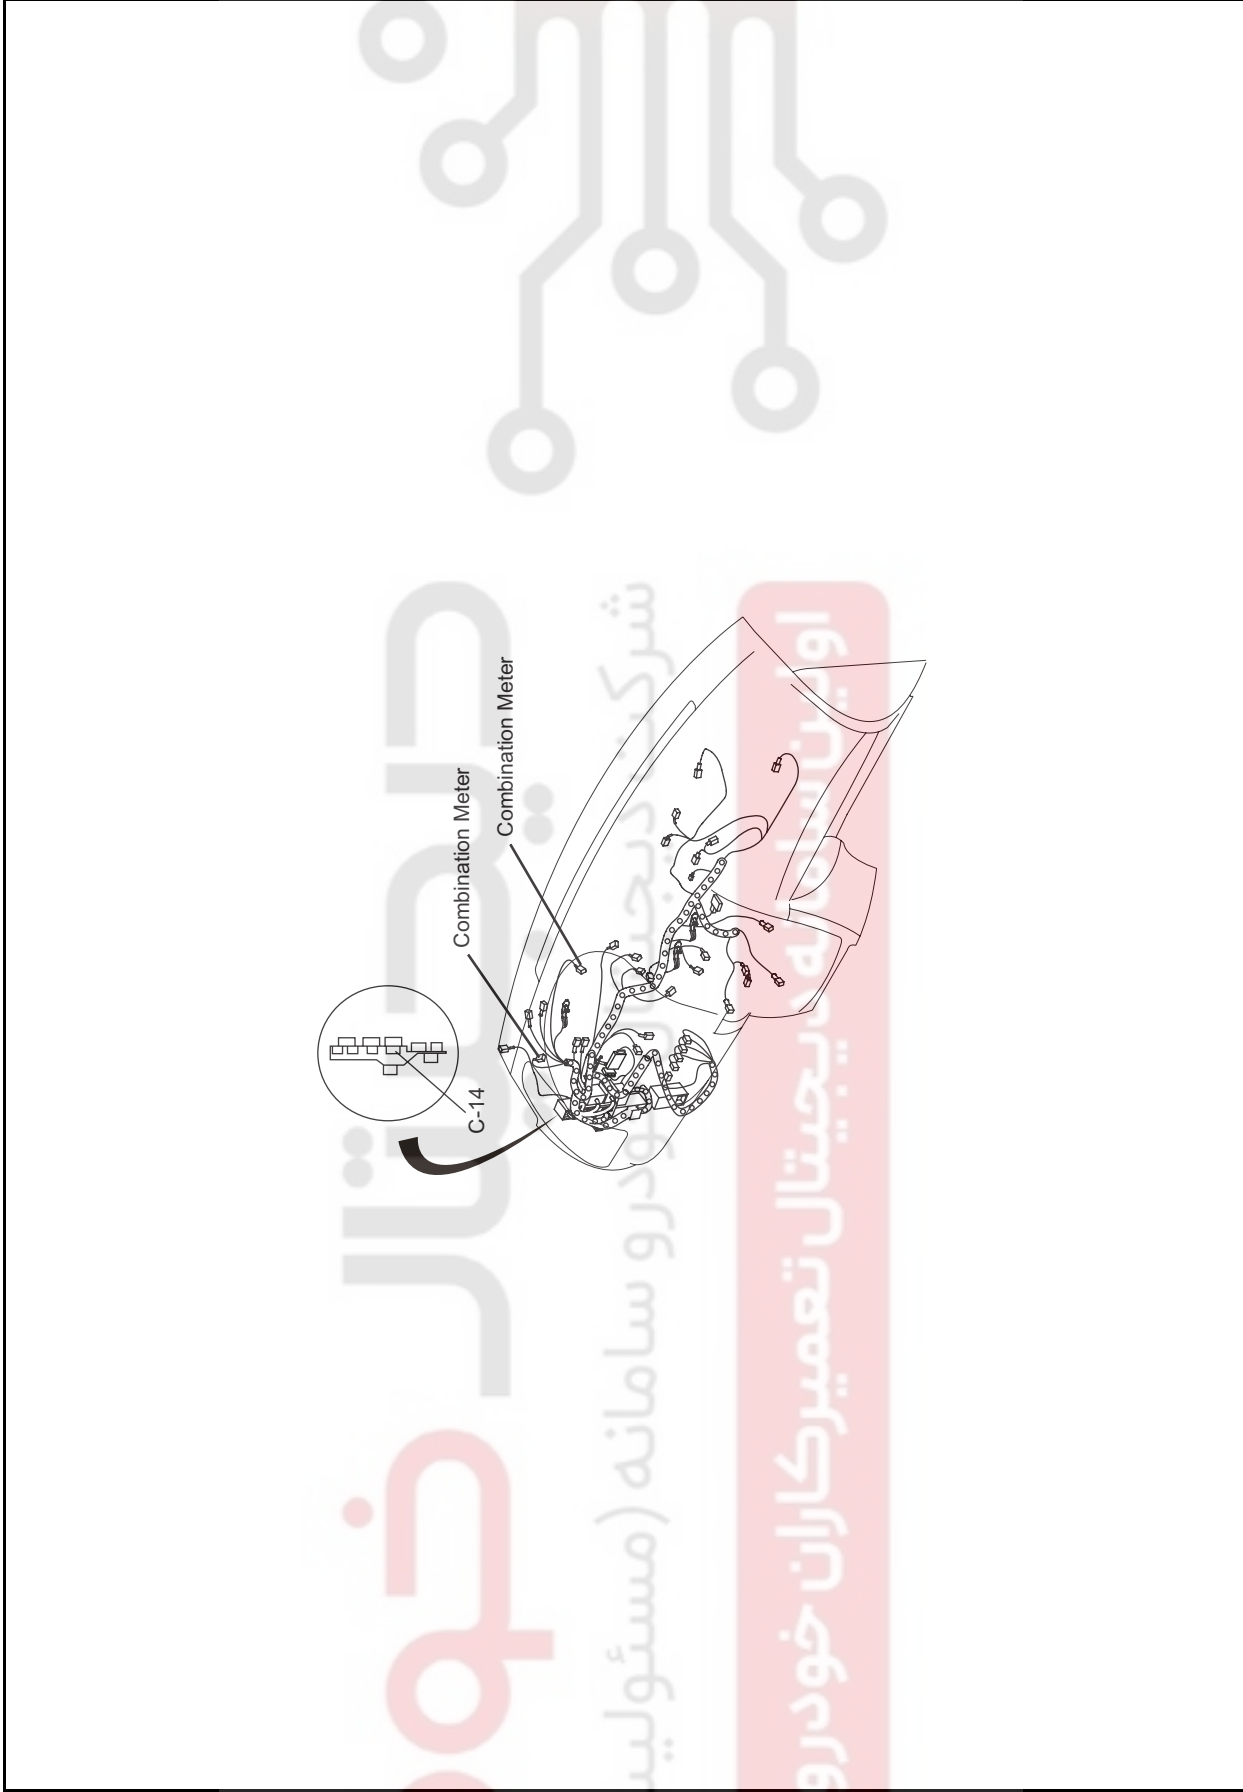


BO-ME-3

BO


BO Body and Accessory ME Meter/Driver Information

BO-ME-4

Horn

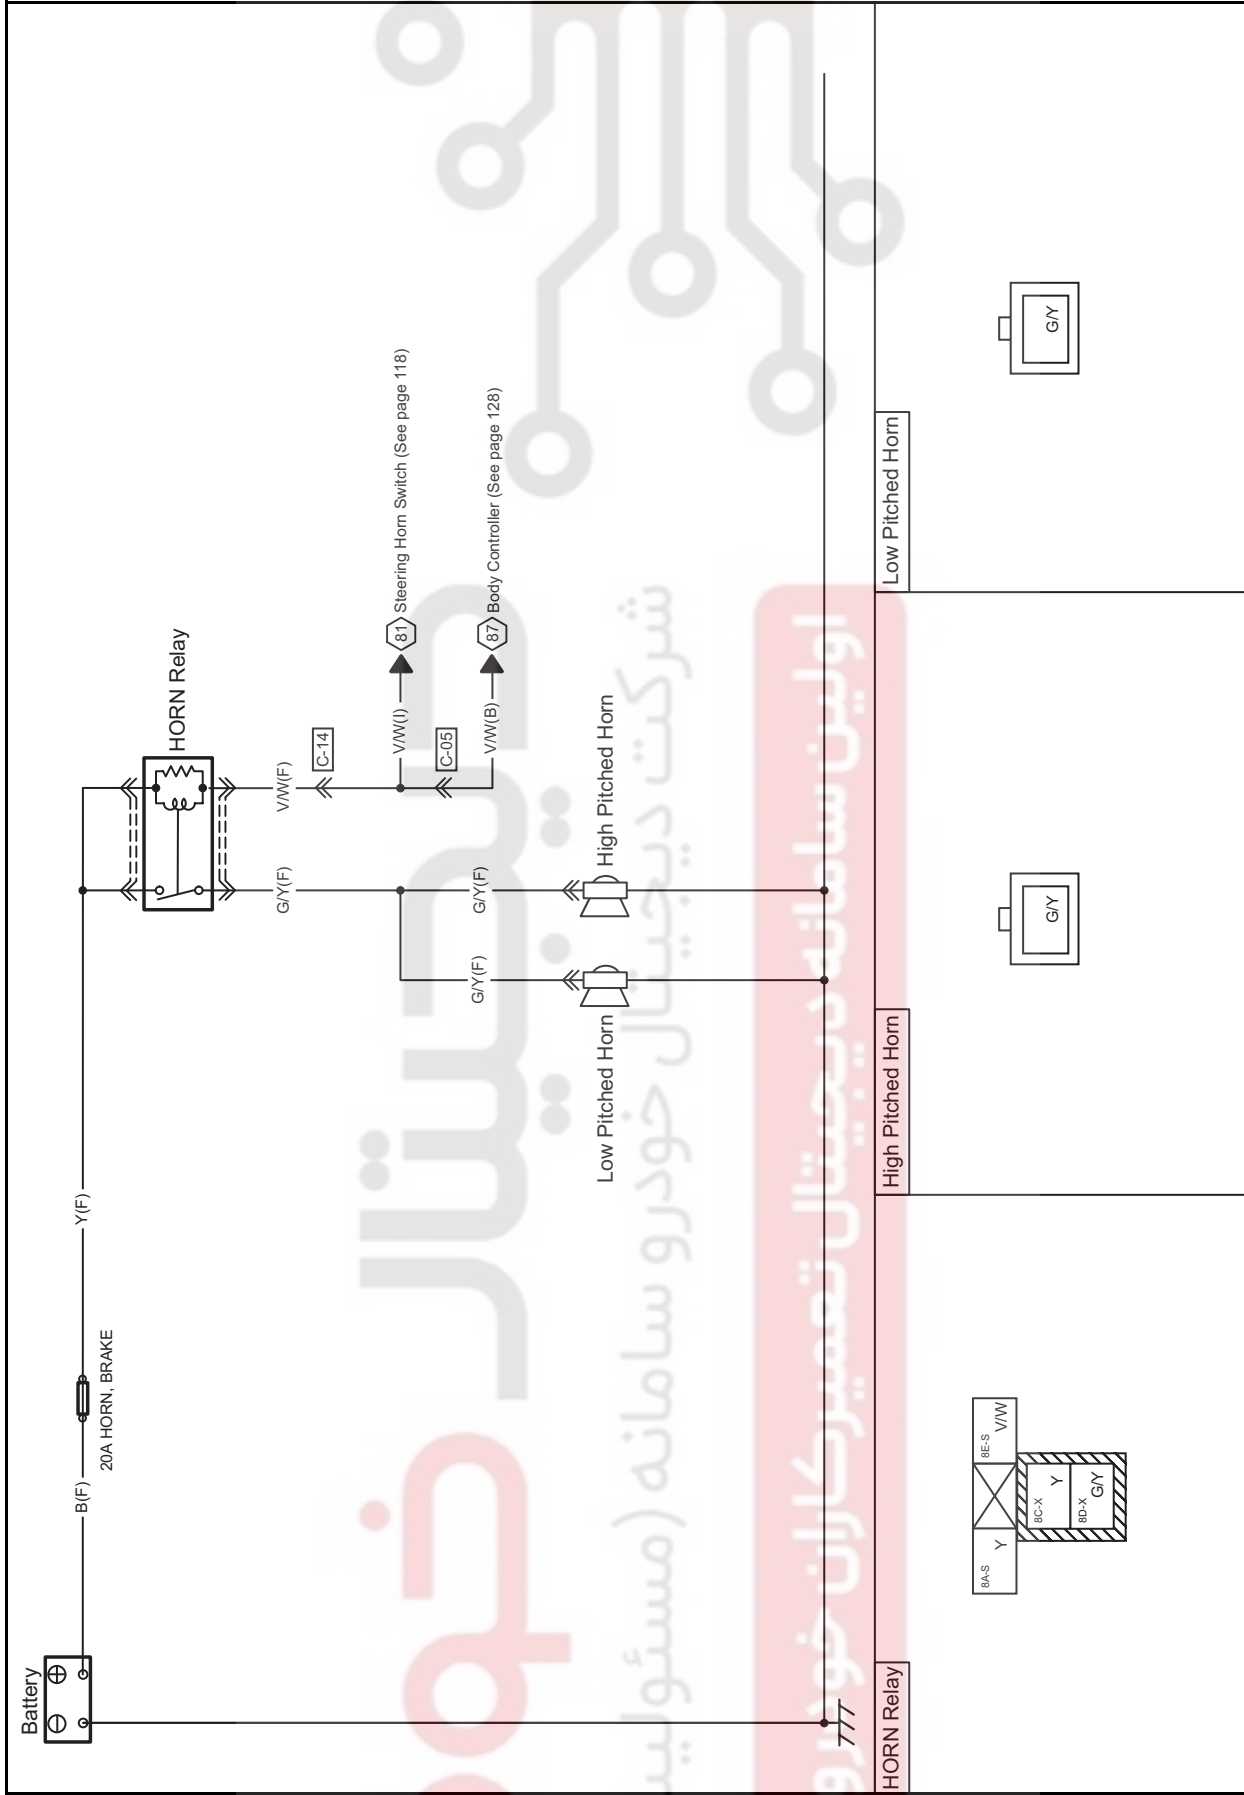

Wire Harness Symbol: (F) (E) (I) (B)

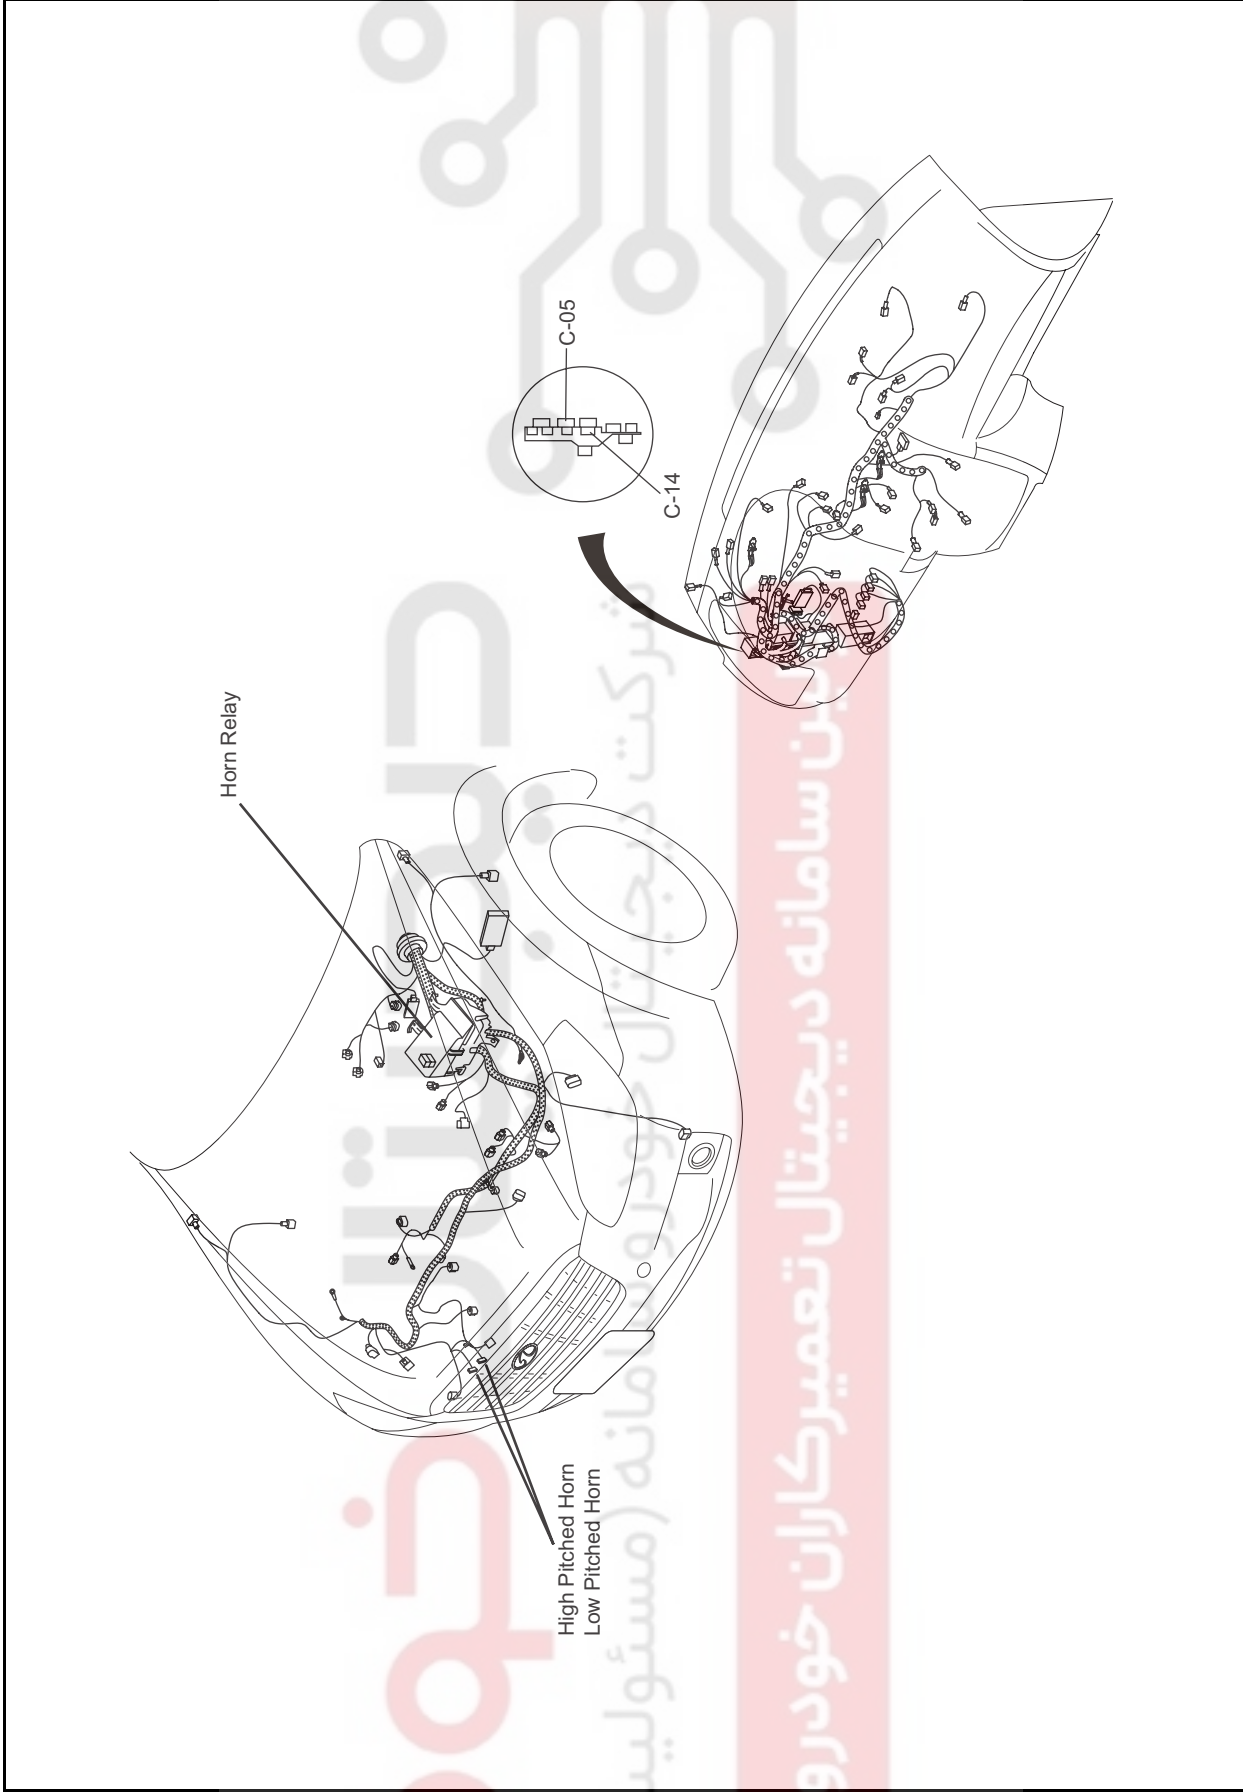



BO-ME-4

BO

BO Body and Accessory ME Meter/Driver Information System



Wire Harness Symbol: (F) (E) (I) (B)

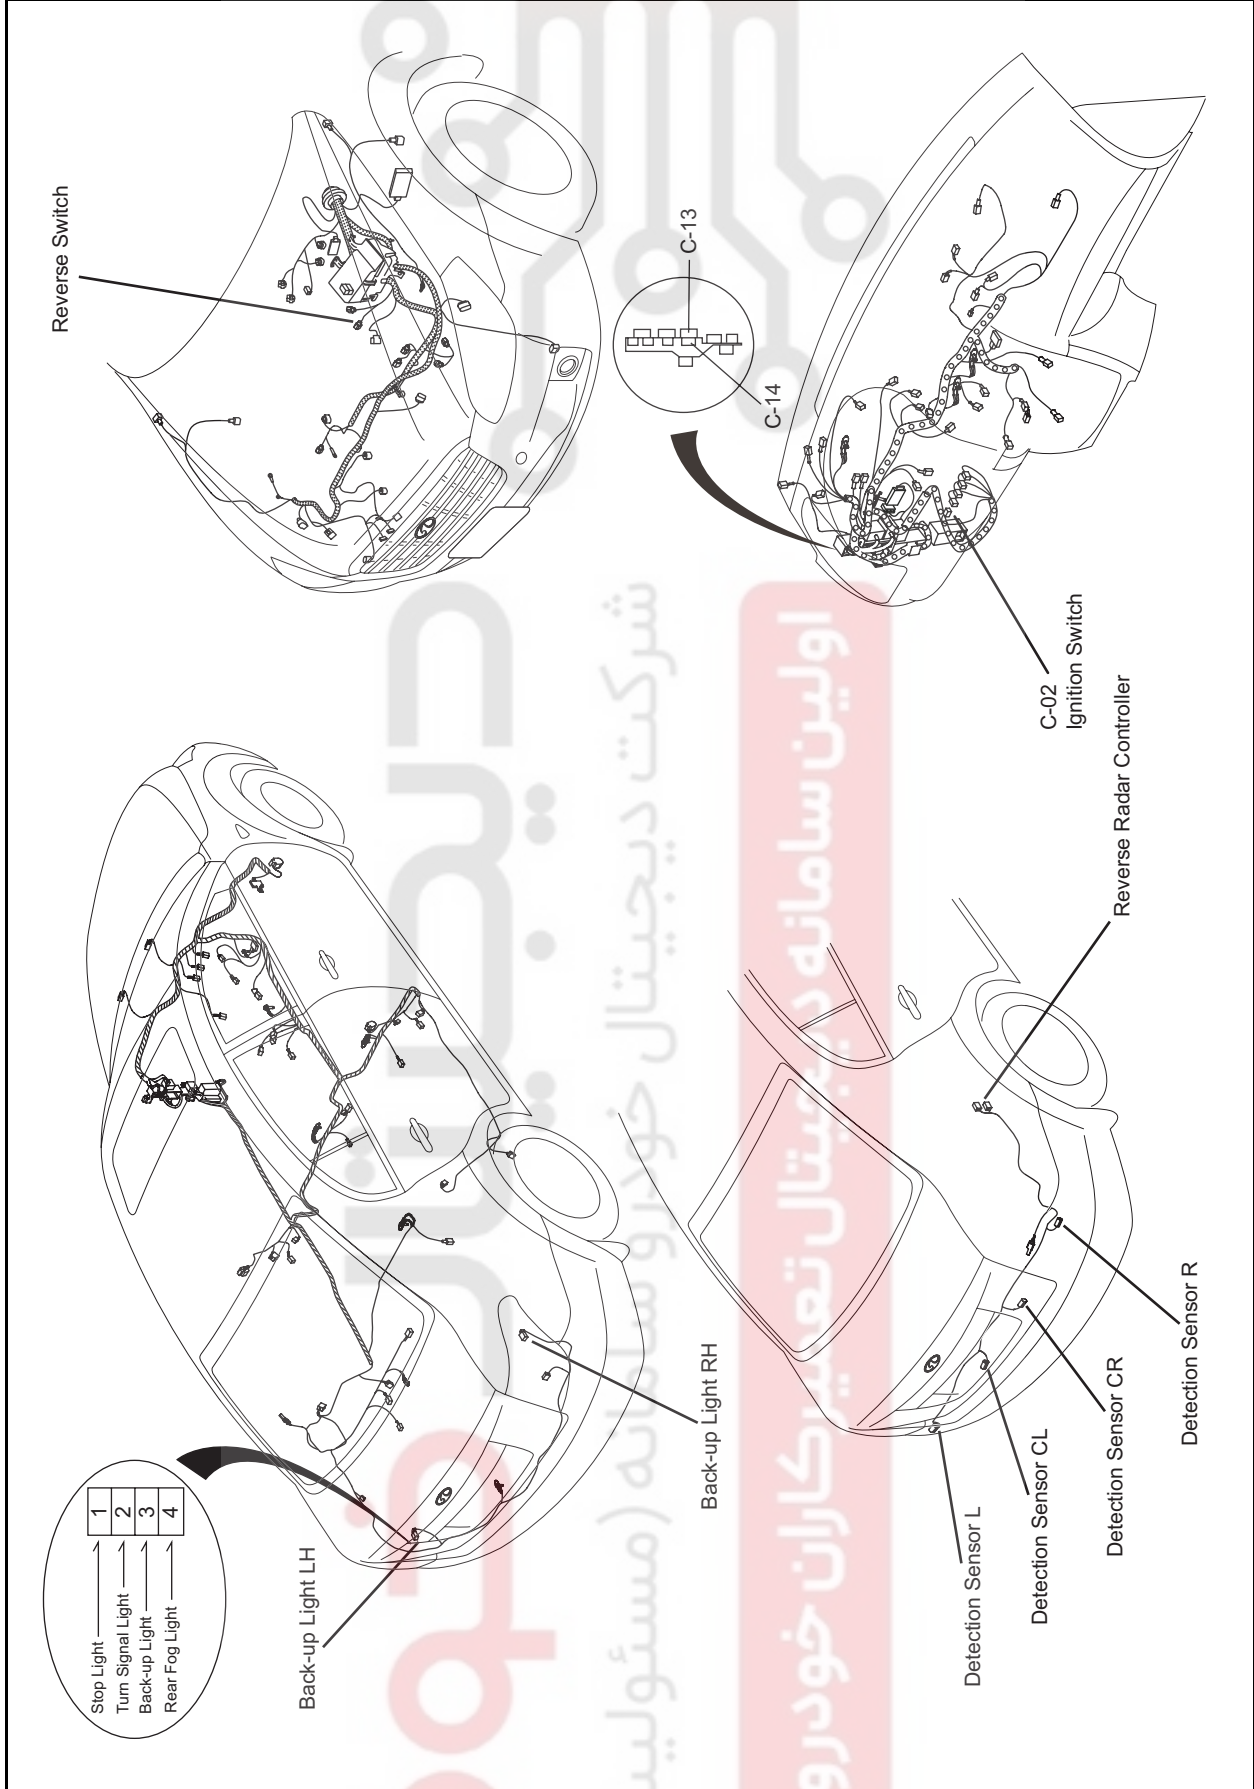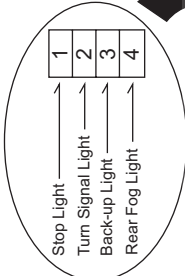


BO-RA-1

BO


BO Body RA Reverse Radar

BO-CS-1

Body Controller

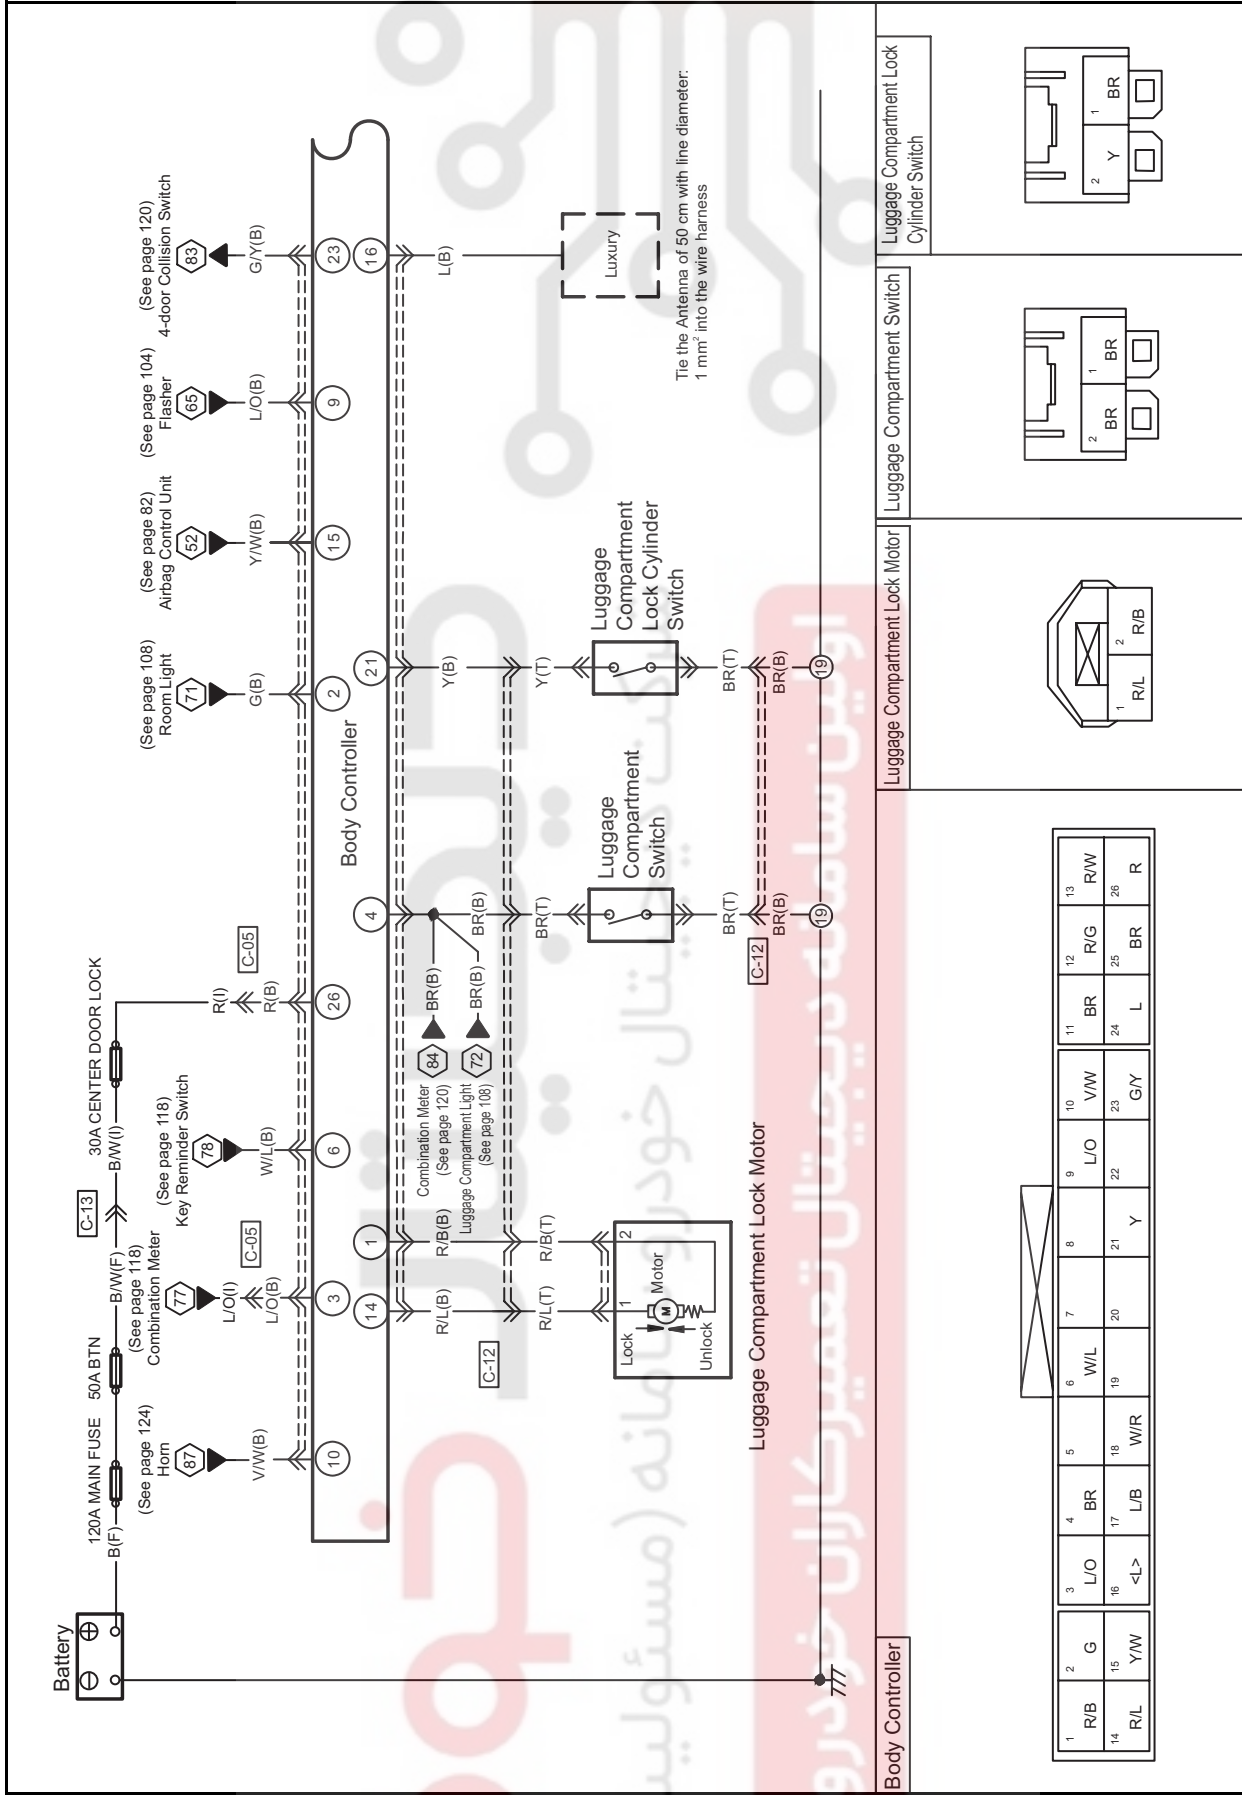

Wire Harness Symbol: (F) (E) (I) (B)

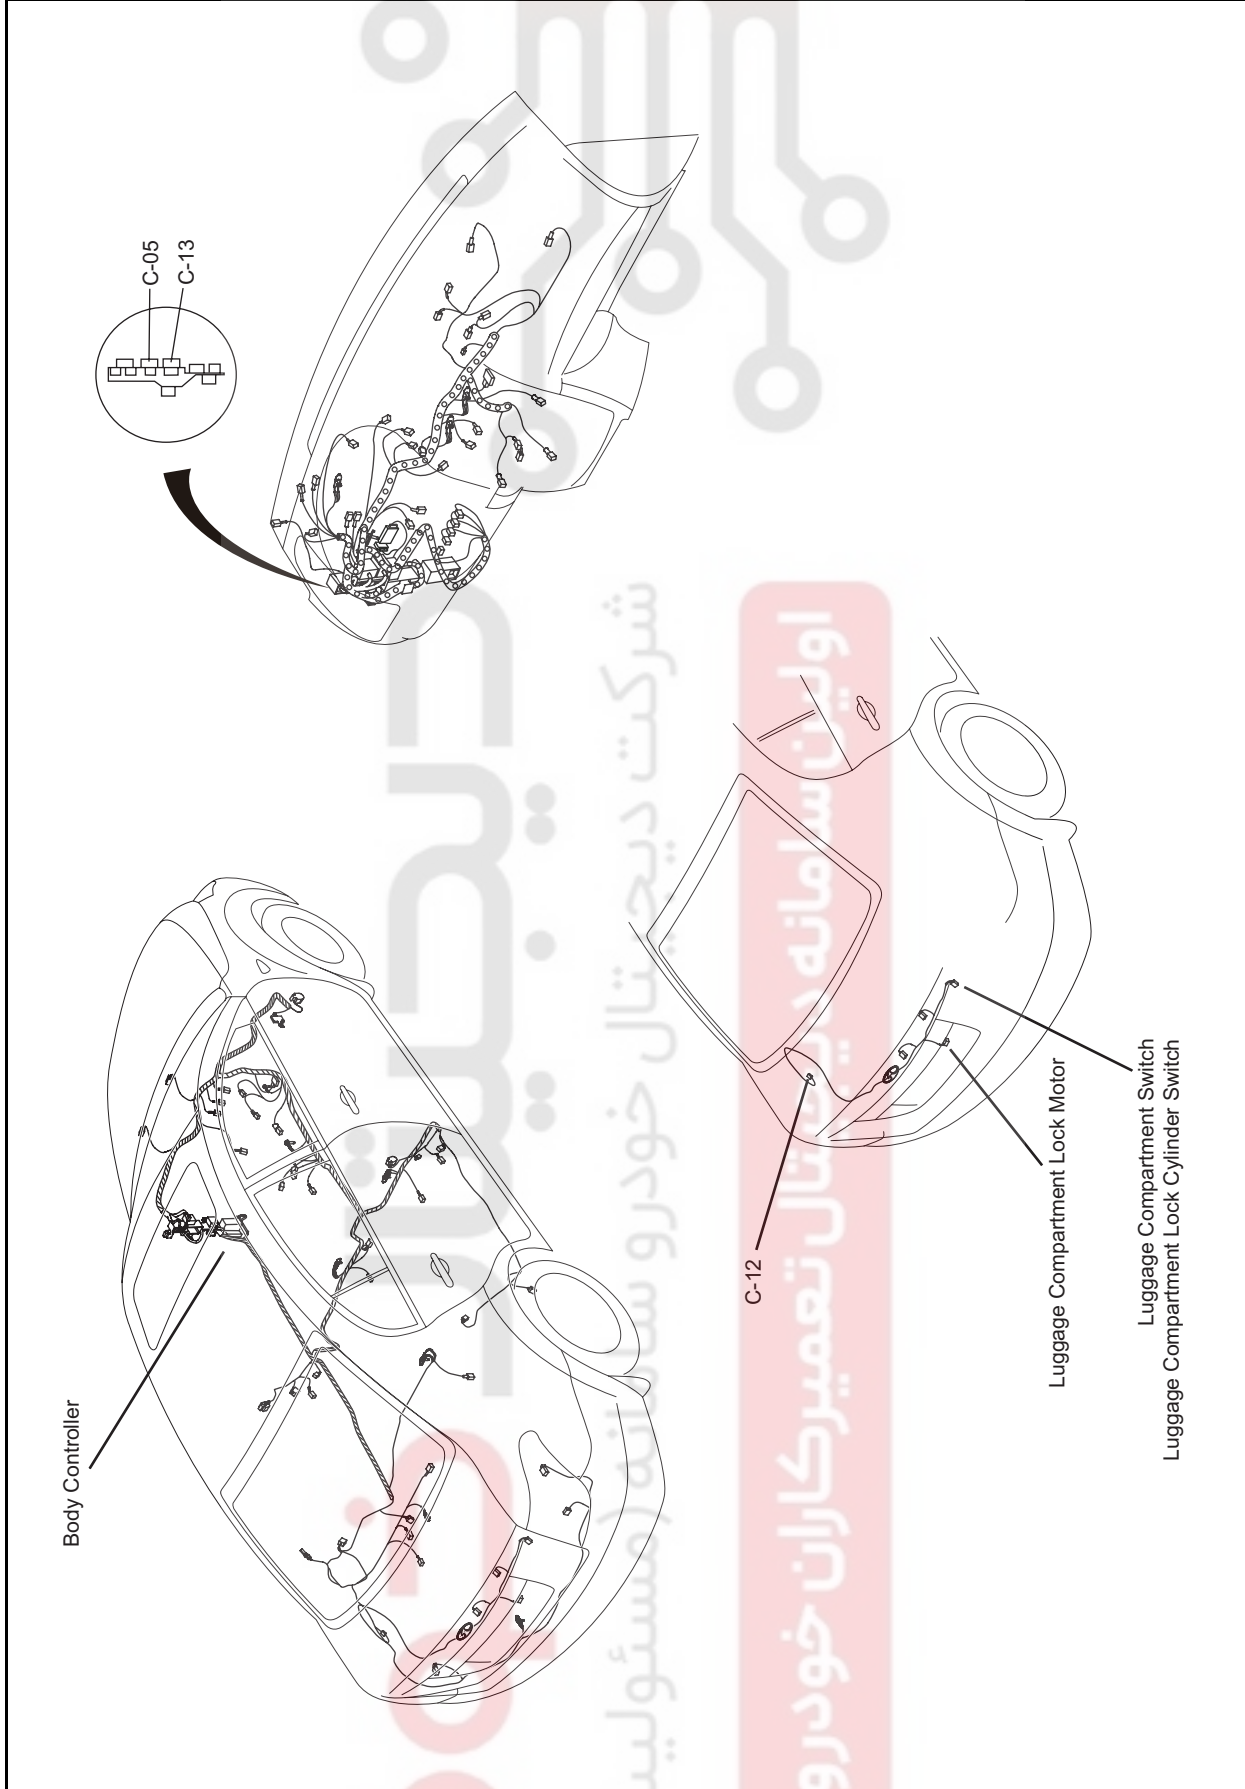


BO-CS-1

BO


BO Body and Accessory CS Control System

BO-CS-2

Body Controller

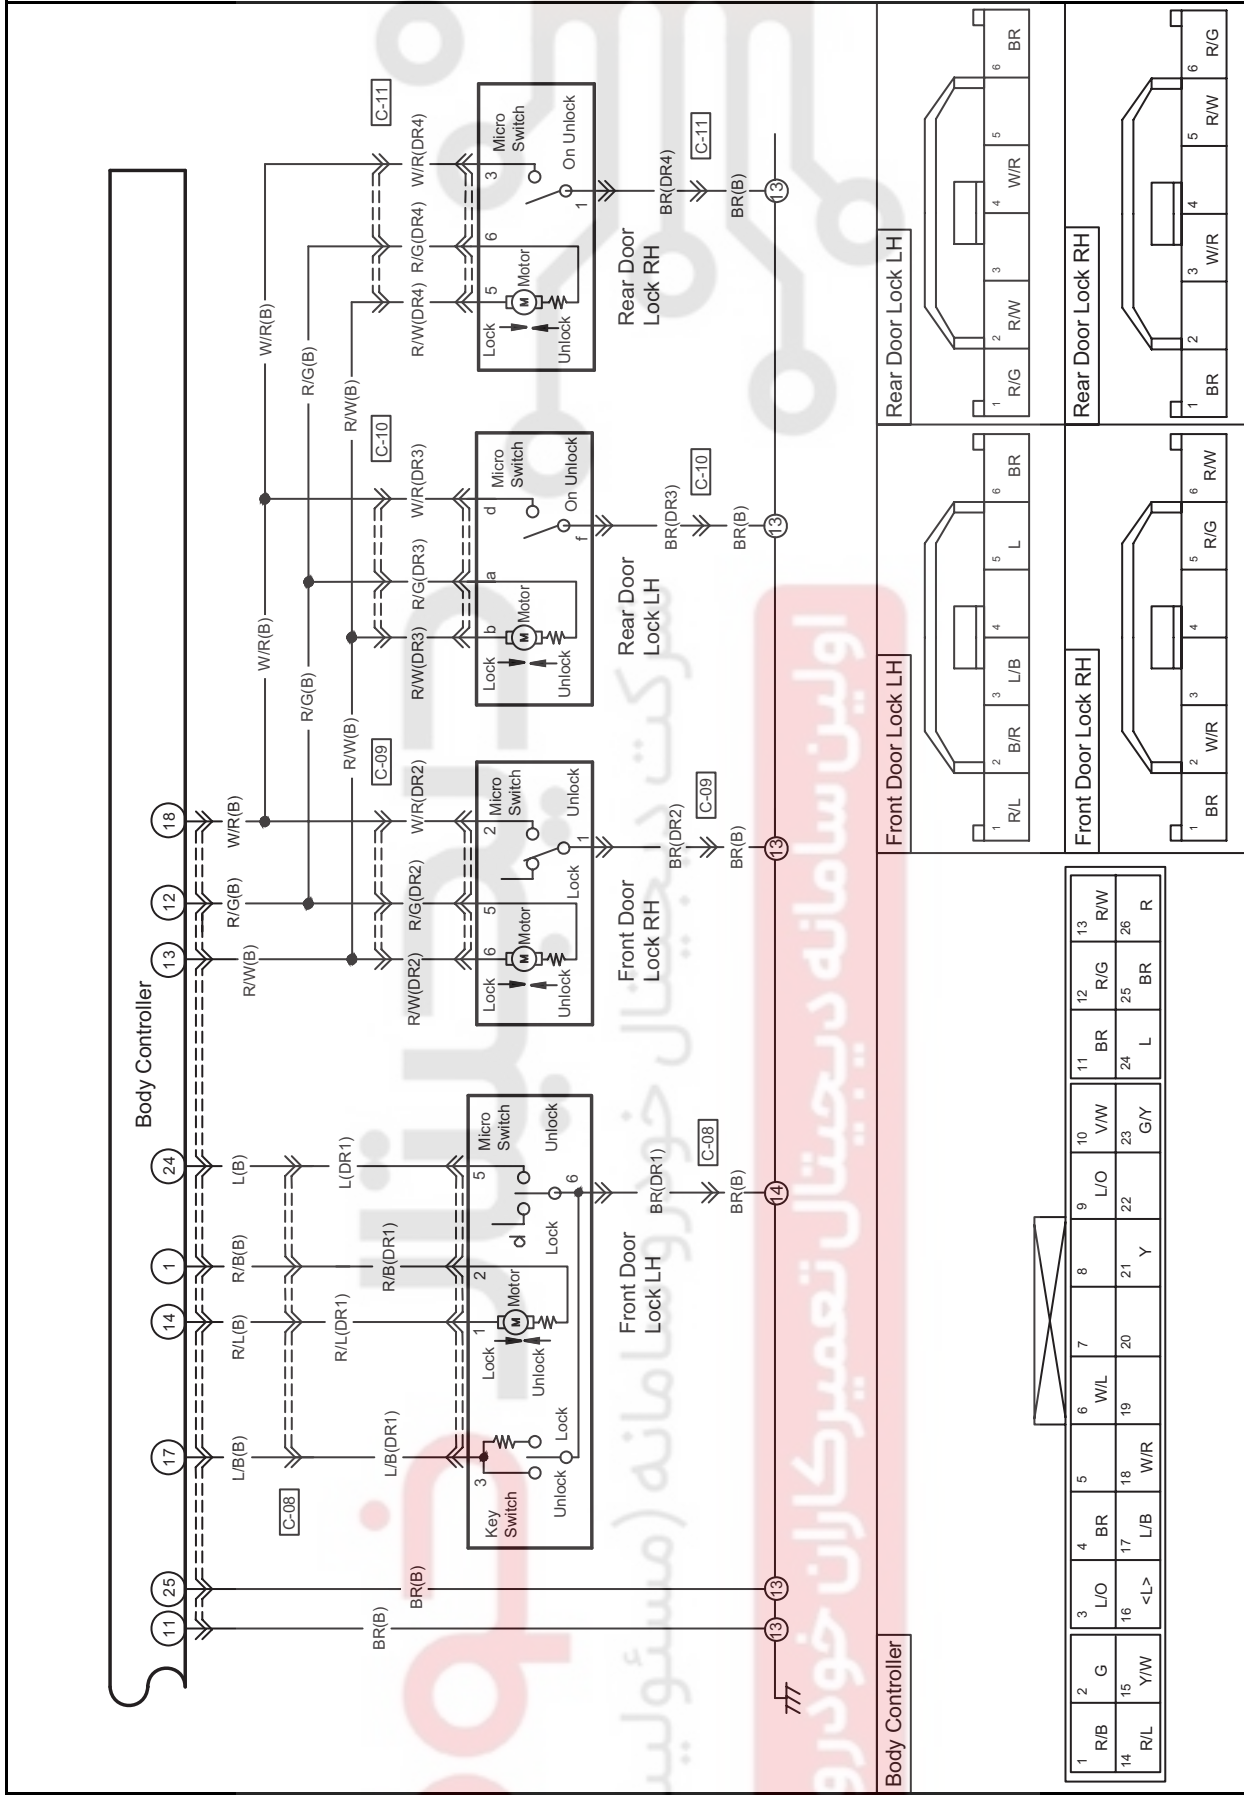



Wire Harness Symbol: (F) (E) (I) (B)

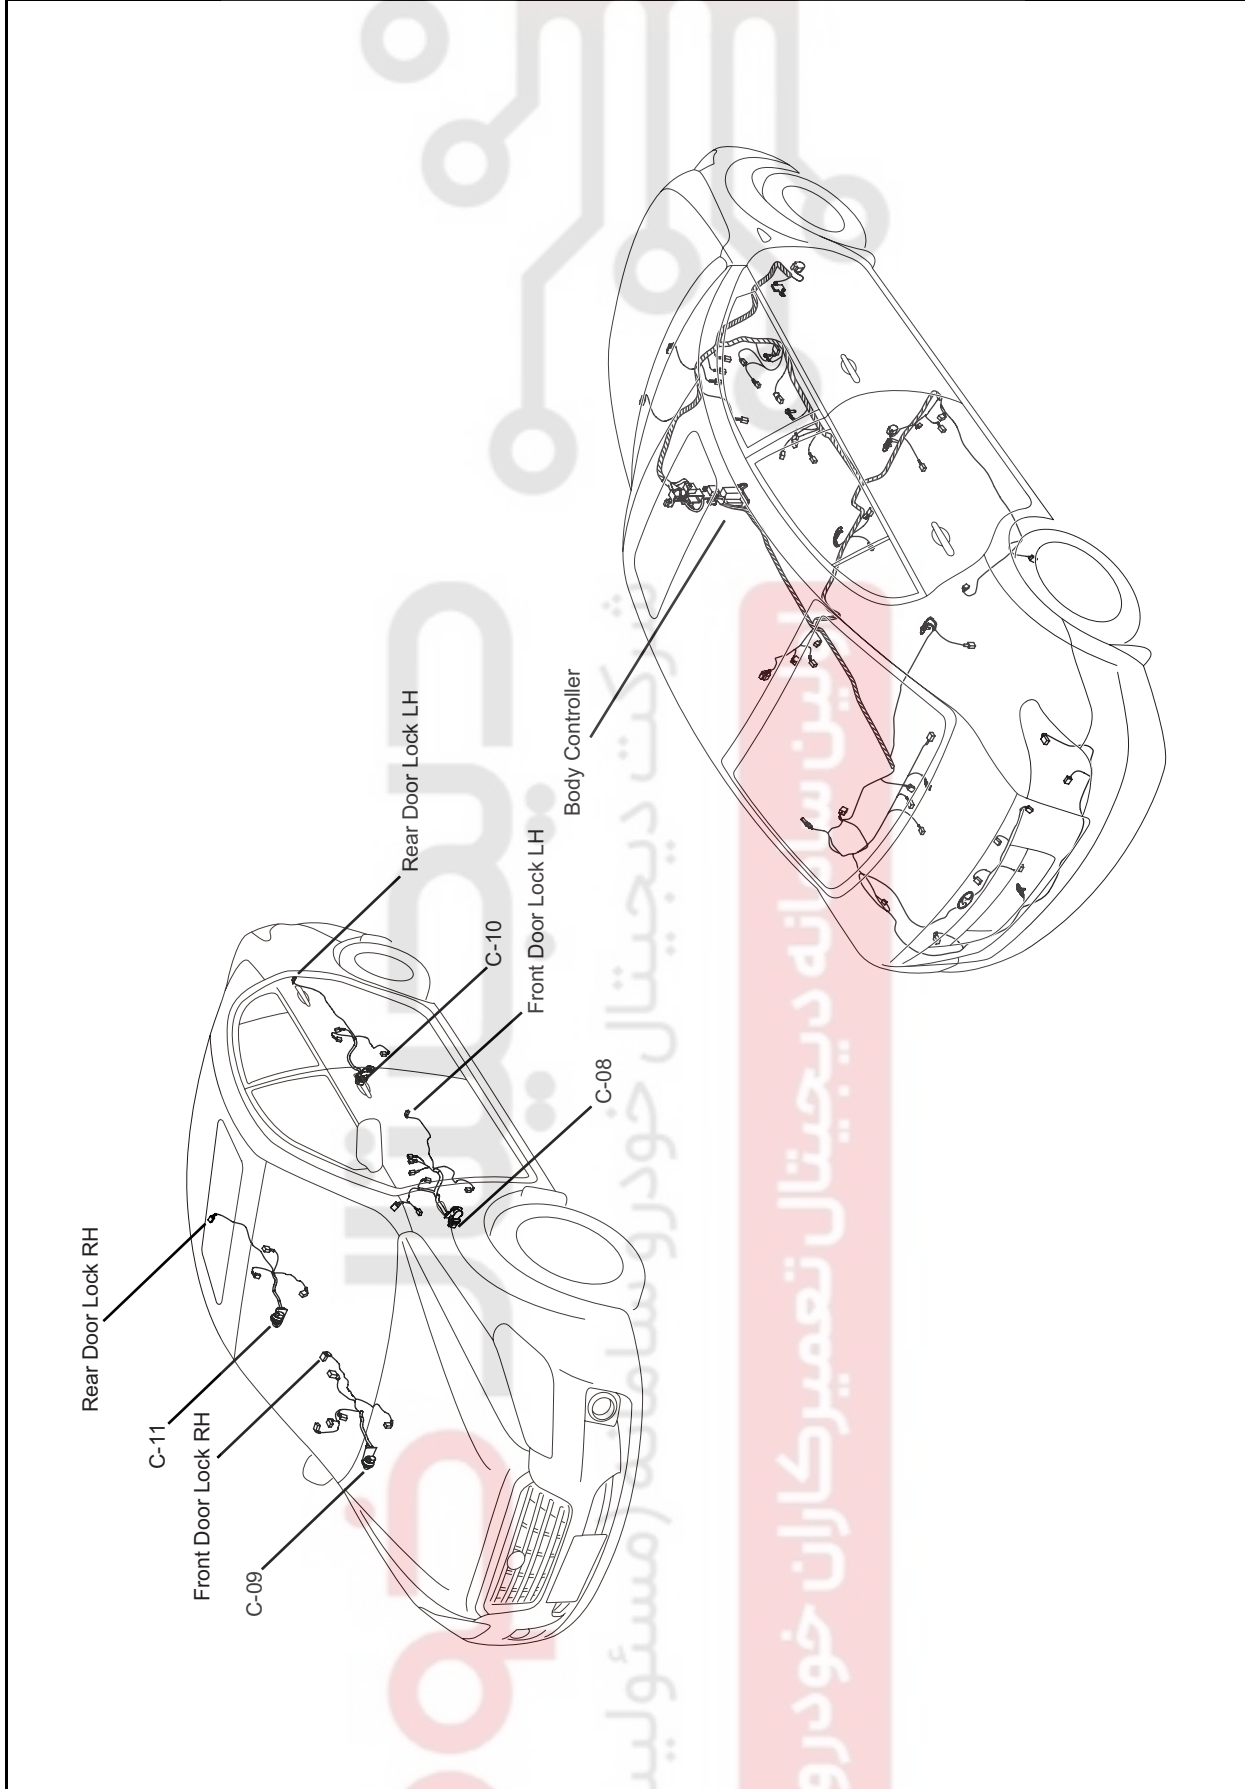

BO-CS-2

BO





BO Body and Accessory CS Control System

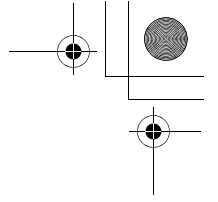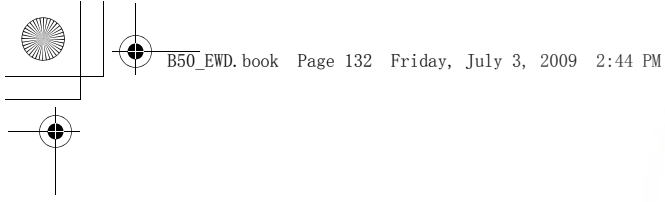

# دیجیتال خوددراو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

  اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

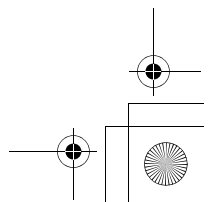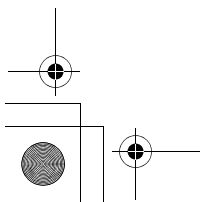

## ALPHABETICAL INDEX

|  |     |  |     |
|--|-----|--|-----|
| <b>A</b>   |     | <b>J</b>   |     |
| Abbreviations Used in This Manual .....                              | 13  | Junction Color Code.....   | 10  |
| Airbag Control System .....  | 82  | <b>M</b>   |     |
| Airbag Service Caution/Repair Caution .....                          | 80  | Manual Air Conditioner.....  | 72  |
| Anti-lock Brake System.....  | 62  | <b>P</b>   |     |
| AT Transmission Case Control System .....                            | 56  | Power Outside Rear View Mirror.....                                  | 92  |
| Audio System.....  | 114 | Power Seat.....  | 94  |
| Automatic Air Conditioner .....                                      | 66  | Power Window System .....  | 88  |
| <b>B</b>   |     | <b>R</b>   |     |
| Back-up Light and Reverse Radar .....                                | 126 | Rear Window Defroster.....   | 112 |
| Body Controller .....  | 128 | Roof.....  | 96  |
| <b>C</b>   |     | <b>S</b>   |     |
| Charging System .....  | 38  | Starting System.....   | 40  |
| Cigarette Lighter, Luggage Compartment Light<br>and Room Light ..... | 108 | Steering Switches and Combination Meter .....                        | 118 |
| Compressor Control.....  | 78  | Stop Light.....  | 106 |
| Contents of Electrical Wiring Diagram .....                          | 3   | Symbol .....   | 11  |
| Cooling System.....  | 34  | System Electrical Wiring Diagram/Junction<br>Schematic Drawing ..... | 6   |
| <b>D</b>   |     | <b>T</b>   |     |
| Data Link Connector .....  | 32  | Tail Light, License Plate Light .....                                | 100 |
| <b>E</b>   |     | Turn Signal Light and Emergency Flasher.....                         | 104 |
| Electrical Wiring Schematic Drawing .....                            | 9   | <b>U</b>   |     |
| (Engine) Control System.....   | 42  | Usual Connector List.....  | 20  |
| Engine Immobilizer System .....                                      | 54  | <b>V</b>   |     |
| <b>F</b>   |     | Vehicle Identification Number .....                                  | 1   |
| Front Fog Light, Rear Fog Light.....                                 | 102 | <b>W</b>   |     |
| Fuse Block .....   | 18  | Windshield Wiper and Washer.....                                     | 110 |
| Fuel System .....  | 36  | Wire Harness Symbol .....  | 10  |
| <b>G</b>   |     |  |     |
| General Procedures of Electrical System .....                        | 14  |  |     |
| Ground Contact Point .....   | 26  |  |     |
| Ground Contact Point (Example).....                                  | 5   |  |     |
| <b>H</b>   |     |  |     |
| Headlight.....   | 98  |  |     |
| Horn .....   | 124 |  |     |

**AI**