
Seat Belt Warning (LHD)

Service Hints

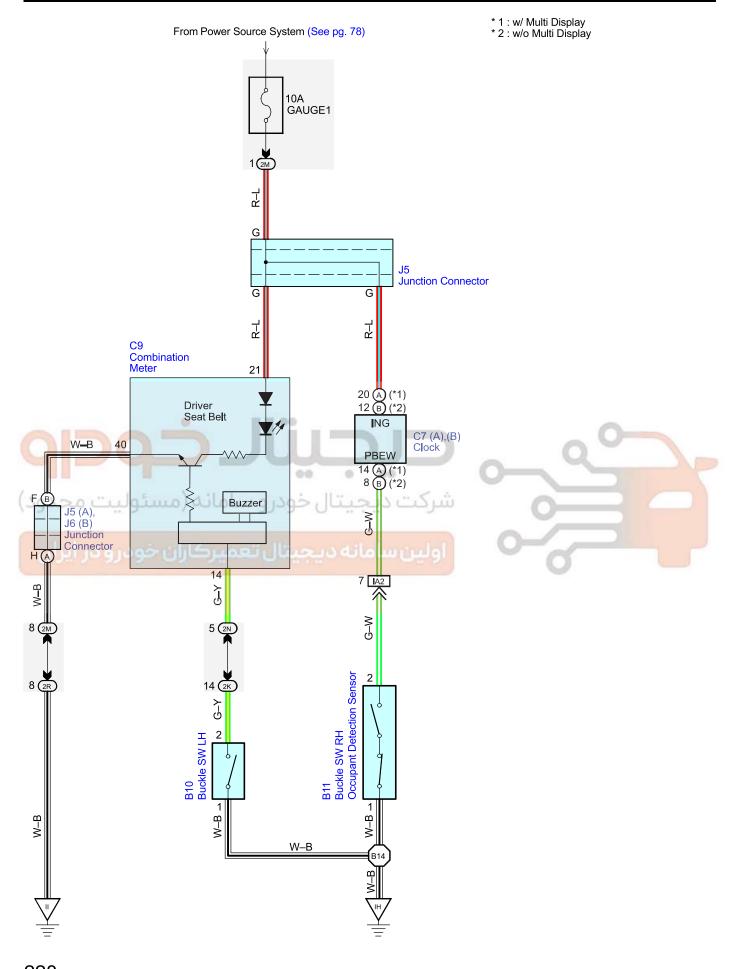

Service Hints

B10 Buckle SW LH

2-1: Closed with seat belt in use

B11 Buckle SW RH

2–1 : Closed with seat belt in use

) : Parts Location

Code	See Page	Co	de	See Page	Co	ode	See Page
B10	40 (LHD)	C	9	36 (LHD)			
B11	40 (LHD)	J5	Α	37 (LHD)			
C7	36 (LHD)	J6	В	37 (LHD)			

. Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)	
2K	26	Floor Wire and Driver Side J/B (Lower Finish Panel)	
2M	27	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)	
2N	27	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)	
2R	27	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	55 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location	0
IH I	55 (LHD)	Left Kick Panel	
	55 (LHD)	Instrument Panel Reinforcement LH	

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B14	60	Flooor wire		29	