


Audio System

Circuit Diagram (Page 1 of 3)

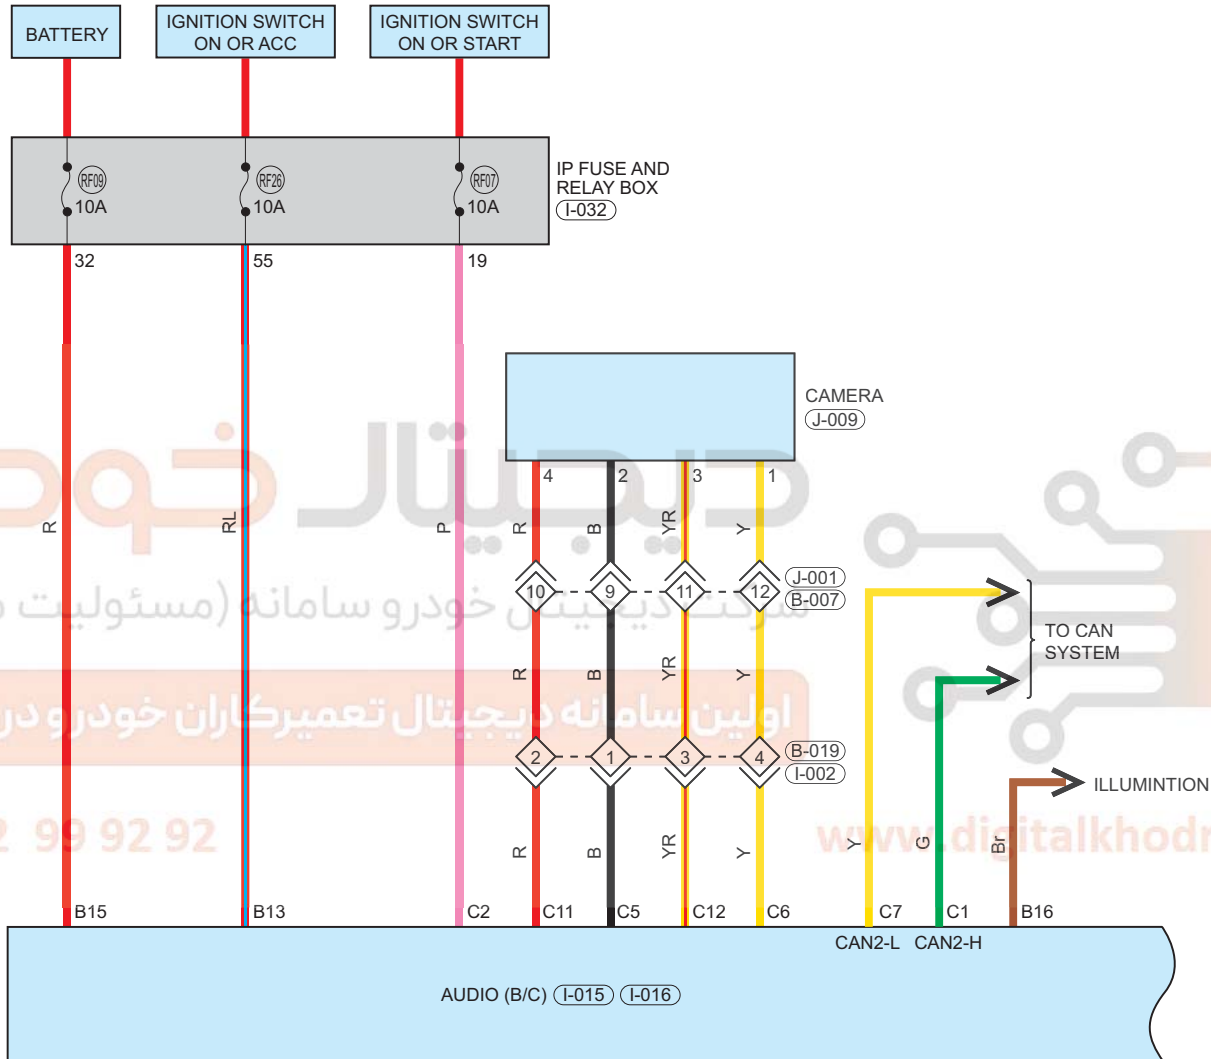

02 09

EA13T090640

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-032	08-10	J-009	08-21	I-015	08-10
I-016	08-10				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF07	06-10	IP Fuse and Relay Box
RF09	06-10	IP Fuse and Relay Box
RF26	06-10	IP Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
J-001, B-007	08-21, 08-12	B-019, I-002	08-12, 08-10		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-032	12-9	J-009	12-15	I-015	12-7
I-016	12-7	J-001, B-007	12-15	B-019, I-002	12-11

Circuit Diagram (Page 2 of 3)

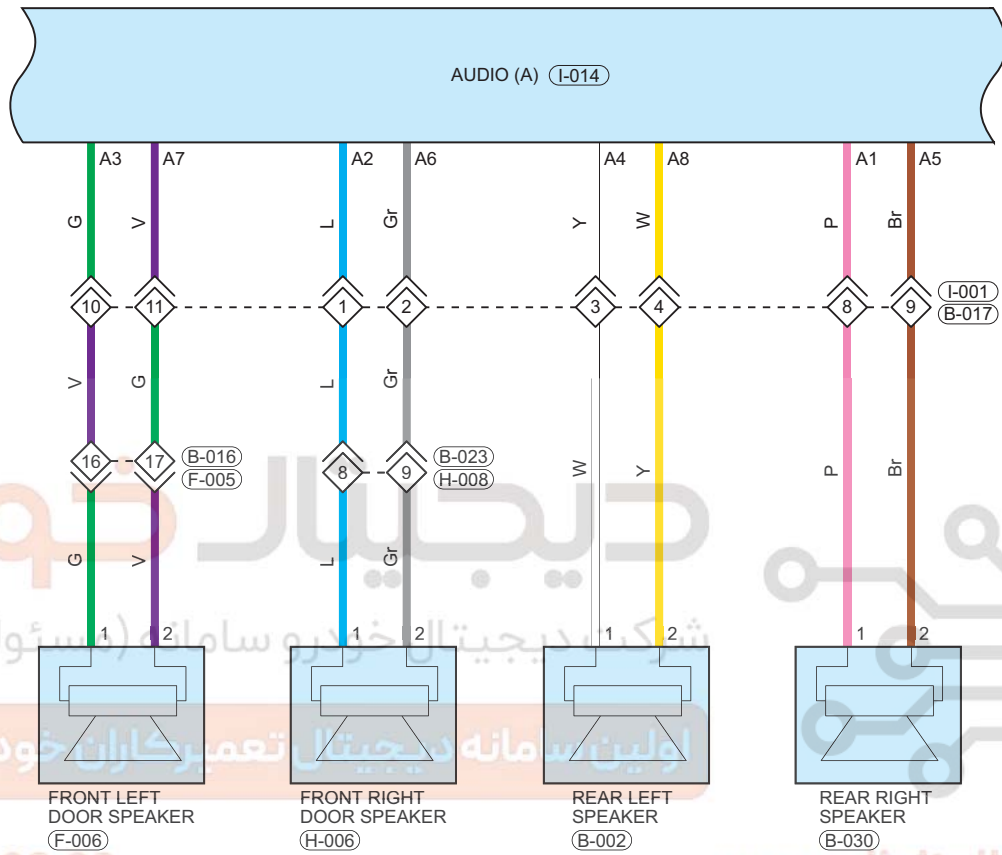

02 09

021 62 99 92 92

www.digitalkhodro.com

EA13T090650

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-014	08-10	F-006	08-14	H-006	08-15
B-002	08-12	B-030	08-12		

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-016, F-005	08-12, 08-14	B-023, H-008	08-12, 08-15	I-001, B-017	08-10, 08-12


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-014	12-7	F-006	12-13	H-006	12-13
B-002	12-10	B-030	12-12	B-016, F-005	12-11
B-023, H-008	12-12	I-001, B-017	12-7		

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

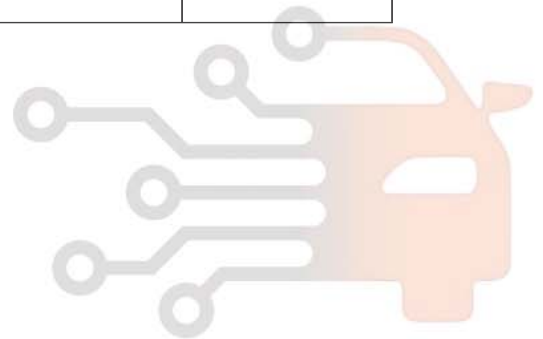

021 62 99 92 92

www.digitalkhodro.com 09

Circuit Diagram (Page 3 of 3)

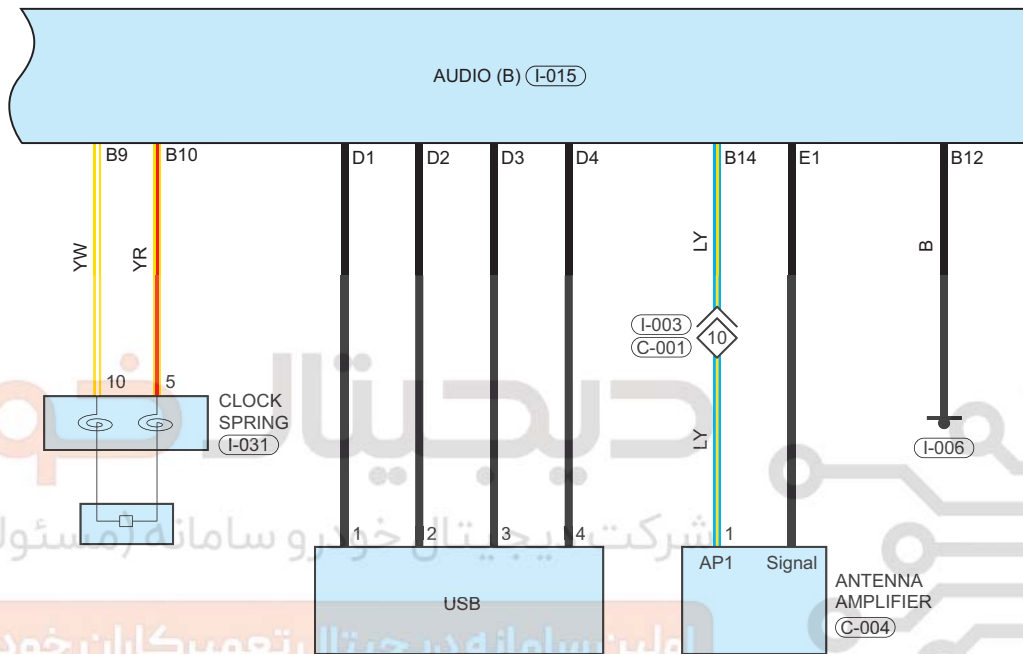

02 09 52 99 92 92

www.digitalkhodro.com

EA13T090660