



47. HAZARD & TURN SIGNAL LAMP

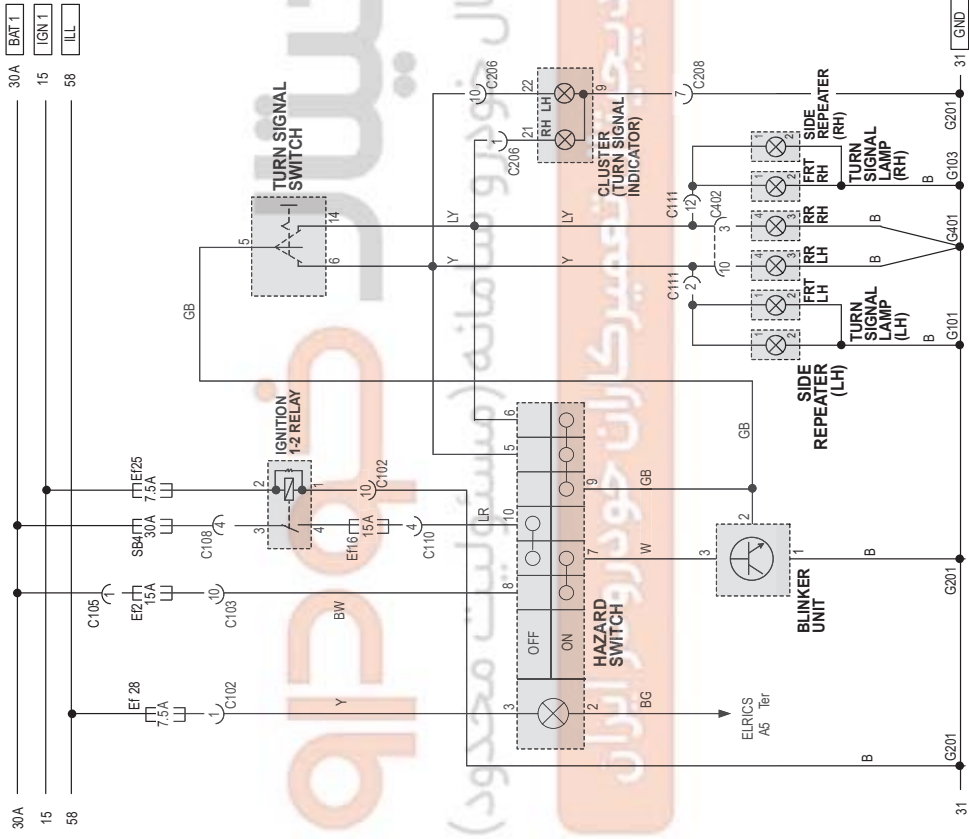

a. CONNECTOR INFORMATION






CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G101	Engine Room	Behind Left Head Lamp
G103	Engine Room	Behind Right Head Lamp
G201	Main	Above Driver Seat Leg Room
G401	Trunk	Left Side Panel of Trunk

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

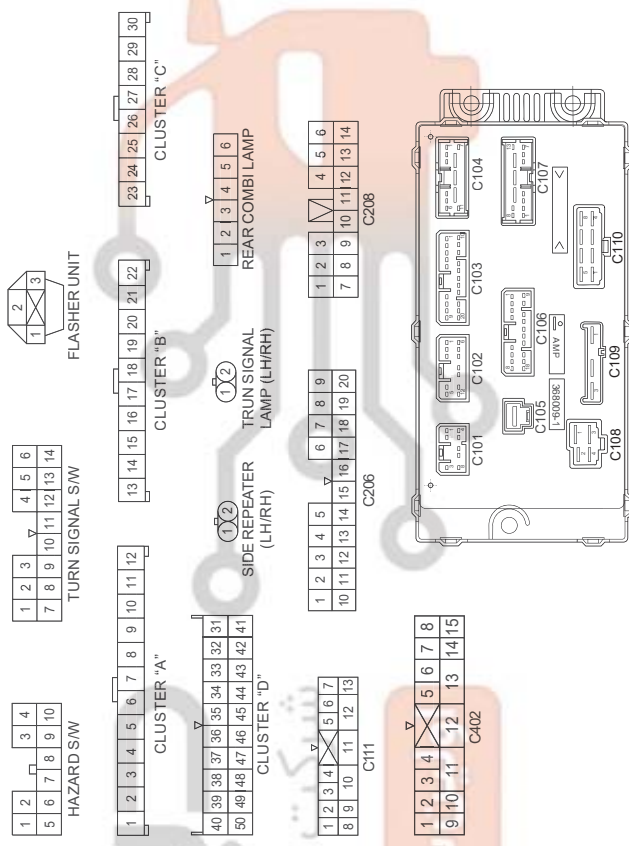


C. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE ROOM

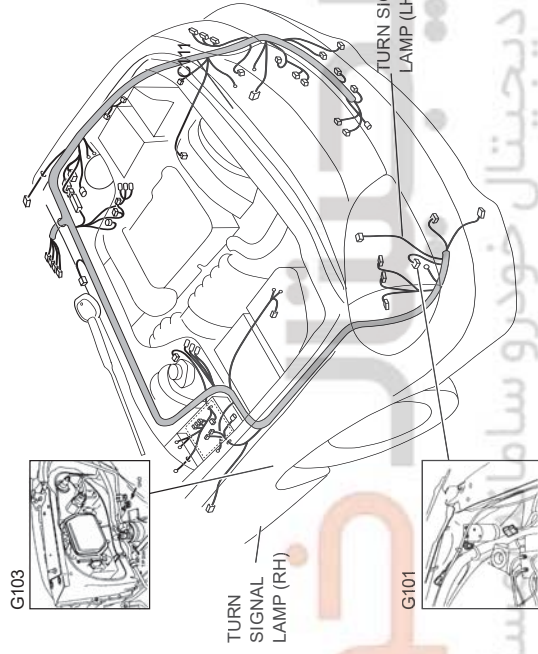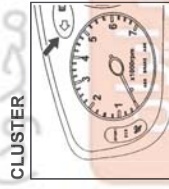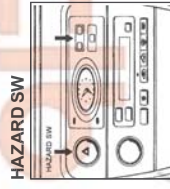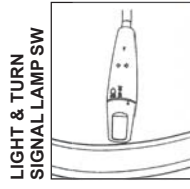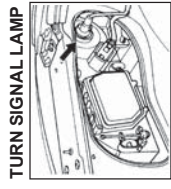

- W/H MAIN : FRONT

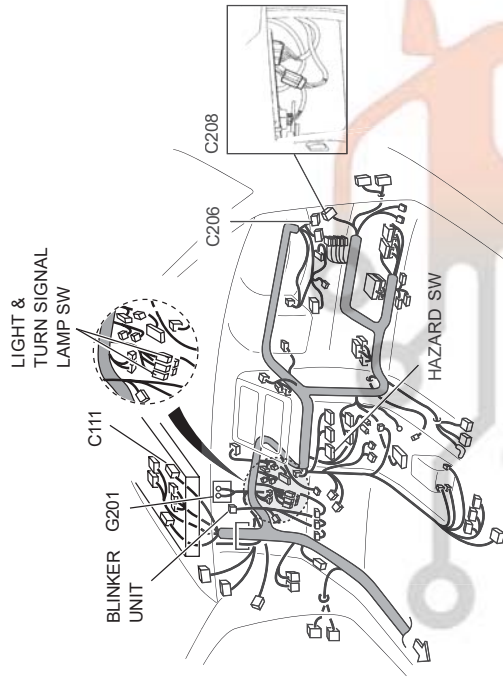

- W/H TRUNK

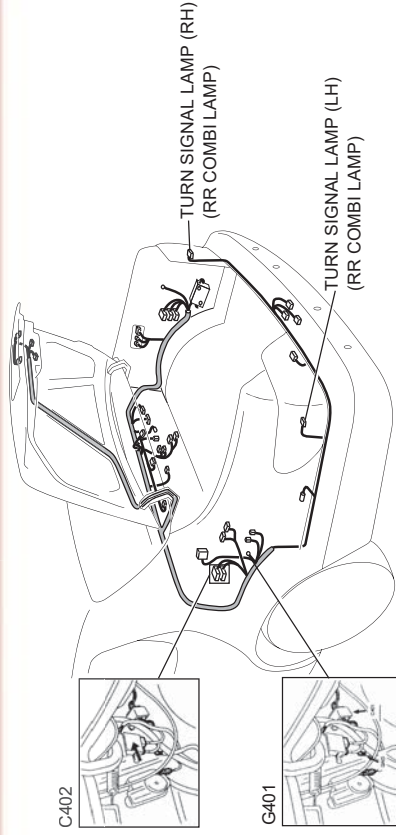

- W/H INSTRUMENT PANEL

