


4A9-AT发动机电控单元 4A9-AT ECU

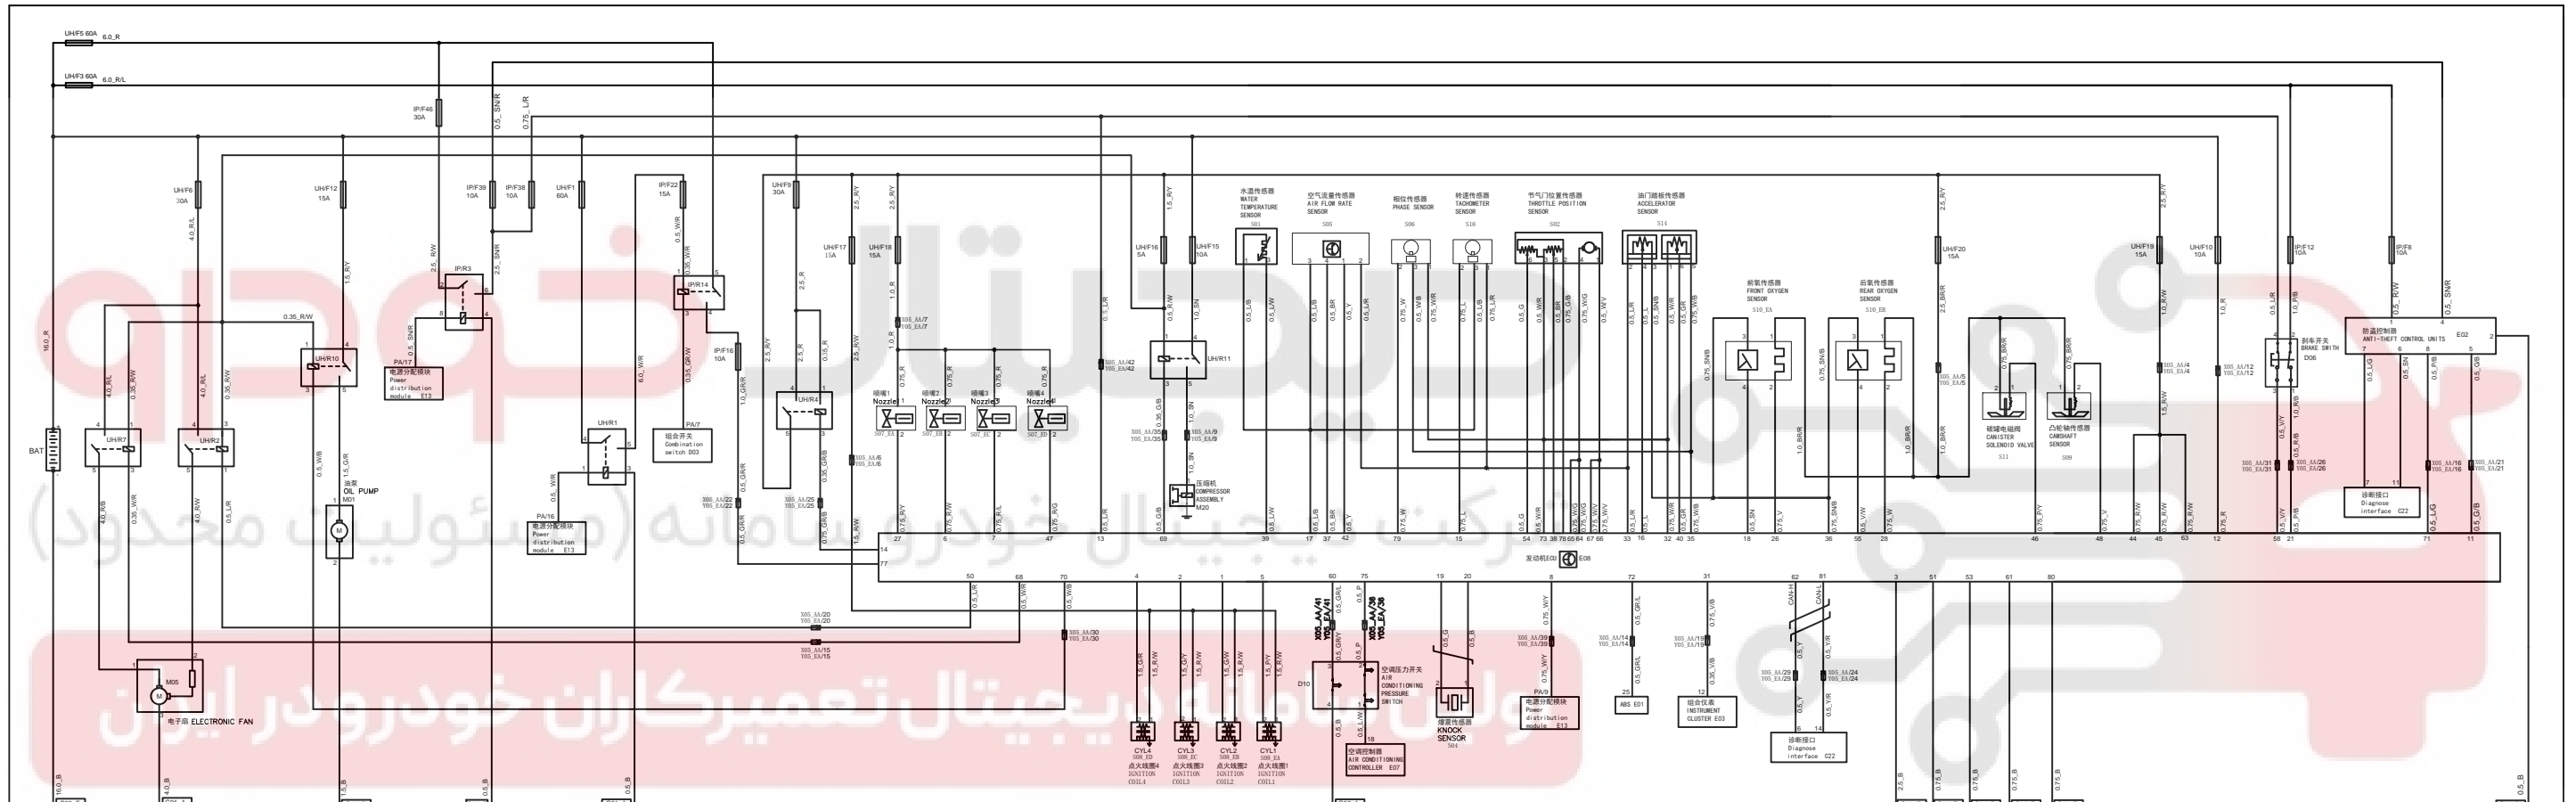

4A9 电喷单元电路图

4A9 EFI CELL CIRCUIT

- | | | | | | | | | | |
|------------|--------------|--------------|------------|---------------------|-----------------------------|-----------------------|------------------------------|--------------------------------------|--|
| E08-发动机ECU | S09-凸轮轴传感器 | S06-相位传感器 | E13-电源分配模块 | G01_A-发动机舱左前搭铁点 | E08-ECU | S09-CAMSHAFT SENSOR | S06-PHASE SENSOR | E13-Power distribution module | G01_A-ENGINE COMPARTMENT FRONT LEFT GROUNDING POINT |
| M20-空调压缩机 | S08_EA-点火线圈1 | S16-转速传感器 | D03-组合开关 | G02_A-发动机舱右前搭铁点 | M20-COMPRESSOR ASSEMBLY | S08_EA-IGNITION COIL1 | S16-TACHOMETER SENSOR | D03-Combination switch | G02_A-ENGINE COMPARTMENT FRONT RIGHT GROUNDING POINT |
| S04-爆震传感器 | S08_EB-点火线圈2 | S05-空气流量传感器 | D06-刹车开关 | G03_E-蓄电池负极到车身搭铁点 | S04-KNOCK SENSOR | S08_EB-IGNITION COIL2 | S05-AIR FLOW RATE SENSOR | D06-BRAKE SWITH | G03_E-BATTERY NEGATIVE TO THE BODY GROUNDING POINT |
| S11-燃油电磁阀 | S08_EC-点火线圈3 | S02-节气门位置传感器 | E02-防盗控制器 | G09_P-主线路左侧立柱下搭铁点2 | S11-CANISTER SOLENOID VALVE | S08_EC-IGNITION COIL3 | S02-THROTTLE POSITION SENSOR | E02-ANTI-THEFT CONTROL UNITS | G09_P-MAIN WRING HARNESS UNDER THE LEFT COLUMN GROUNDING POINT 2 |
| S07_EA-喷嘴1 | S08_ED-点火线圈4 | S14-油门踏板传感器 | D10-空调压力开关 | G12_P-主线路右侧后座座椅下搭铁点 | S07_EA-Nozzle1 | S08_ED-IGNITION COIL4 | S14-ACCELERATOR SENSOR | D10-AIR CONDITIONING PRESSURE SWITCH | G12_P-REAR SEAT RIGHT OF MAIN WIREHARNES GROUNDING POINT |
| S07_EB-喷嘴2 | S10-水温传感器 | C22-诊断接口 | E07-空调控制器 | G31_E-流水槽内电喷搭铁点1 | S07_EB-Nozzle2 | S10-水温传感器 | C22-DIAGNOSE INTERFACE | E07-AIR CONDITIONING CONTROLLER | G31_E-WATER TANK EFI GROUNDING POINT 1 |
| S07_EC-喷嘴3 | S10_EA-前氧传感器 | M05-电子油 | E01-ABS | G32_E-流水槽内电喷搭铁点2 | S07_EC-Nozzle3 | S10_EA-前氧传感器 | M05-ELECTRONIC FAN | E01-ABS | G32_E-WATER TANK EFI GROUNDING POINT 2 |
| S07_ED-喷嘴4 | S10_EB-后氧传感器 | M01-油泵 | E03-组合仪表 | G35_P-中控台搭铁点 | S07_ED-Nozzle4 | S10_EB-后氧传感器 | M01-OIL PUMP | E03-INSTRUMENT CLUSTER | G35_P-CENTER CONSOLE GROUNDING POINT |