


GENERAL INFORMATION

 
Starting System (Page 2 of 2)

STARTING SYSTEM - WITH ACTECO ENGINE SYSTEM


- A1 : WITH ACTECO 1.6 - 1.8L ENGINE
- A2 : WITH ACTECO 2.0L ENGINE
- AT : WITH AUTO TRANSMISSION

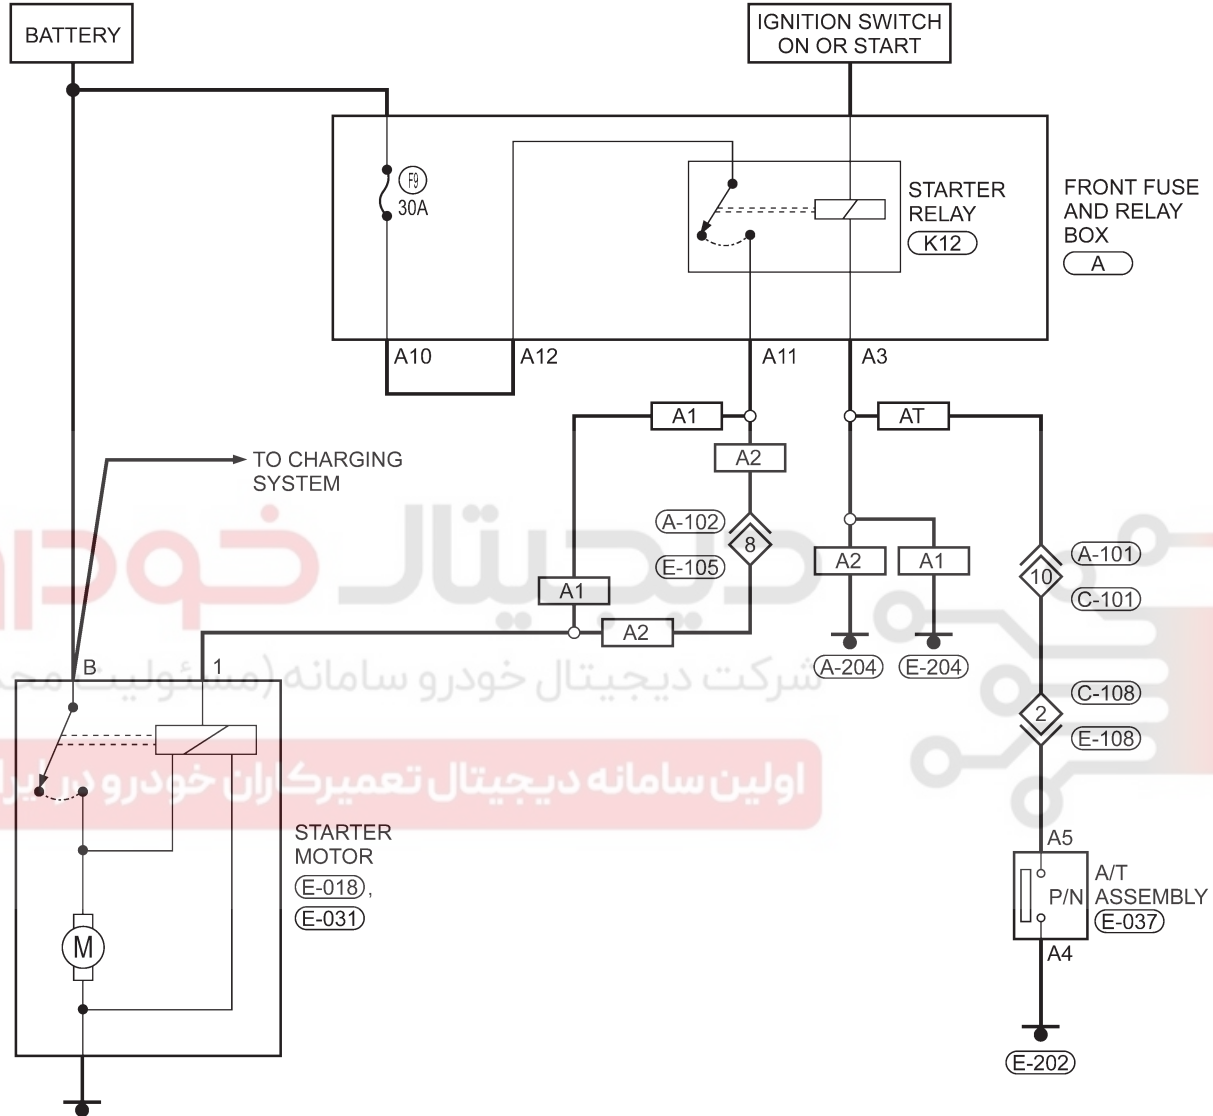


05




FRONT FUSE AND RELAY BOX

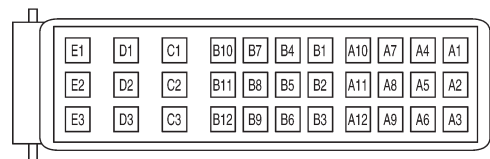


A-037 GR

 

A-102 B

 

A-101 W

 

E-108 W

Itsmw050003t