 


CHAPTER 2. WIRE HARNESS DIAGRAM**CHAPTER 2. WIRE HARNESS DIAGRAM**

Vehicle Wire Harness Layout Diagram	45
(1). Engine Wire Harness Diagram	46
1.1. Engine Wire Harness (F4J20) Connector Position Diagram	46
1.2. Engine Wire Harness (F4J20) Connector Position Diagram	47
1.3. Engine Wire Harness (F4J20) Connector Position Diagram	48
1.4. Injection Nozzle Wire Harness (F4J20) Connector Position Diagram	49
1.5. Battery Positive Wire Harness (F4J20) Connector Position Diagram	50
(2). Power Supply Wire Harness Diagram	51
2.1. Power Supply Wire Harness Connector Position Diagram	51
(3). Interior Wire Harness Diagram	52
3.1. Interior Wire Harness Connector Position Diagram	52
3.2. Interior Wire Harness Connector Position Diagram	53
3.3. Interior Wire Harness Connector Position Diagram	54
3.4. Interior Wire Harness Connector Position Diagram	55
3.5. Interior Wire Harness Connector Position Diagram	56
3.6. Interior Wire Harness Connector Position Diagram	57
3.7. Interior Wire Harness Connector Position Diagram	58
3.8. Interior Wire Harness Connector Position Diagram	59
3.9. Interior Wire Harness Connector Position Diagram	60
3.10. Interior Wire Harness Connector Position Diagram	61
3.11. Interior Wire Harness Connector Position Diagram	62
3.12. Interior Wire Harness Connector Position Diagram	63
3.13. Interior Wire Harness Connector Position Diagram	64
3.14. Interior Wire Harness Connector Position Diagram	65
3.15. Interior Wire Harness Connector Position Diagram	66
3.16. Interior Wire Harness Connector Position Diagram	67
3.17. Interior Wire Harness Connector Position Diagram	68
3.18. Interior Wire Harness Connector Position Diagram	69

3.19. Interior Wire Harness Connector Position Diagram	70
3.20. Interior Wire Harness Connector Position Diagram	71
3.21. Interior Wire Harness Connector Position Diagram	72
3.22. Interior Wire Harness Connector Position Diagram	73
(4). IP Wire Harness Diagram	74
4.1. IP Wire Harness Connector Position Diagram	74
4.2. IP Wire Harness Connector Position Diagram	75
4.3. IP Wire Harness Connector Position Diagram	76
4.4. IP Wire Harness Connector Position Diagram	77
4.5. IP Wire Harness Connector Position Diagram	78
4.6. IP Wire Harness Connector Position Diagram	79
4.7. IP Wire Harness Connector Position Diagram	80
4.8. IP Wire Harness Connector Position Diagram	81
(5). Door Wire Harness Diagram	82
5.1. Door Wire Harness Connector FL Position Diagram	82
5.2. Door Wire Harness Connector FR Position Diagram	83
5.3. Door Wire Harness Connector RL Position Diagram	84
5.4. Door Wire Harness Connector RR Position Diagram	85
5.5. Back Door Wire Harness Connector Position Diagram	86
(6). Front Bumper Wire Harness Diagram	87
6.1. Front Bumper Wire Harness Connector Position Diagram	87
6.2. Front Bumper Wire Harness Connector Position Diagram	88
6.3. Front Bumper Wire Harness Connector Position Diagram	89
6.4. Front Bumper Wire Harness Connector Position Diagram	90
(7). Front Radar Wire Harness Diagram	91
(8). Rear Bumper Wire Harness Diagram	92
(9). A/C Wire Harness Diagram	93

Vehicle Wire Harness Layout Diagram

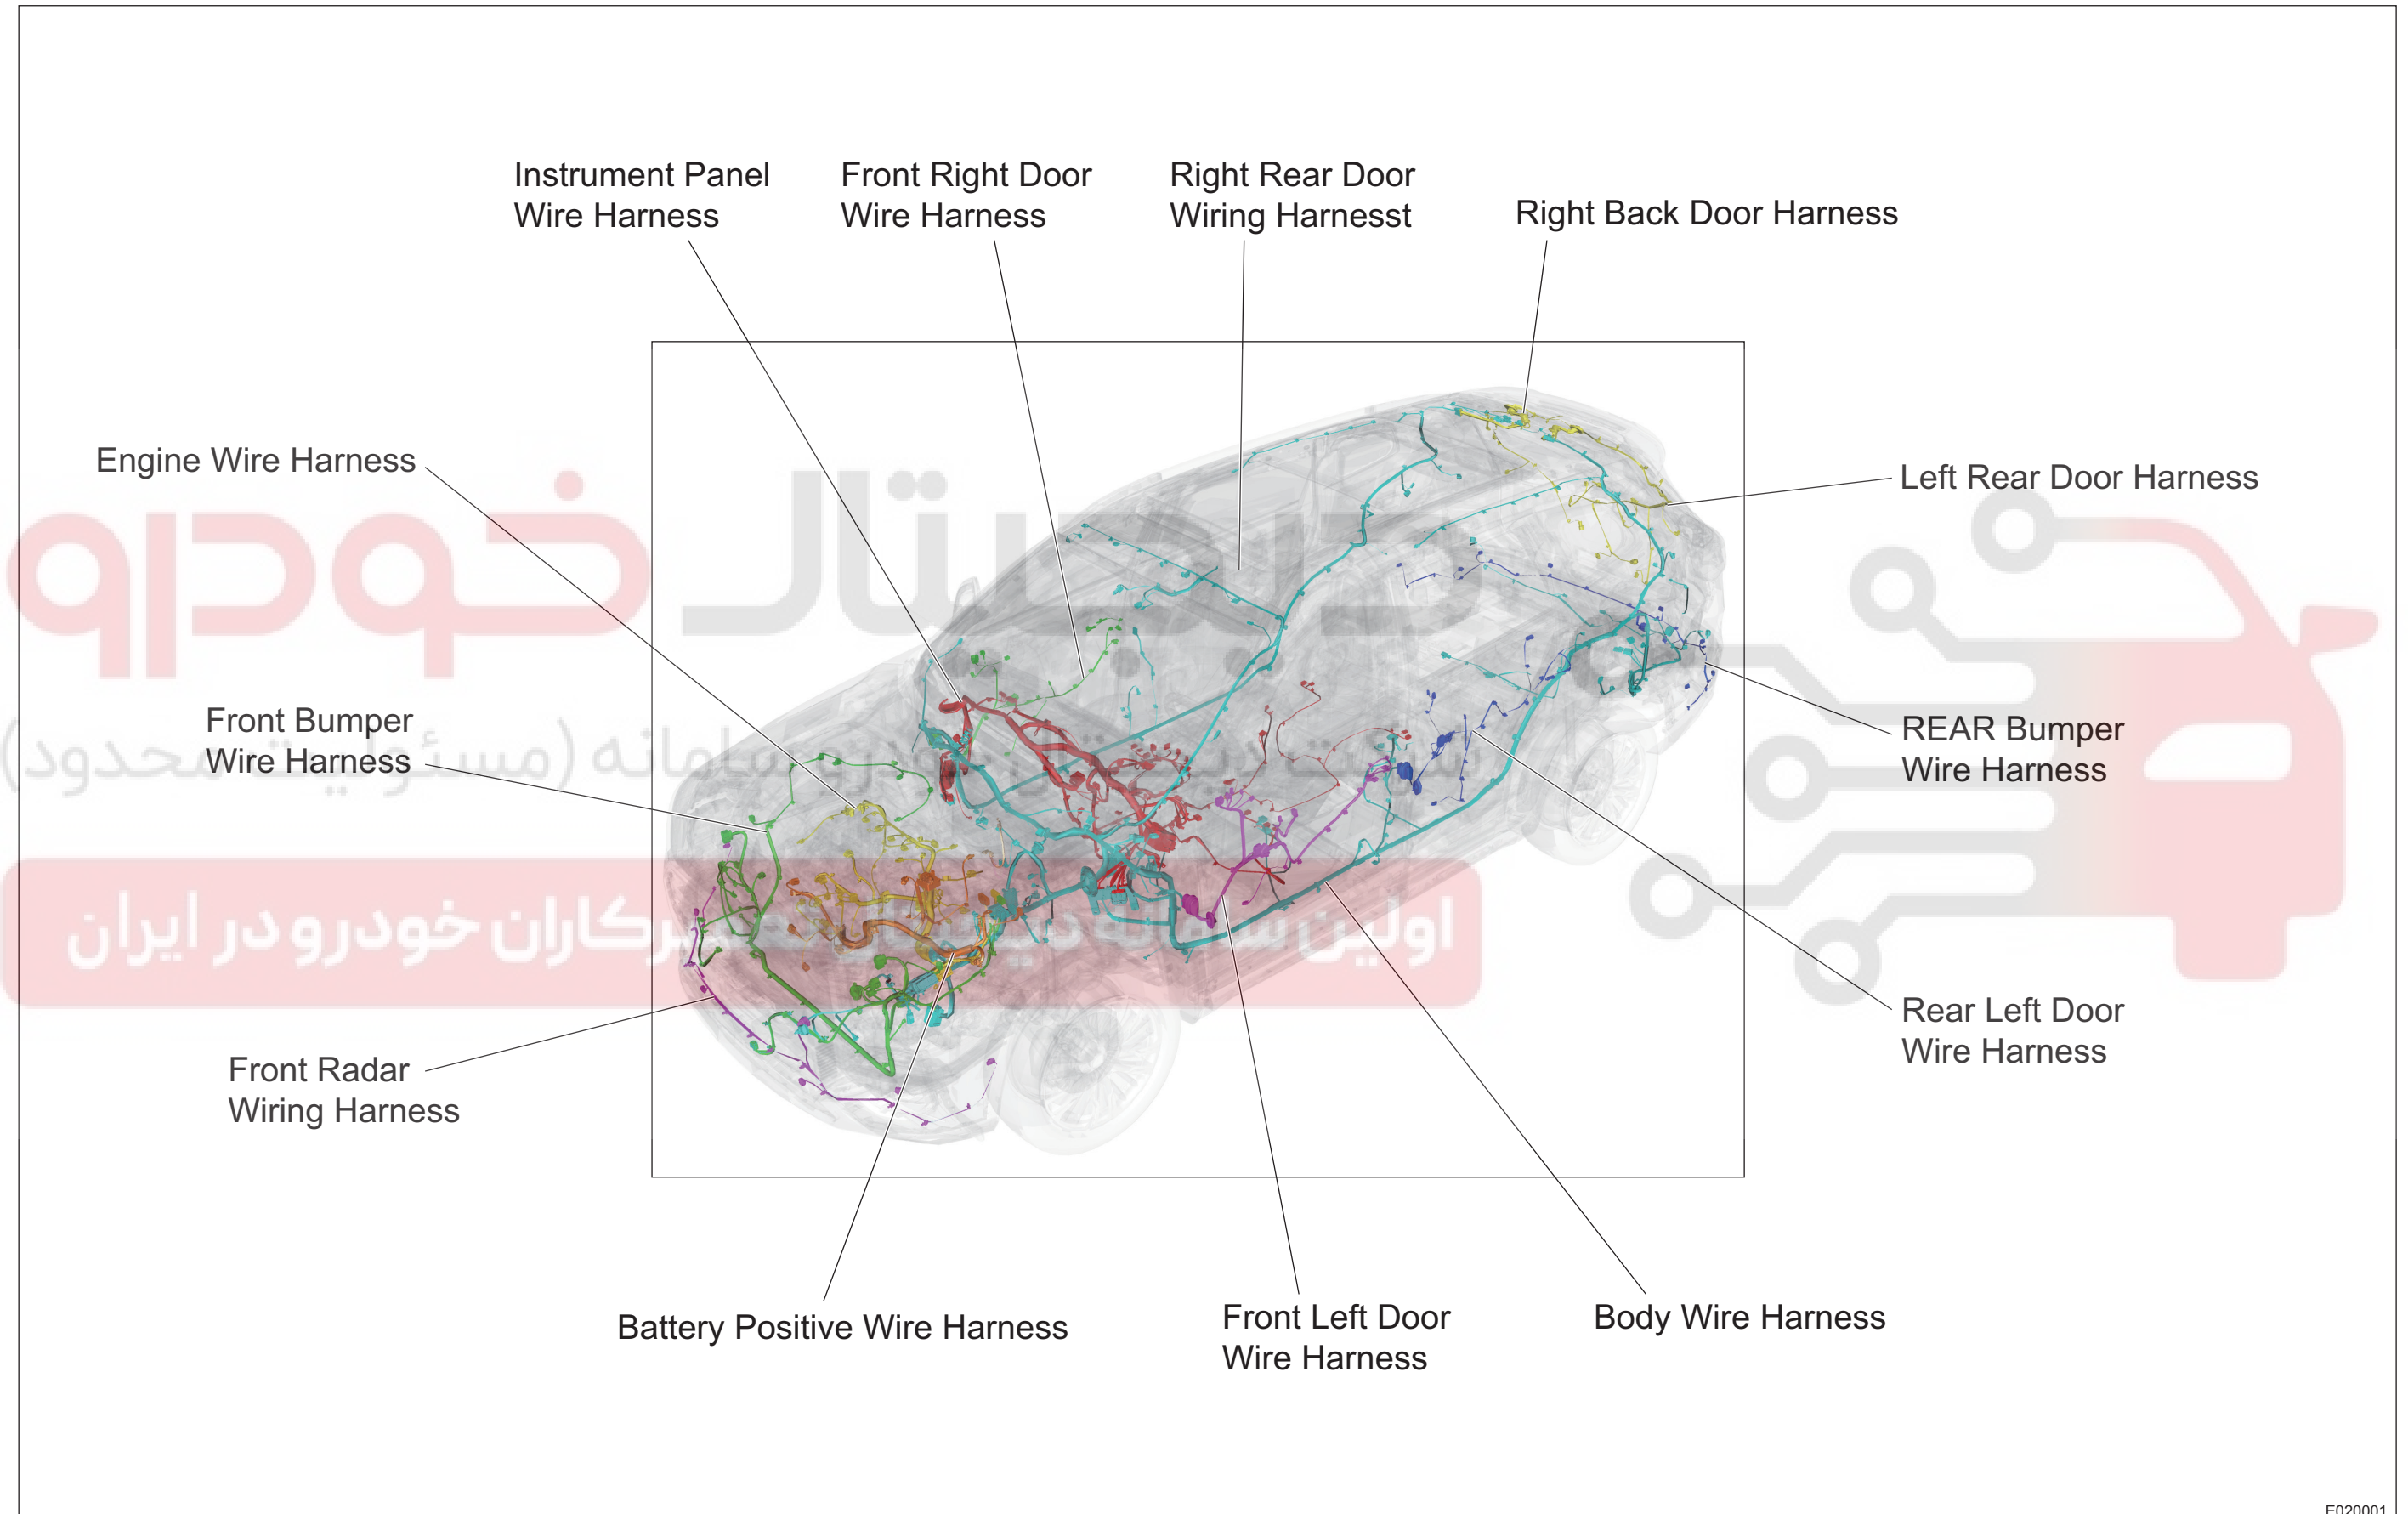


E020001

CHAPTER 2. WIRE HARNESS DIAGRAM


(1). Engine Wire Harness Diagram

 1.1. Engine Wire Harness (F4J20) Connector Position Diagram

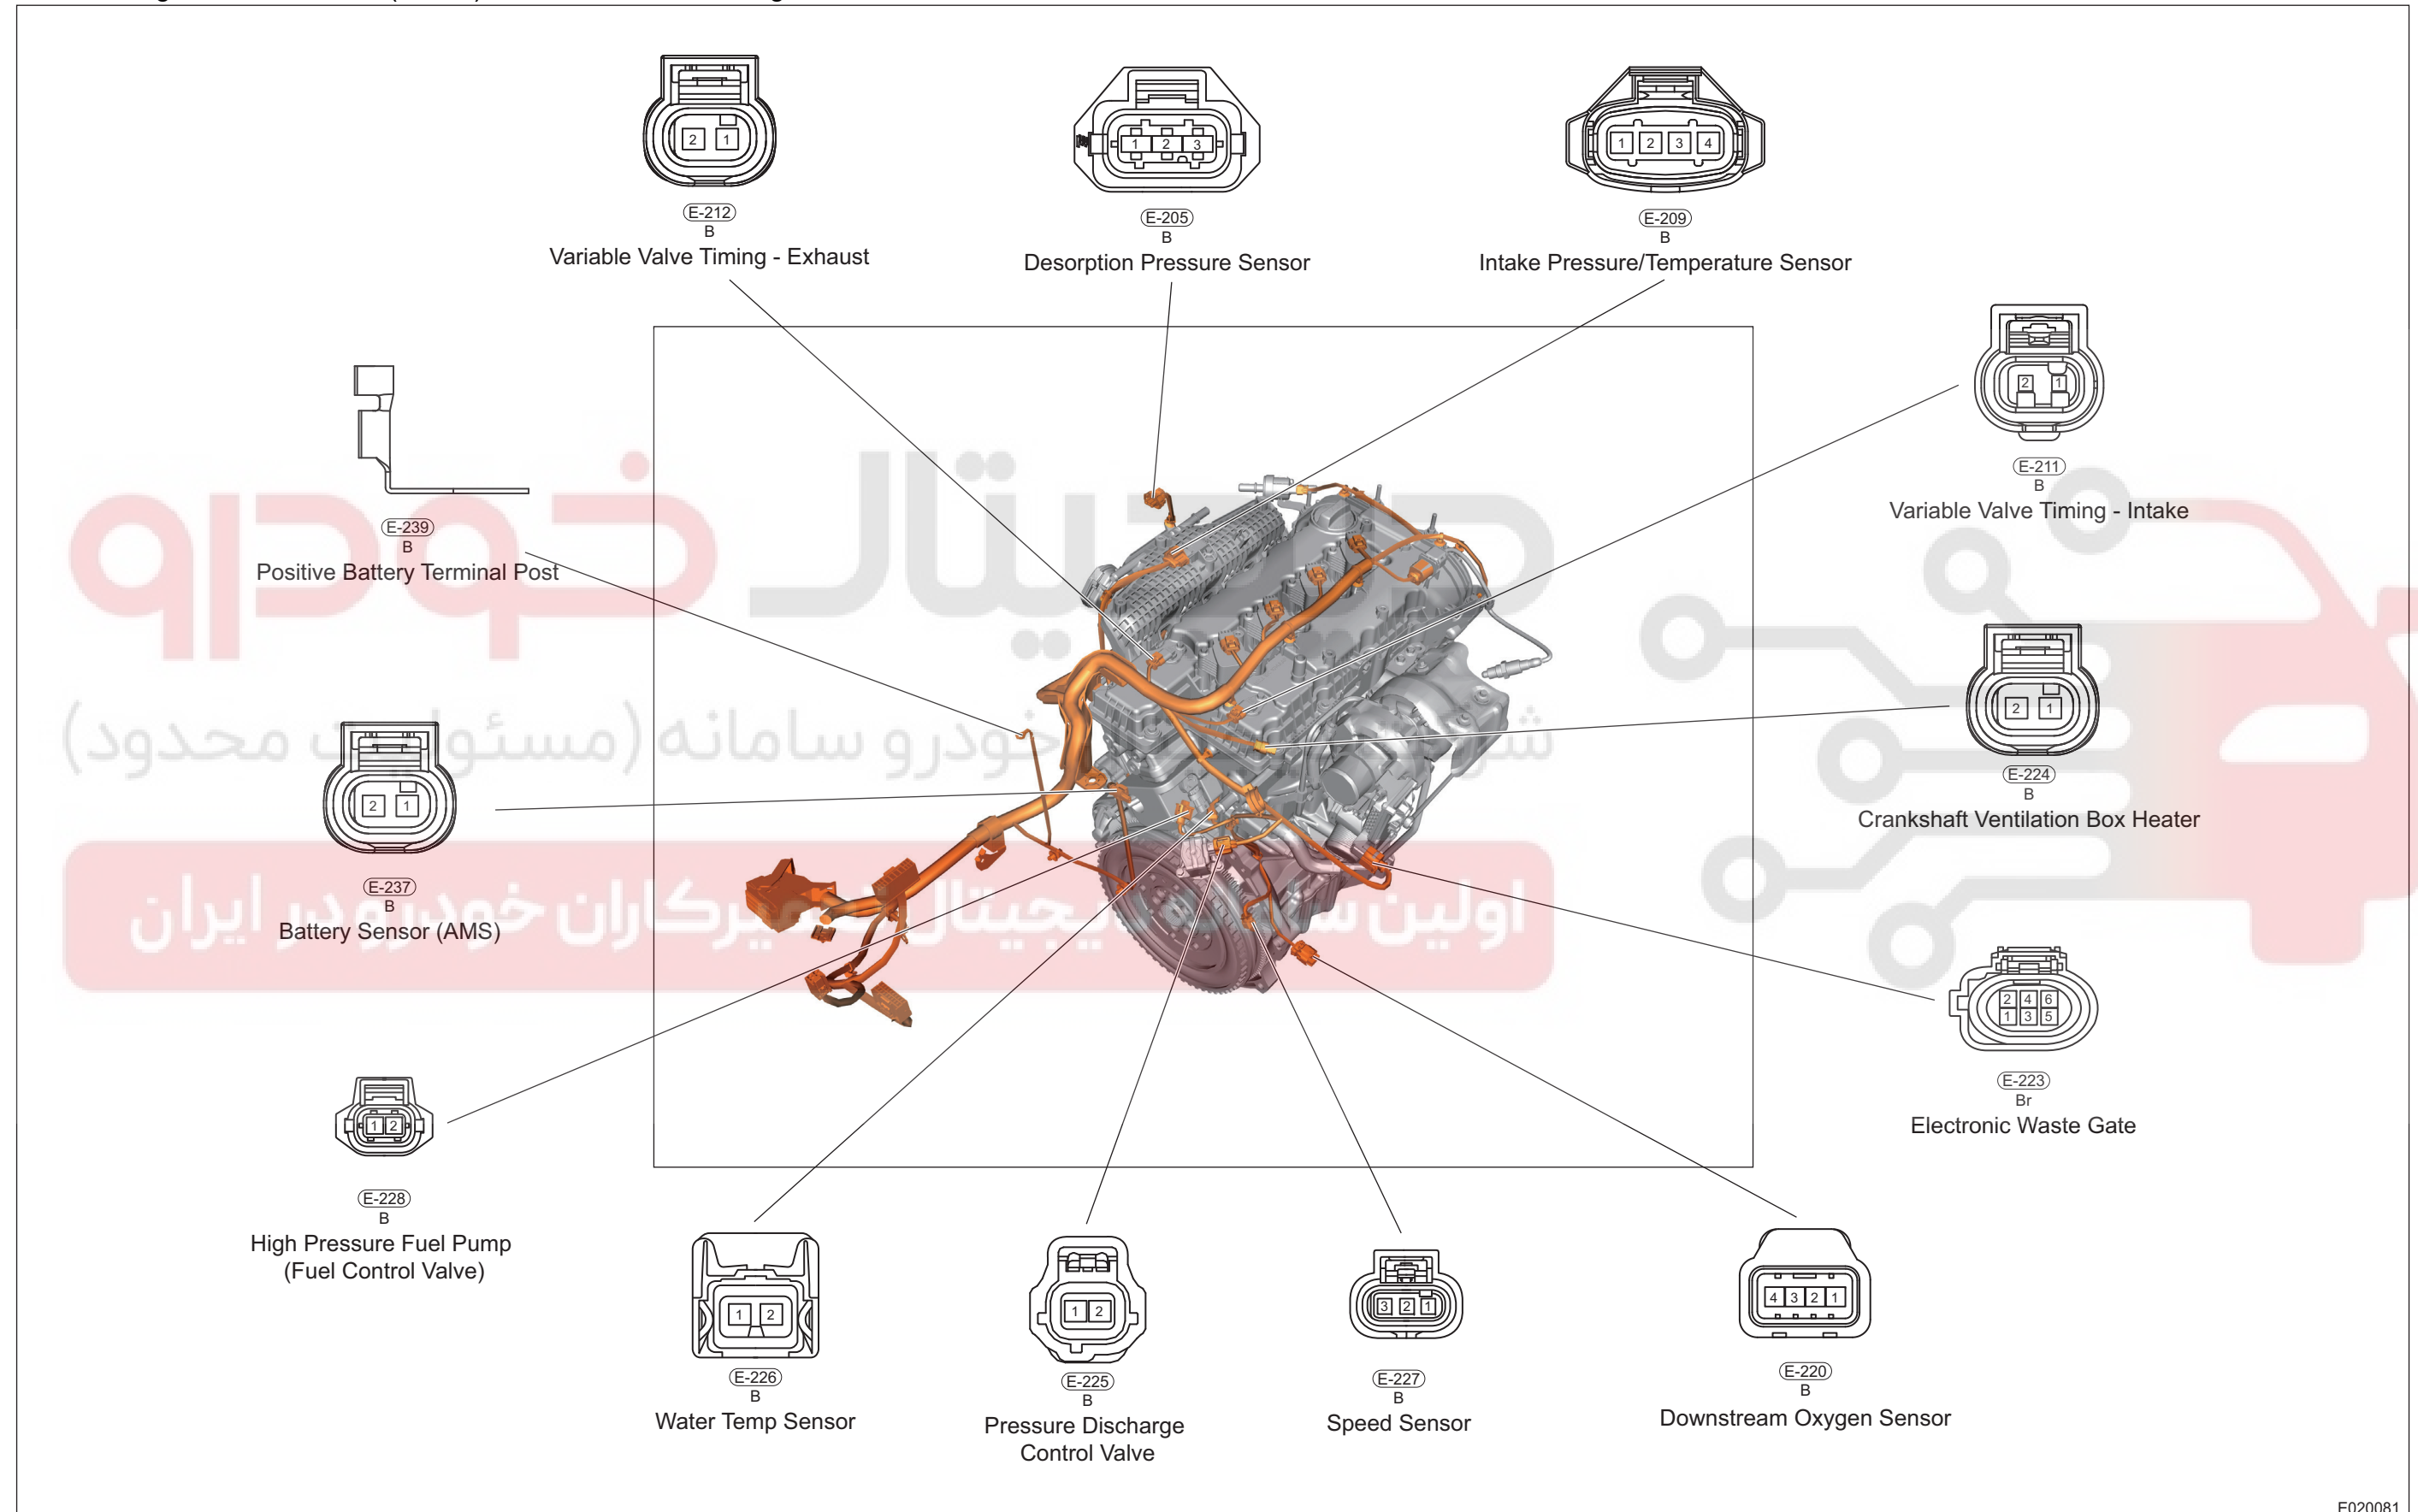

E020081

 
1.2. Engine Wire Harness (F4J20) Connector Position Diagram

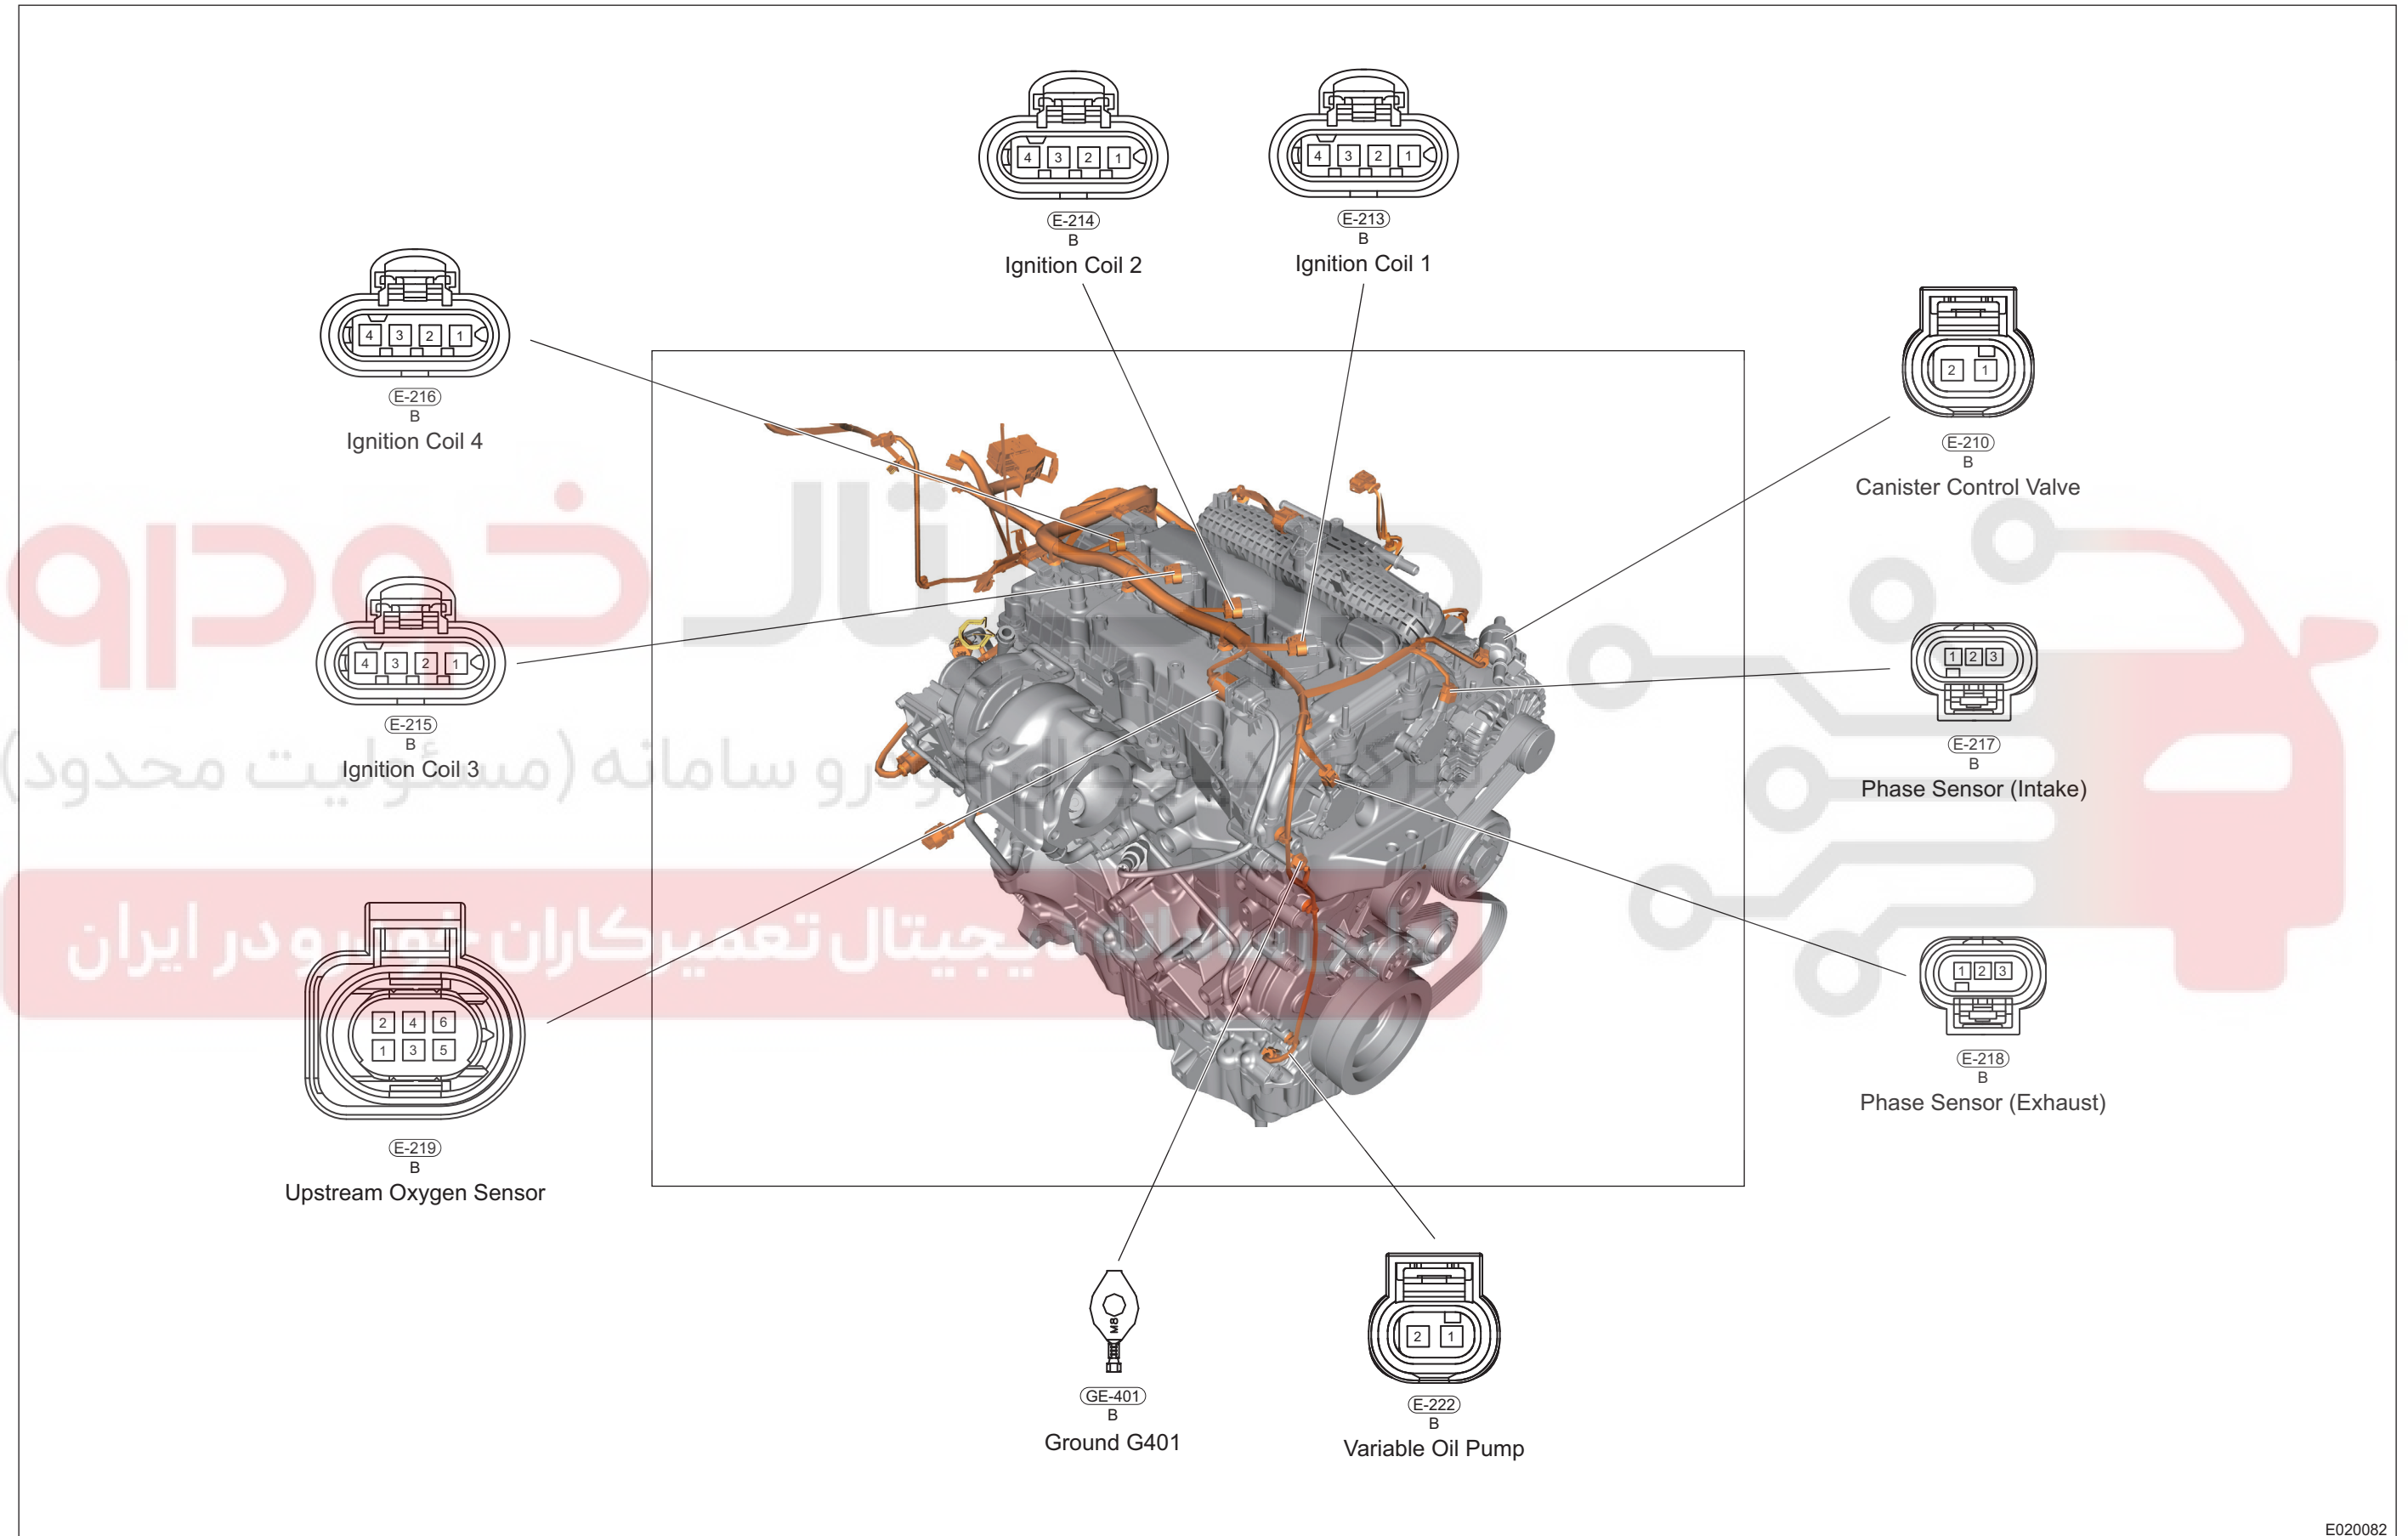

E020082


CHAPTER 2. WIRE HARNESS DIAGRAM

 1.3. Engine Wire Harness (F4J20) Connector Position Diagram

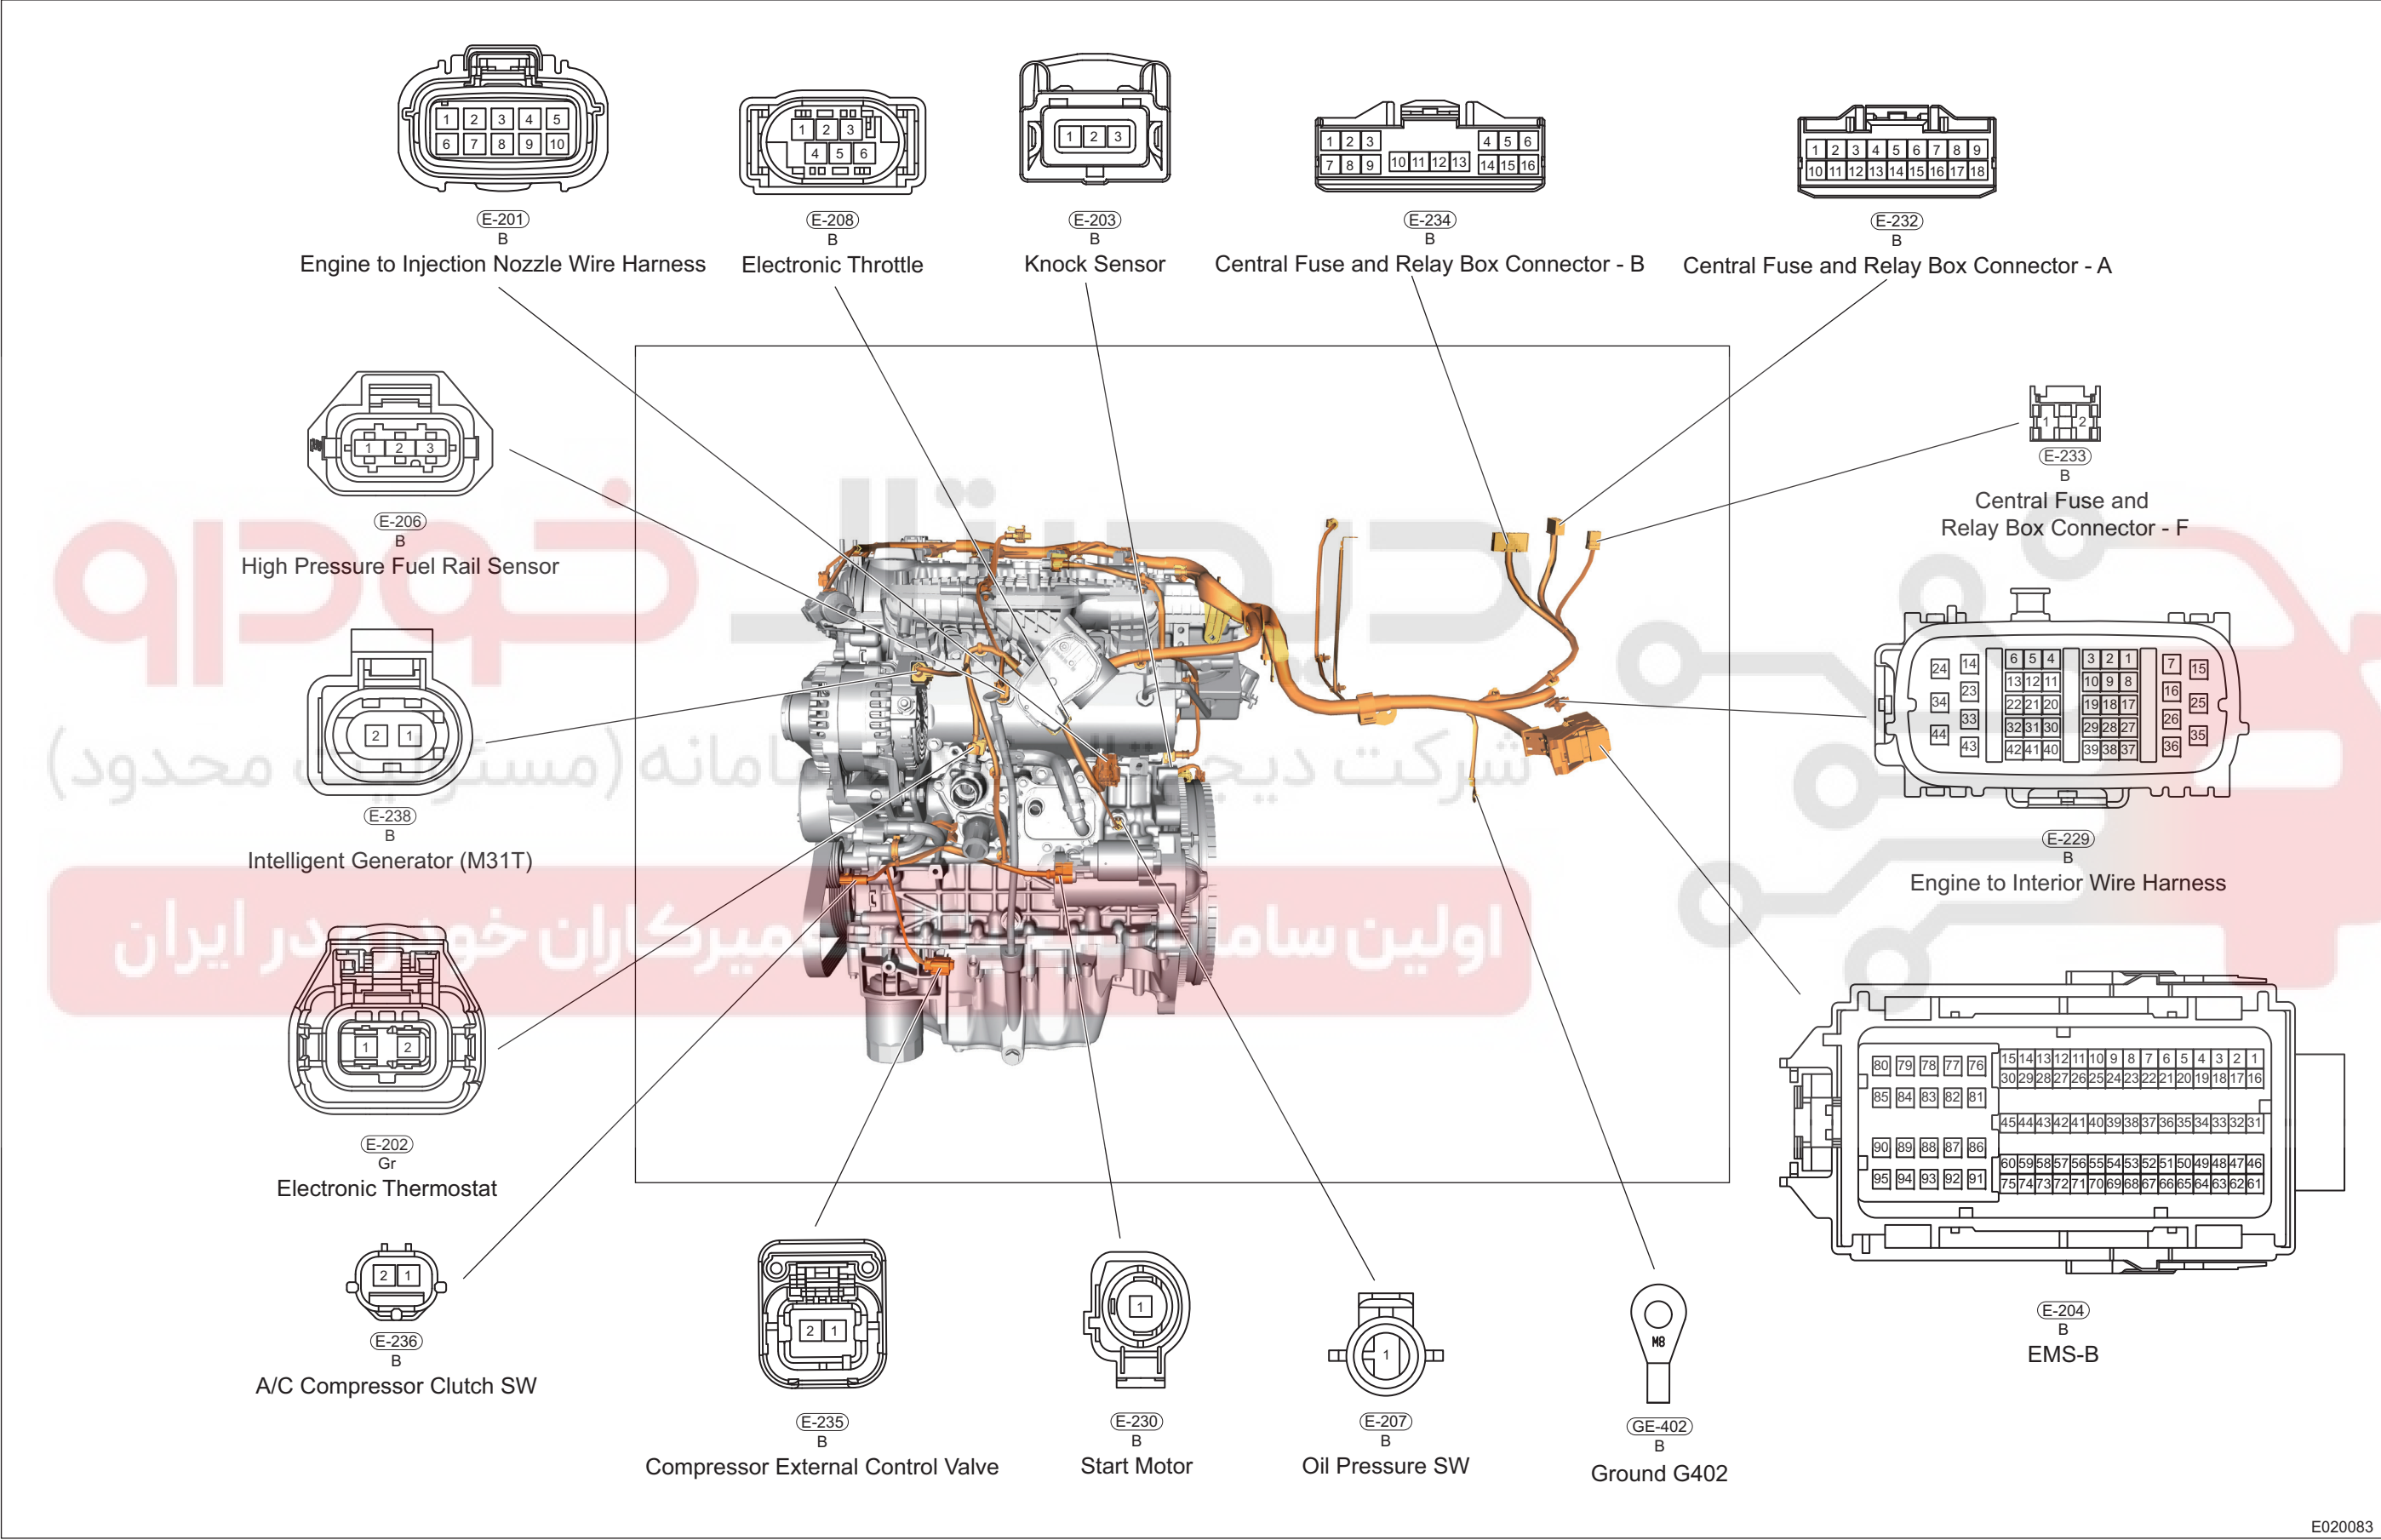

E020083

 
1.4. Injection Nozzle Wire Harness (F4J20) Connector Position Diagram

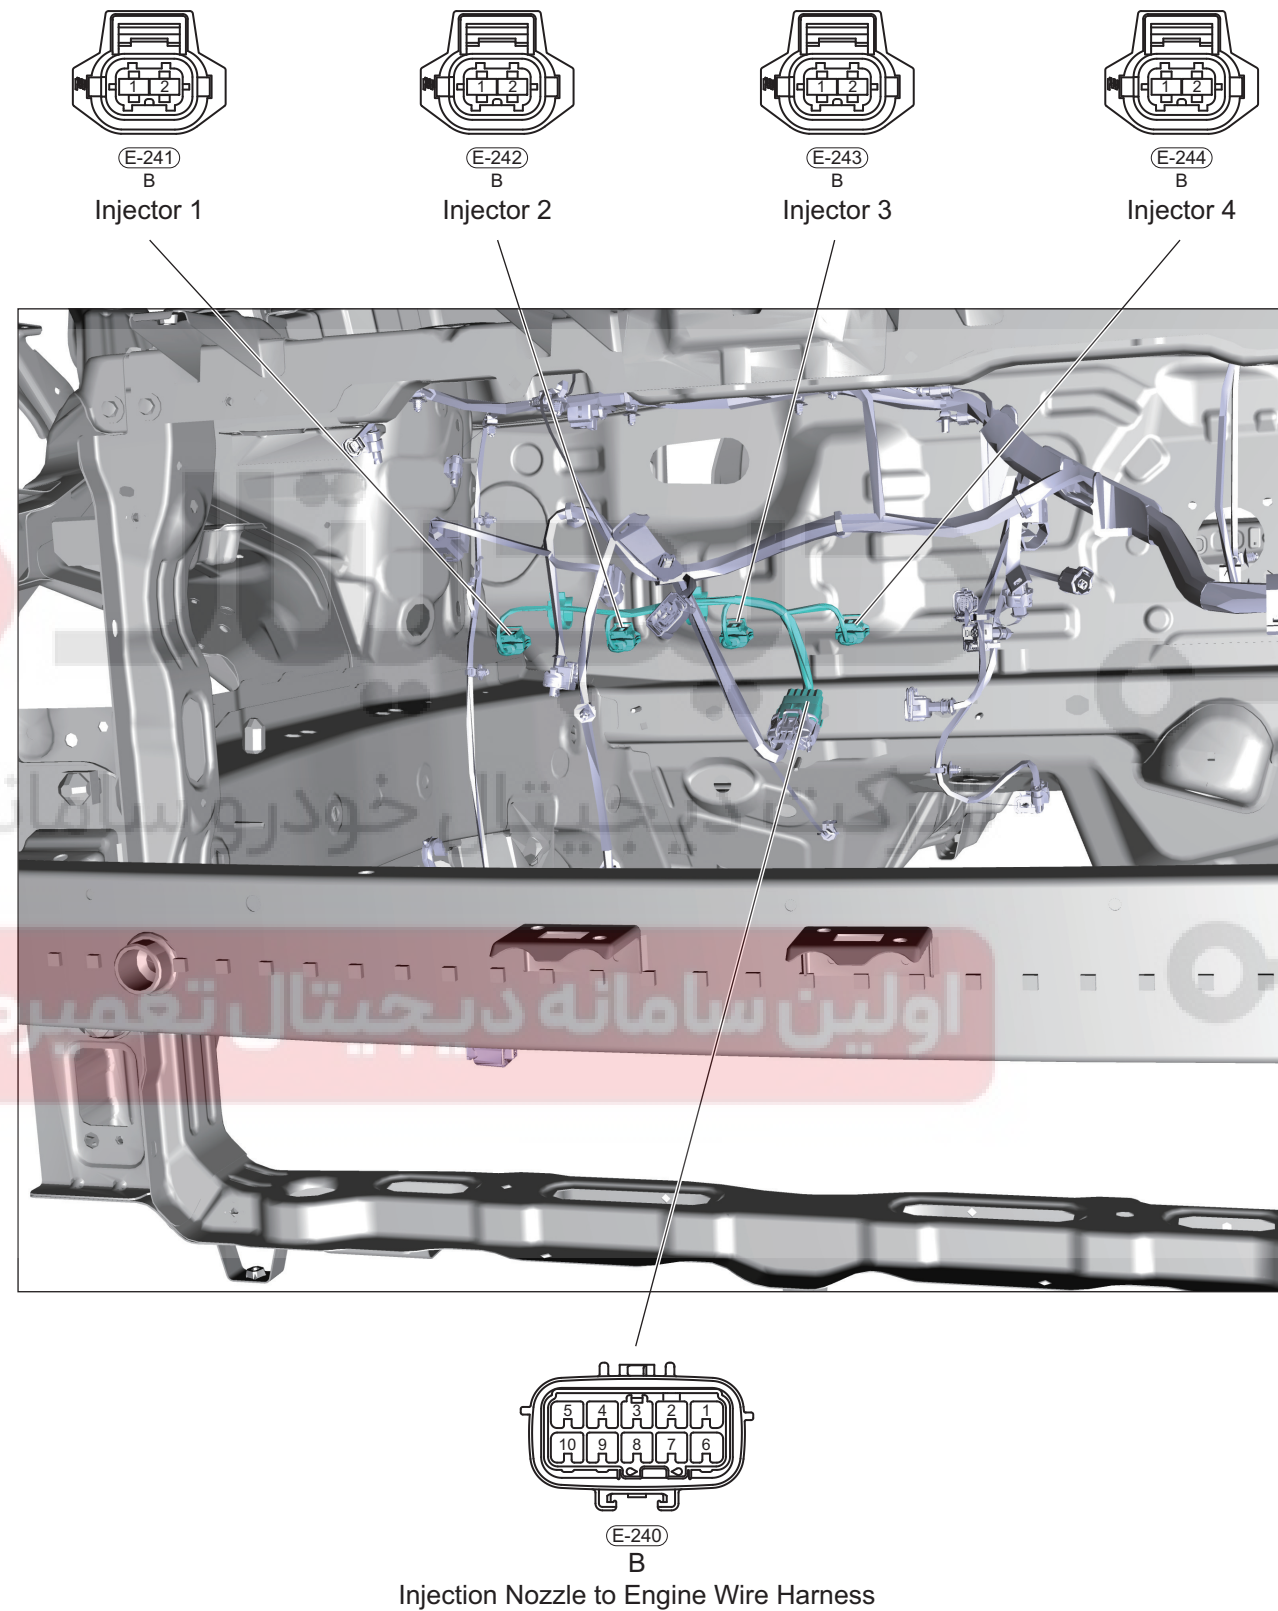

E020084

CHAPTER 2. WIRE HARNESS DIAGRAM

 
1.5. Battery Positive Wire Harness (F4J20) Connector Position Diagram

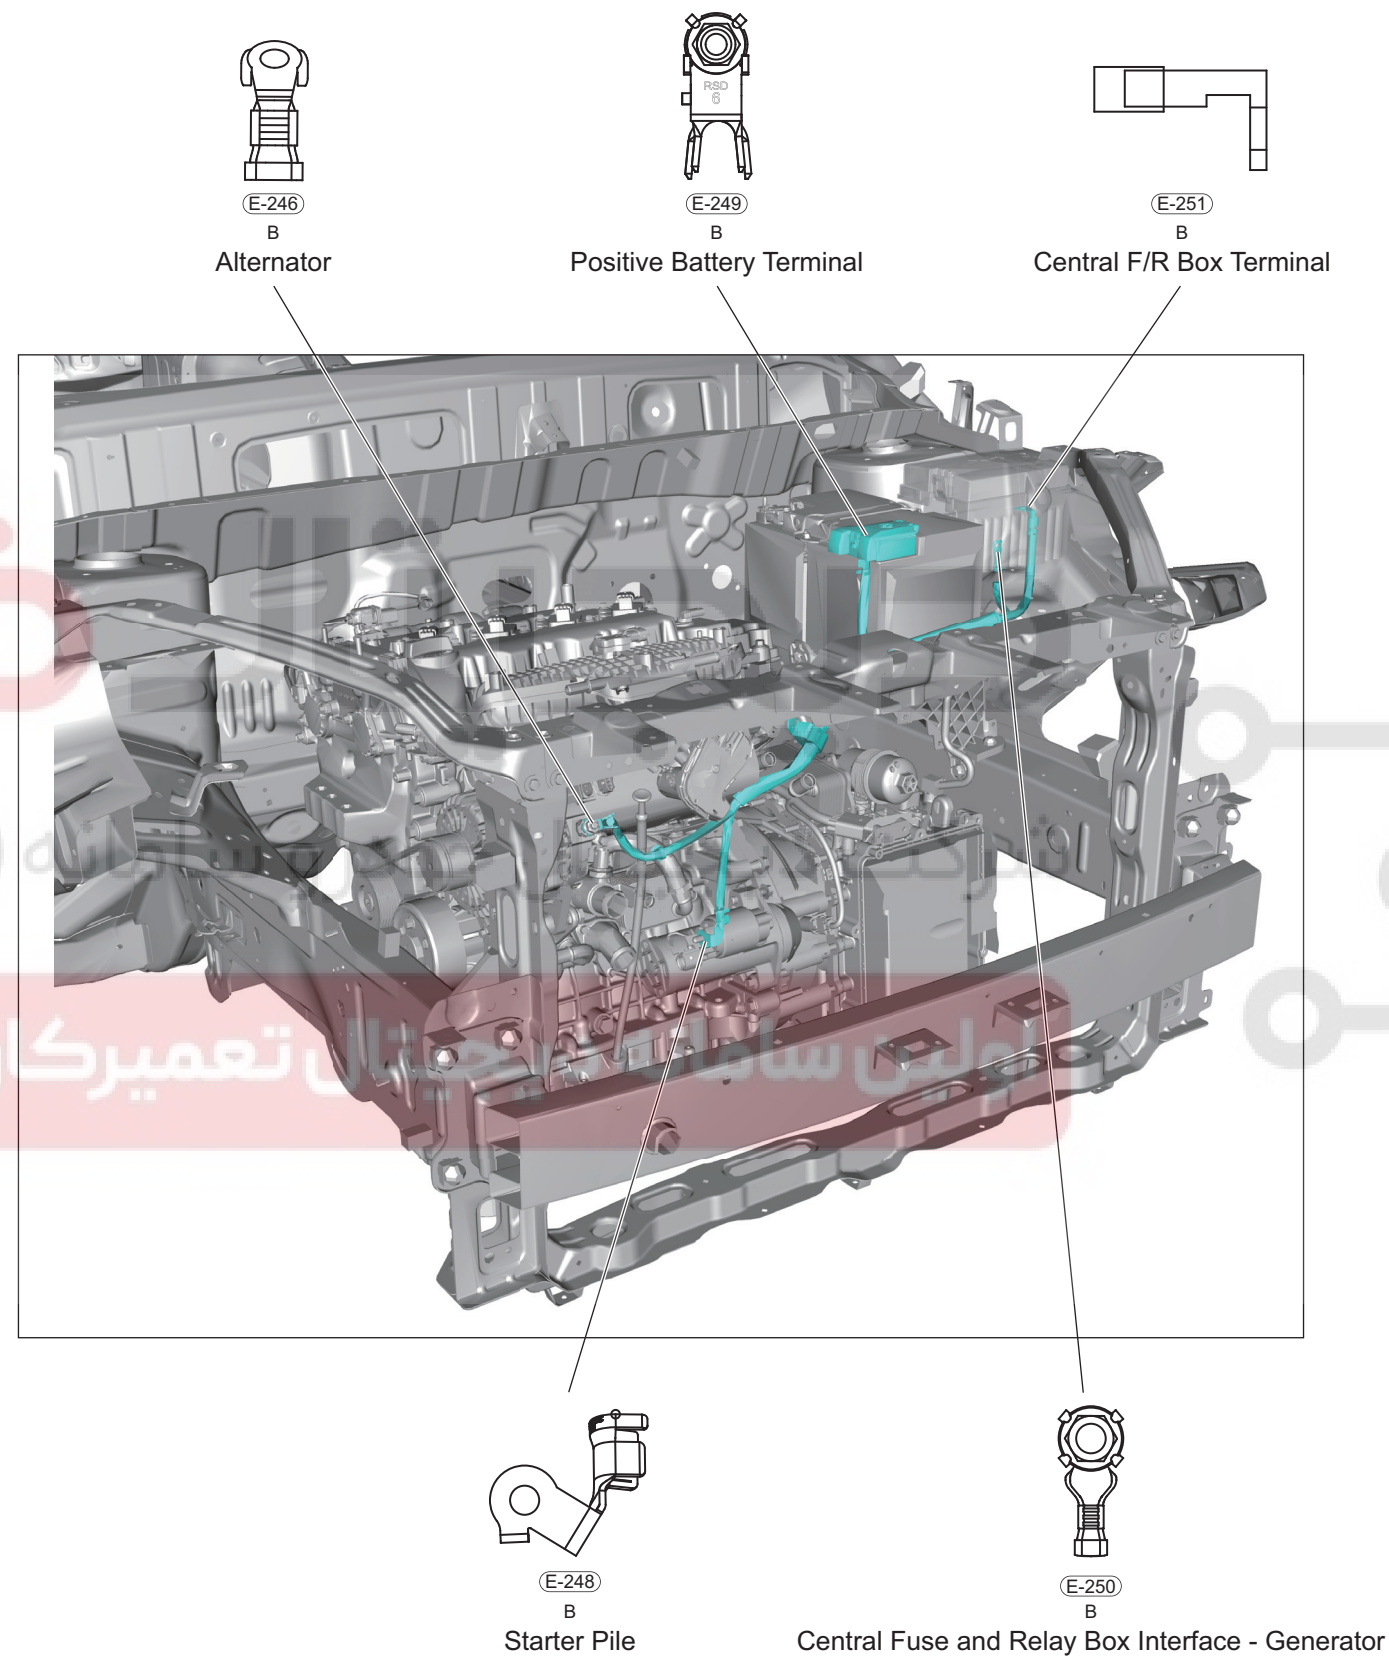

E020085


(2). Power Supply Wire Harness Diagram

 2.1. Power Supply Wire Harness Connector Position Diagram

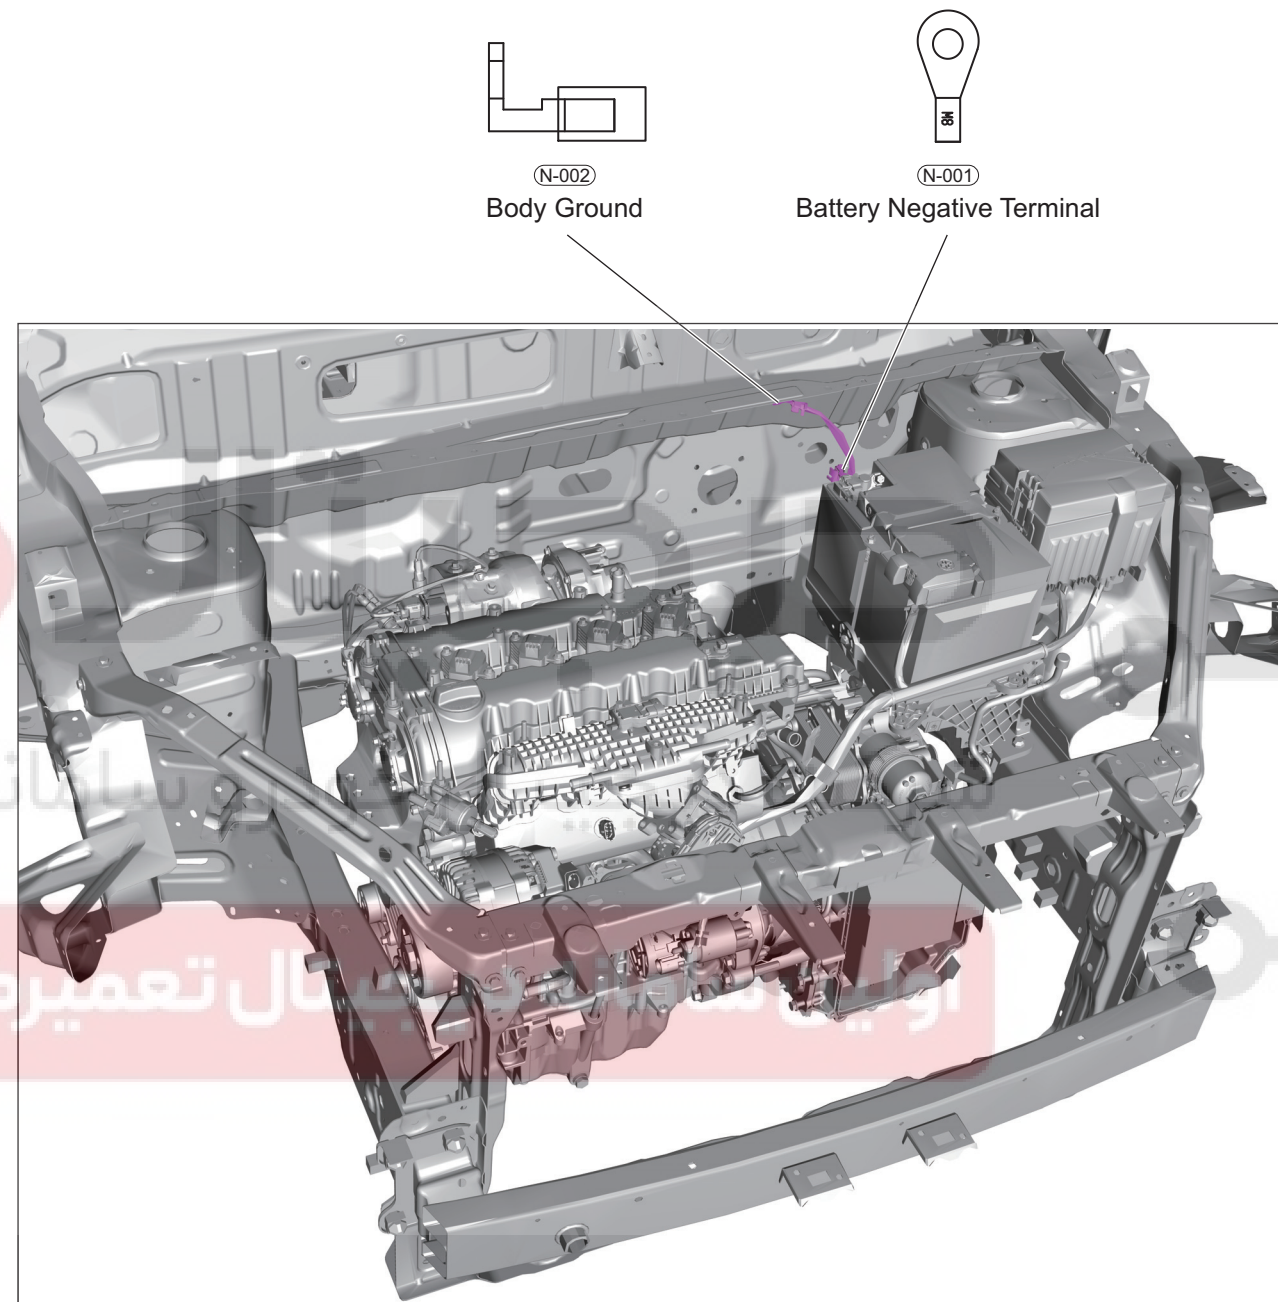


CHAPTER 2. WIRE HARNESS DIAGRAM

 (3). Interior Wire Harness Diagram
3.1. Interior Wire Harness Connector Position Diagram

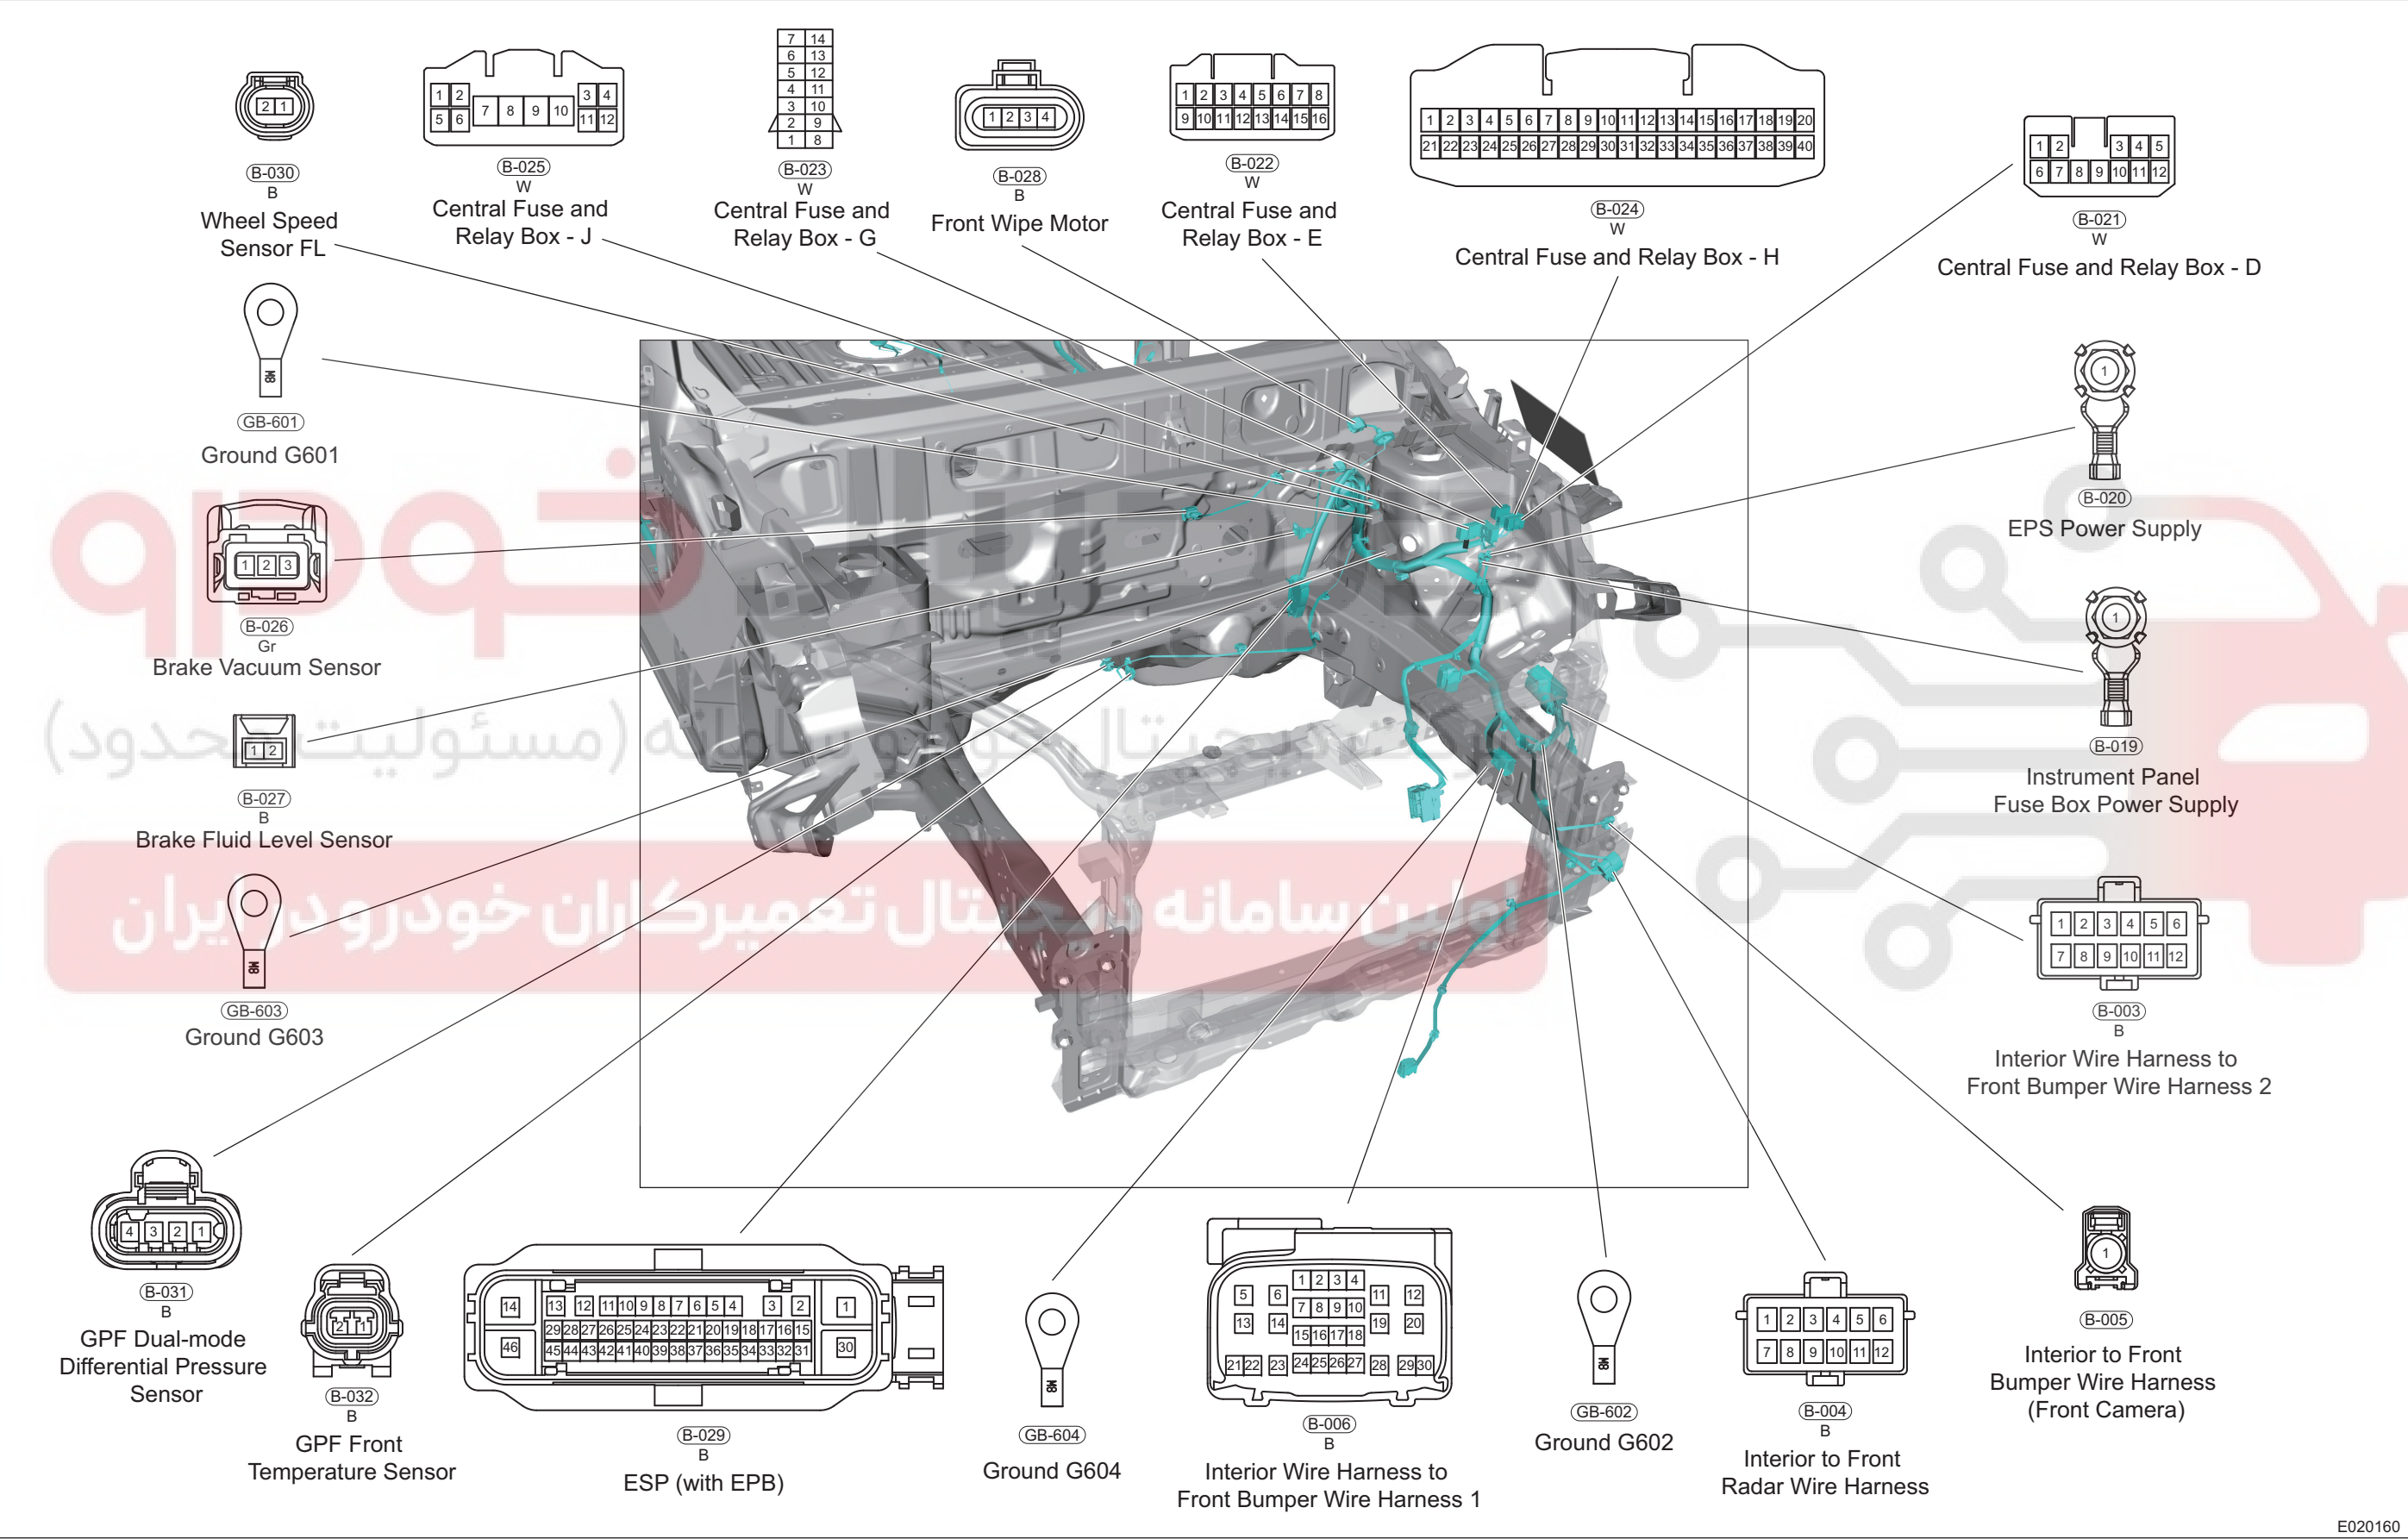

E020160

 
3.2. Interior Wire Harness Connector Position Diagram

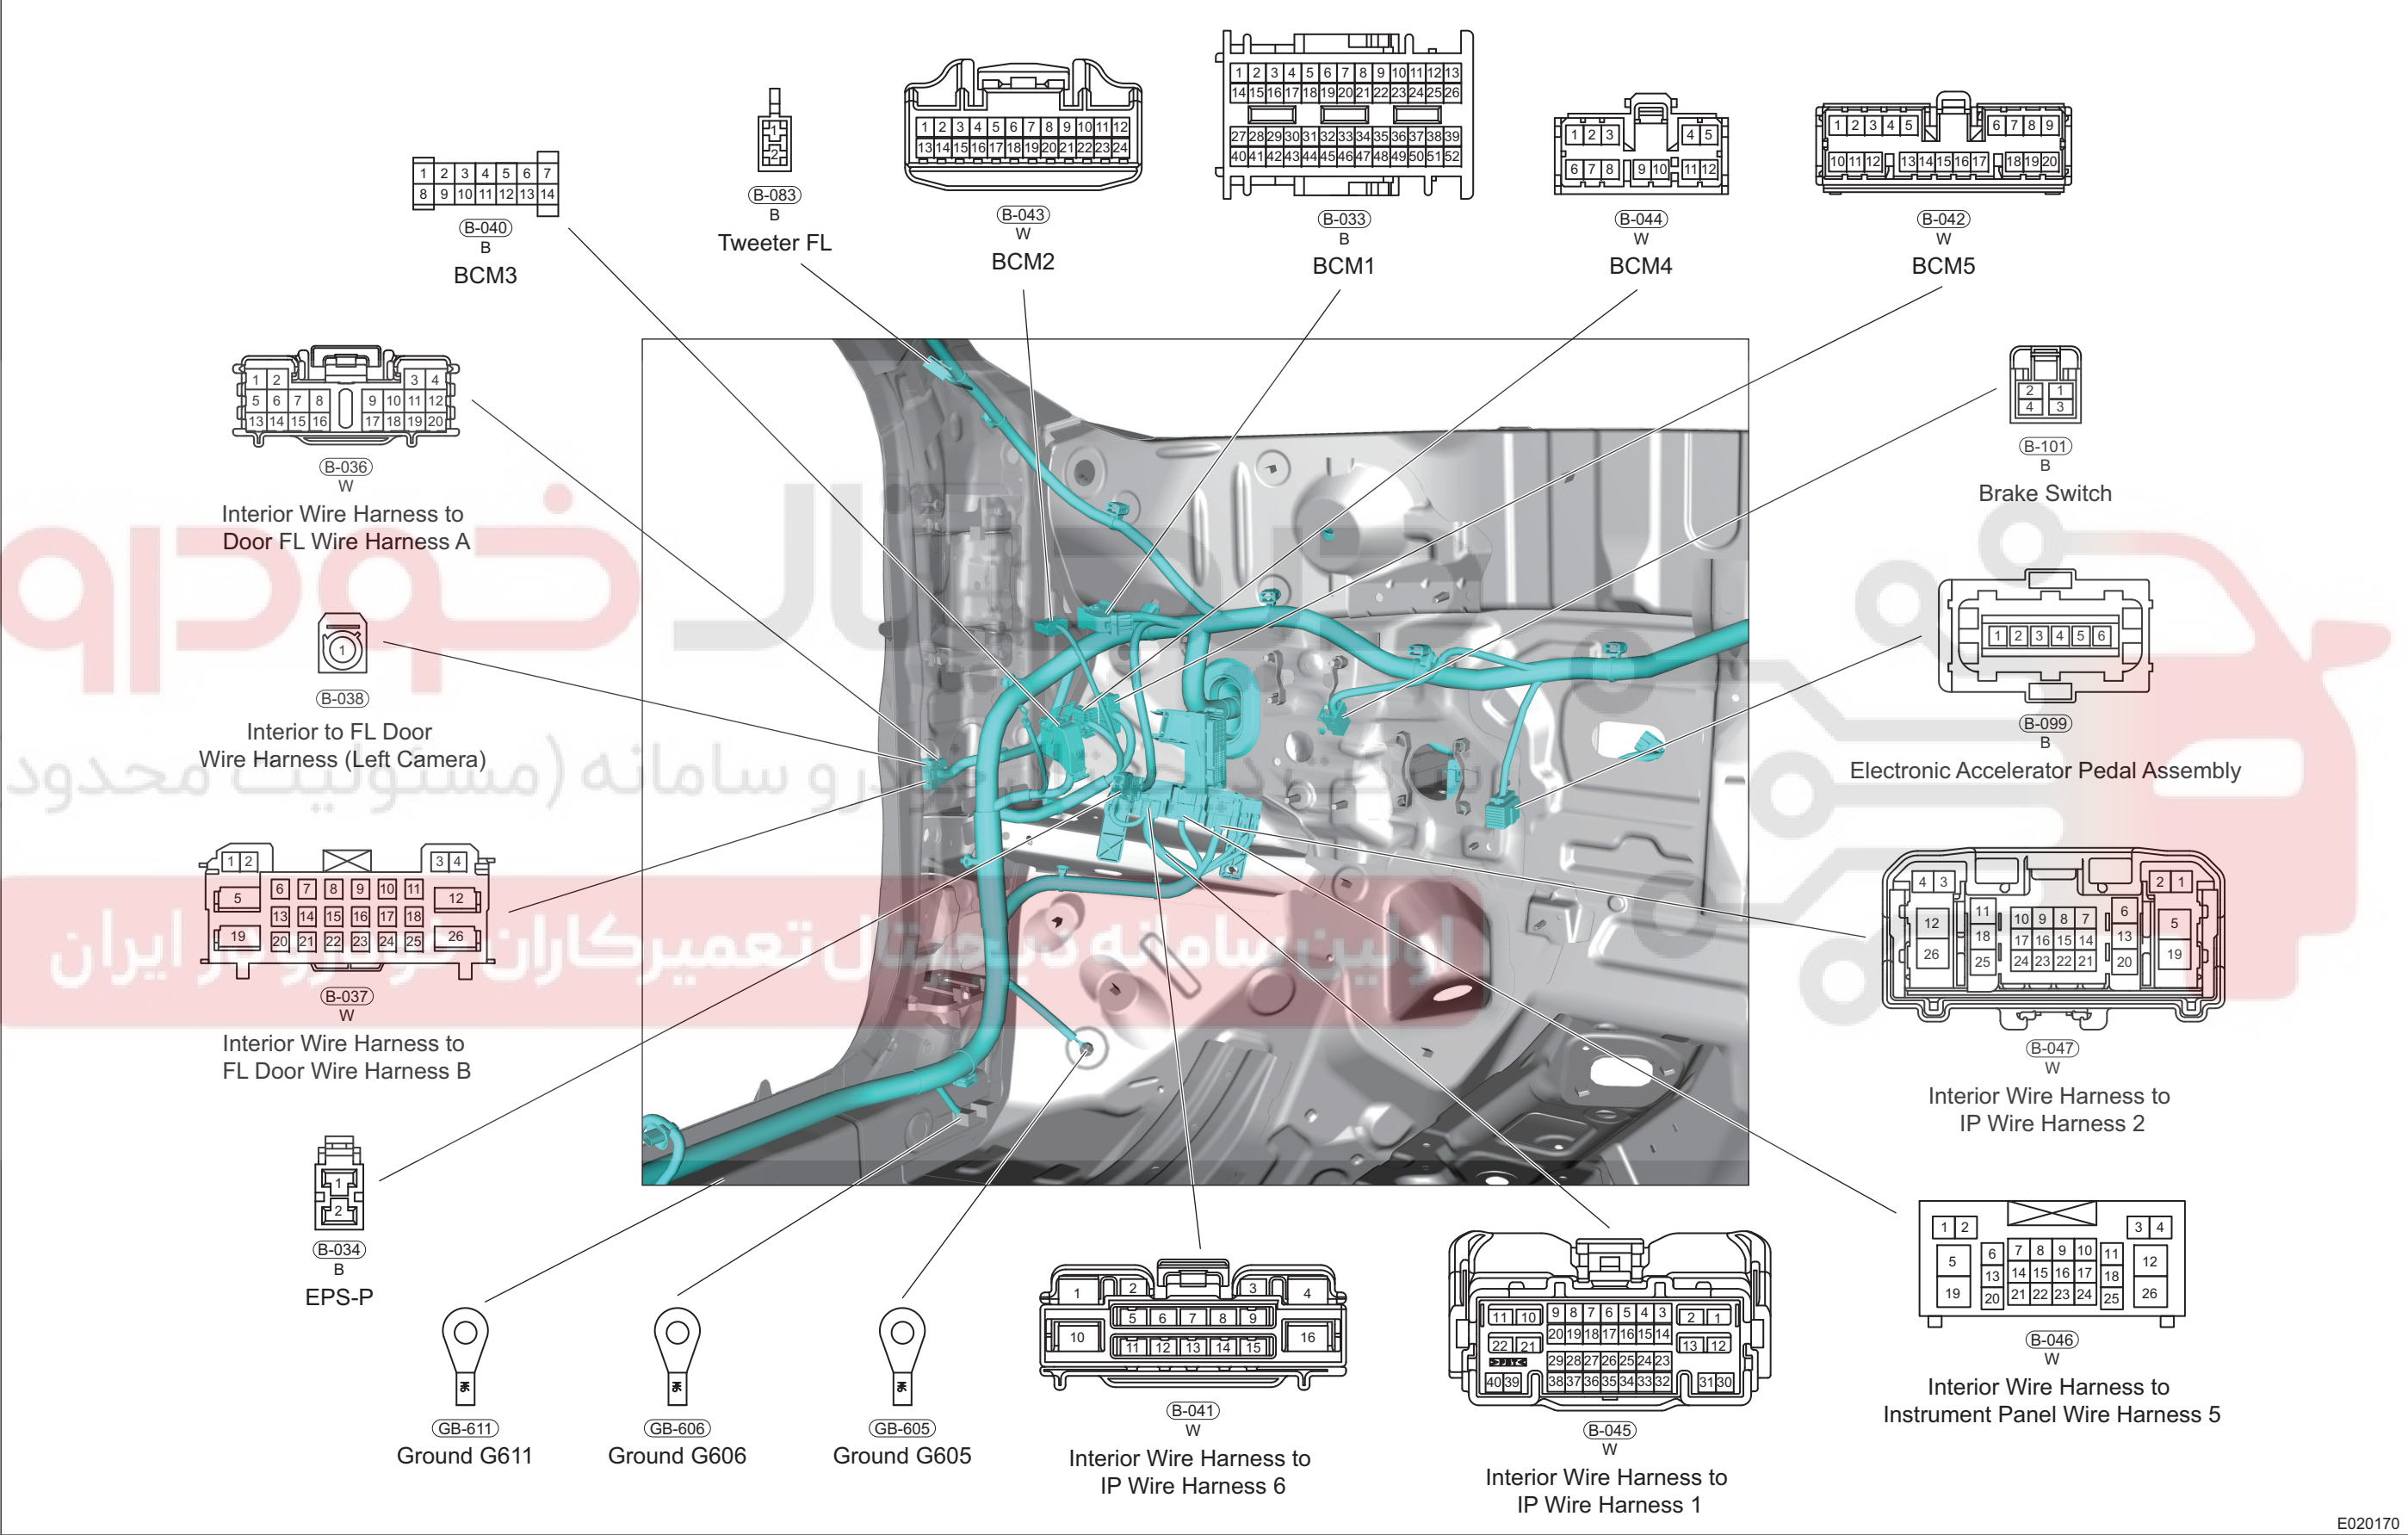

E020170


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.3. Interior Wire Harness Connector Position Diagram

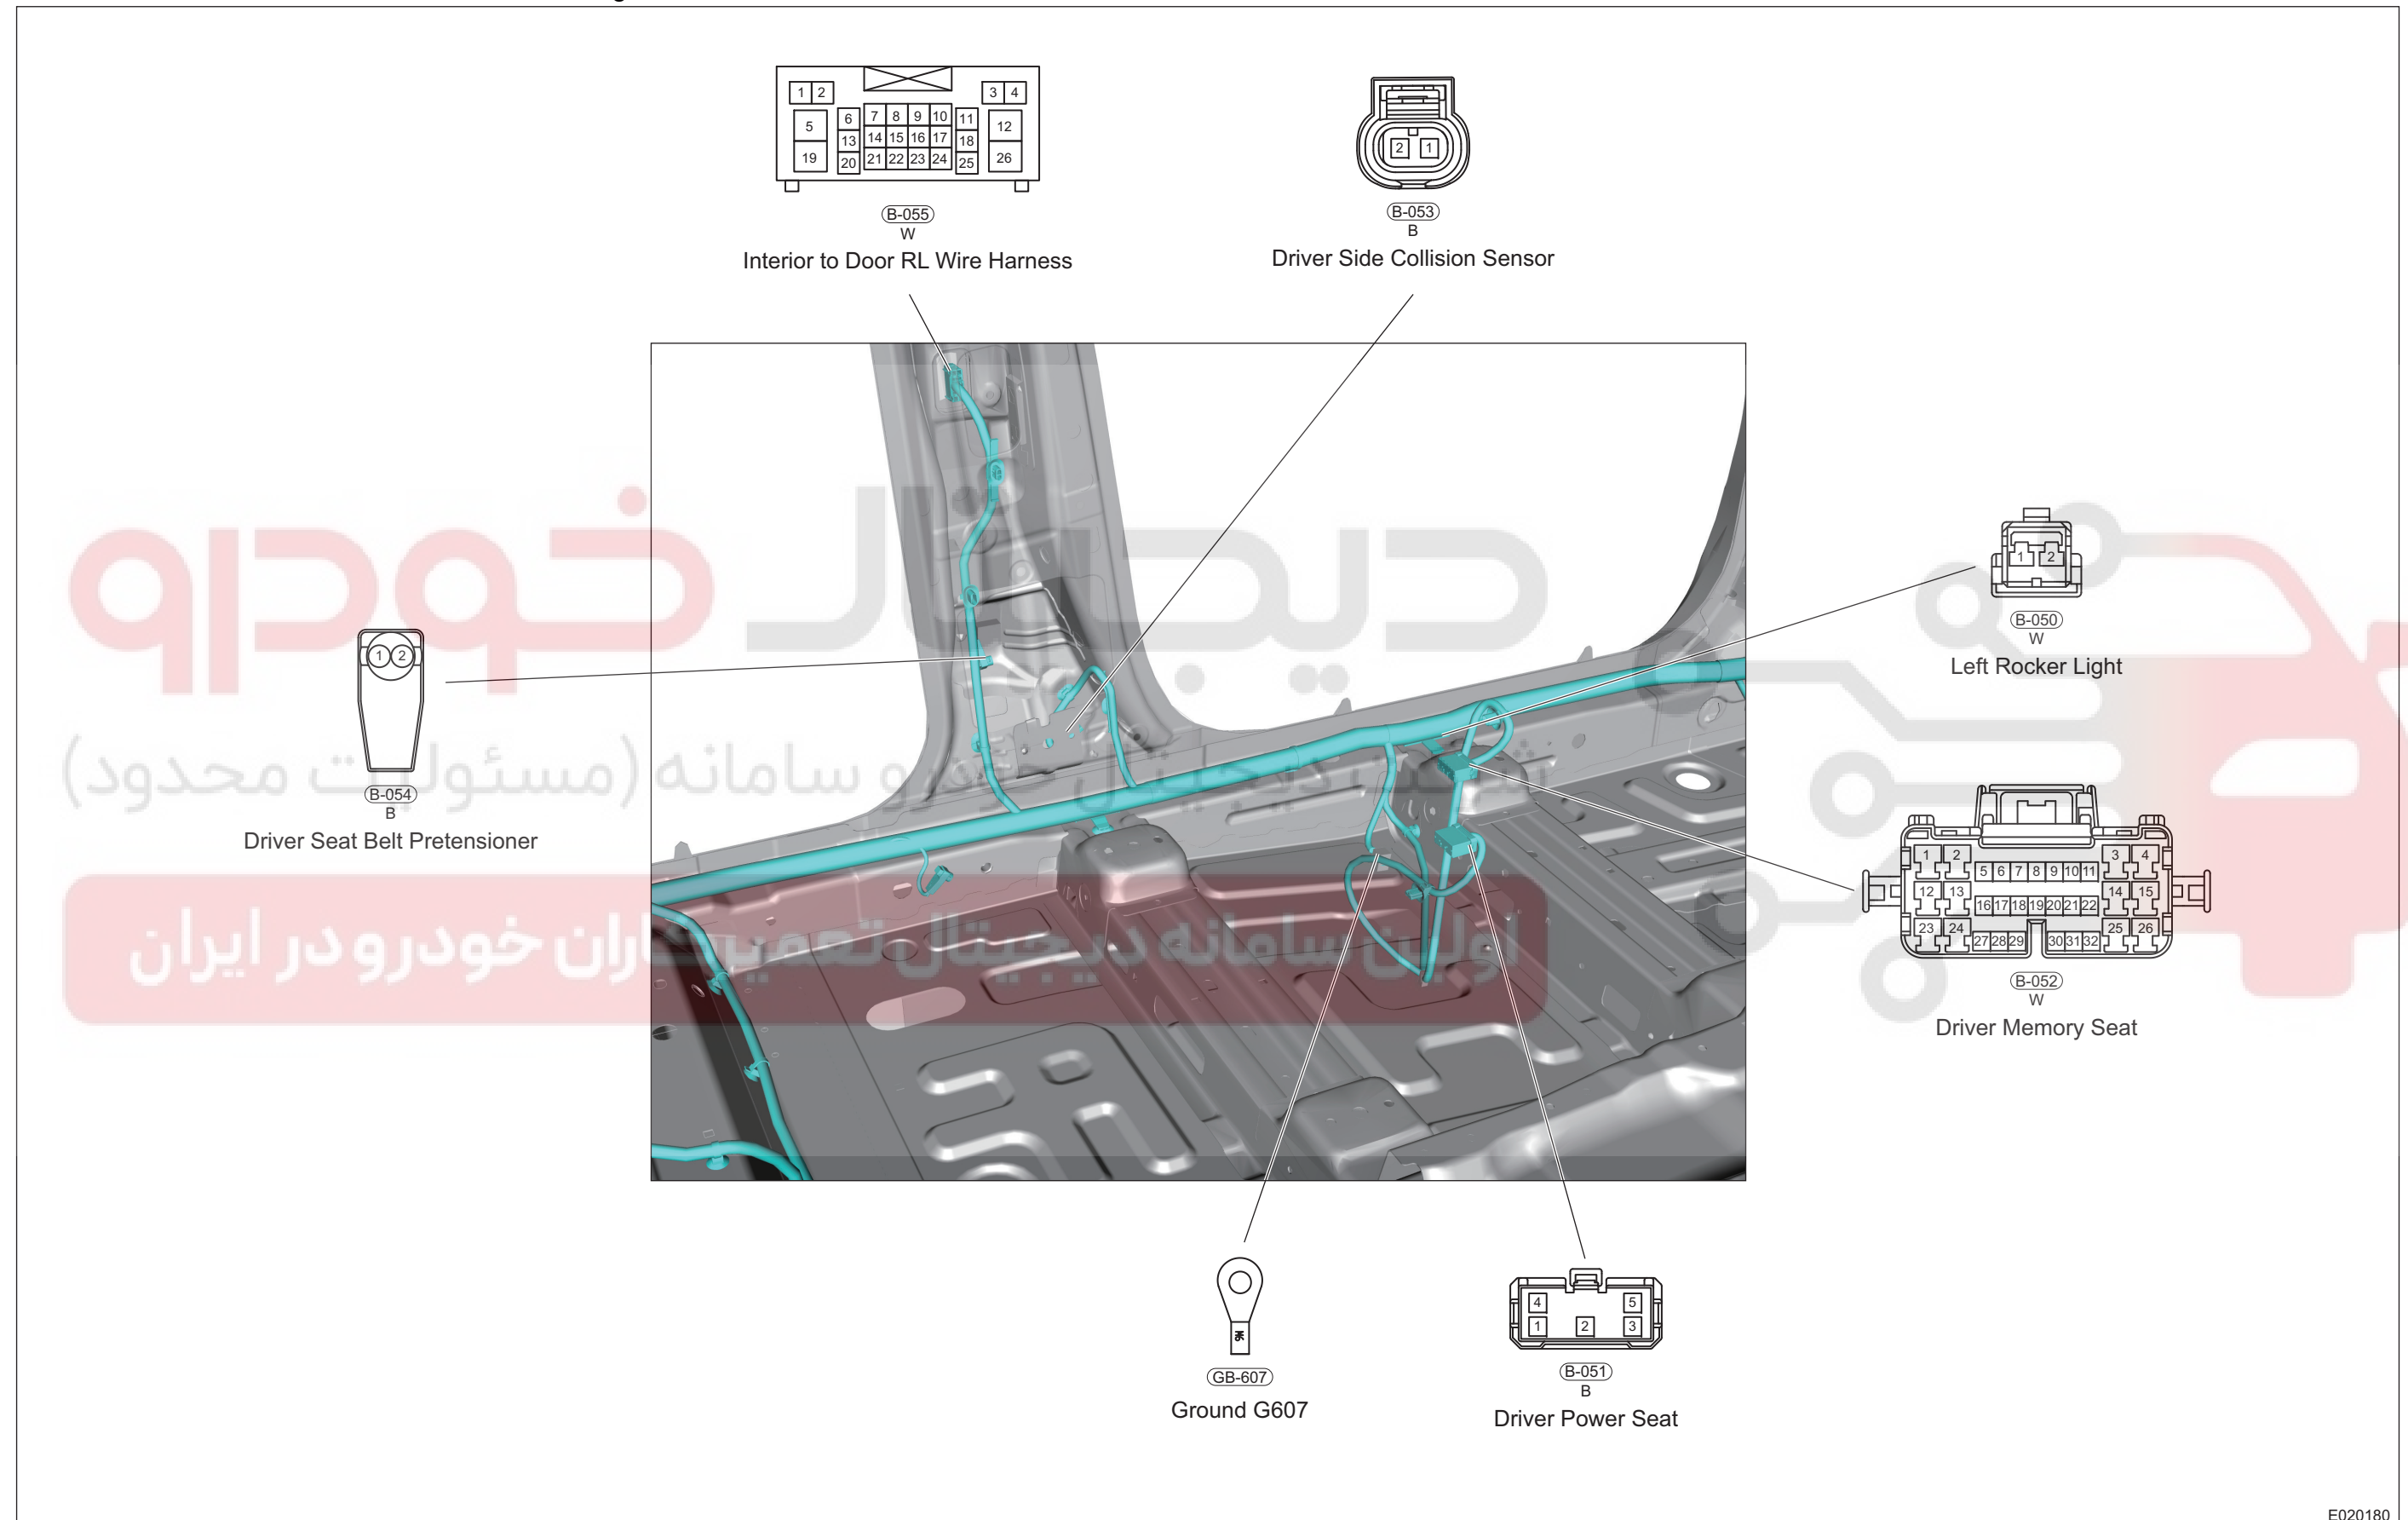


E020180

 3.4. Interior Wire Harness Connector Position Diagram

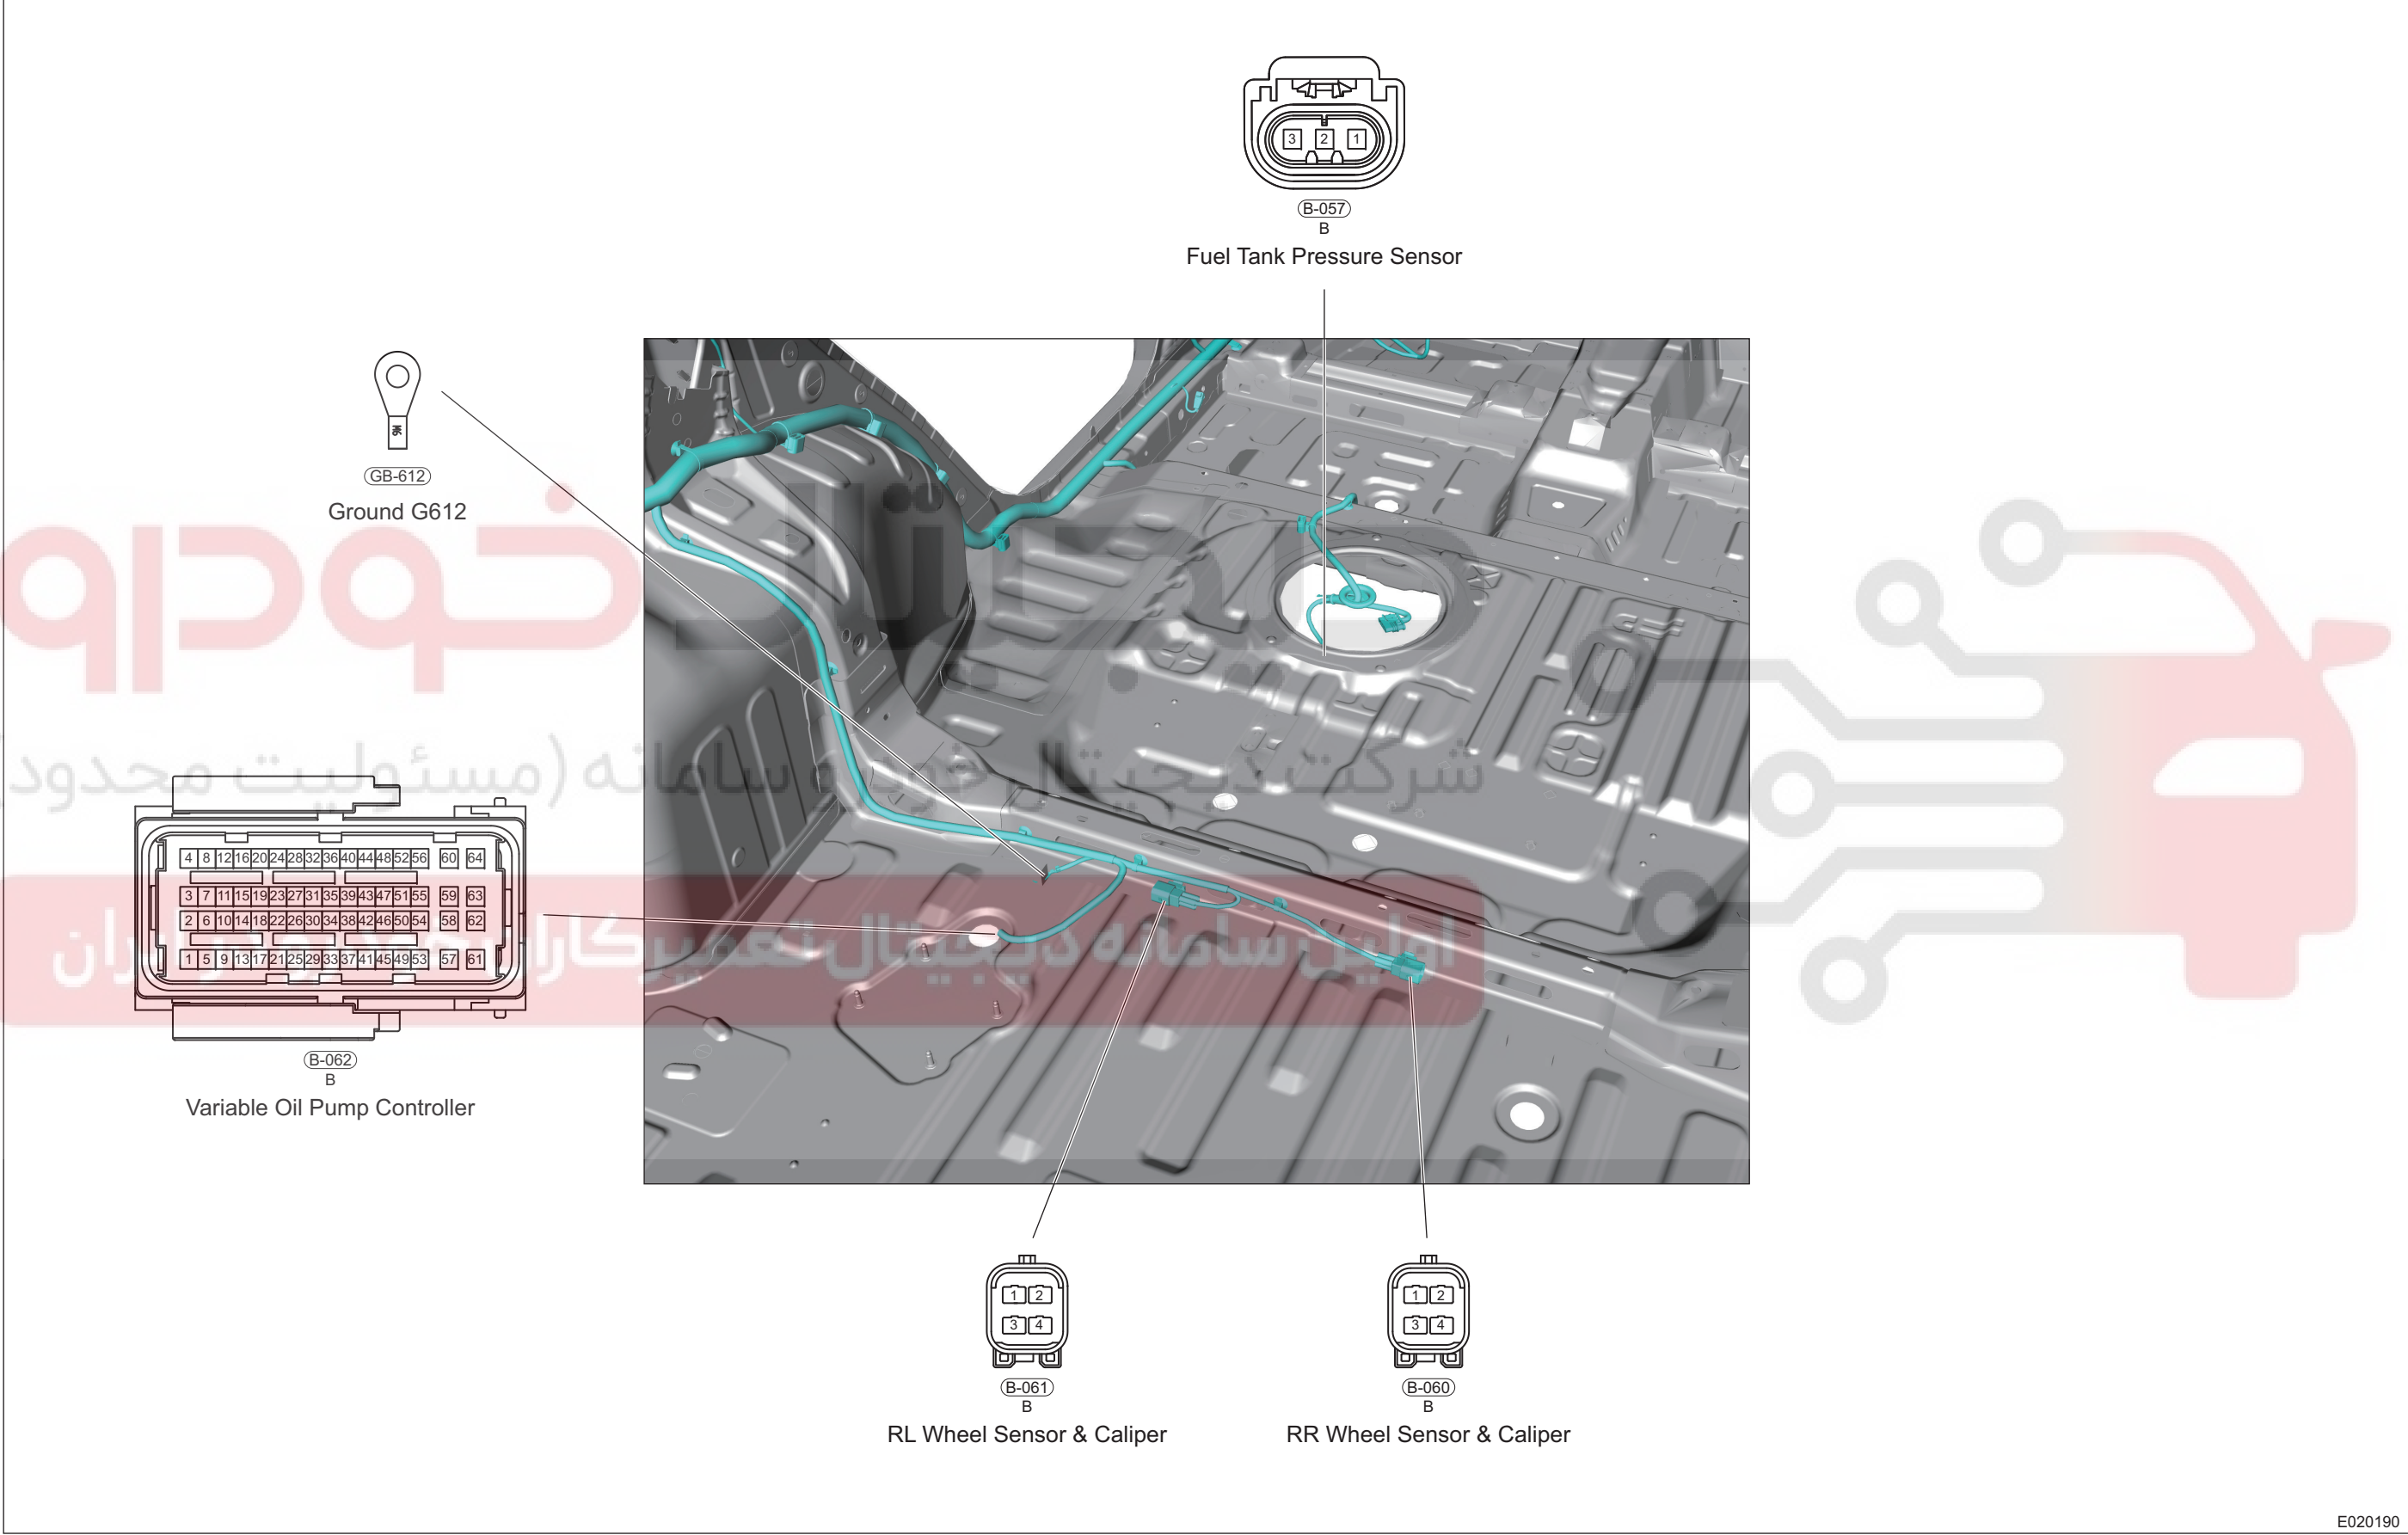


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.5. Interior Wire Harness Connector Position Diagram

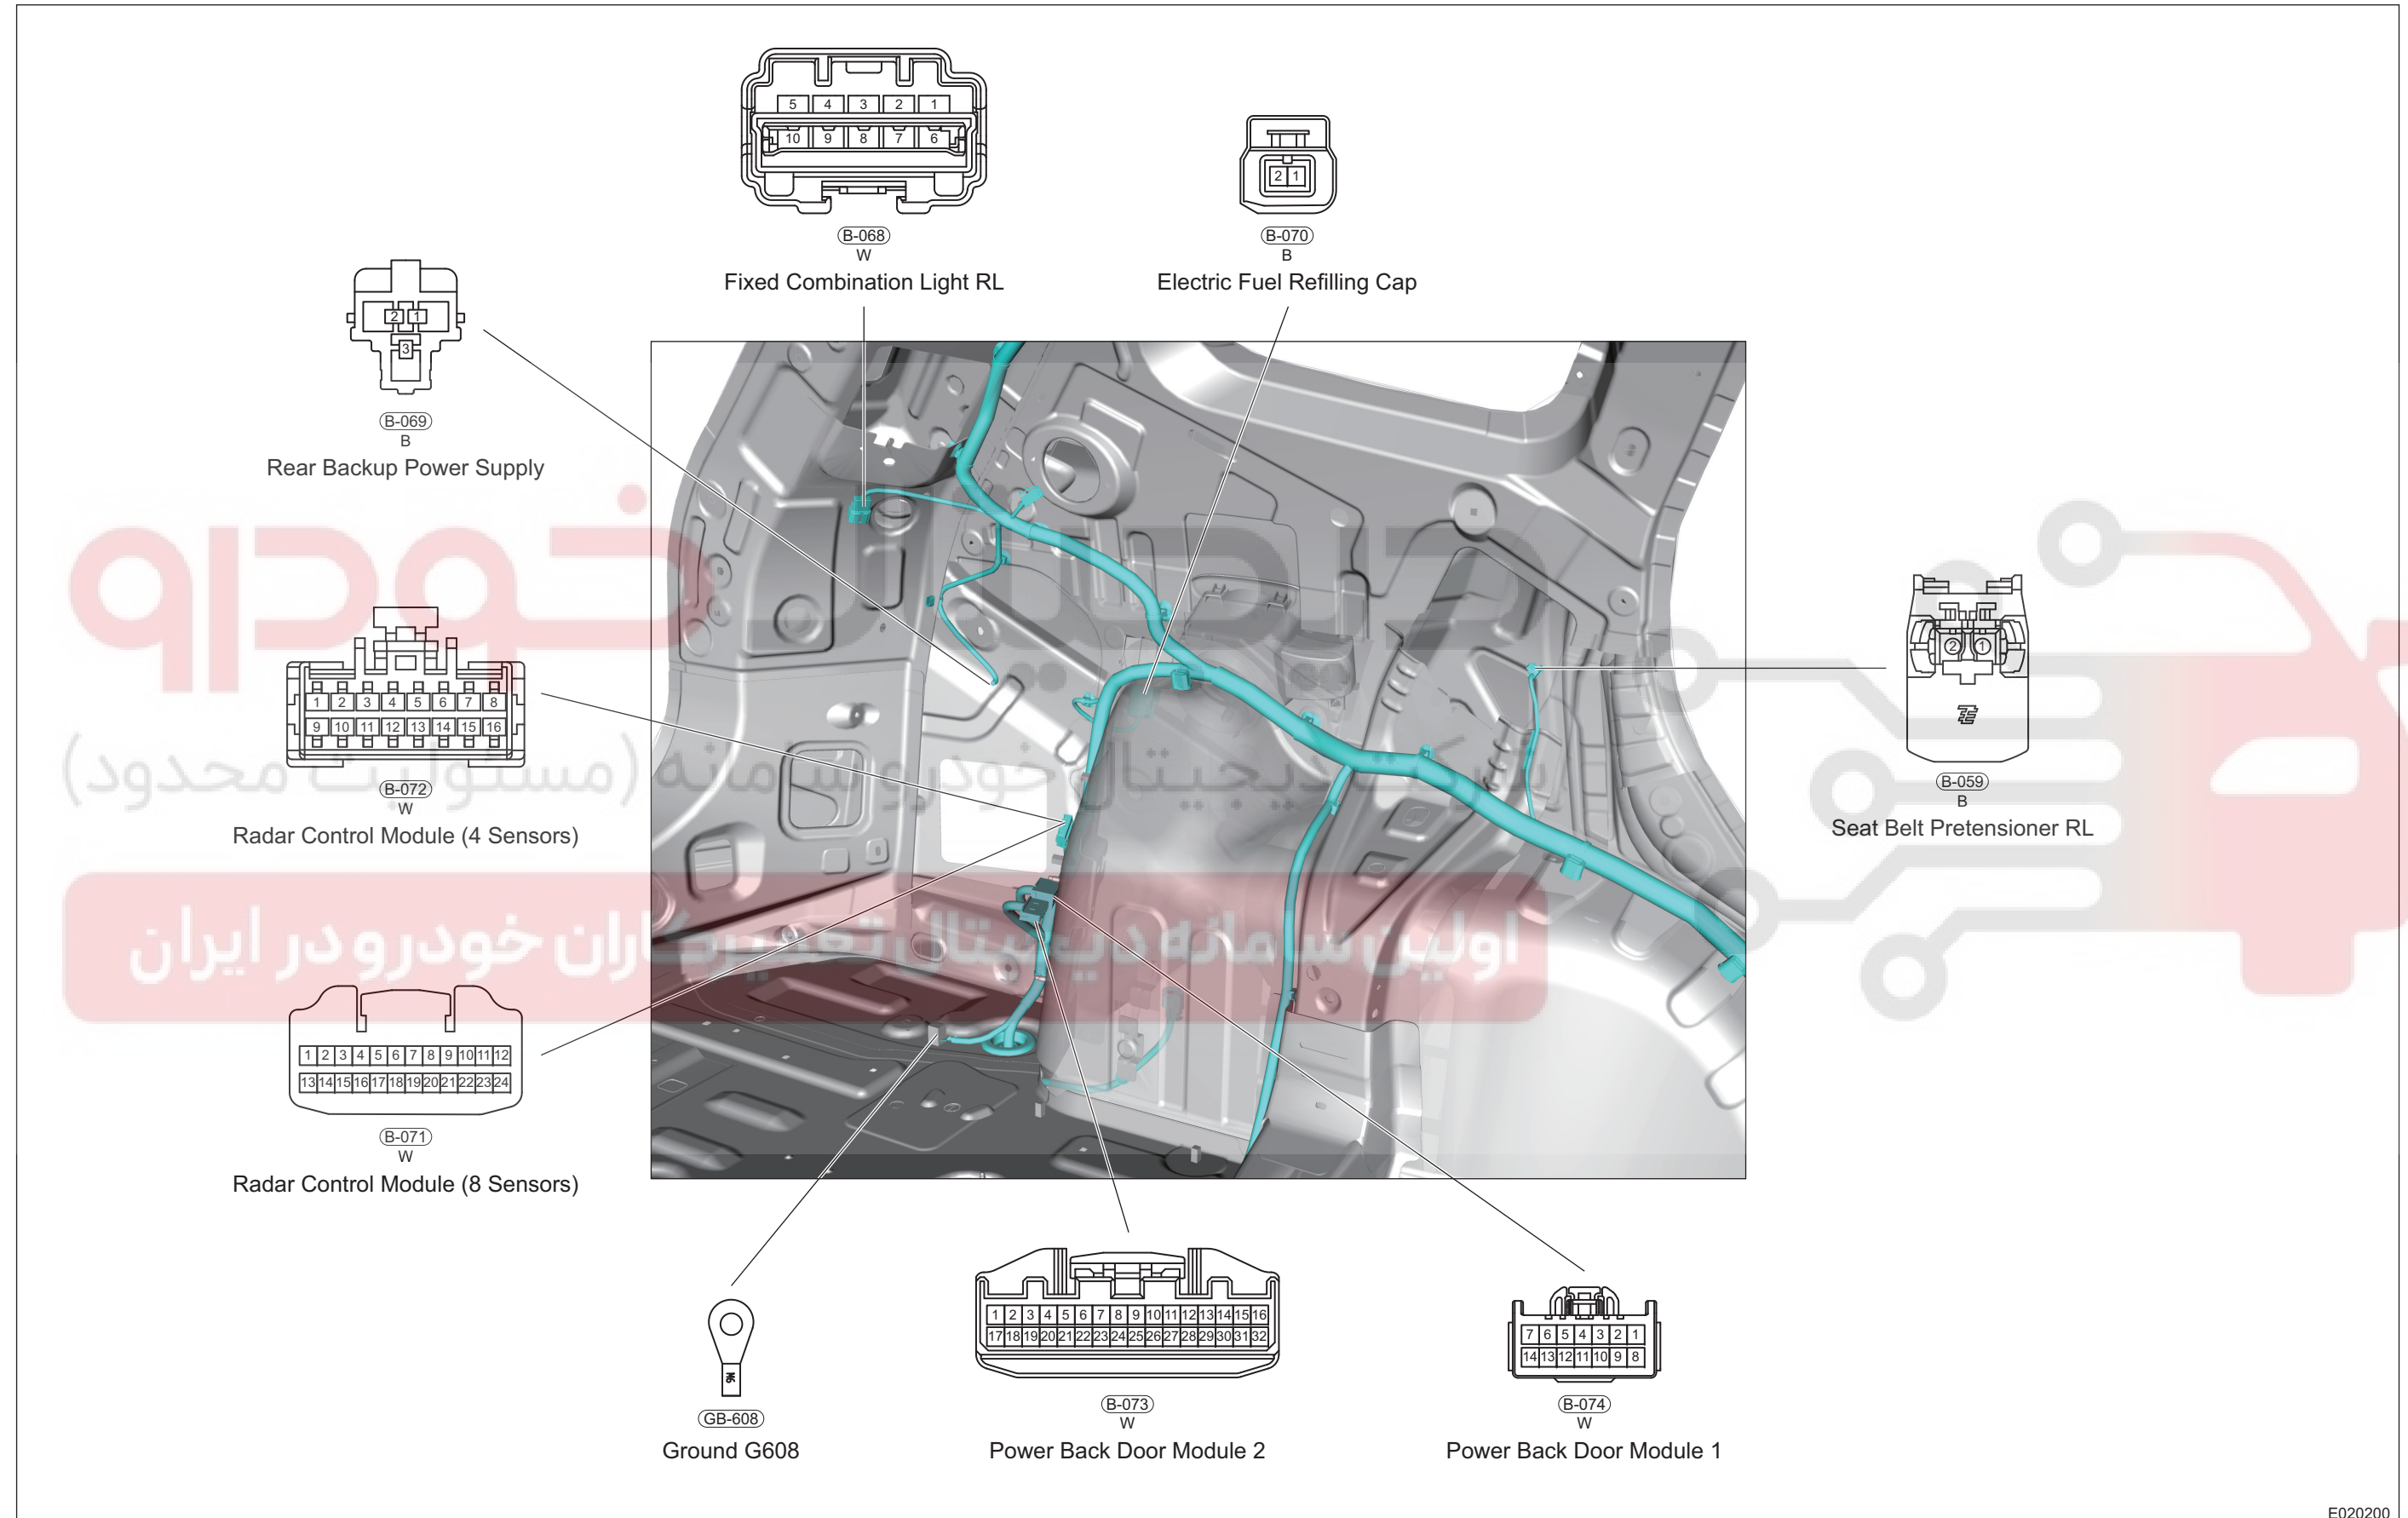

E020200

 
3.6. Interior Wire Harness Connector Position Diagram

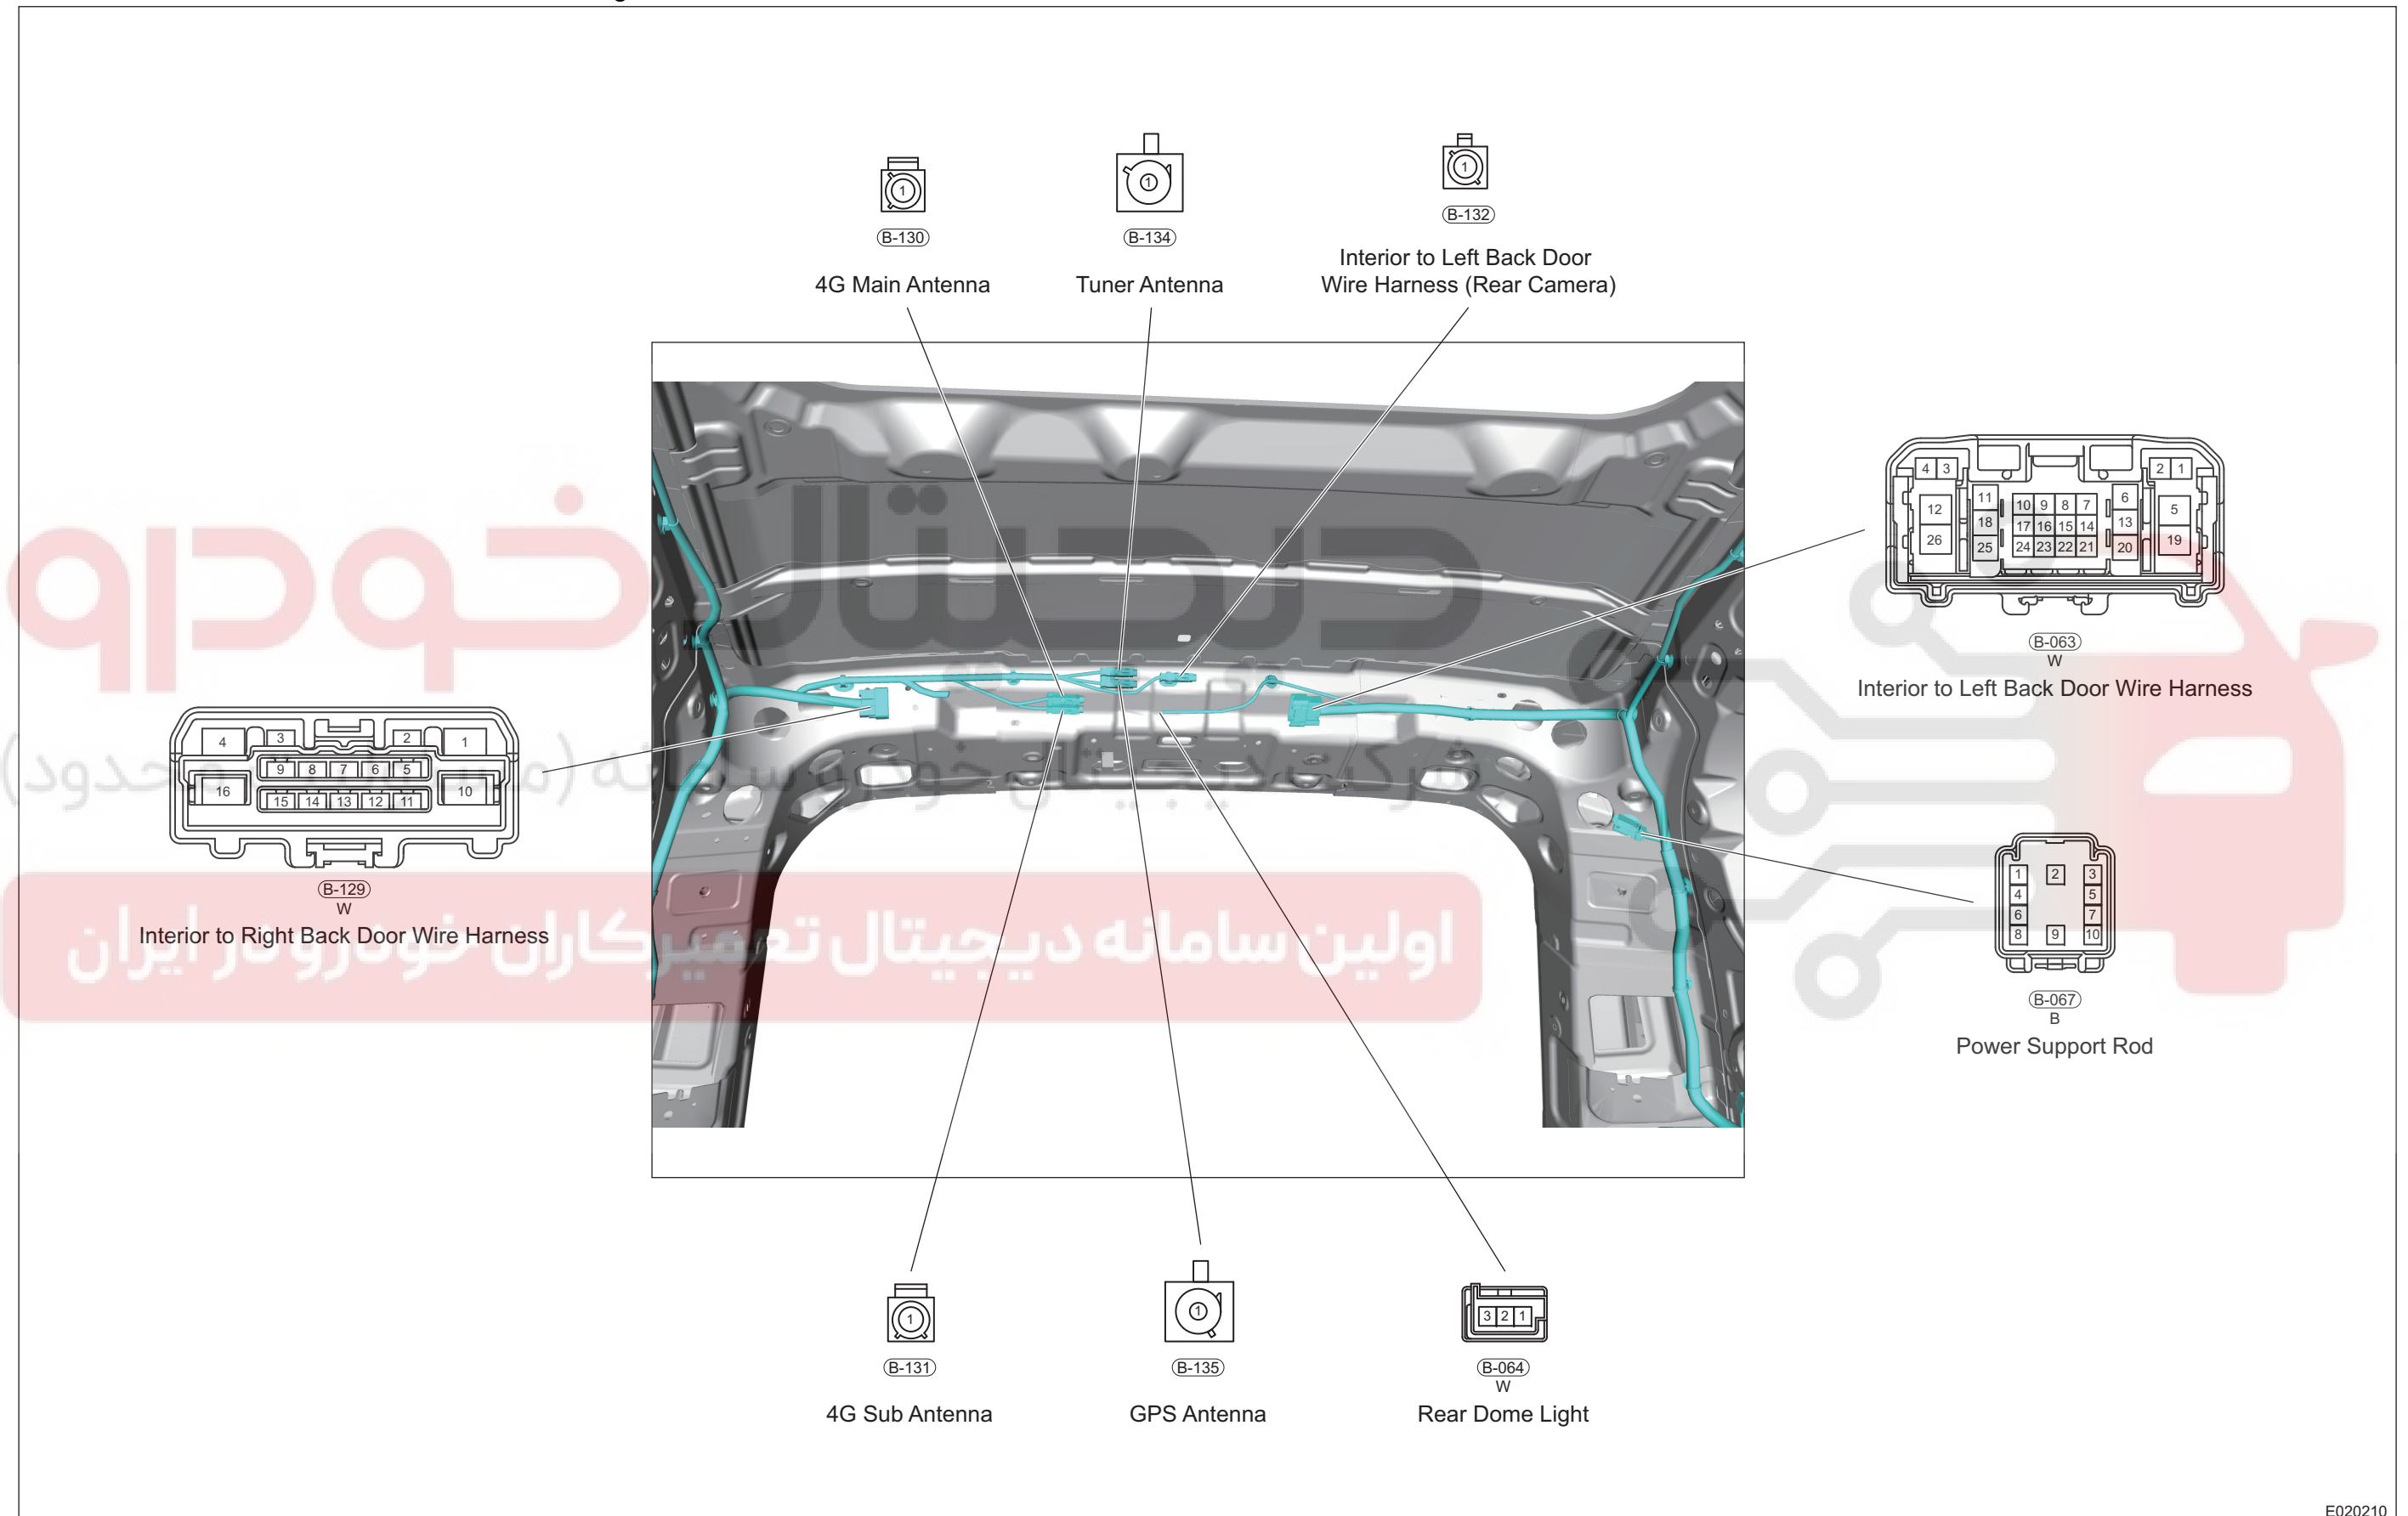

E020210


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.7. Interior Wire Harness Connector Position Diagram




(B-125)
B

 Rear Blower



(B-124)
B

 Rear Speed Regulation Panel

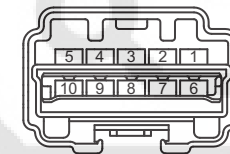


(B-126)
W

Fixed Combination Light RR




(GB-609)

 Ground G609

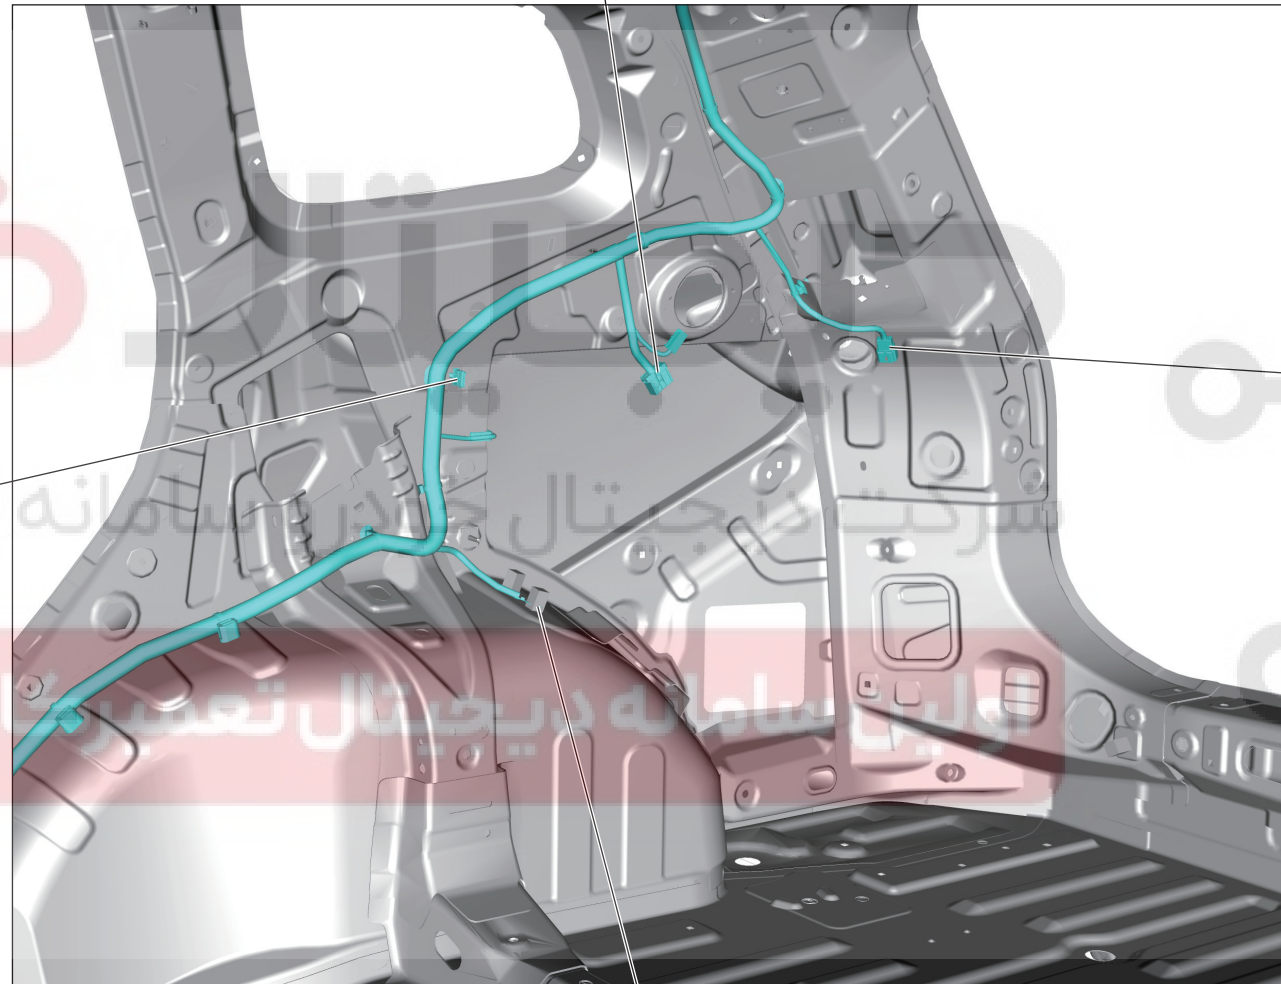

 
3.8. Interior Wire Harness Connector Position Diagram

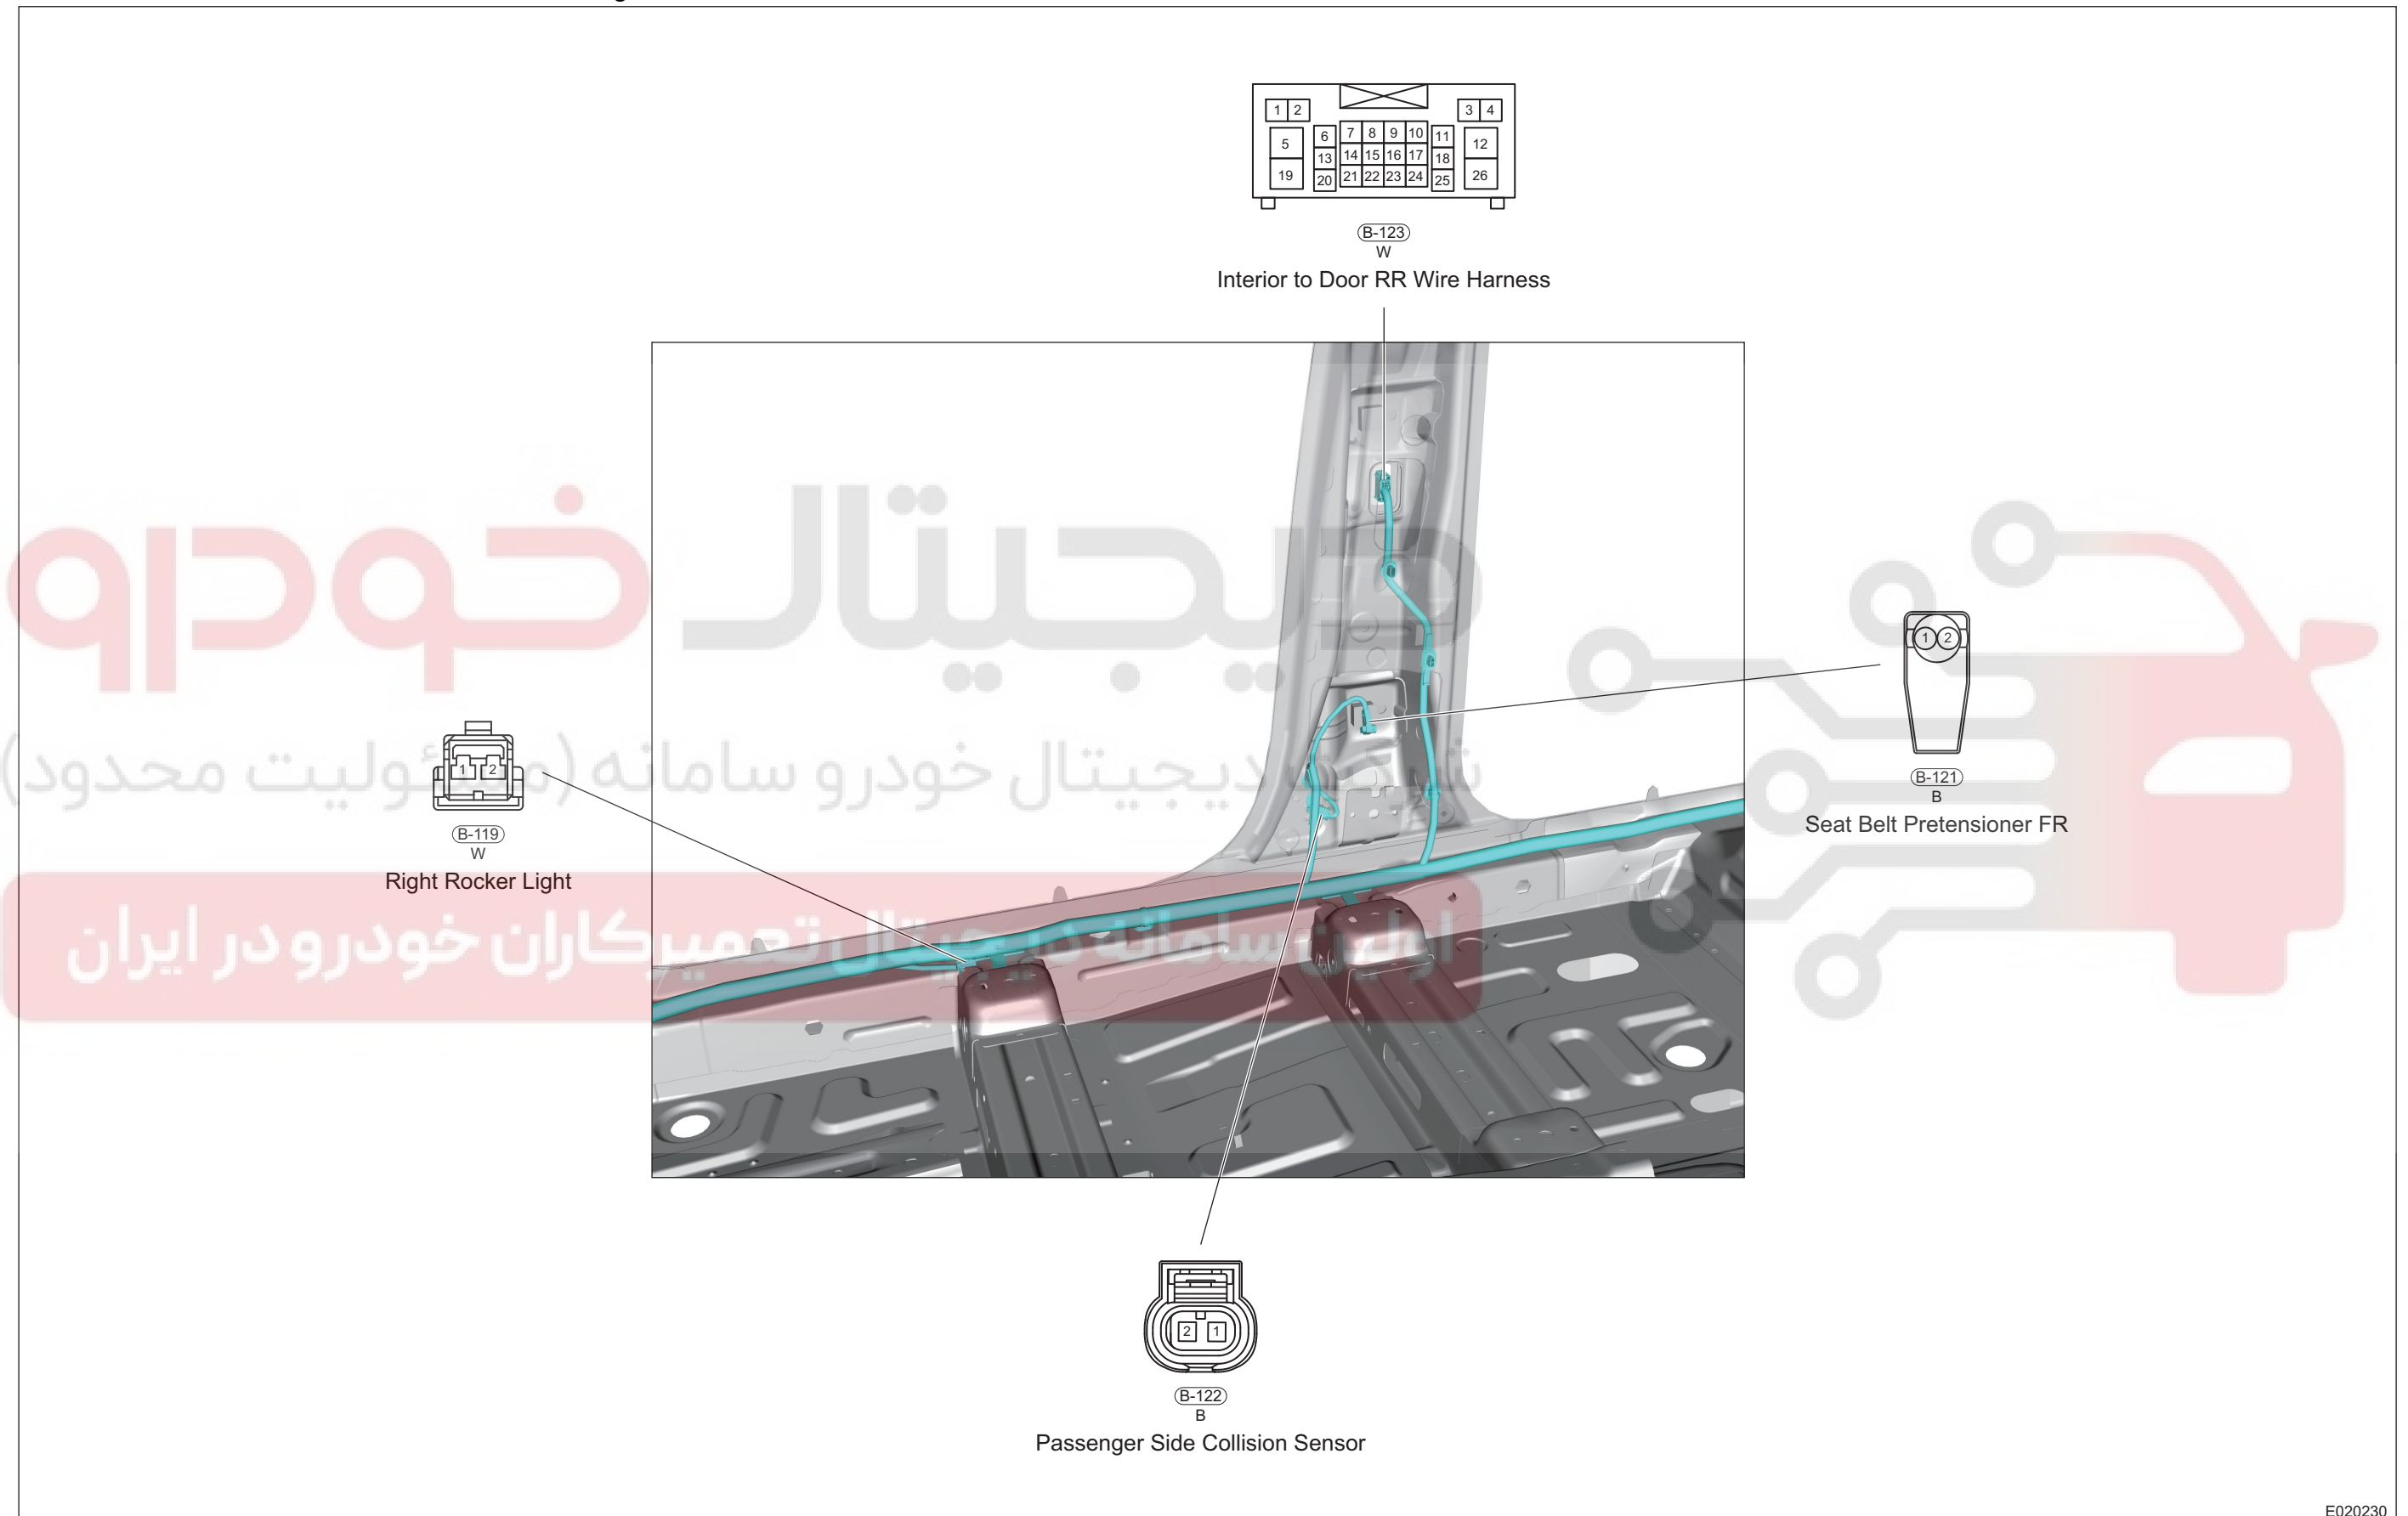

E020230


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.9. Interior Wire Harness Connector Position Diagram

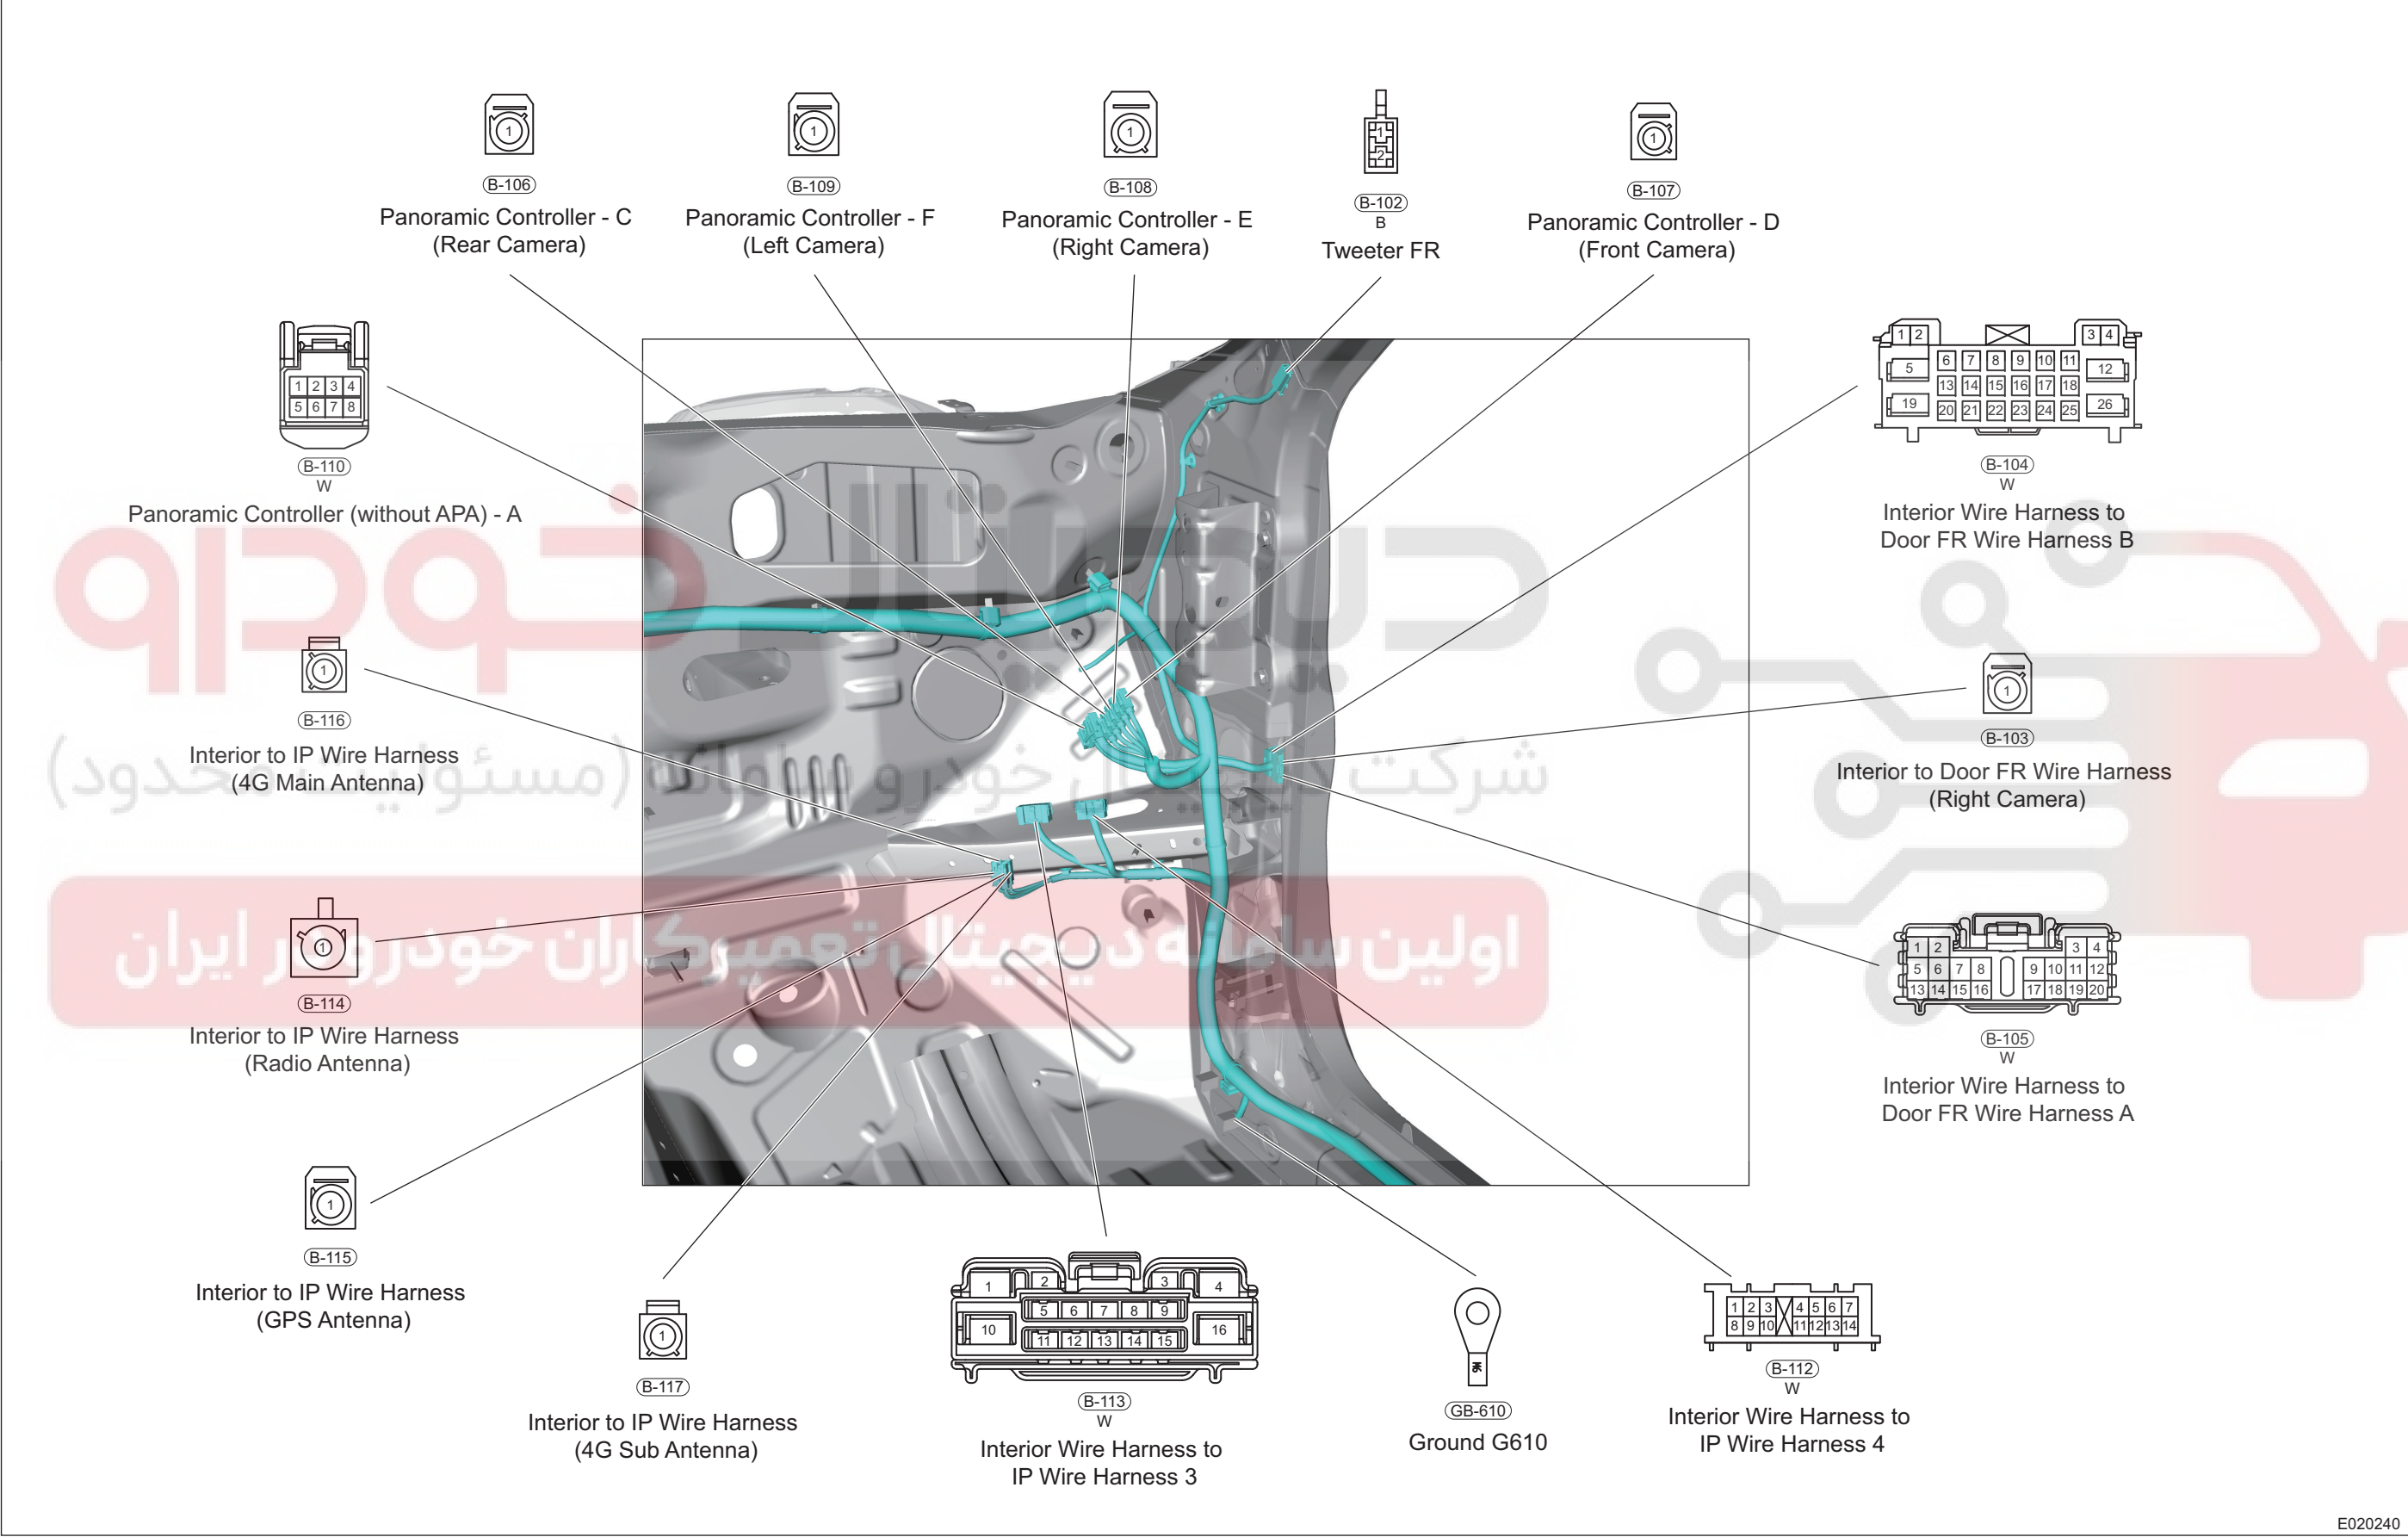

E020240

 
3.10. Interior Wire Harness Connector Position Diagram

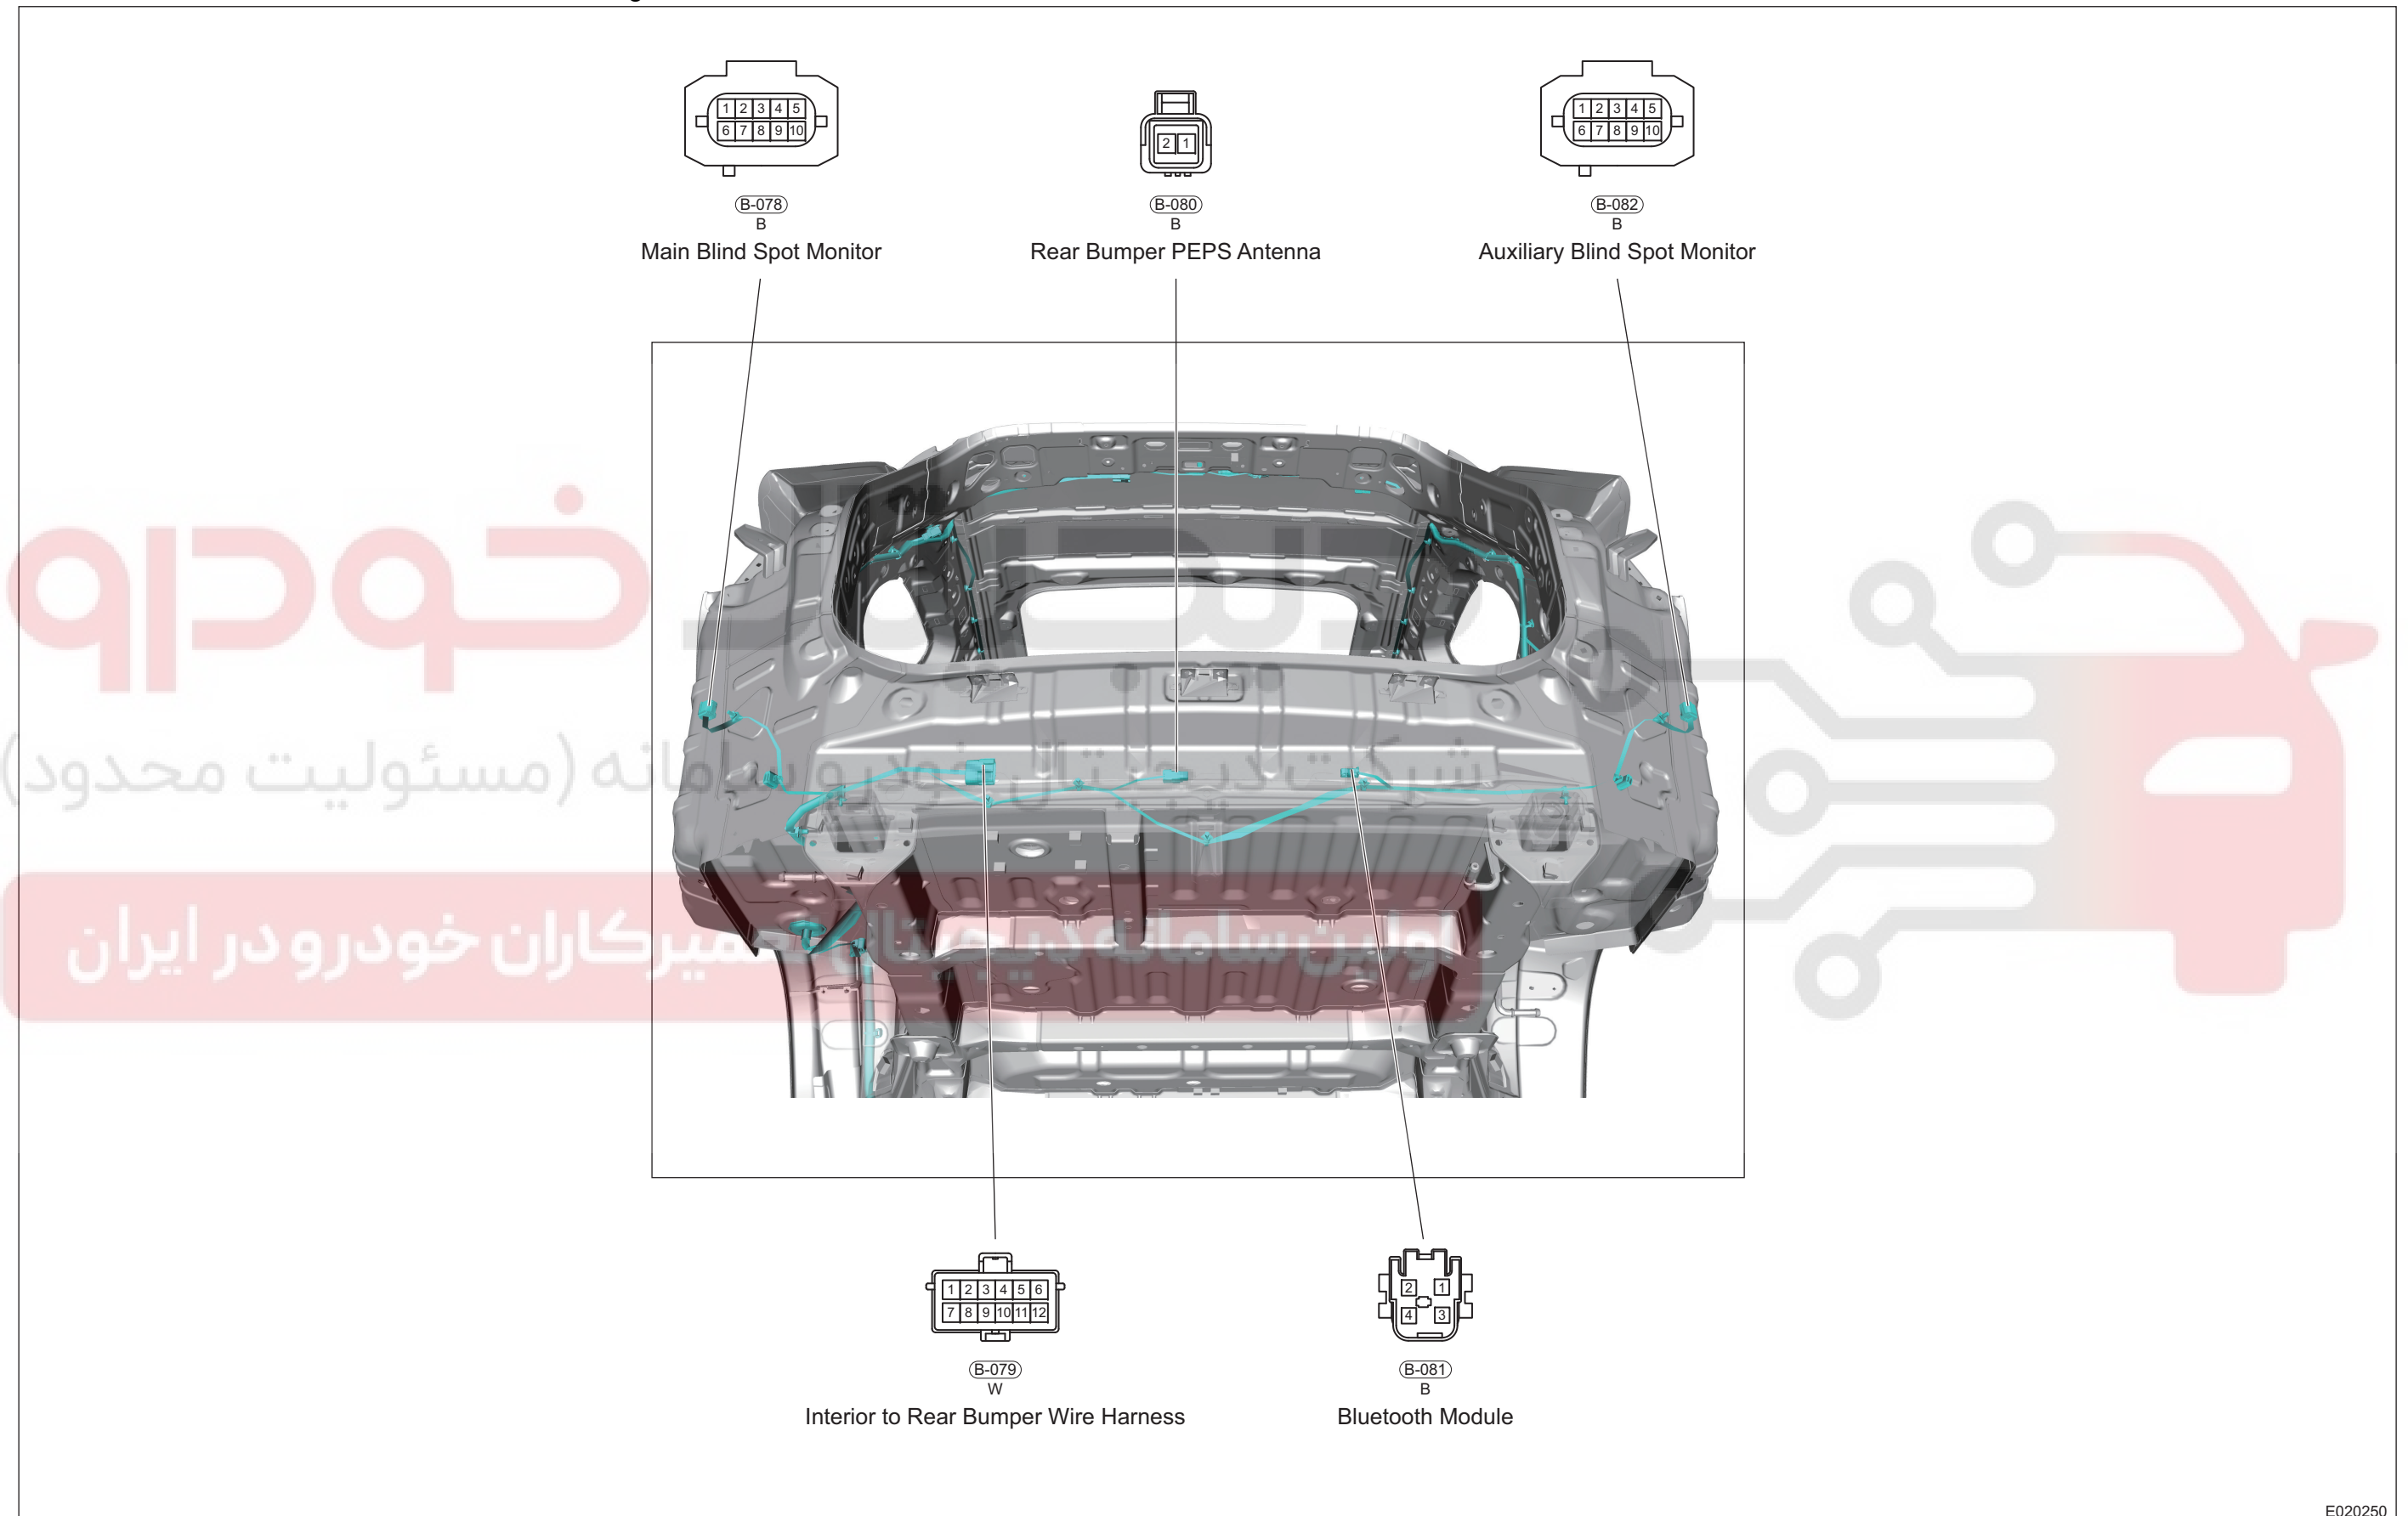


E020250

CHAPTER 2. WIRE HARNESS DIAGRAM

 
3.11. Interior Wire Harness Connector Position Diagram

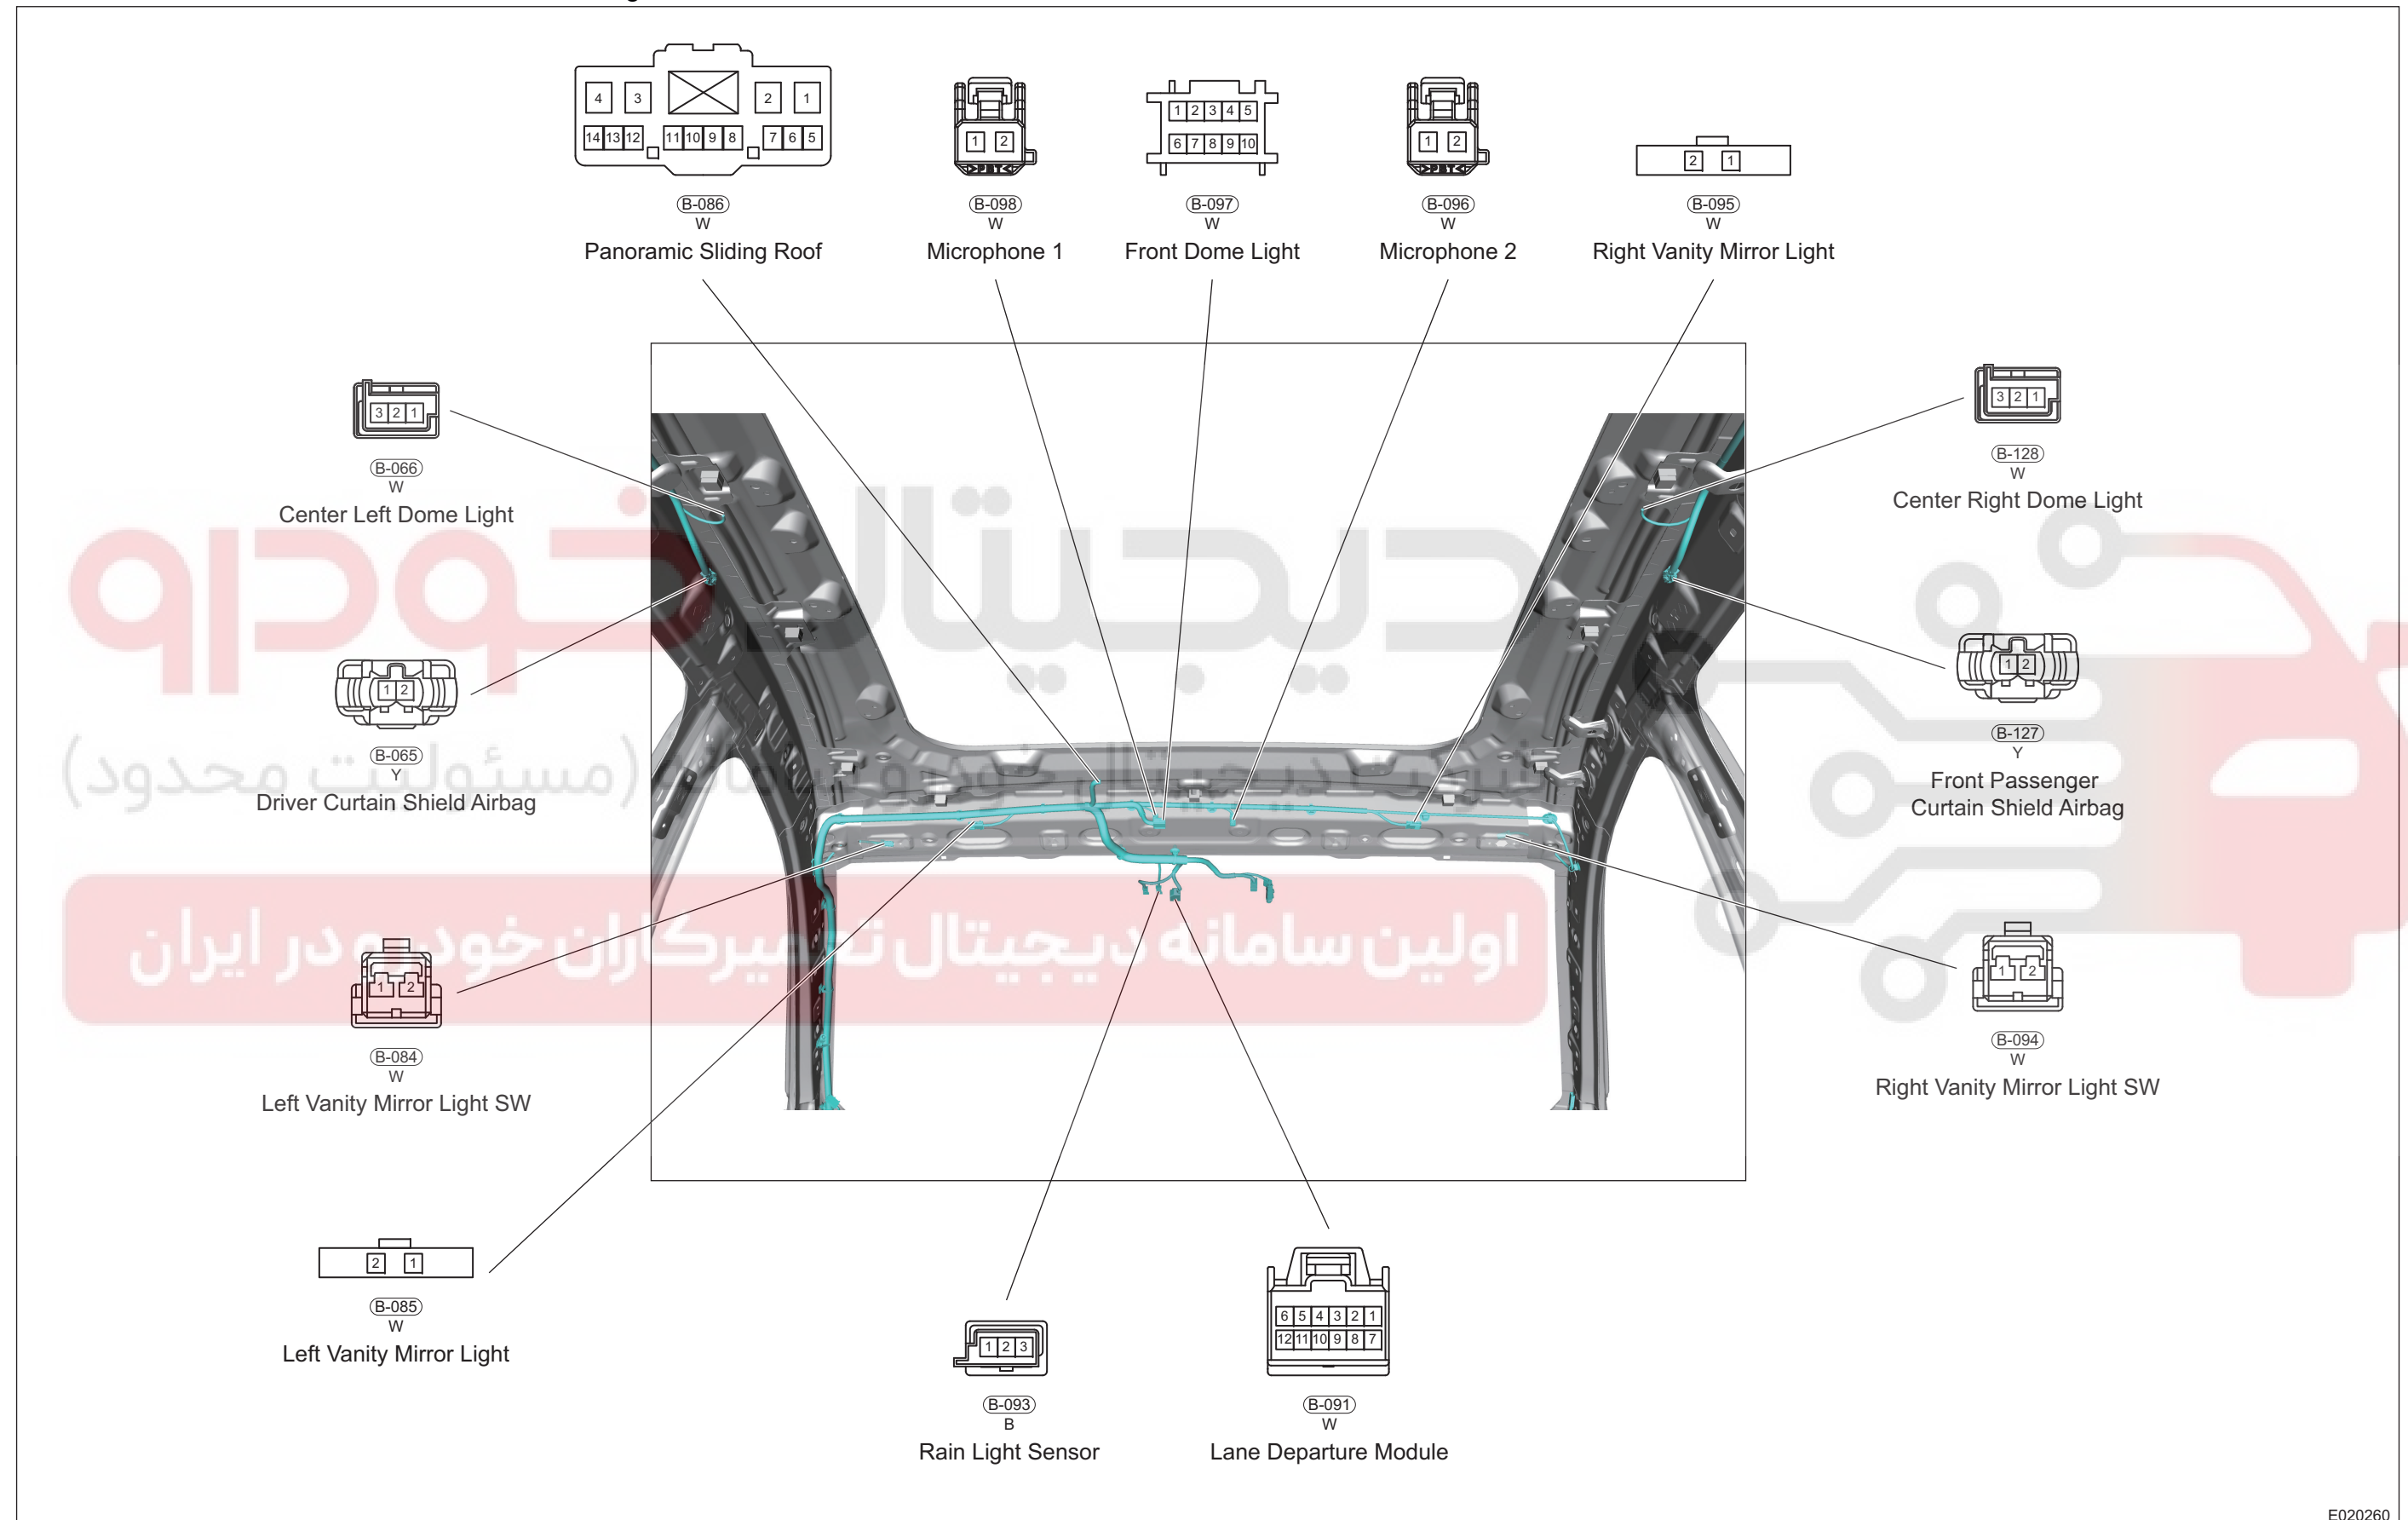


 
3.12. Interior Wire Harness Connector Position Diagram

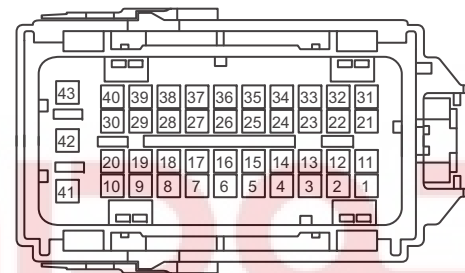

(B-137)
B
Cylinder Wire Harness 2.0T

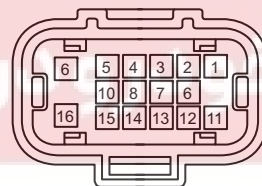 

  (B-136)
B
Transmission Three-in-one Connector

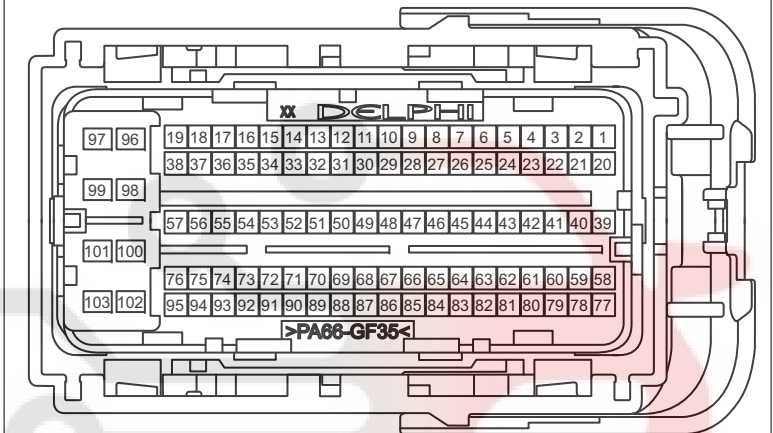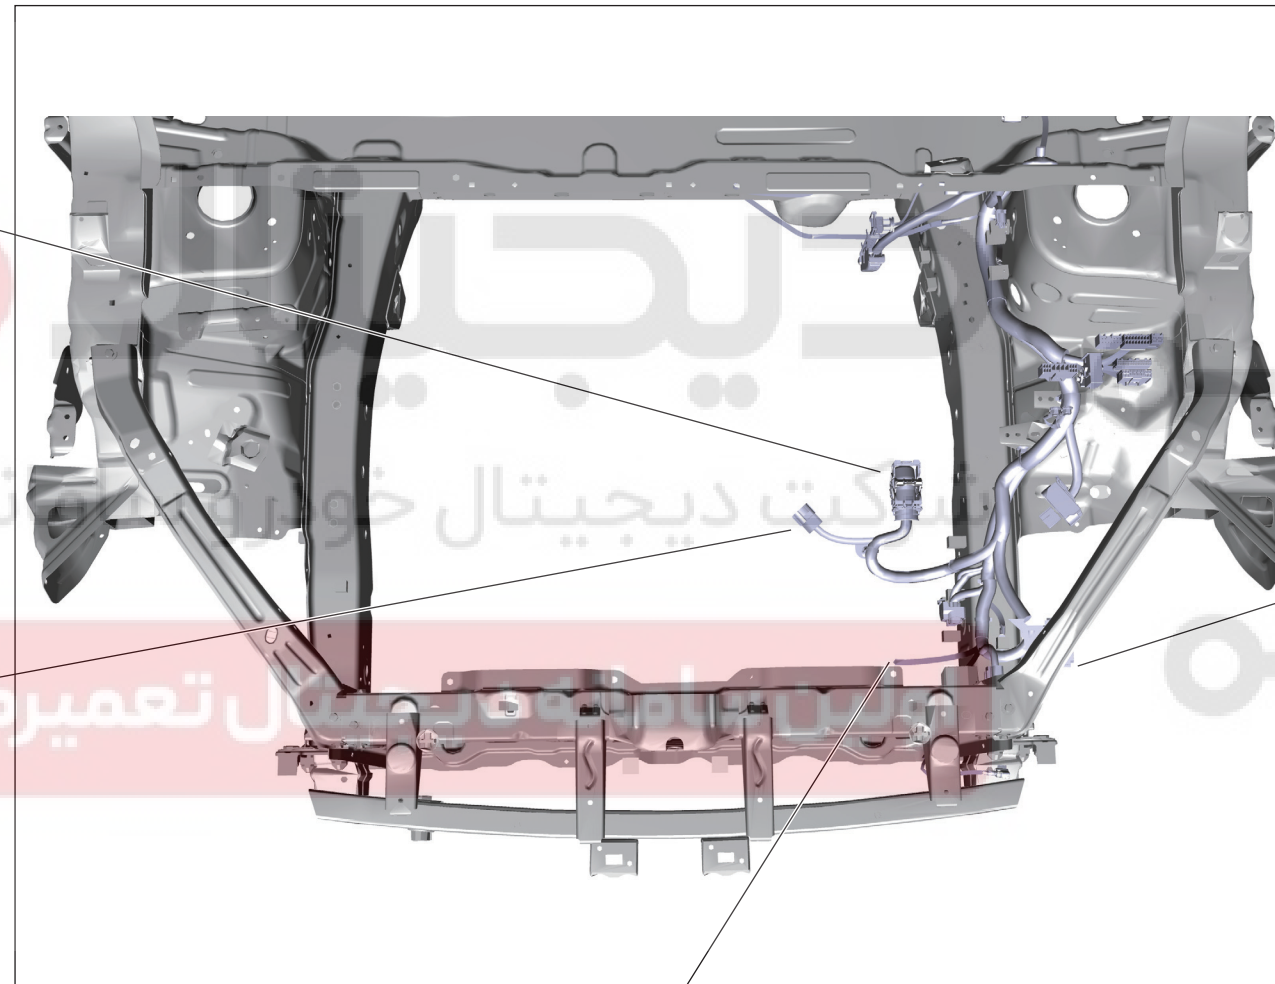


(B-139)
B
EMS-A




(B-138)
B
2nd Water Temperature Sensor 2.0T

CHAPTER 2. WIRE HARNESS DIAGRAM

 3.13. Interior Wire Harness Connector Position Diagram

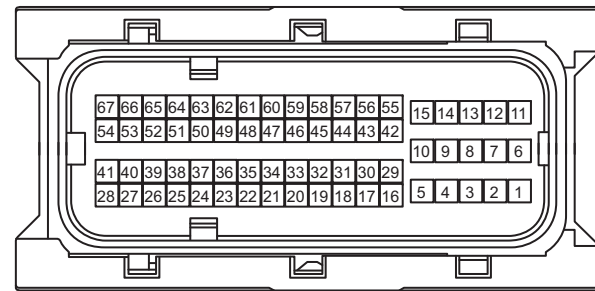


(B-140)
B
Transmission TCU 2.0T

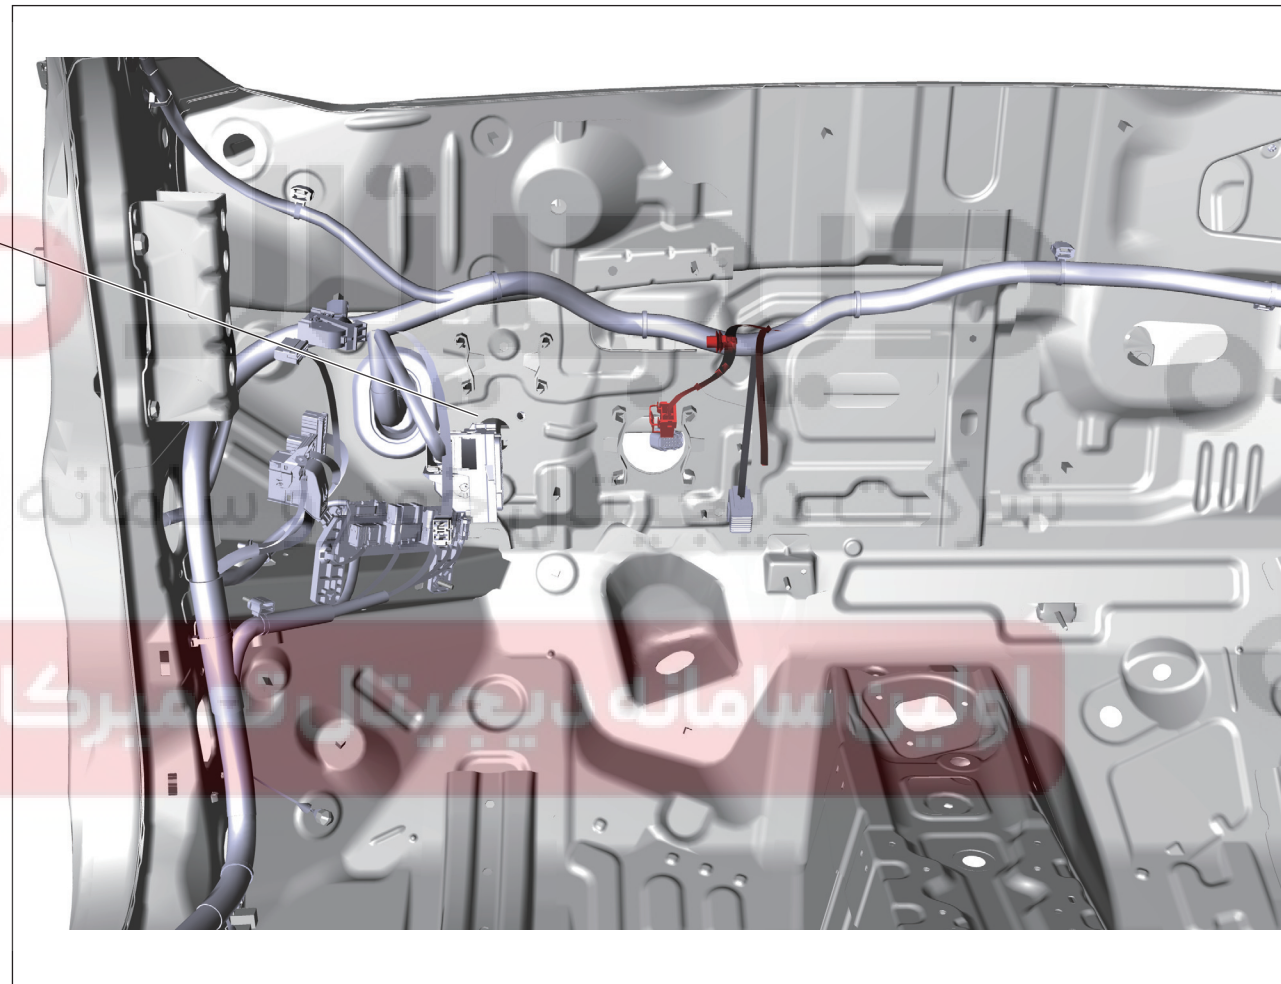 


E020262

 
3.14. Interior Wire Harness Connector Position Diagram

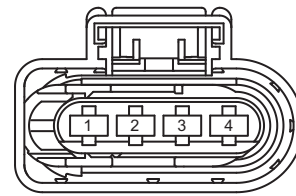

(B-152)
B
4WD Oil Pump Motor

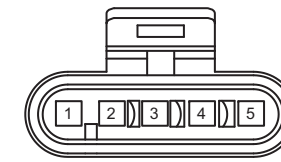 


(B-151)
B
4WD Oil Pump Sensor

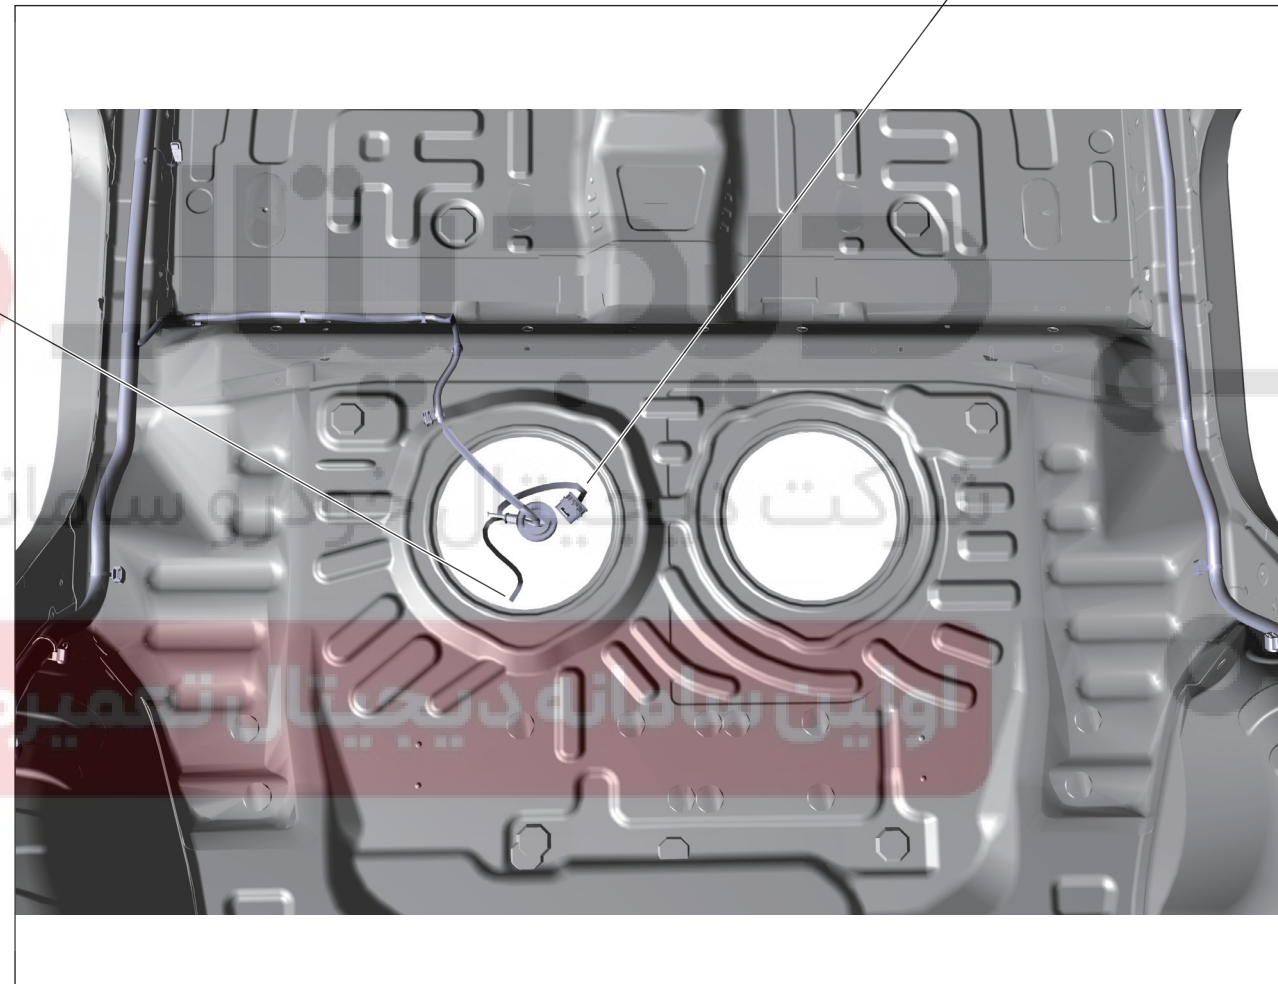 


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.15. Interior Wire Harness Connector Position Diagram

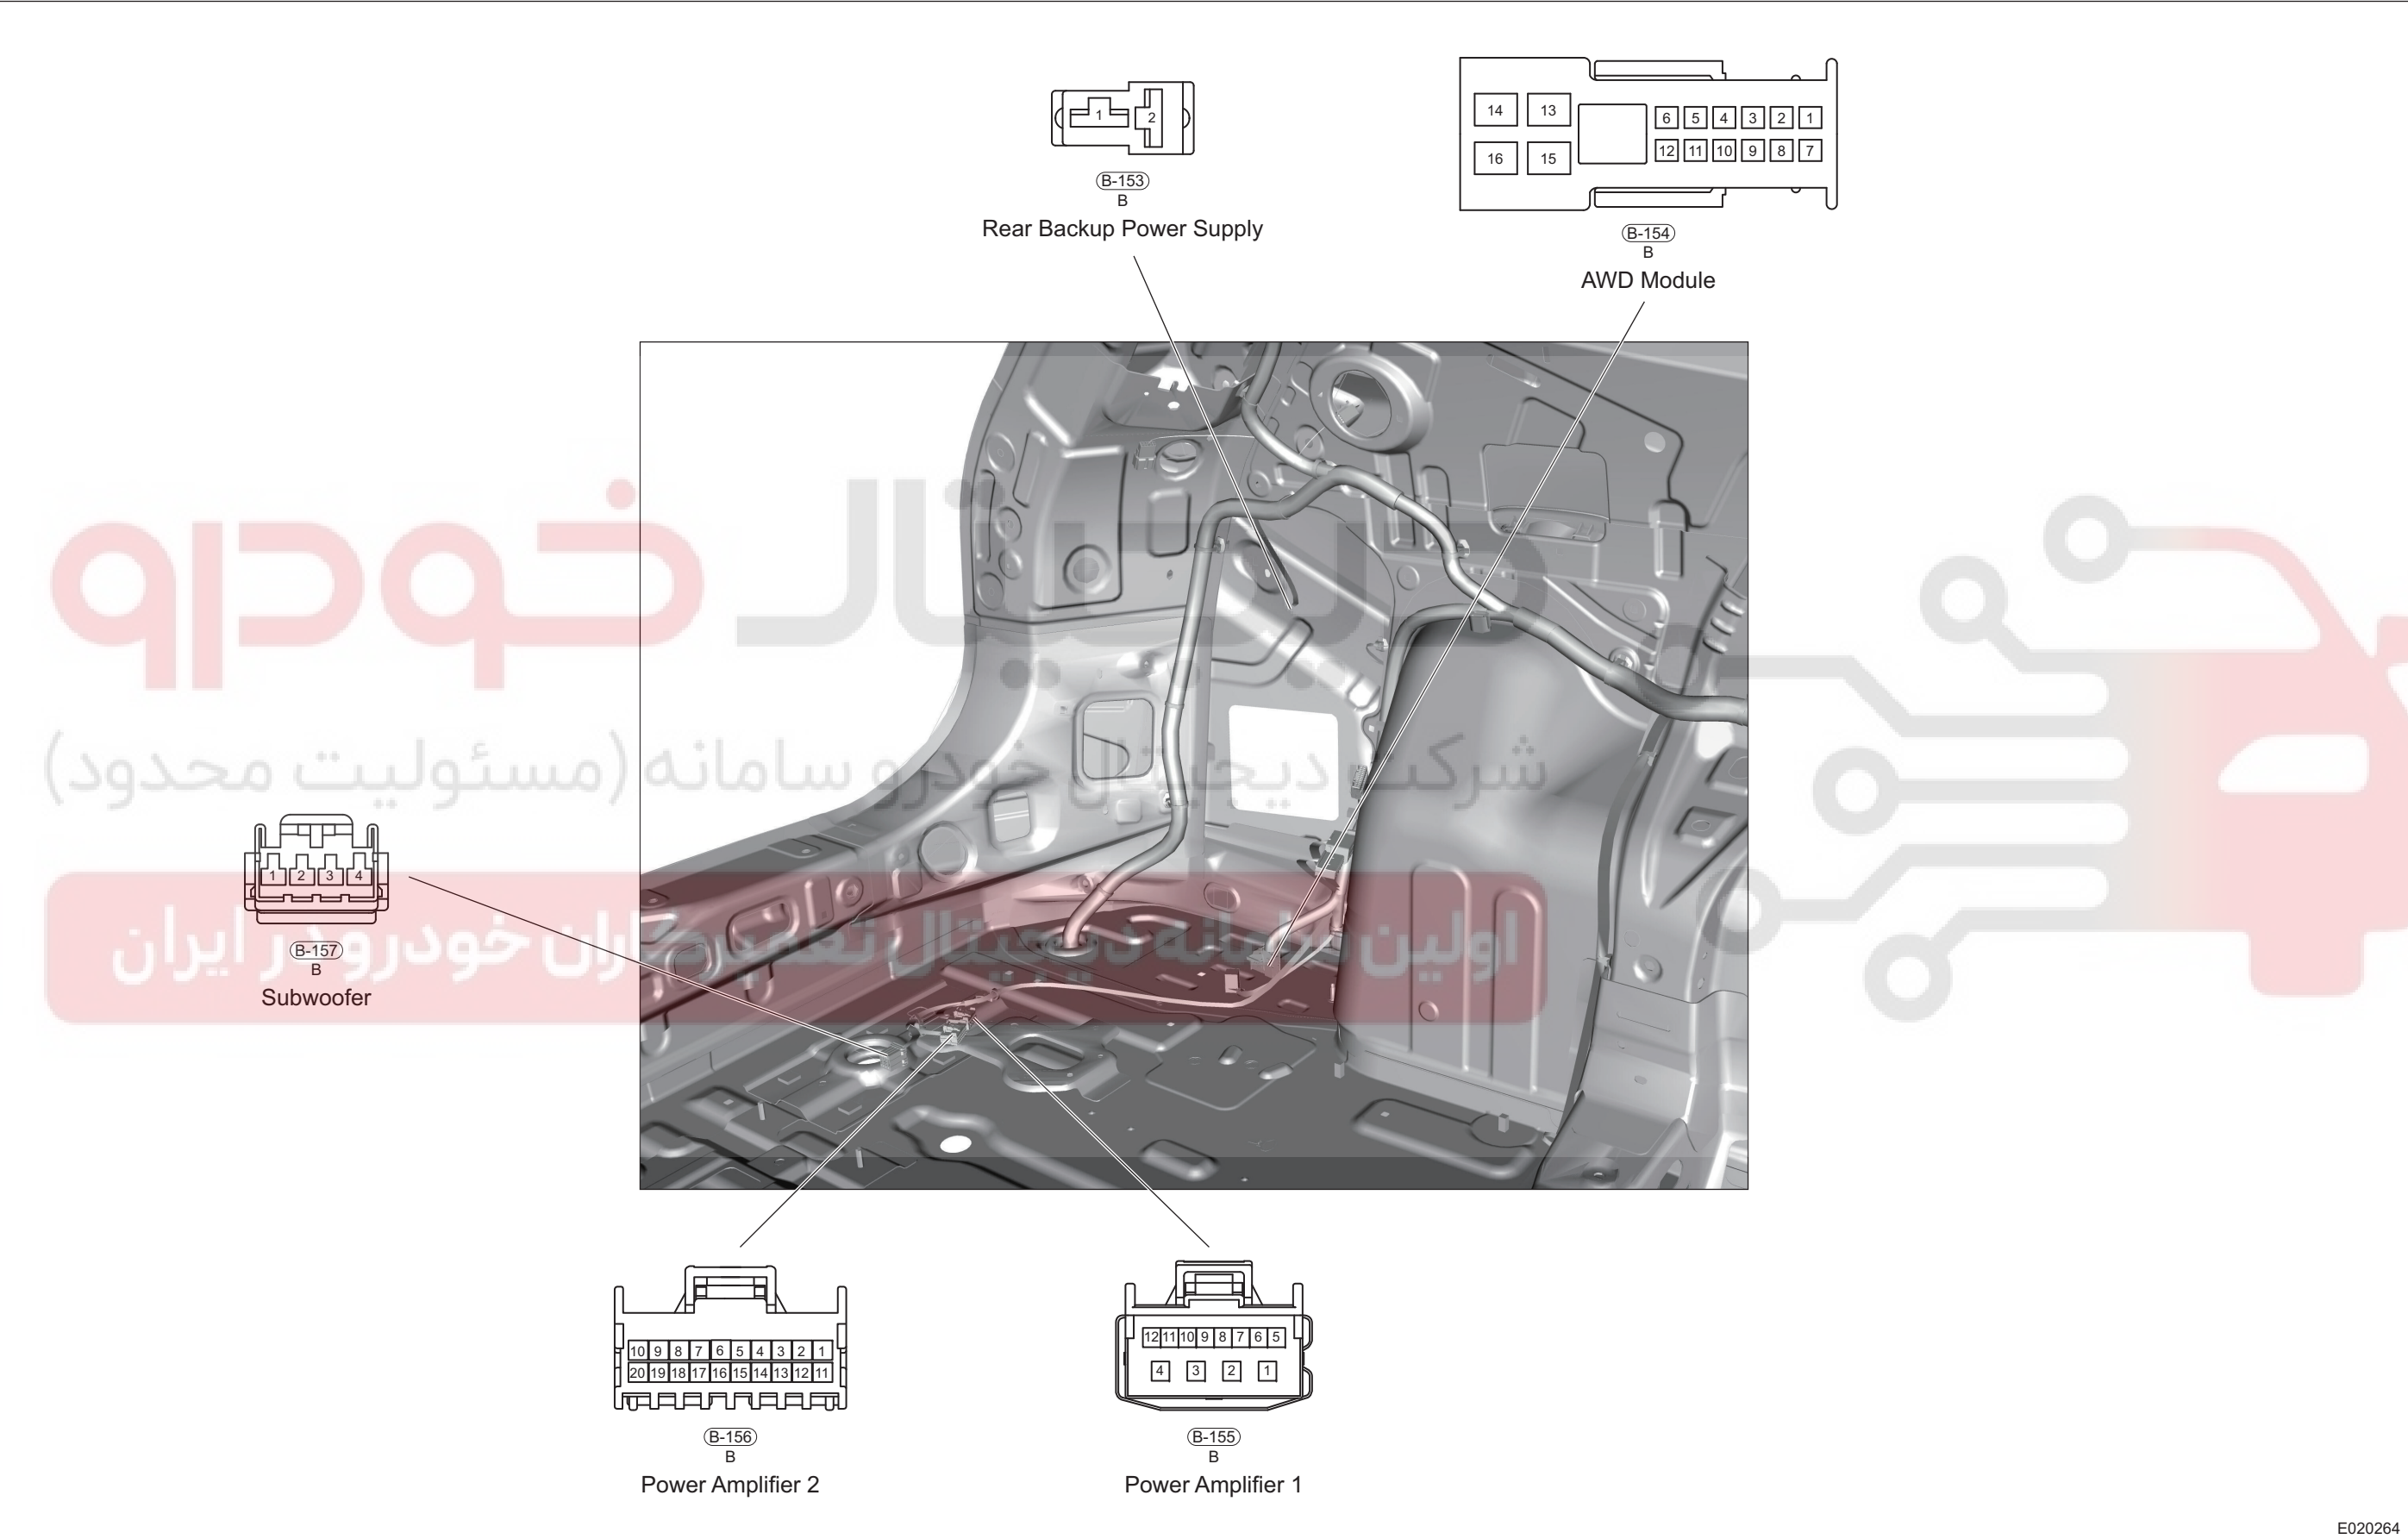


E020264

 3.16. Interior Wire Harness Connector Position Diagram

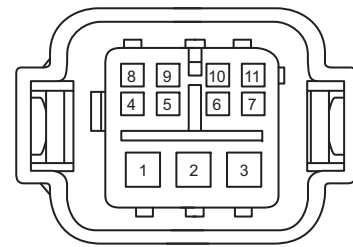


(B-158)
B
4WD Motor

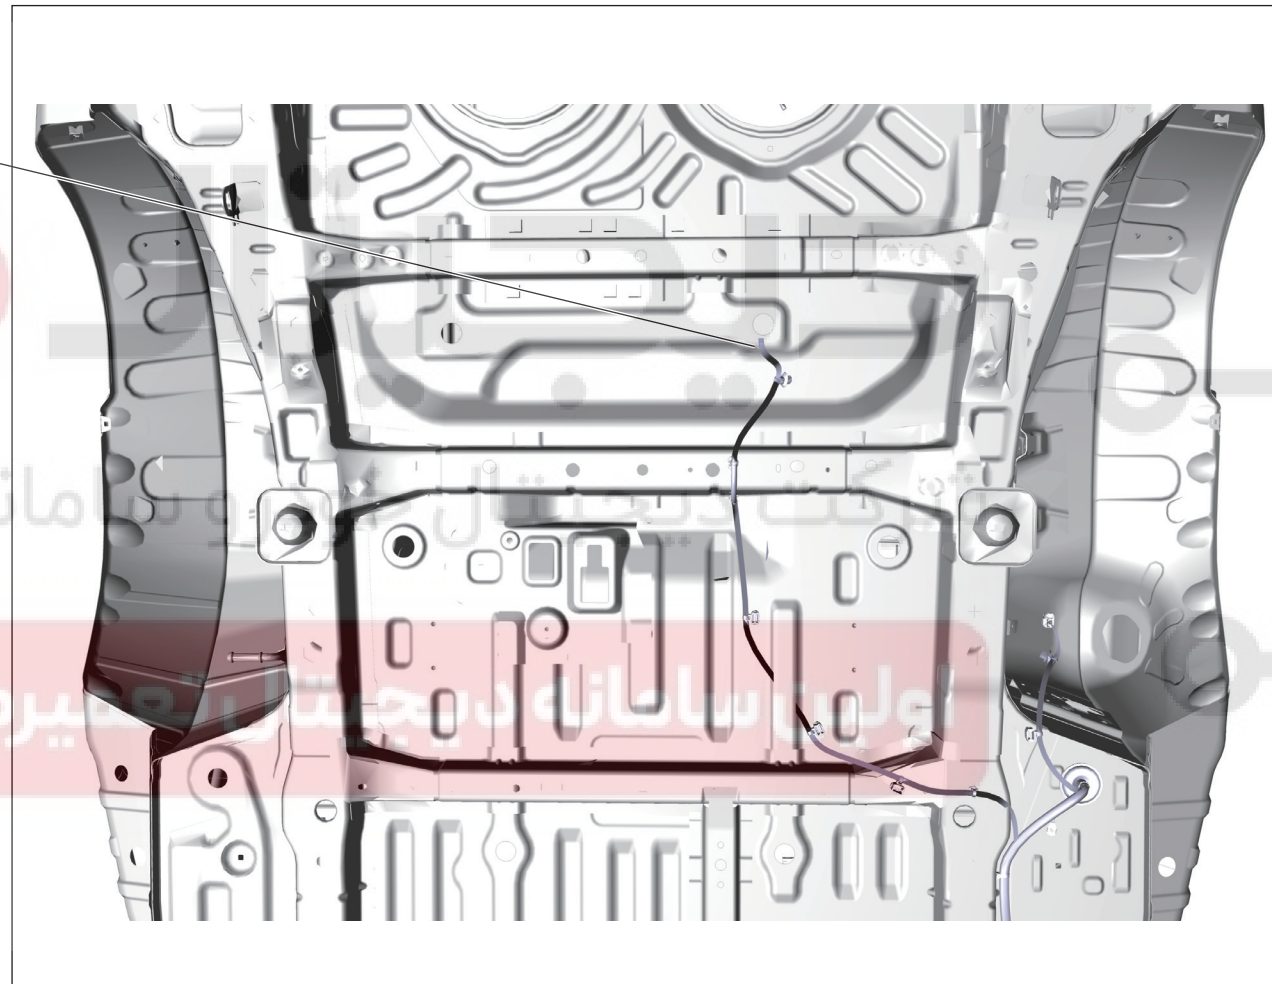 


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.17. Interior Wire Harness Connector Position Diagram




(B-159)
B

 Front Passenger Power Seat

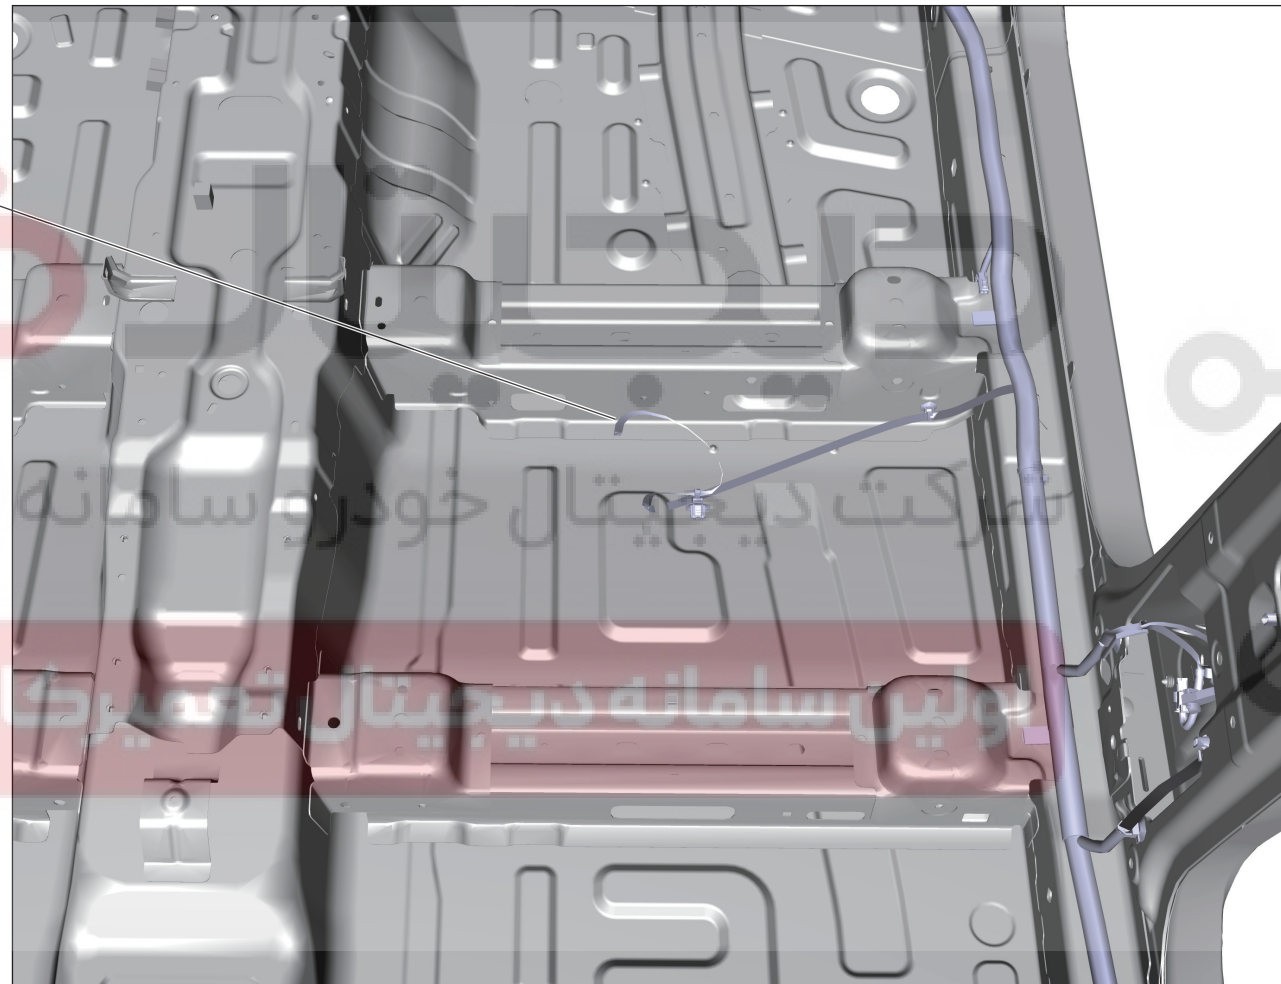

E020266

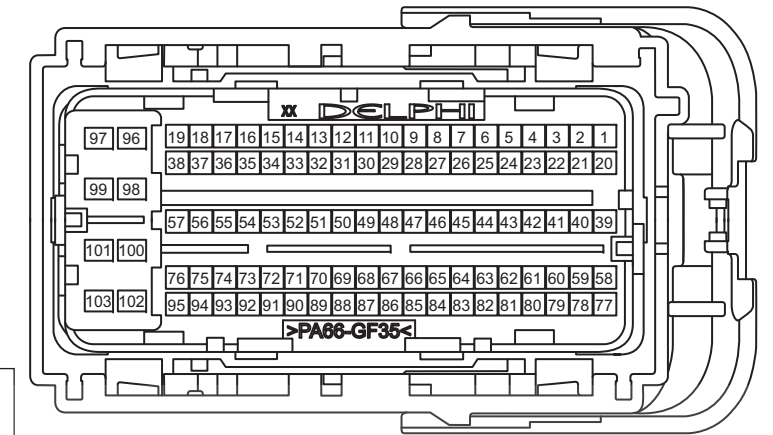 


B-139
B
EMS-A



Electric Vacuum Pump 2.0T


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.19. Interior Wire Harness Connector Position Diagram

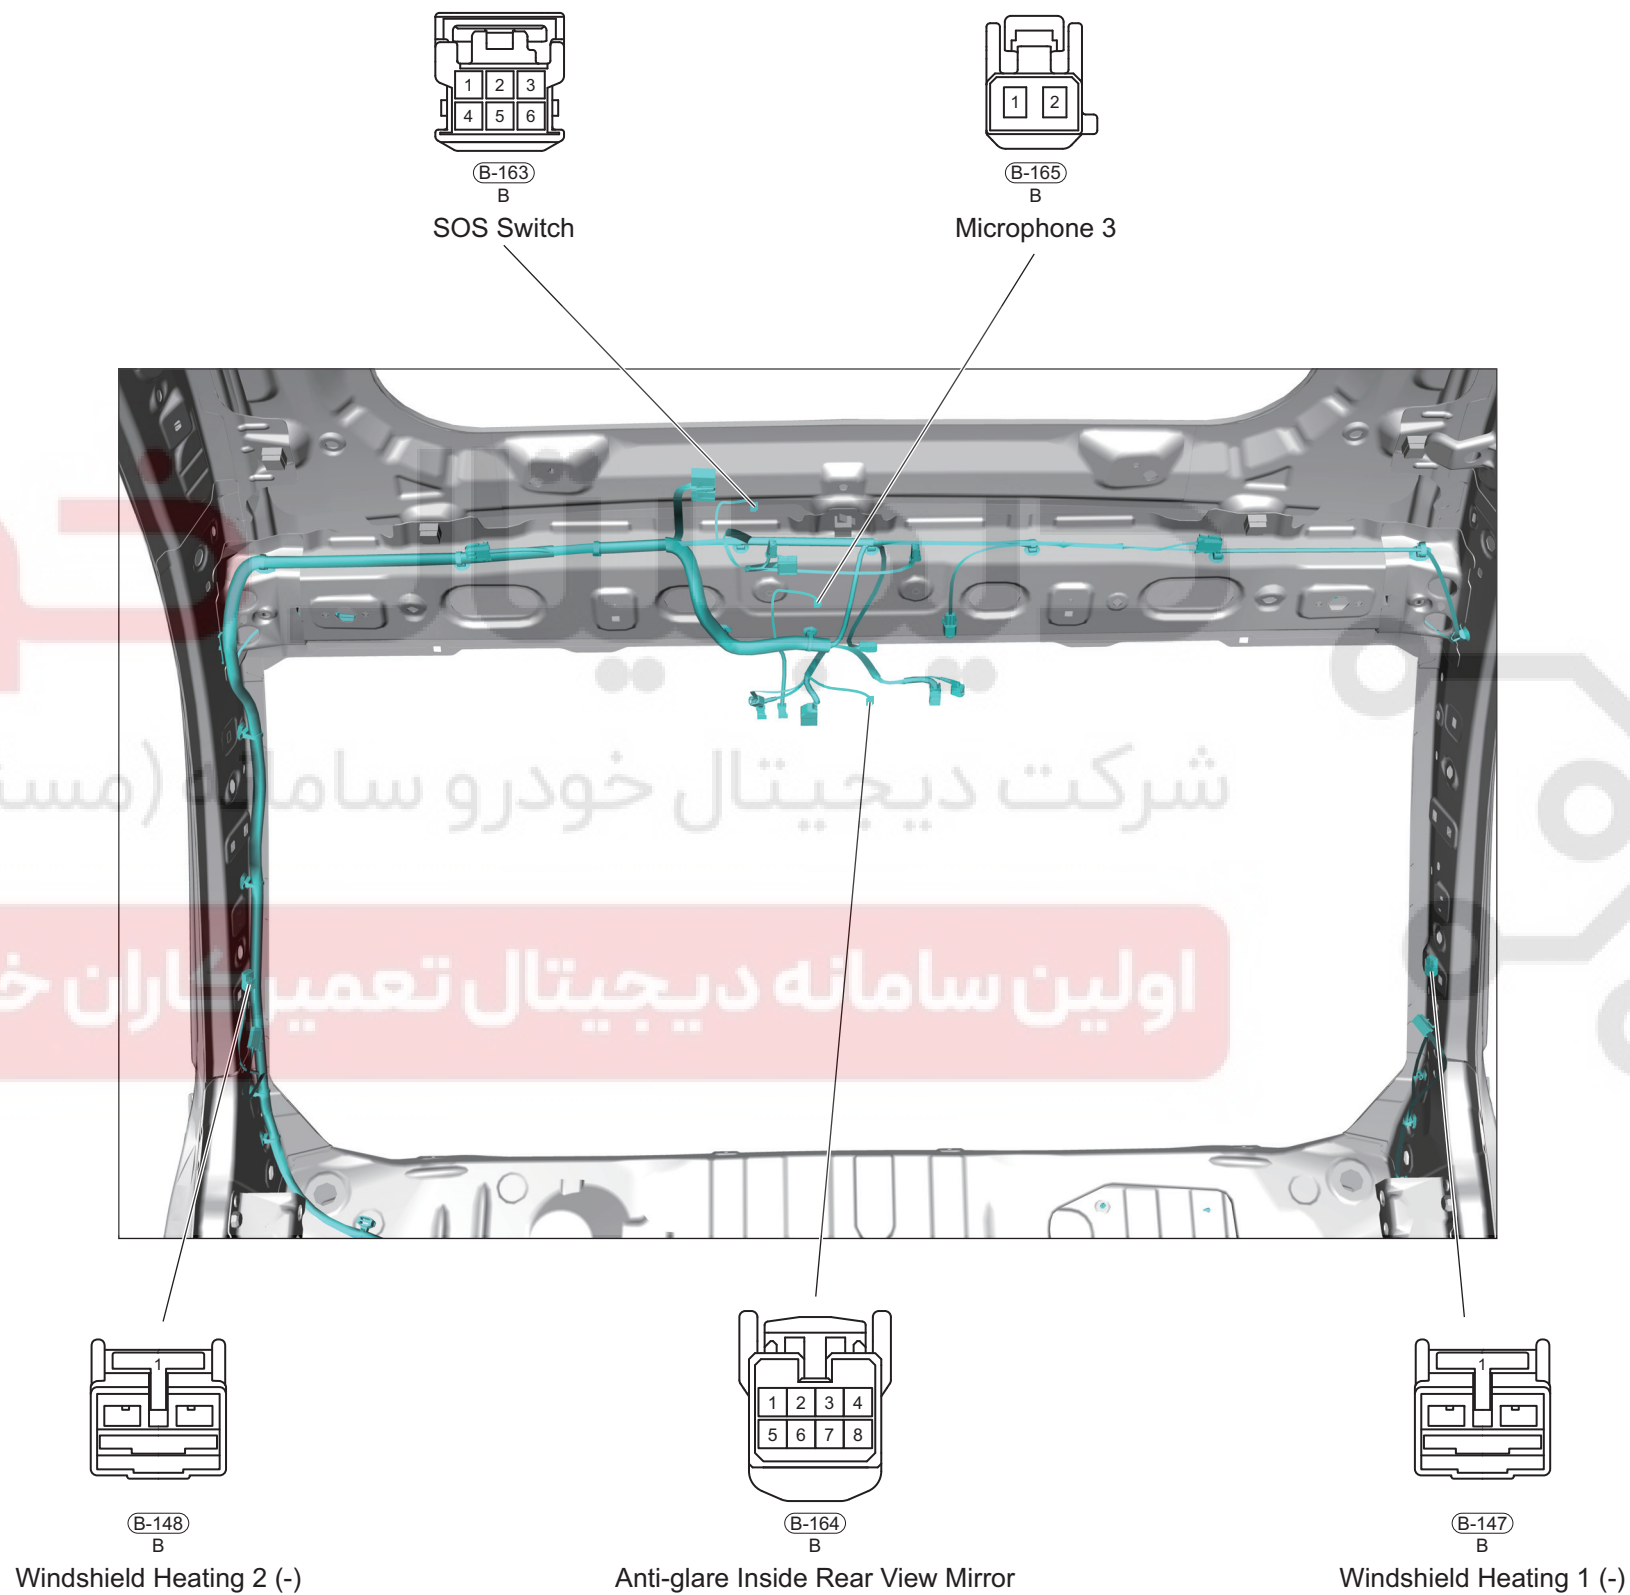

E020268

 
3.20. Interior Wire Harness Connector Position Diagram

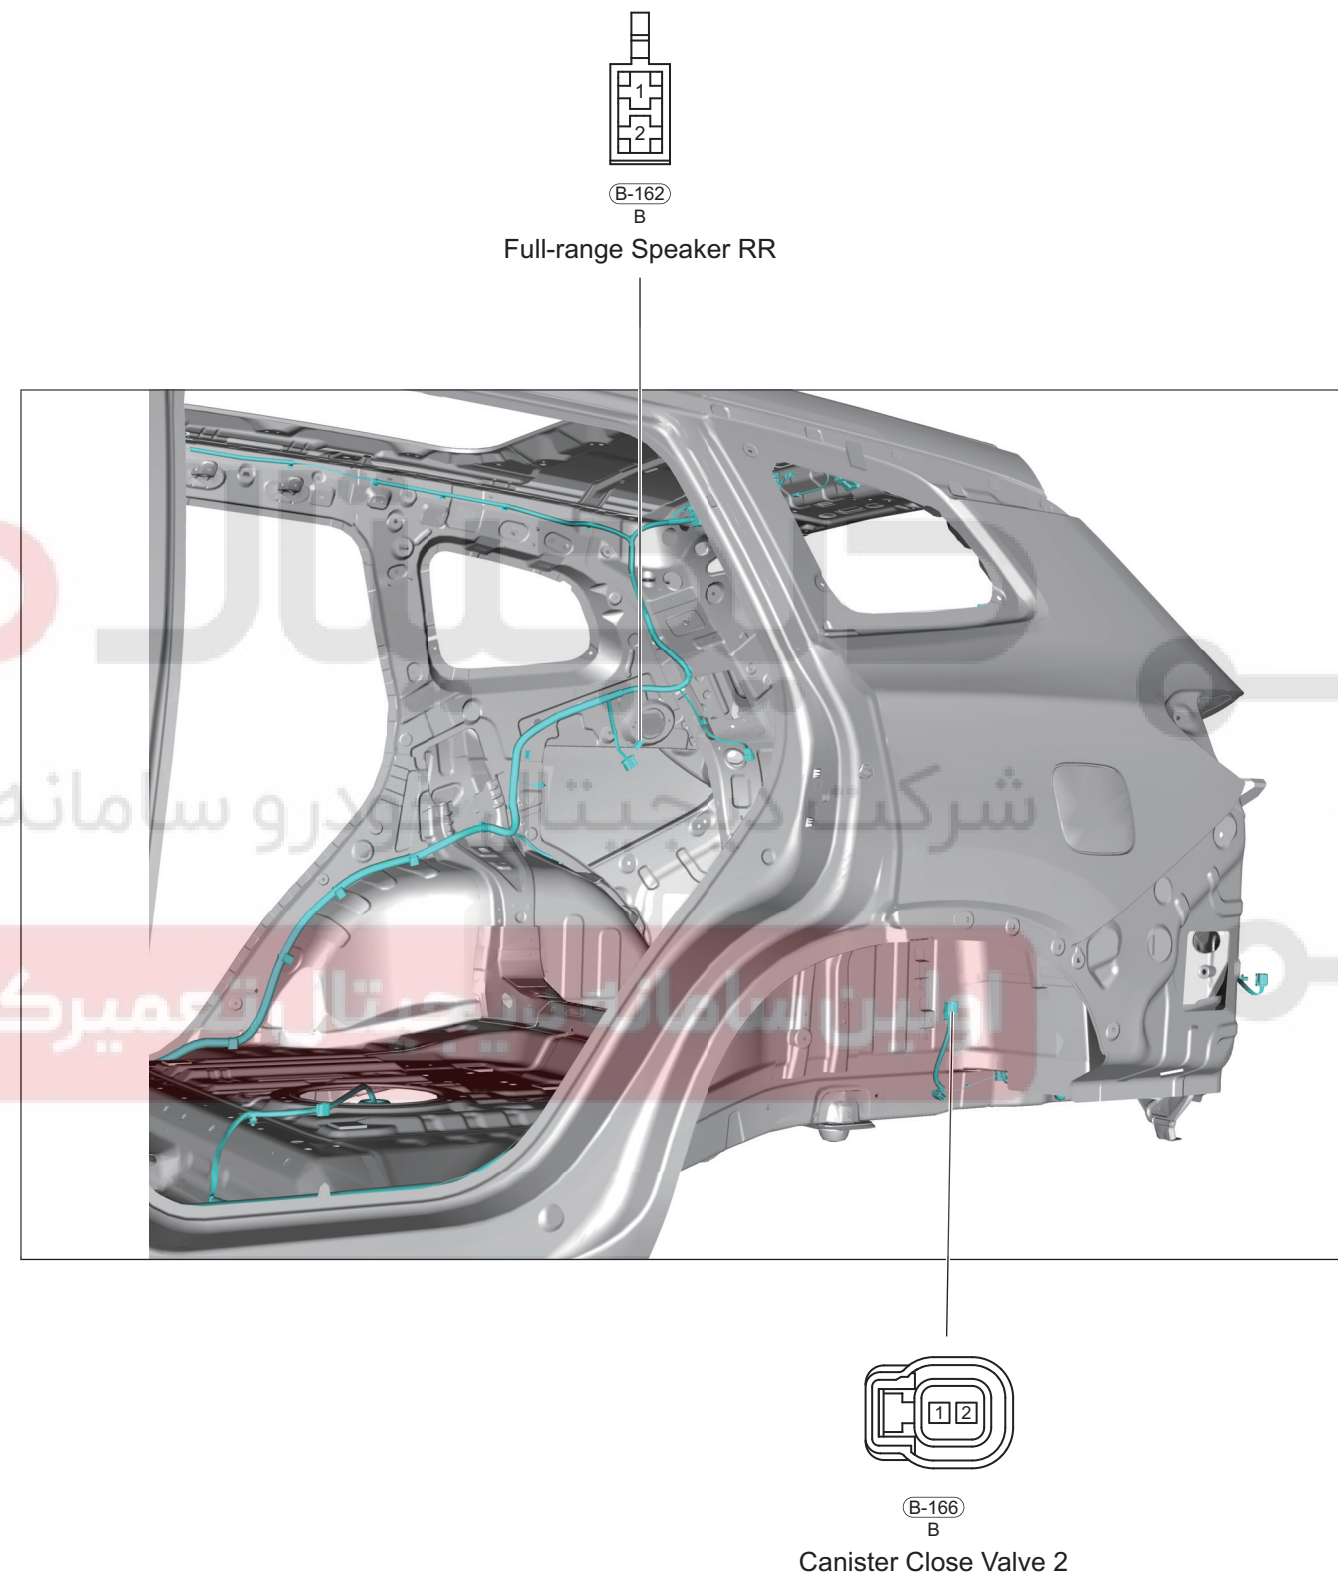

E020269


CHAPTER 2. WIRE HARNESS DIAGRAM

 3.21. Interior Wire Harness Connector Position Diagram

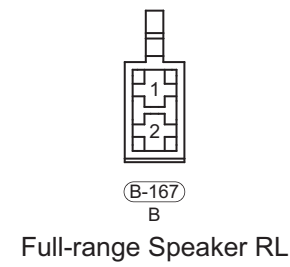

E020251

 
3.22. Interior Wire Harness Connector Position Diagram

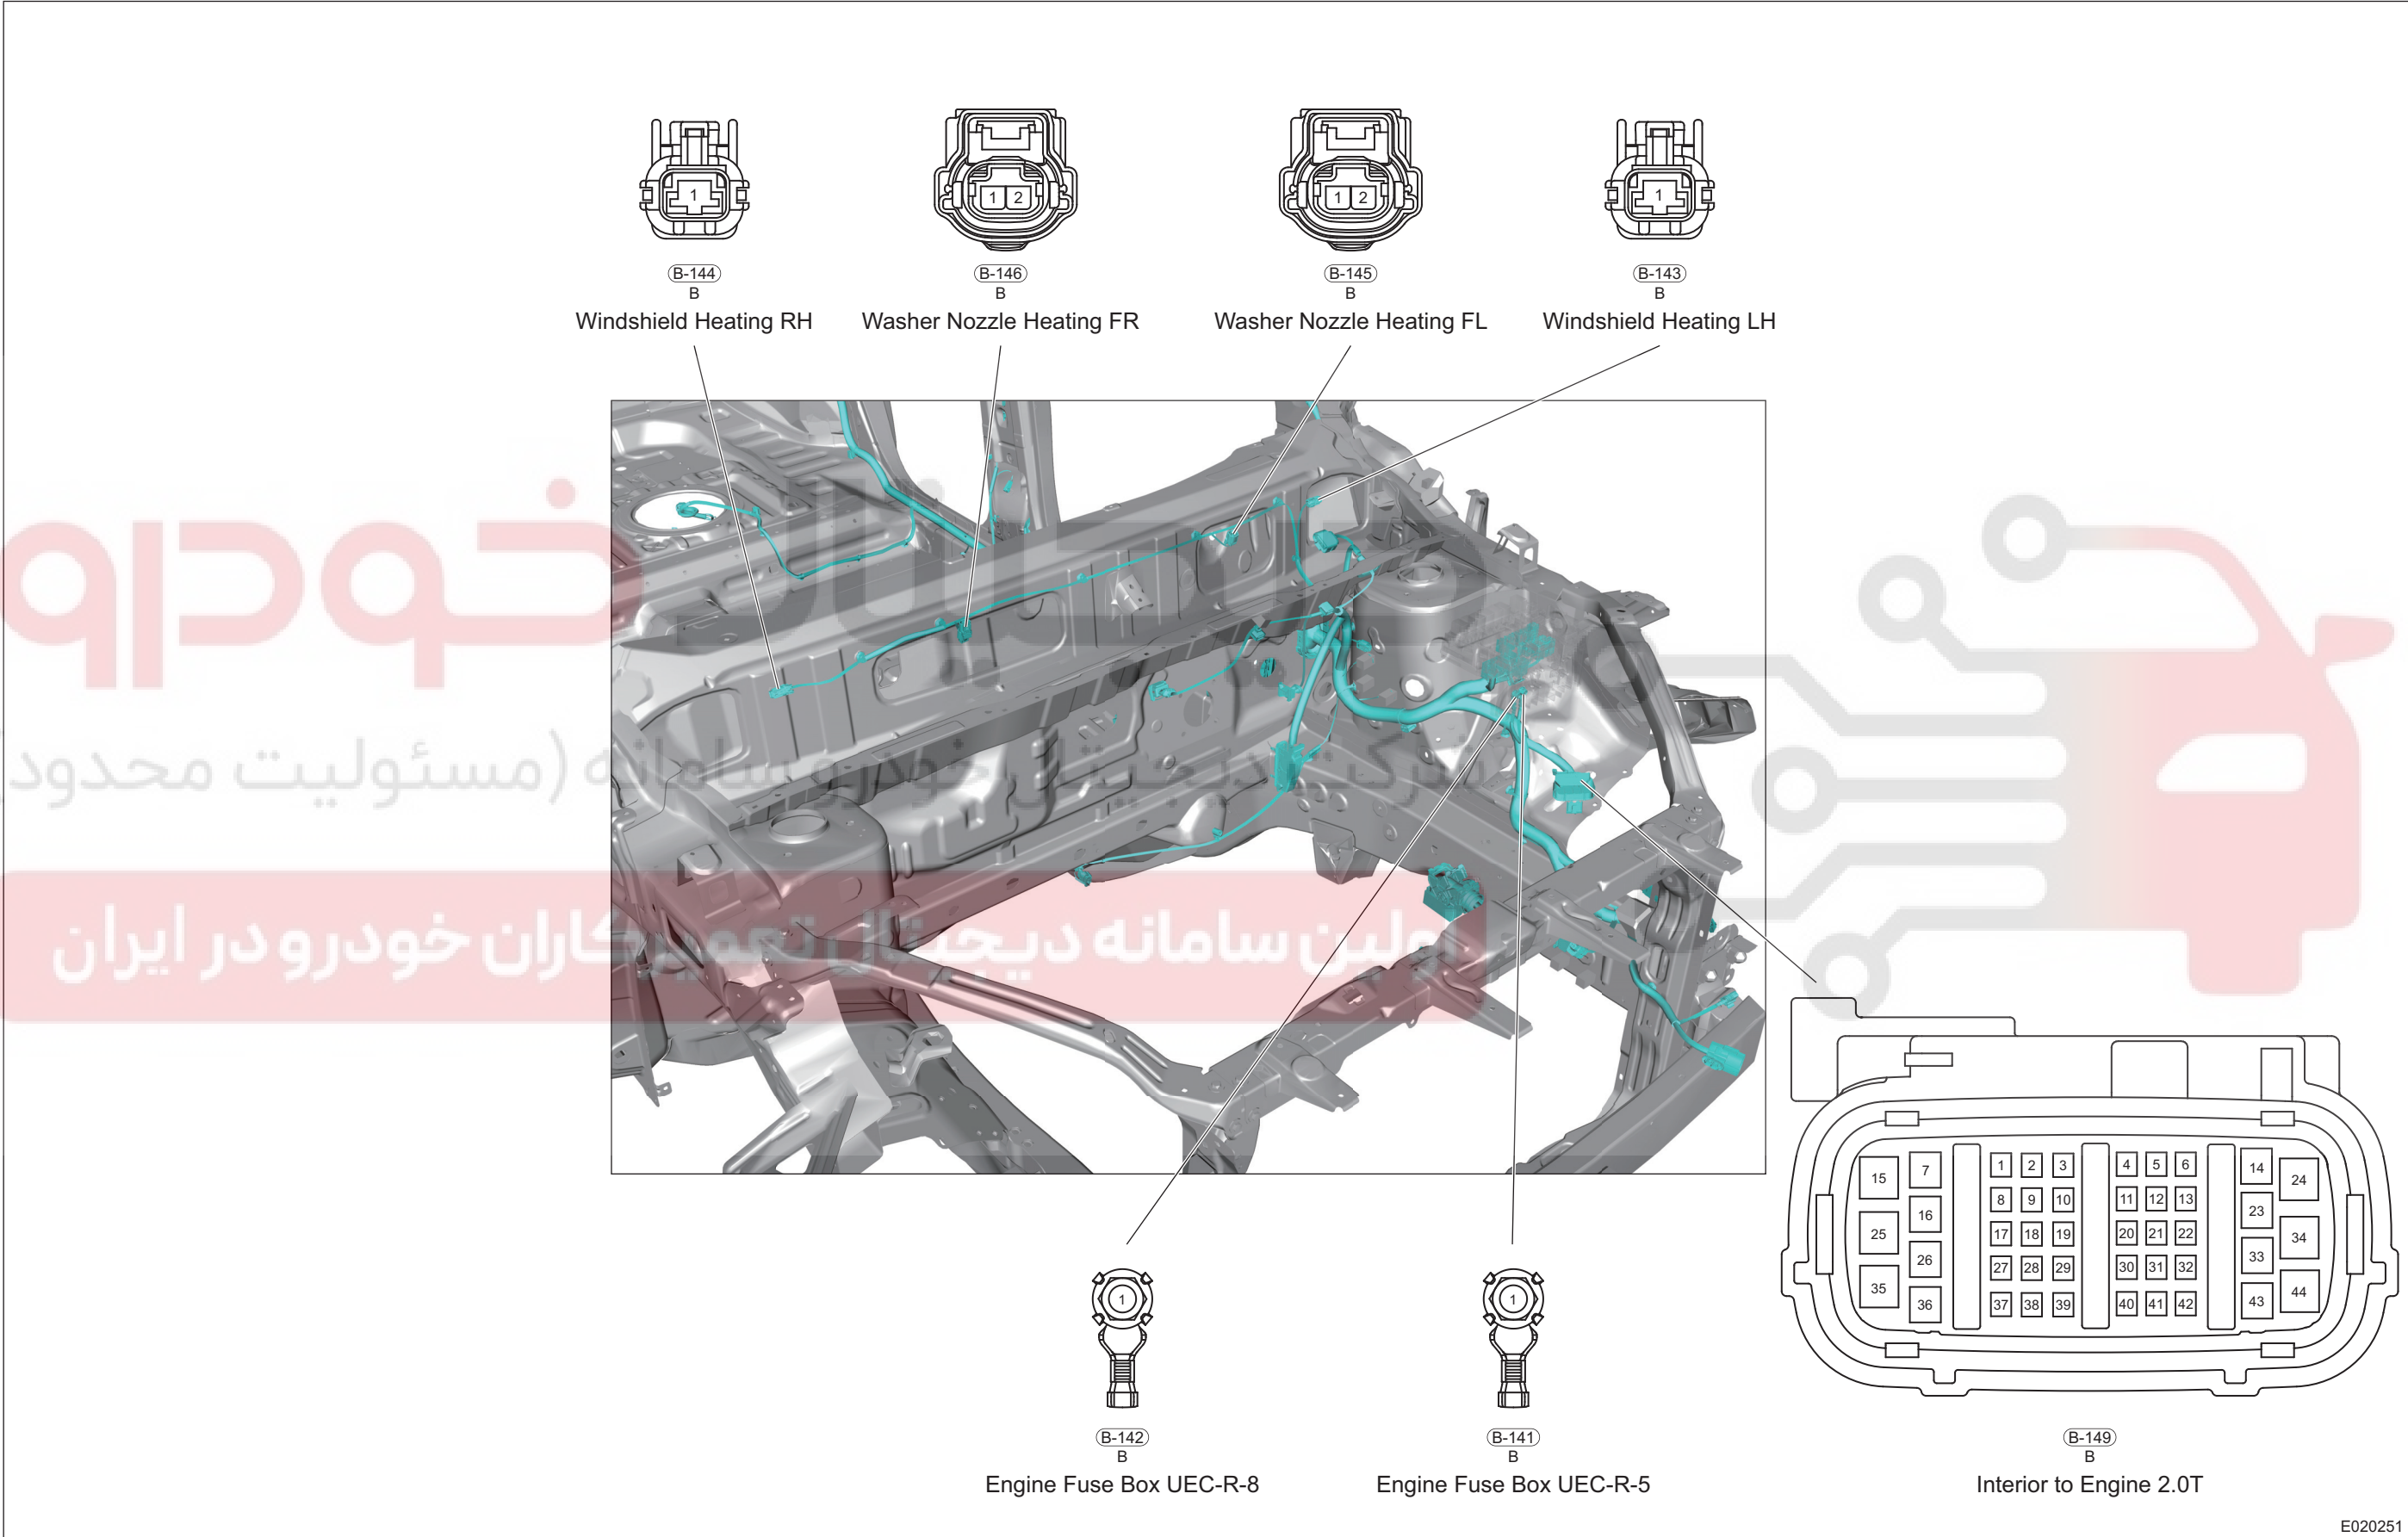

E020251


CHAPTER 2. WIRE HARNESS DIAGRAM

 (4). IP Wire Harness Diagram
4.1. IP Wire Harness Connector Position Diagram

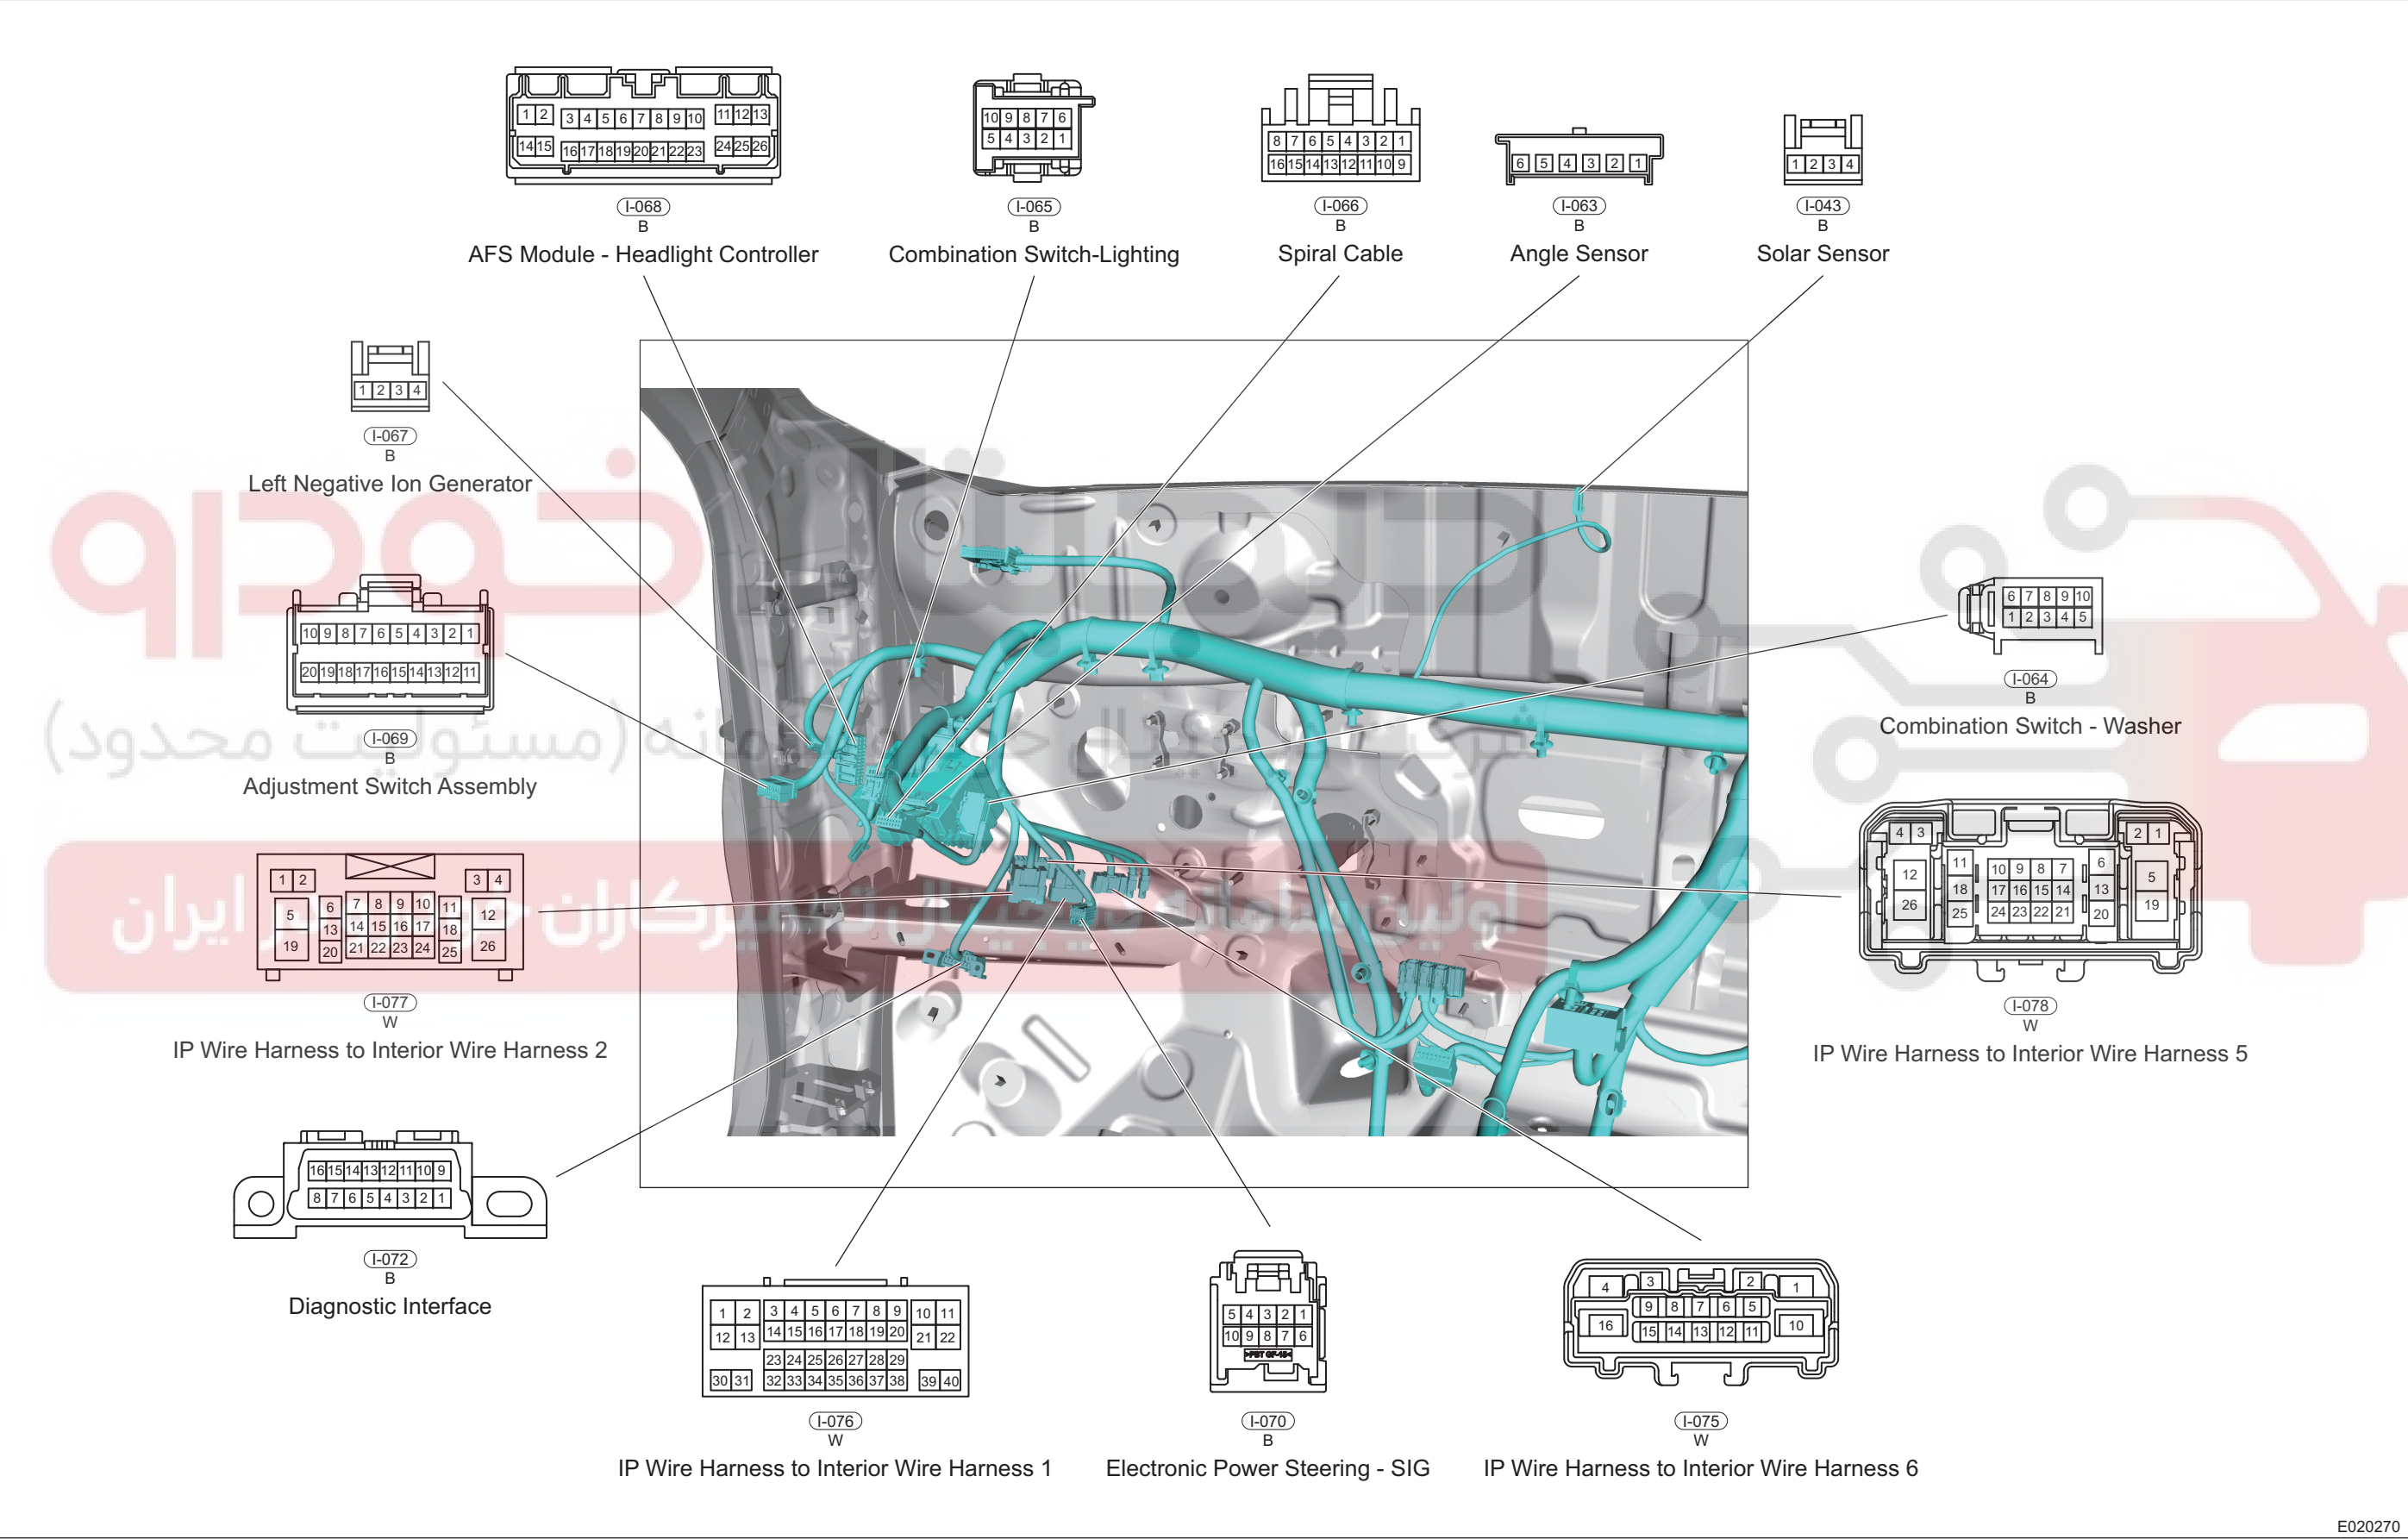

E020270

 
4.2. IP Wire Harness Connector Position Diagram

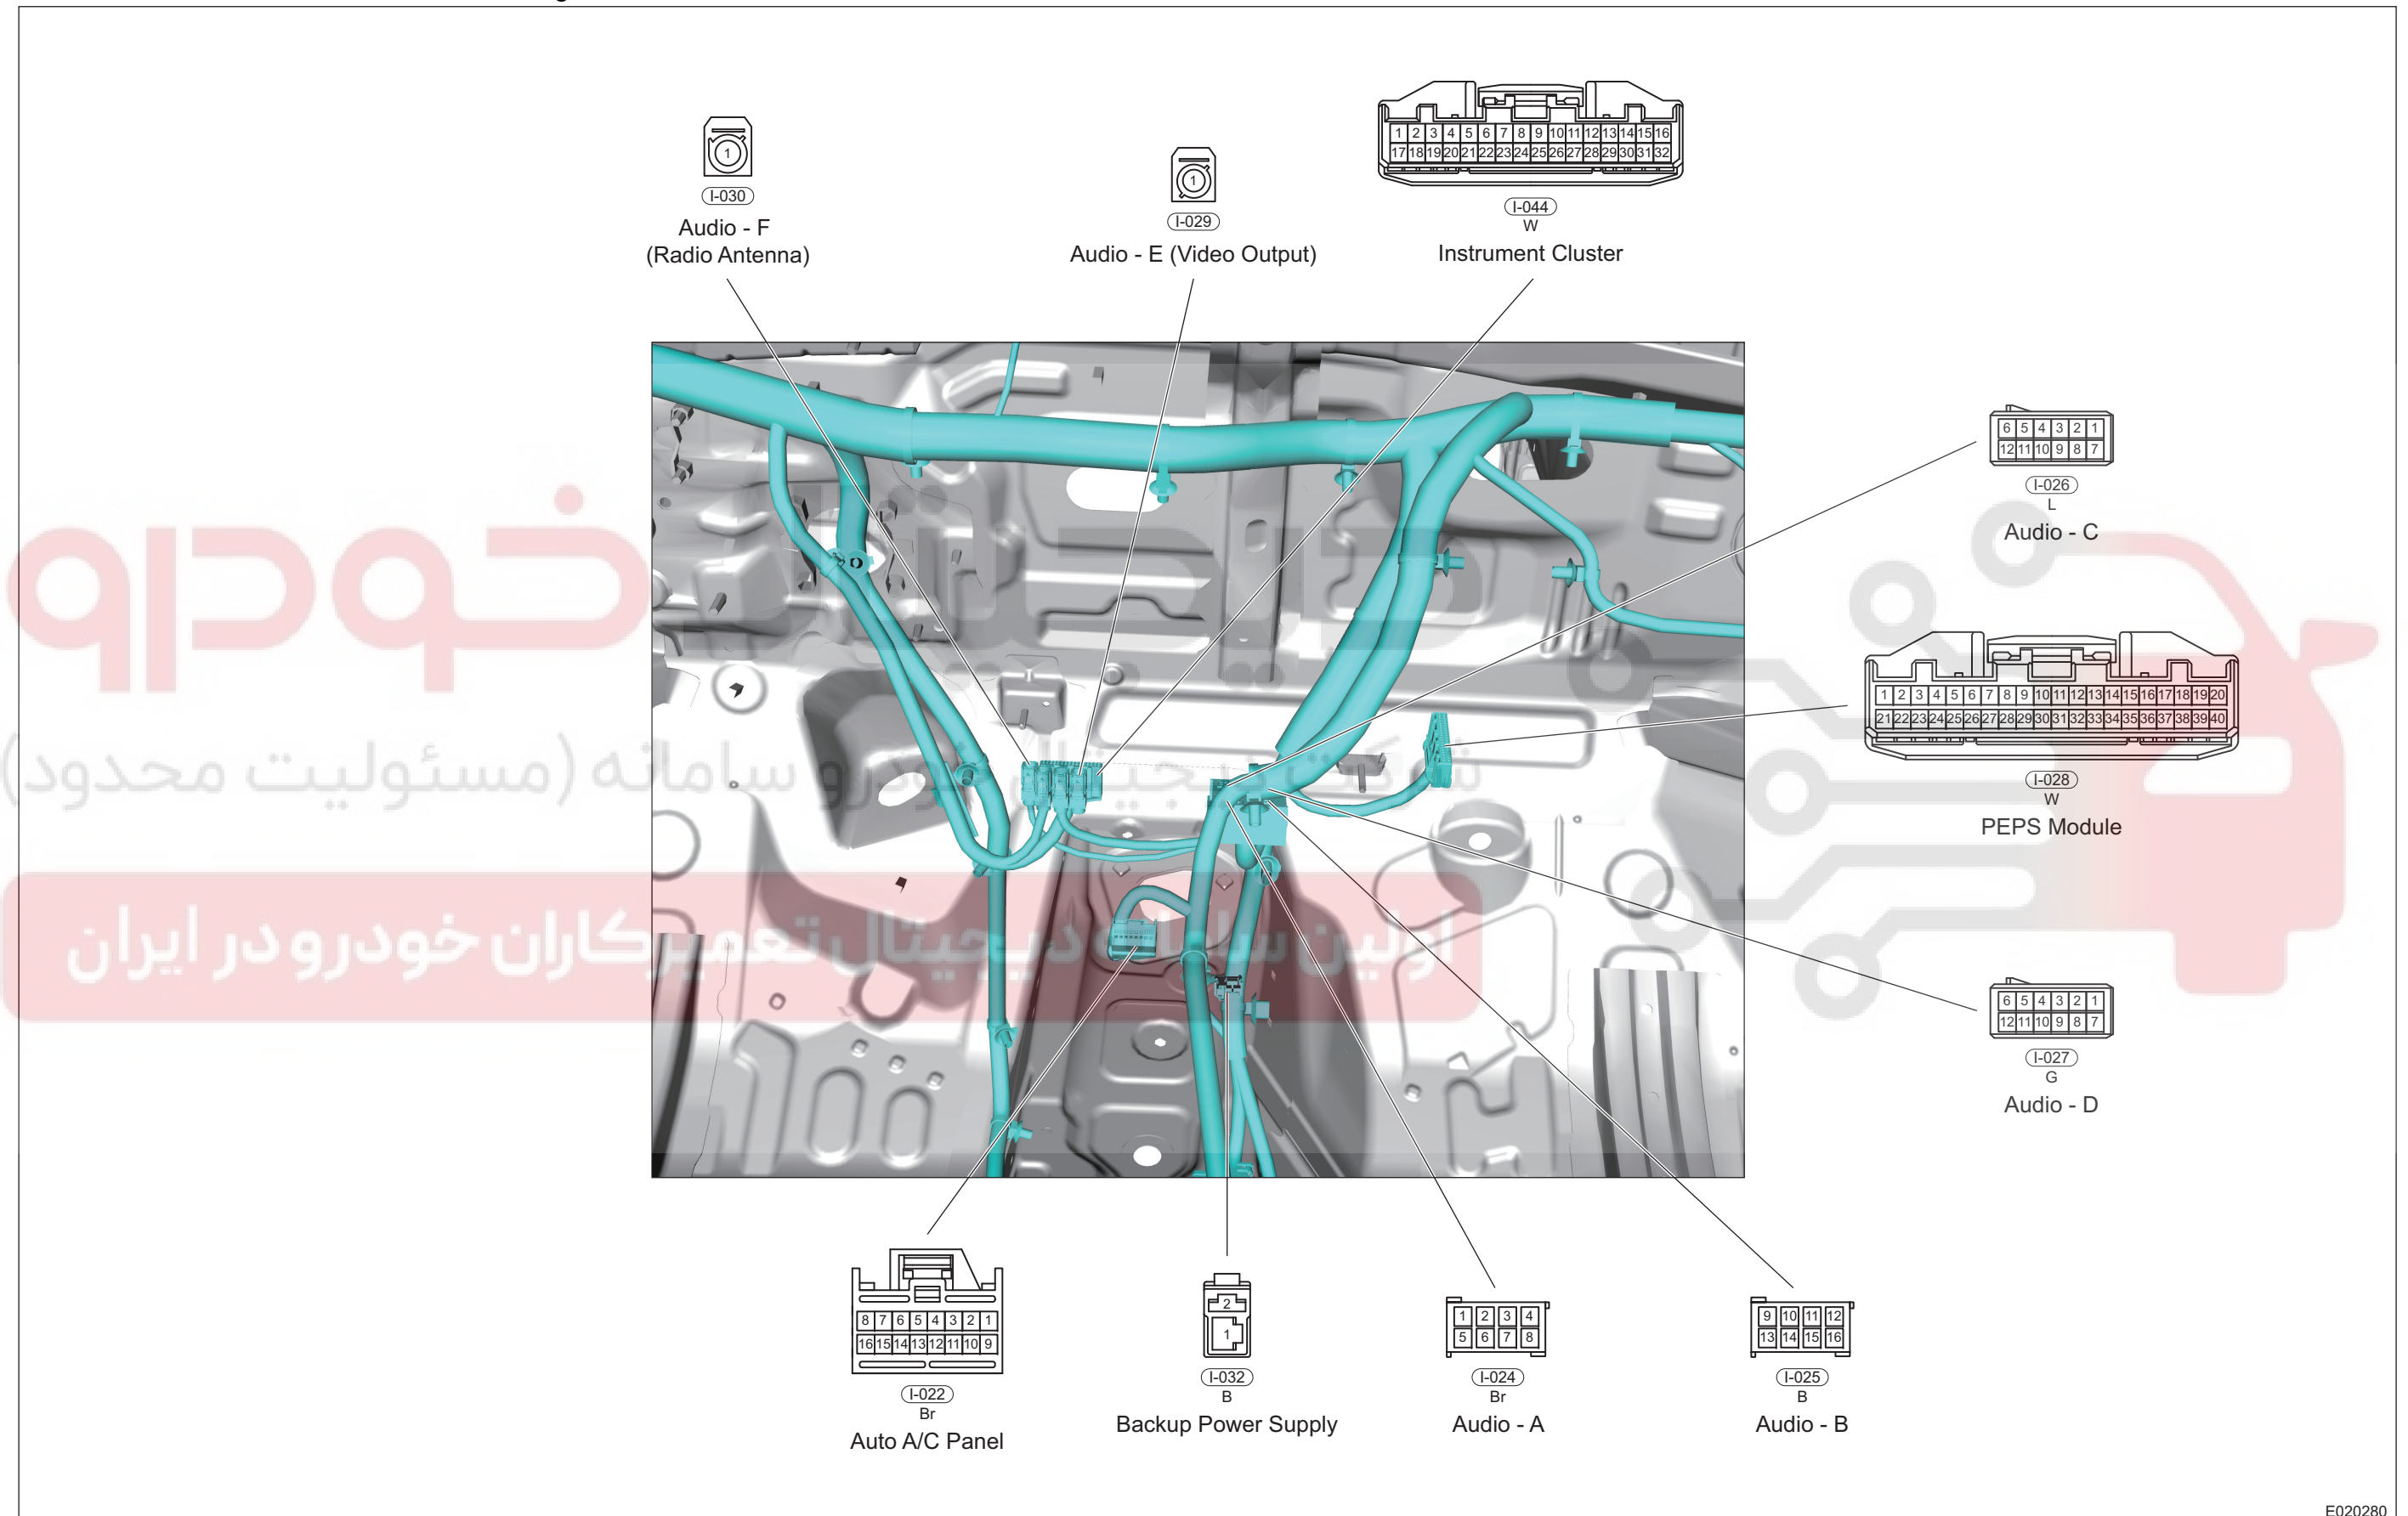

E020280

CHAPTER 2. WIRE HARNESS DIAGRAM

 
4.3. IP Wire Harness Connector Position Diagram

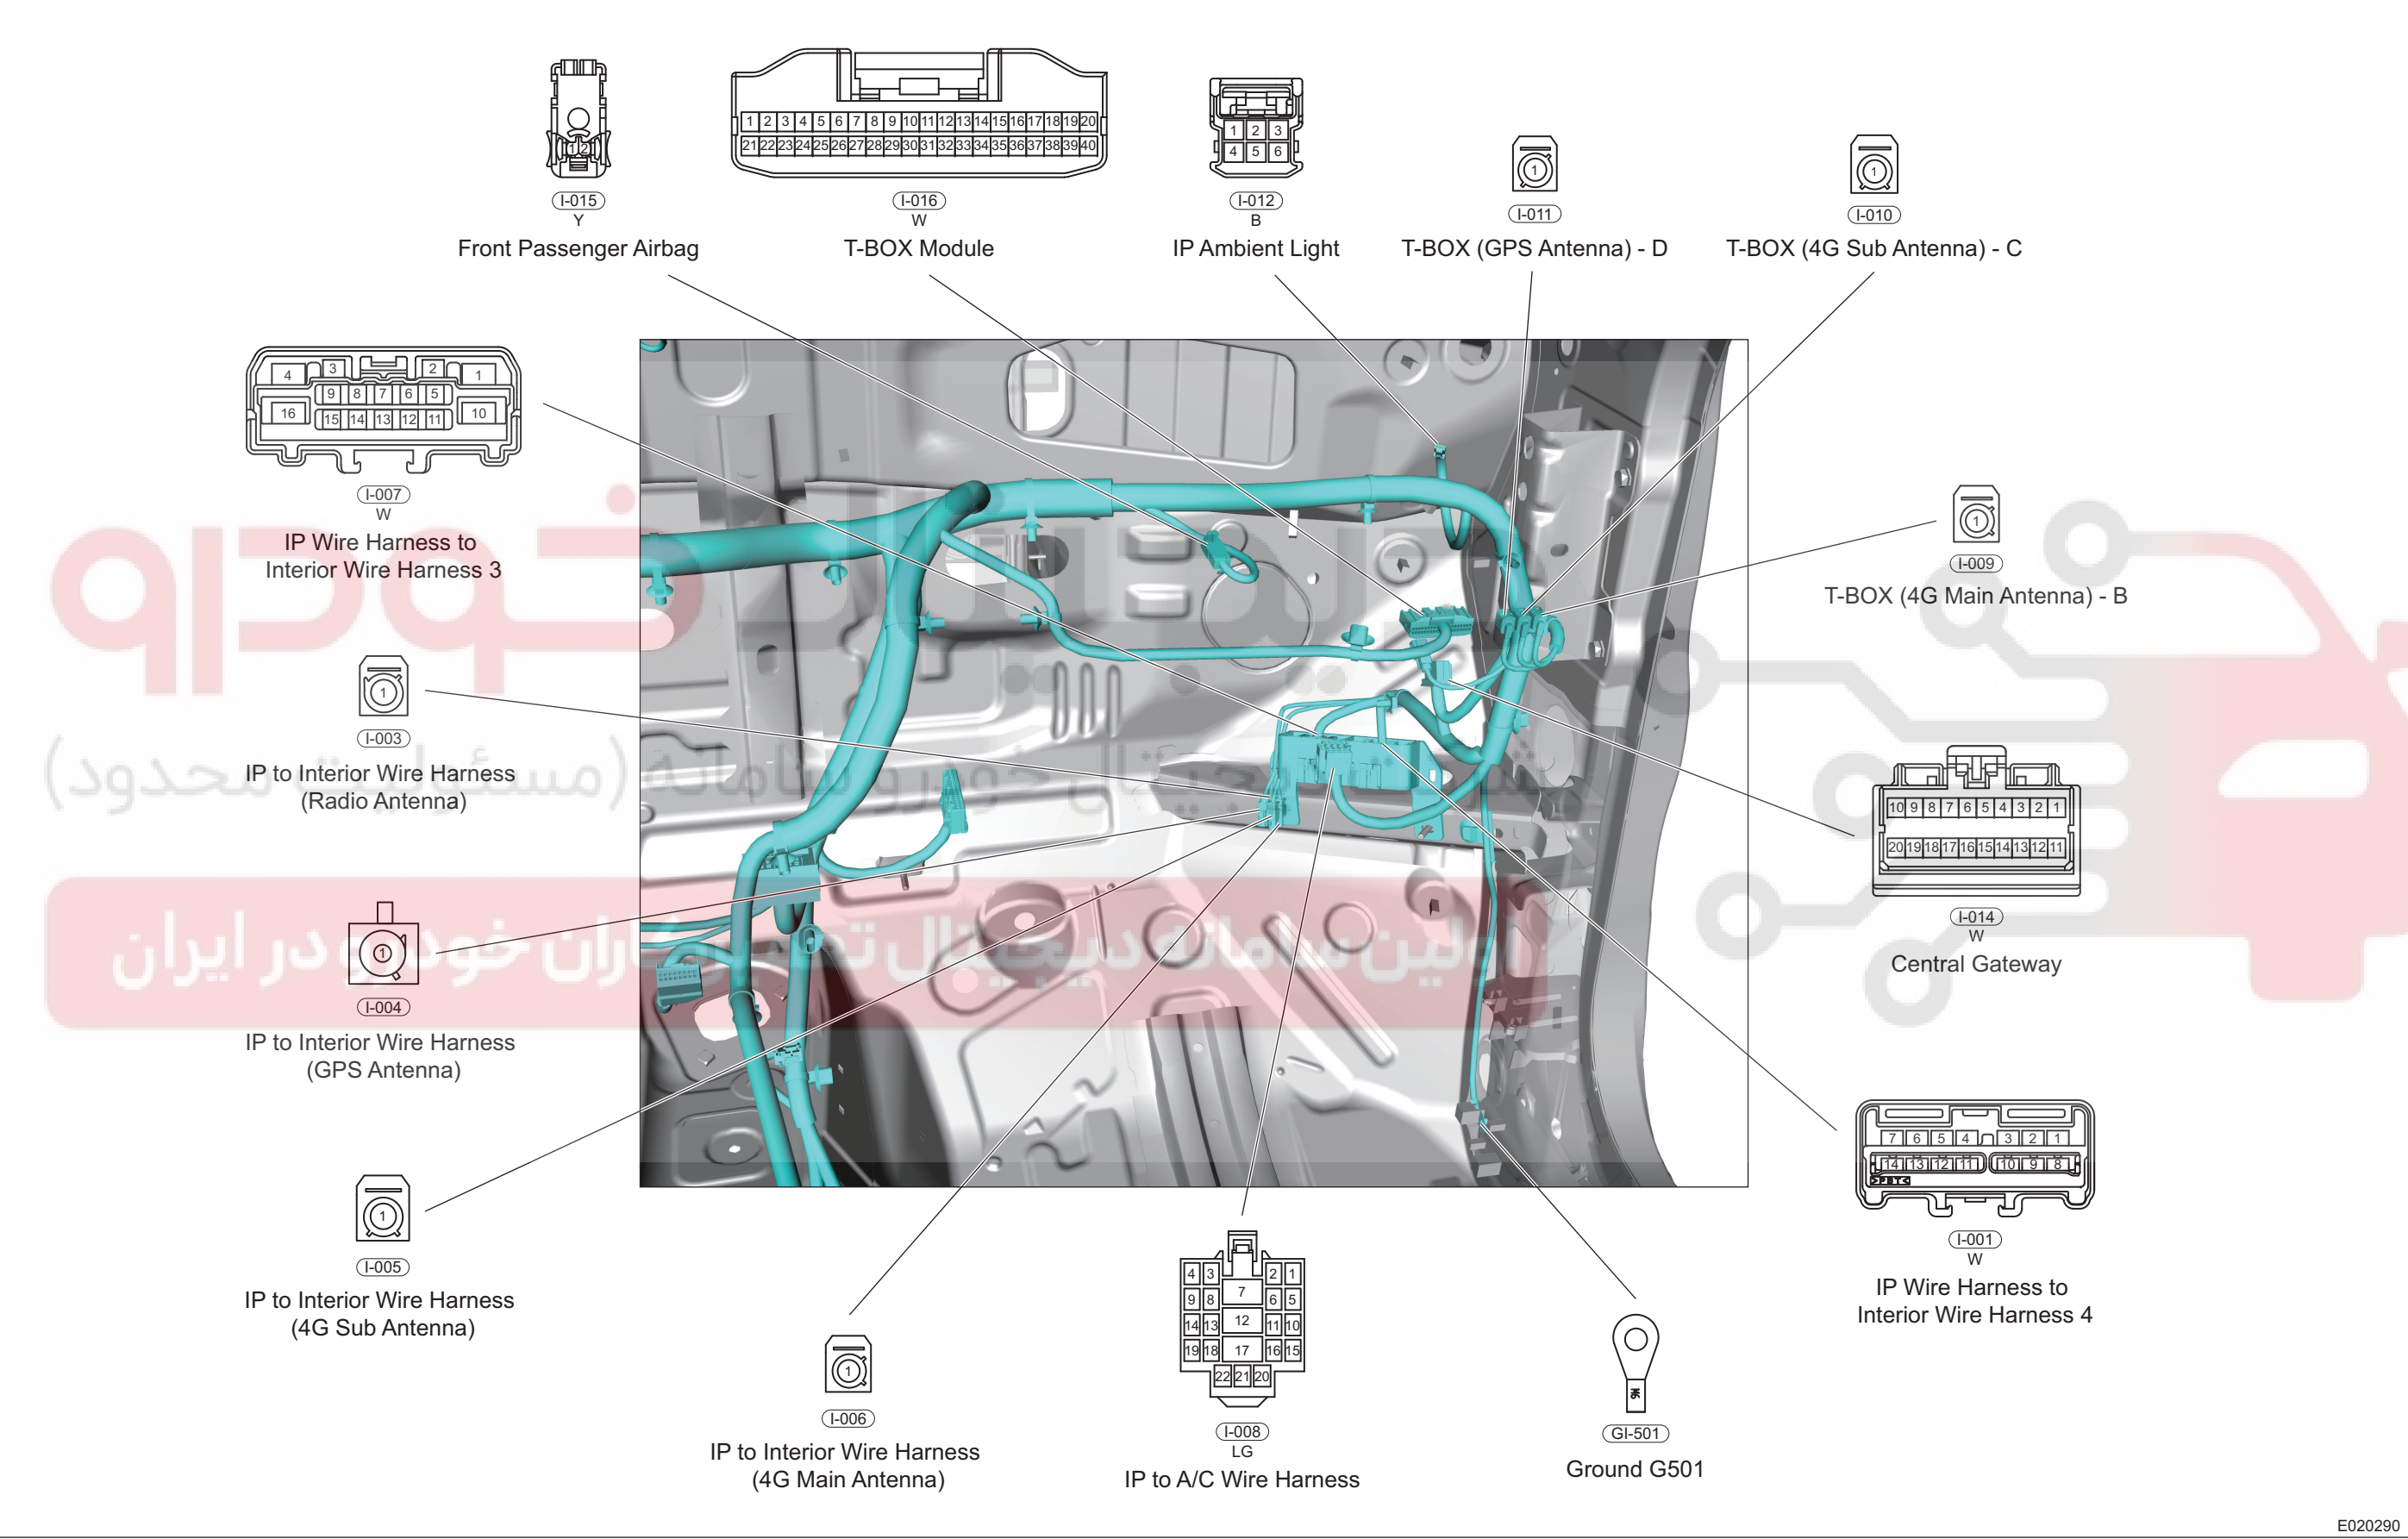

E020290

CHAPTER 2. WIRE HARNESS DIAGRAM

 
4.4. IP Wire Harness Connector Position Diagram

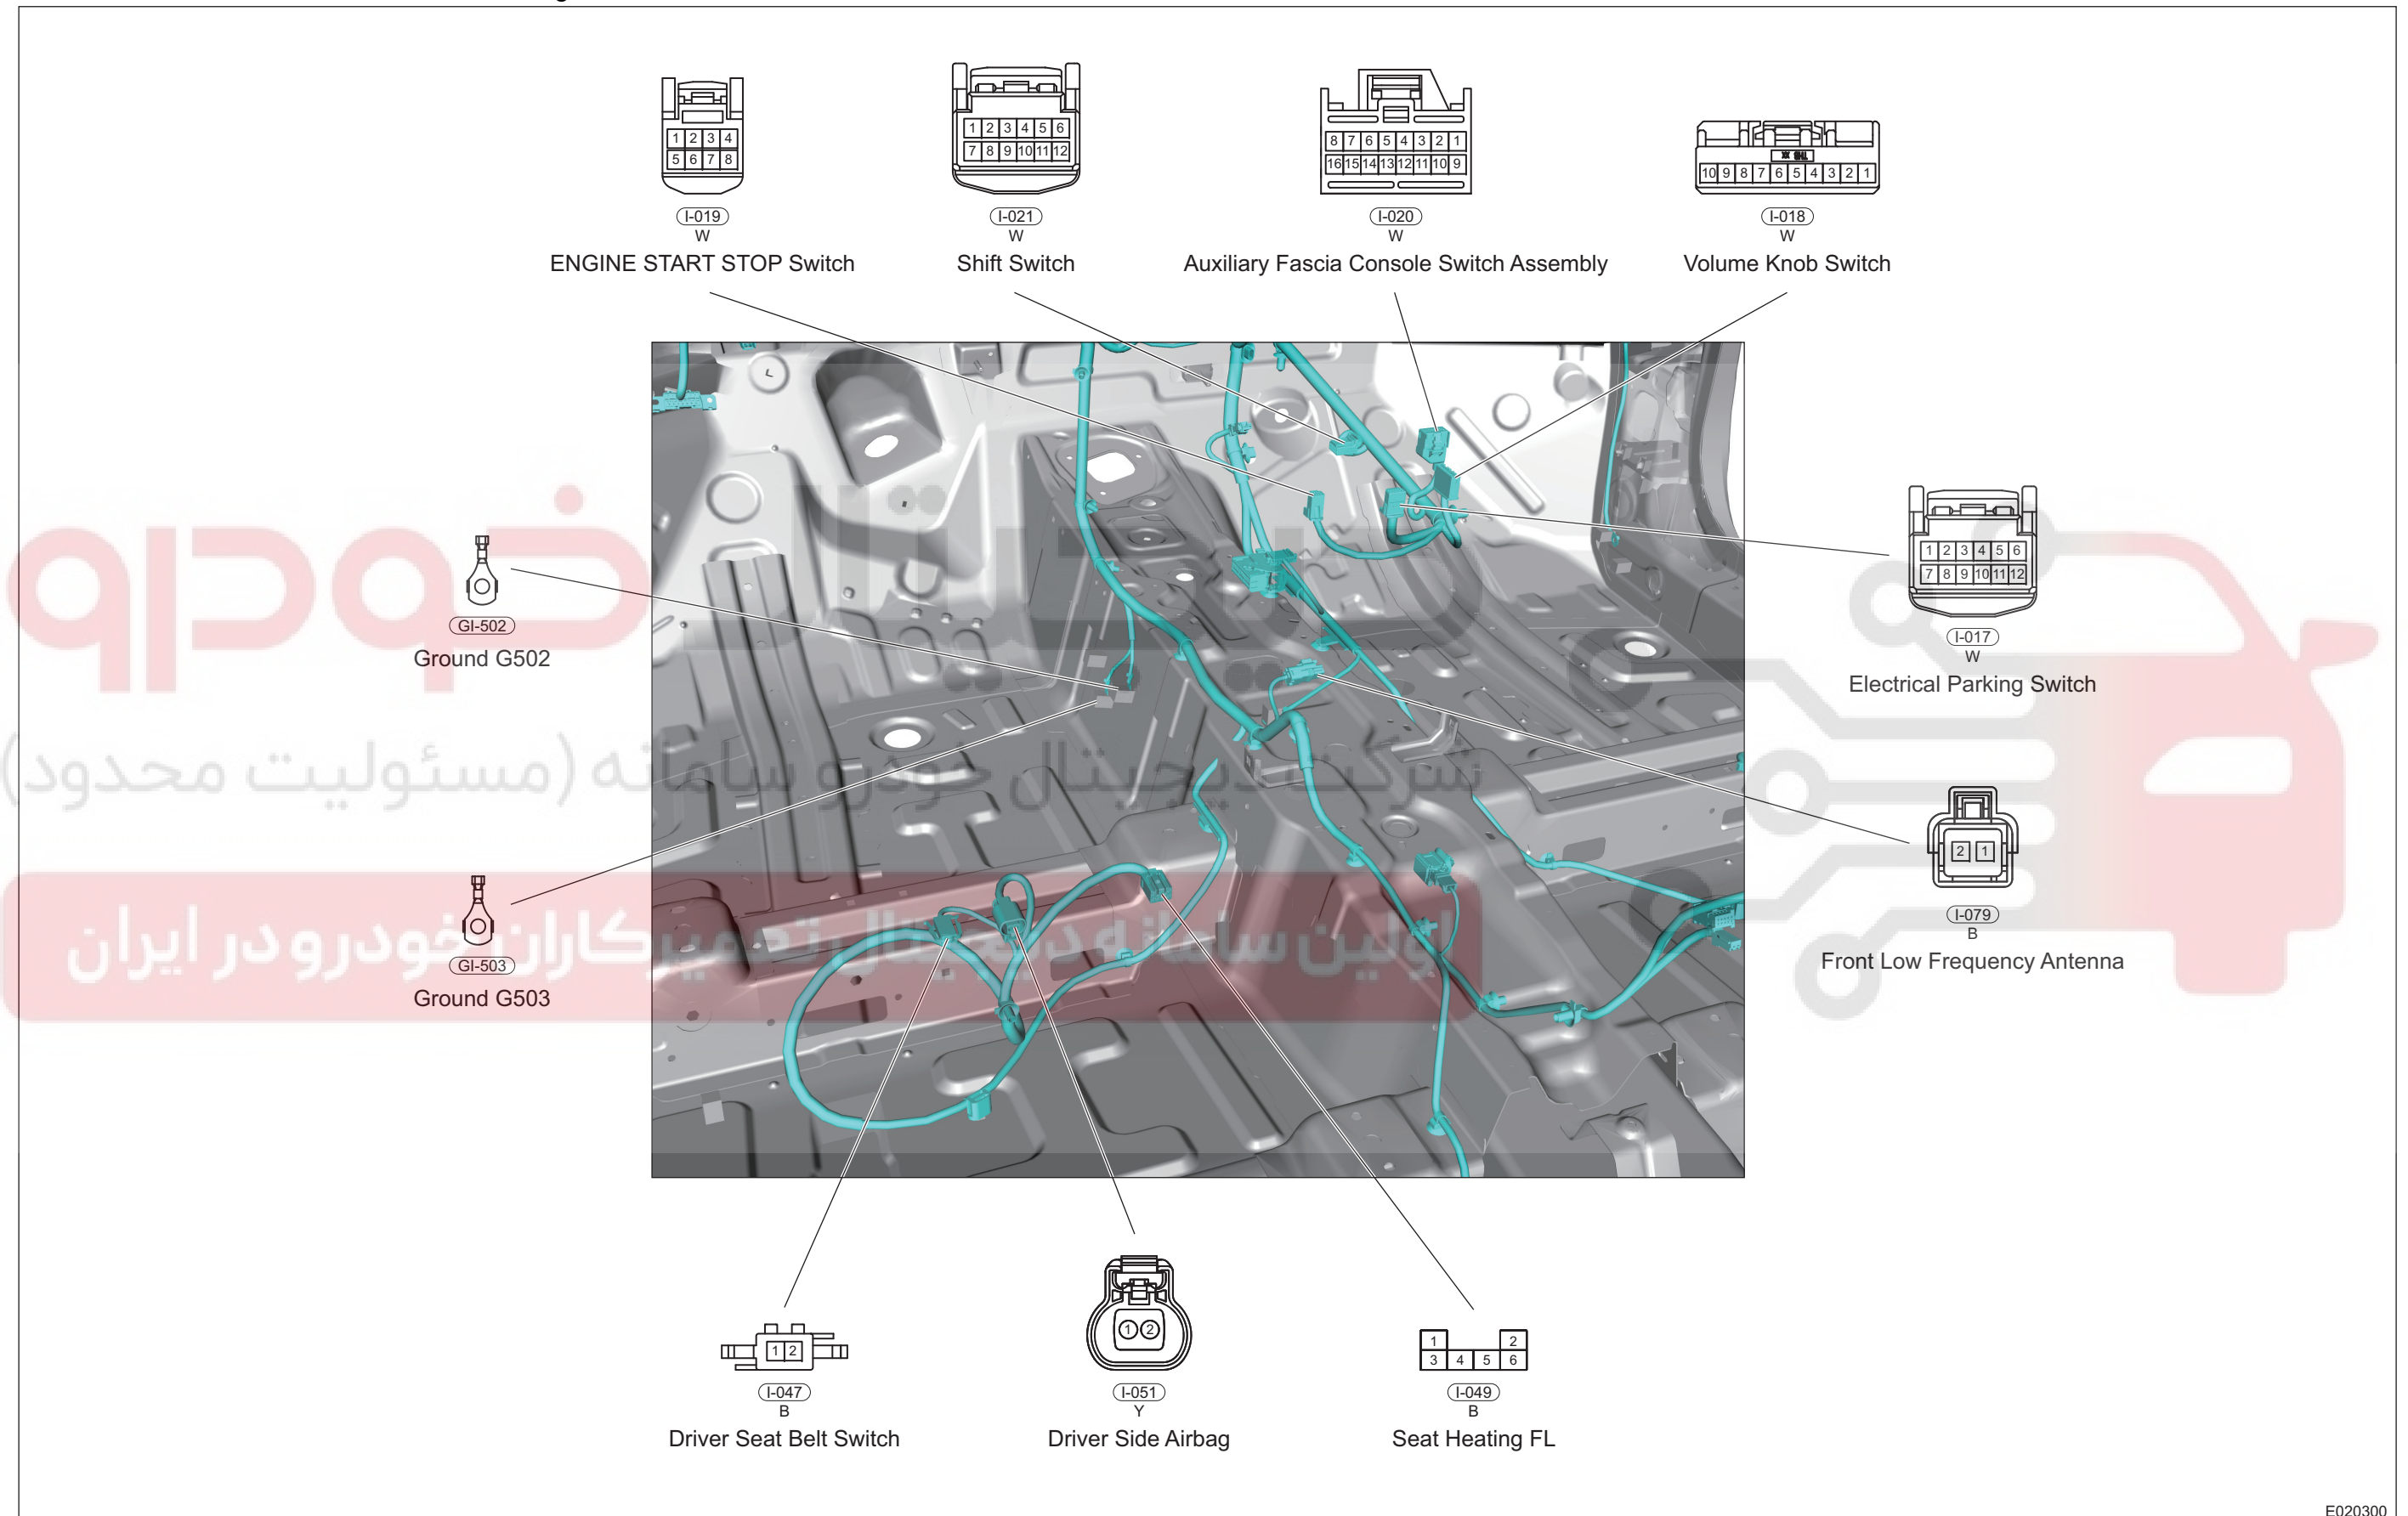

E020300


CHAPTER 2. WIRE HARNESS DIAGRAM

 4.5. IP Wire Harness Connector Position Diagram

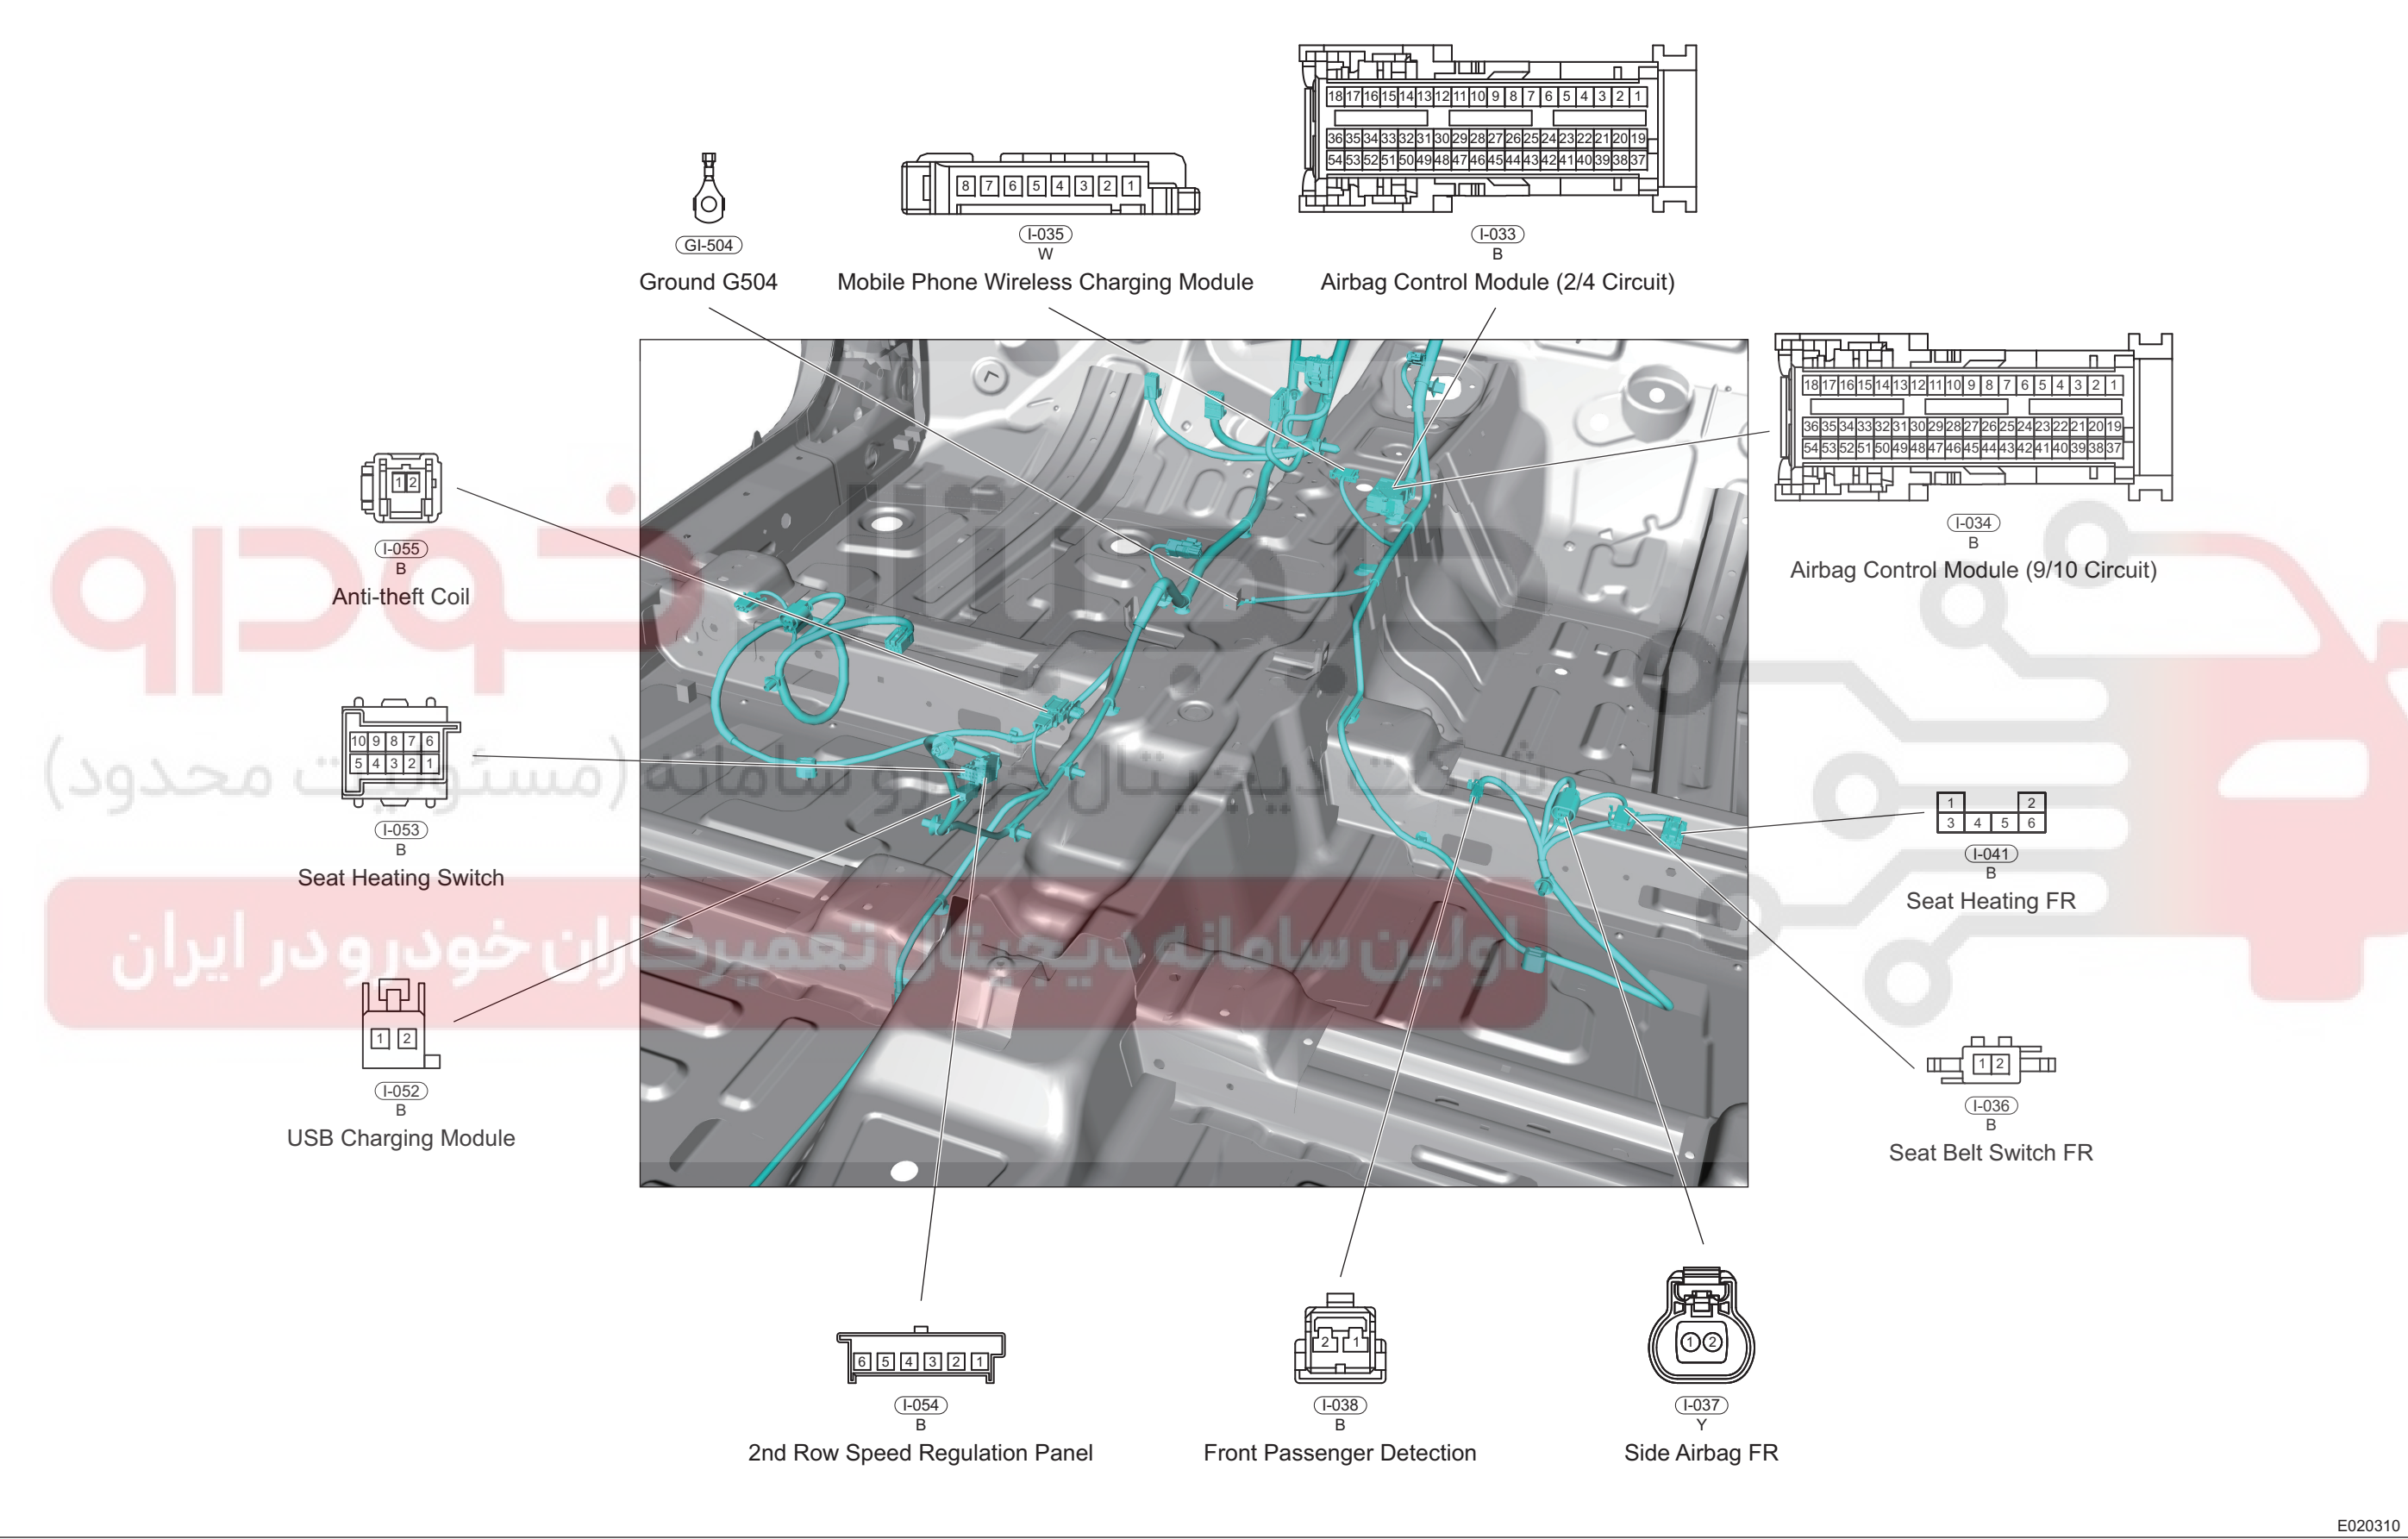

E020310

 
4.6. IP Wire Harness Connector Position Diagram

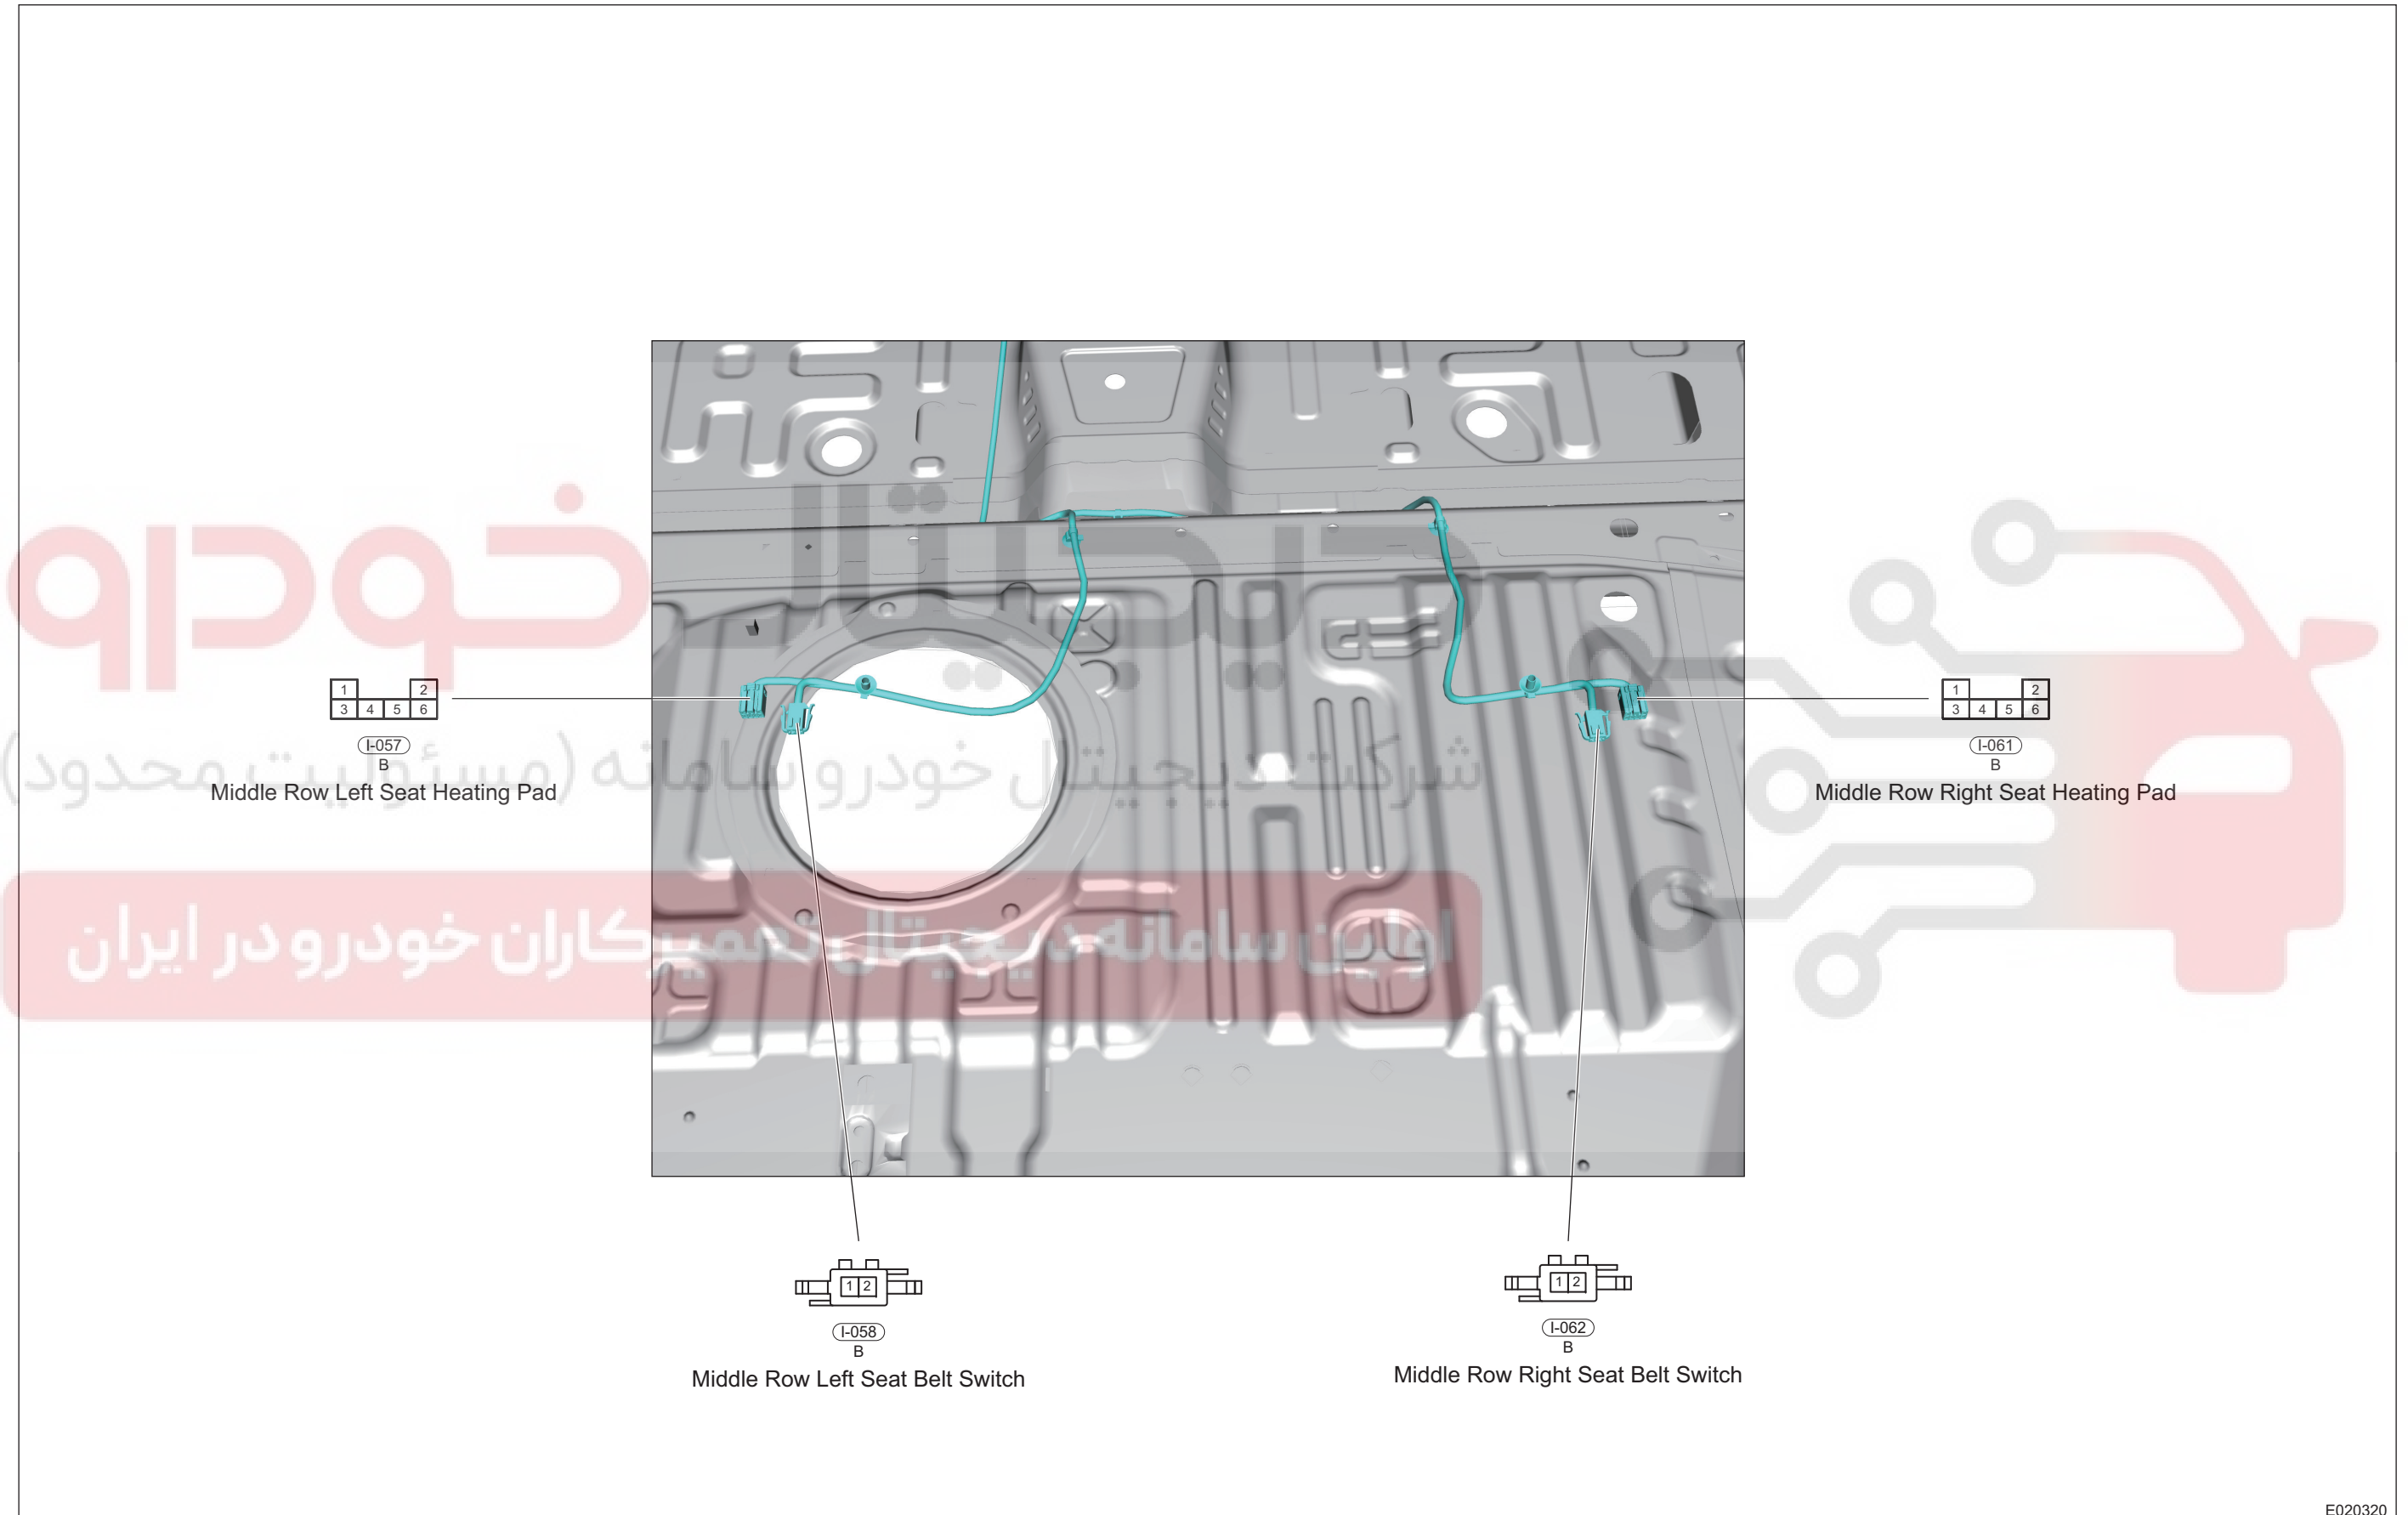

E020320


CHAPTER 2. WIRE HARNESS DIAGRAM

 4.7. IP Wire Harness Connector Position Diagram

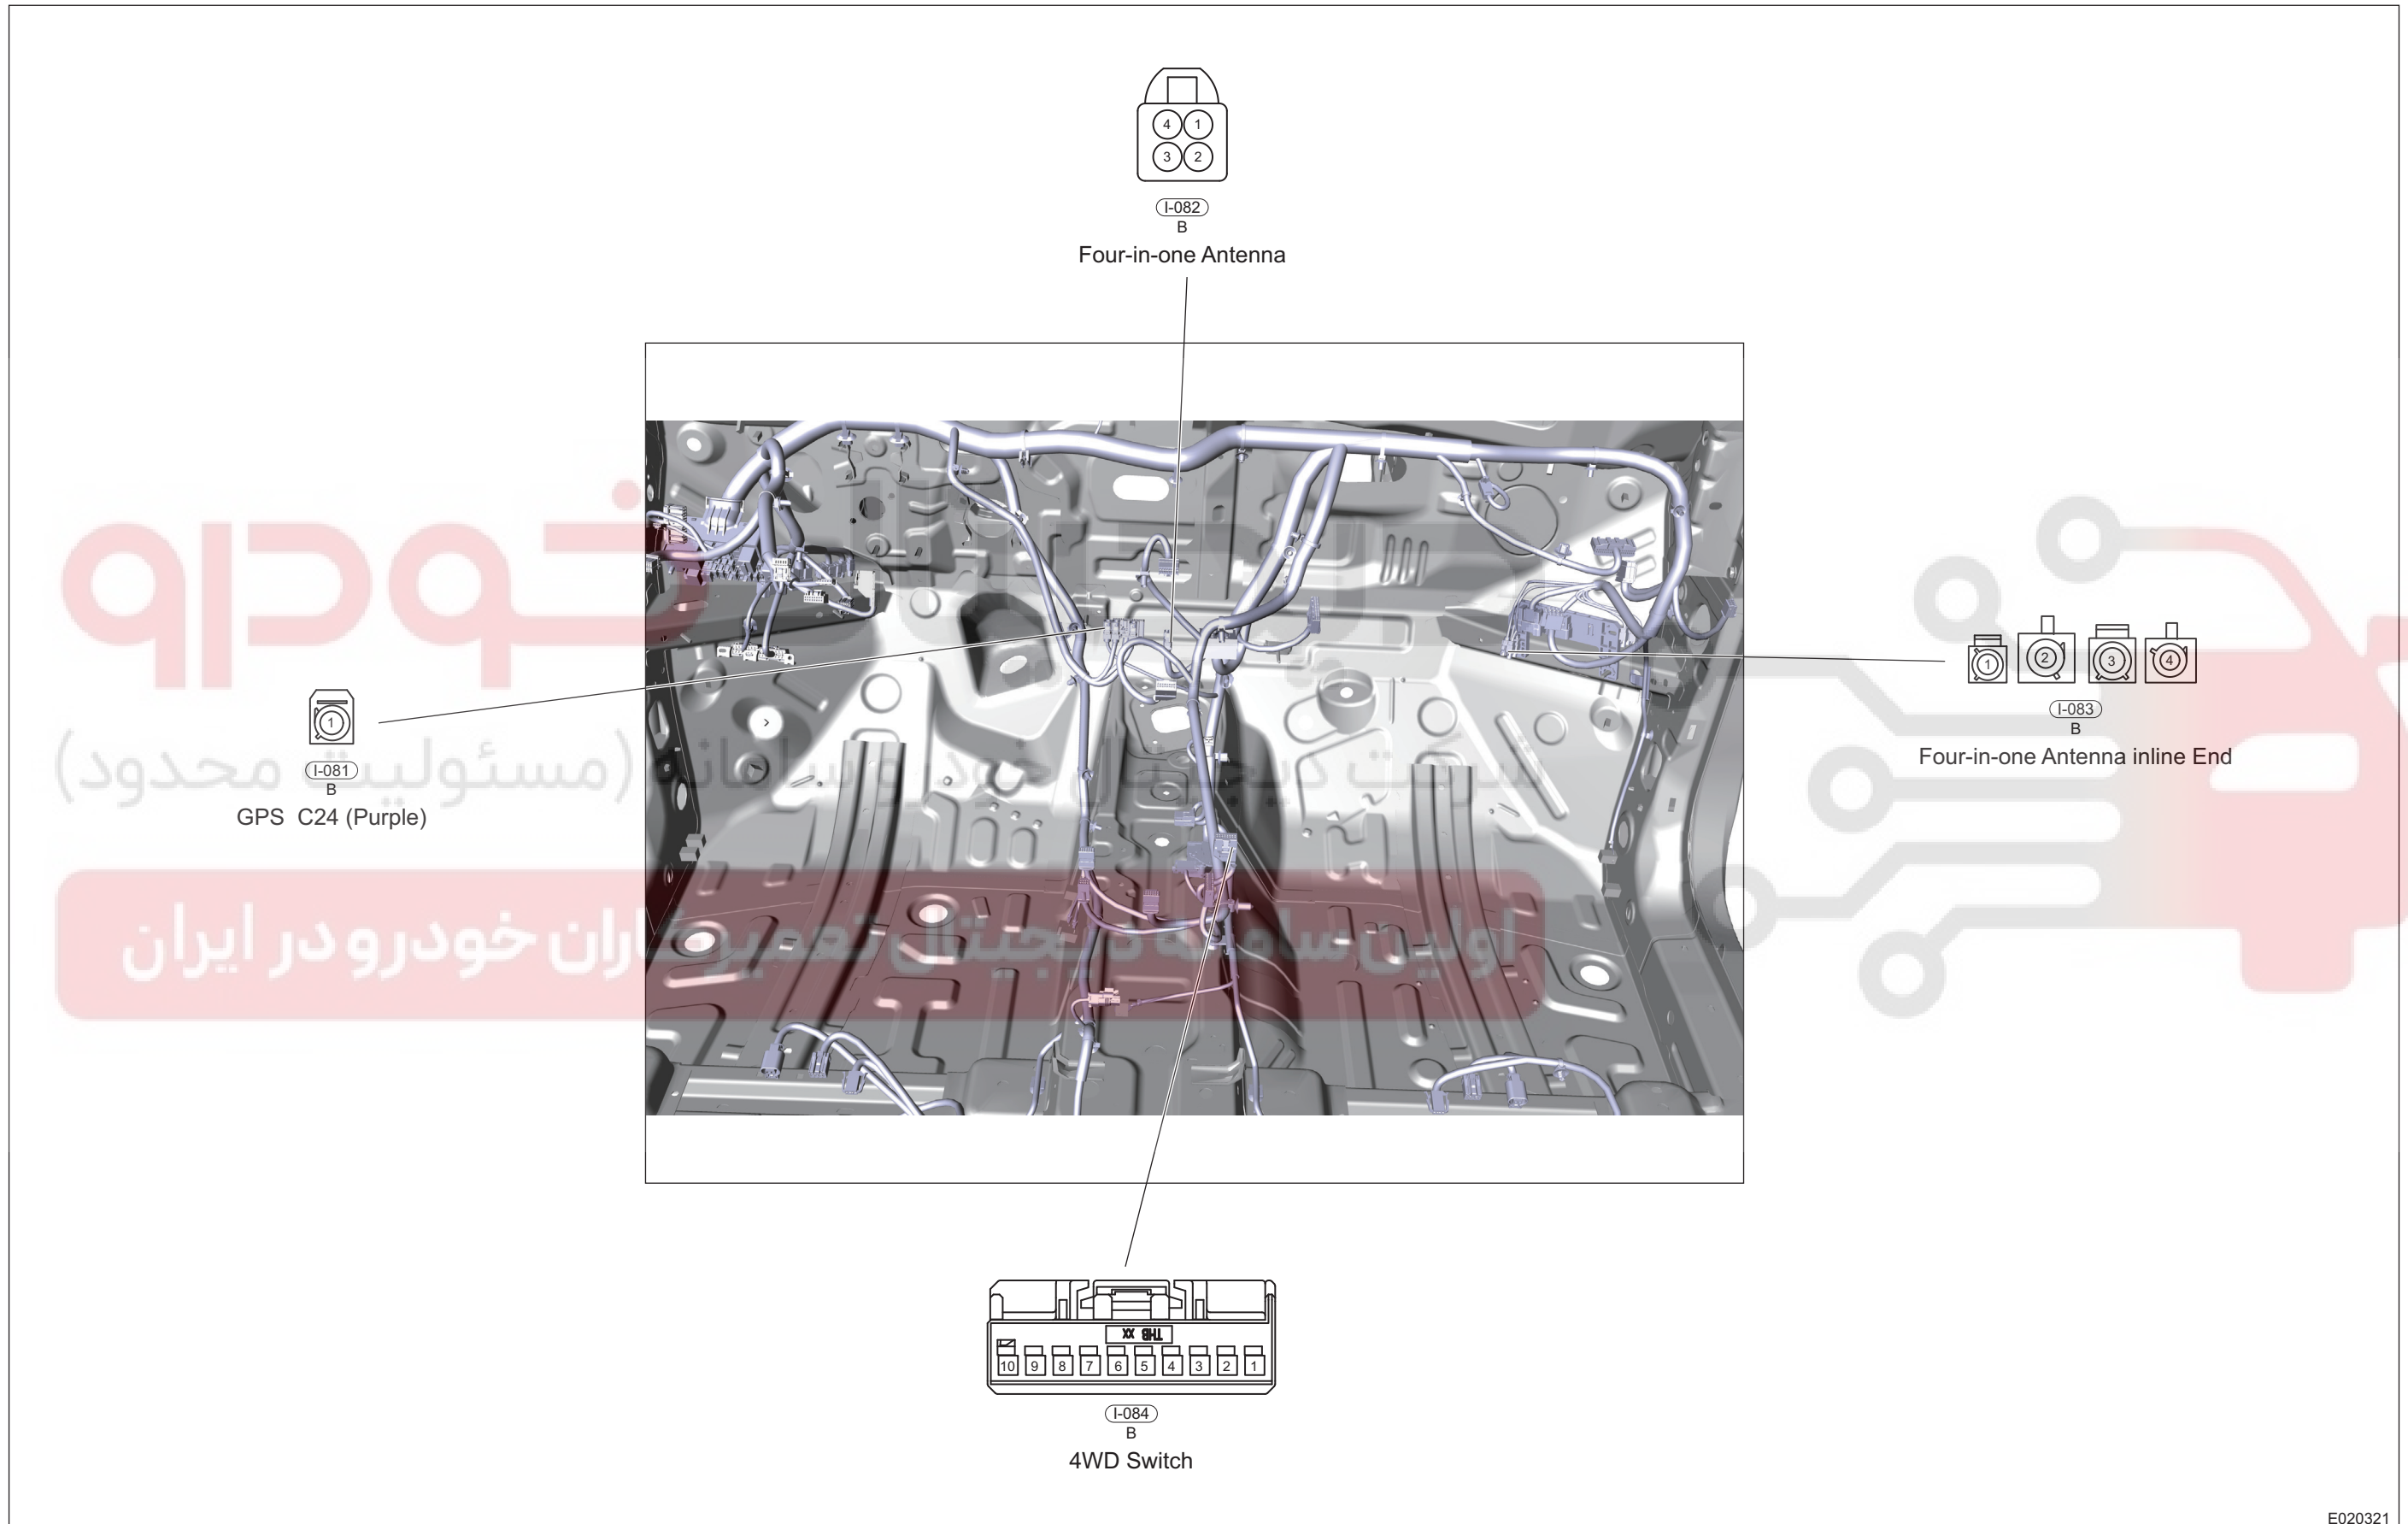

E020321

 
4.8. IP Wire Harness Connector Position Diagram

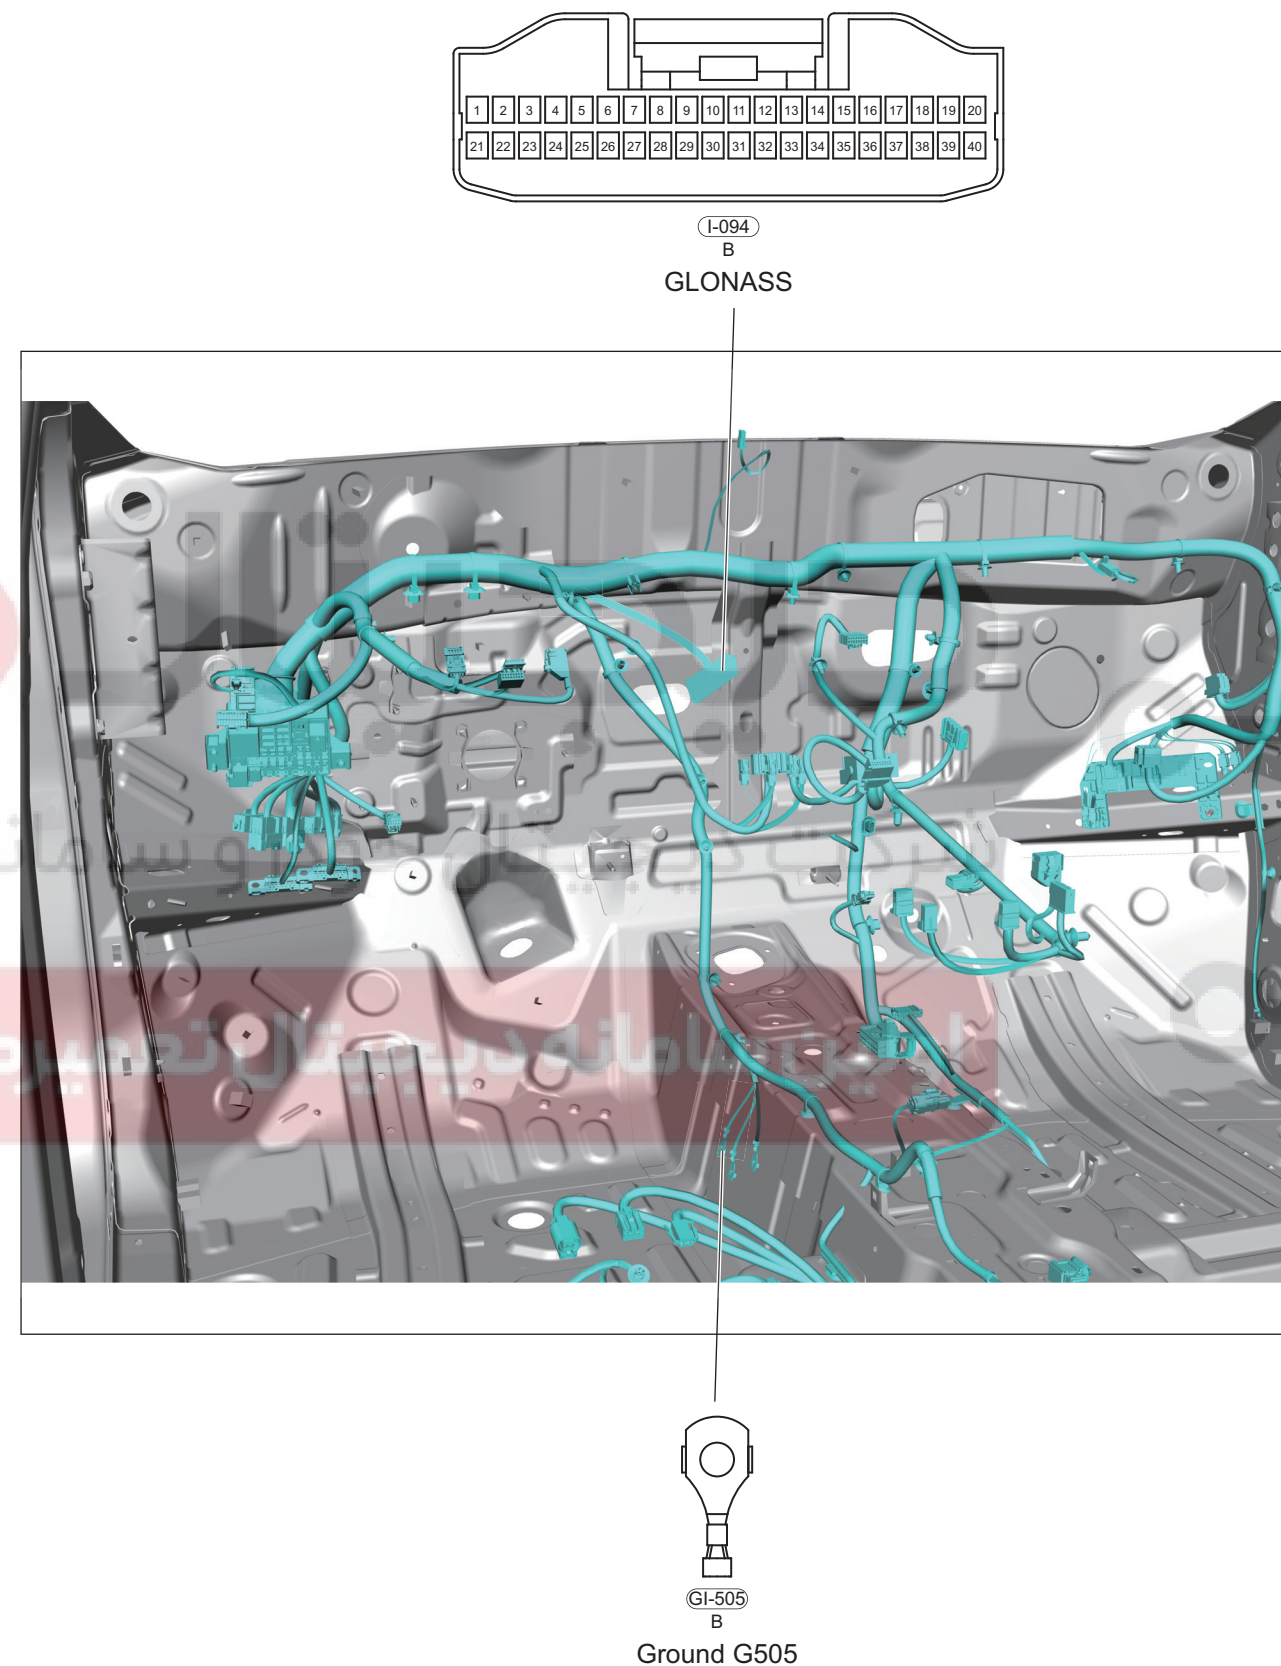

E020322


CHAPTER 2. WIRE HARNESS DIAGRAM

 (5). Door Wire Harness Diagram 5.1. Door Wire Harness Connector FL Position Diagram

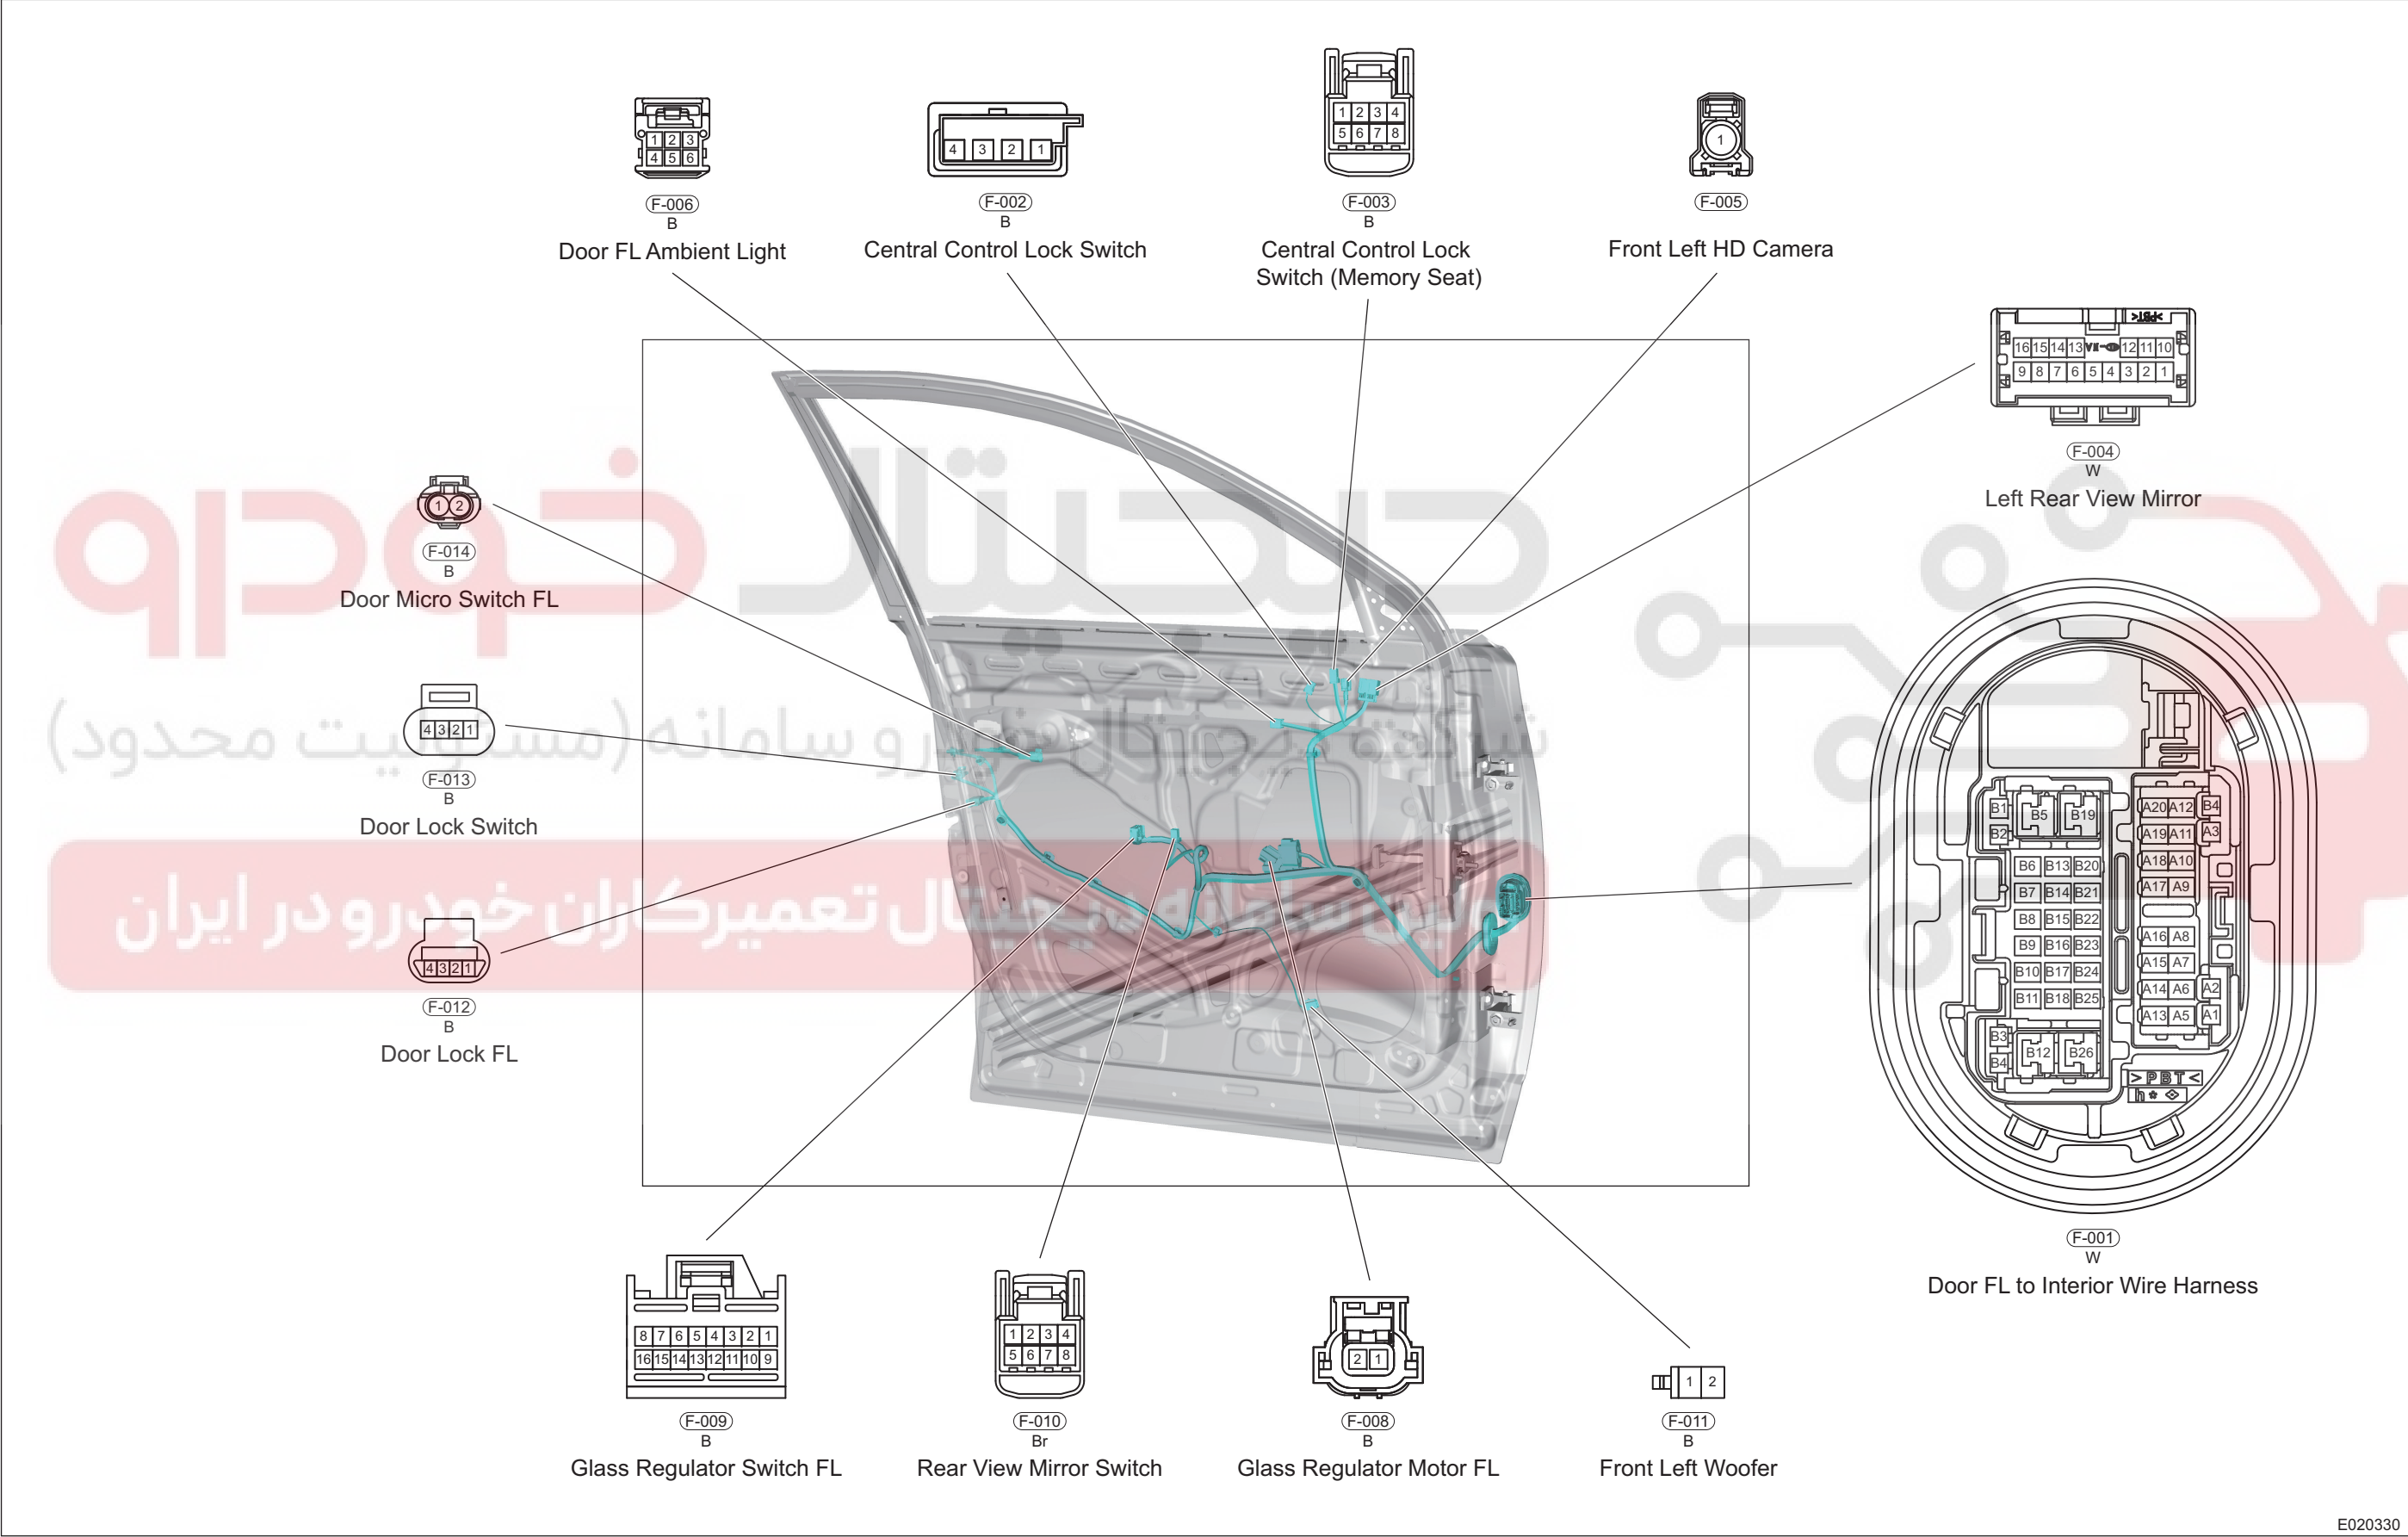


E020330

 5.2. Door Wire Harness Connector FR Position Diagram

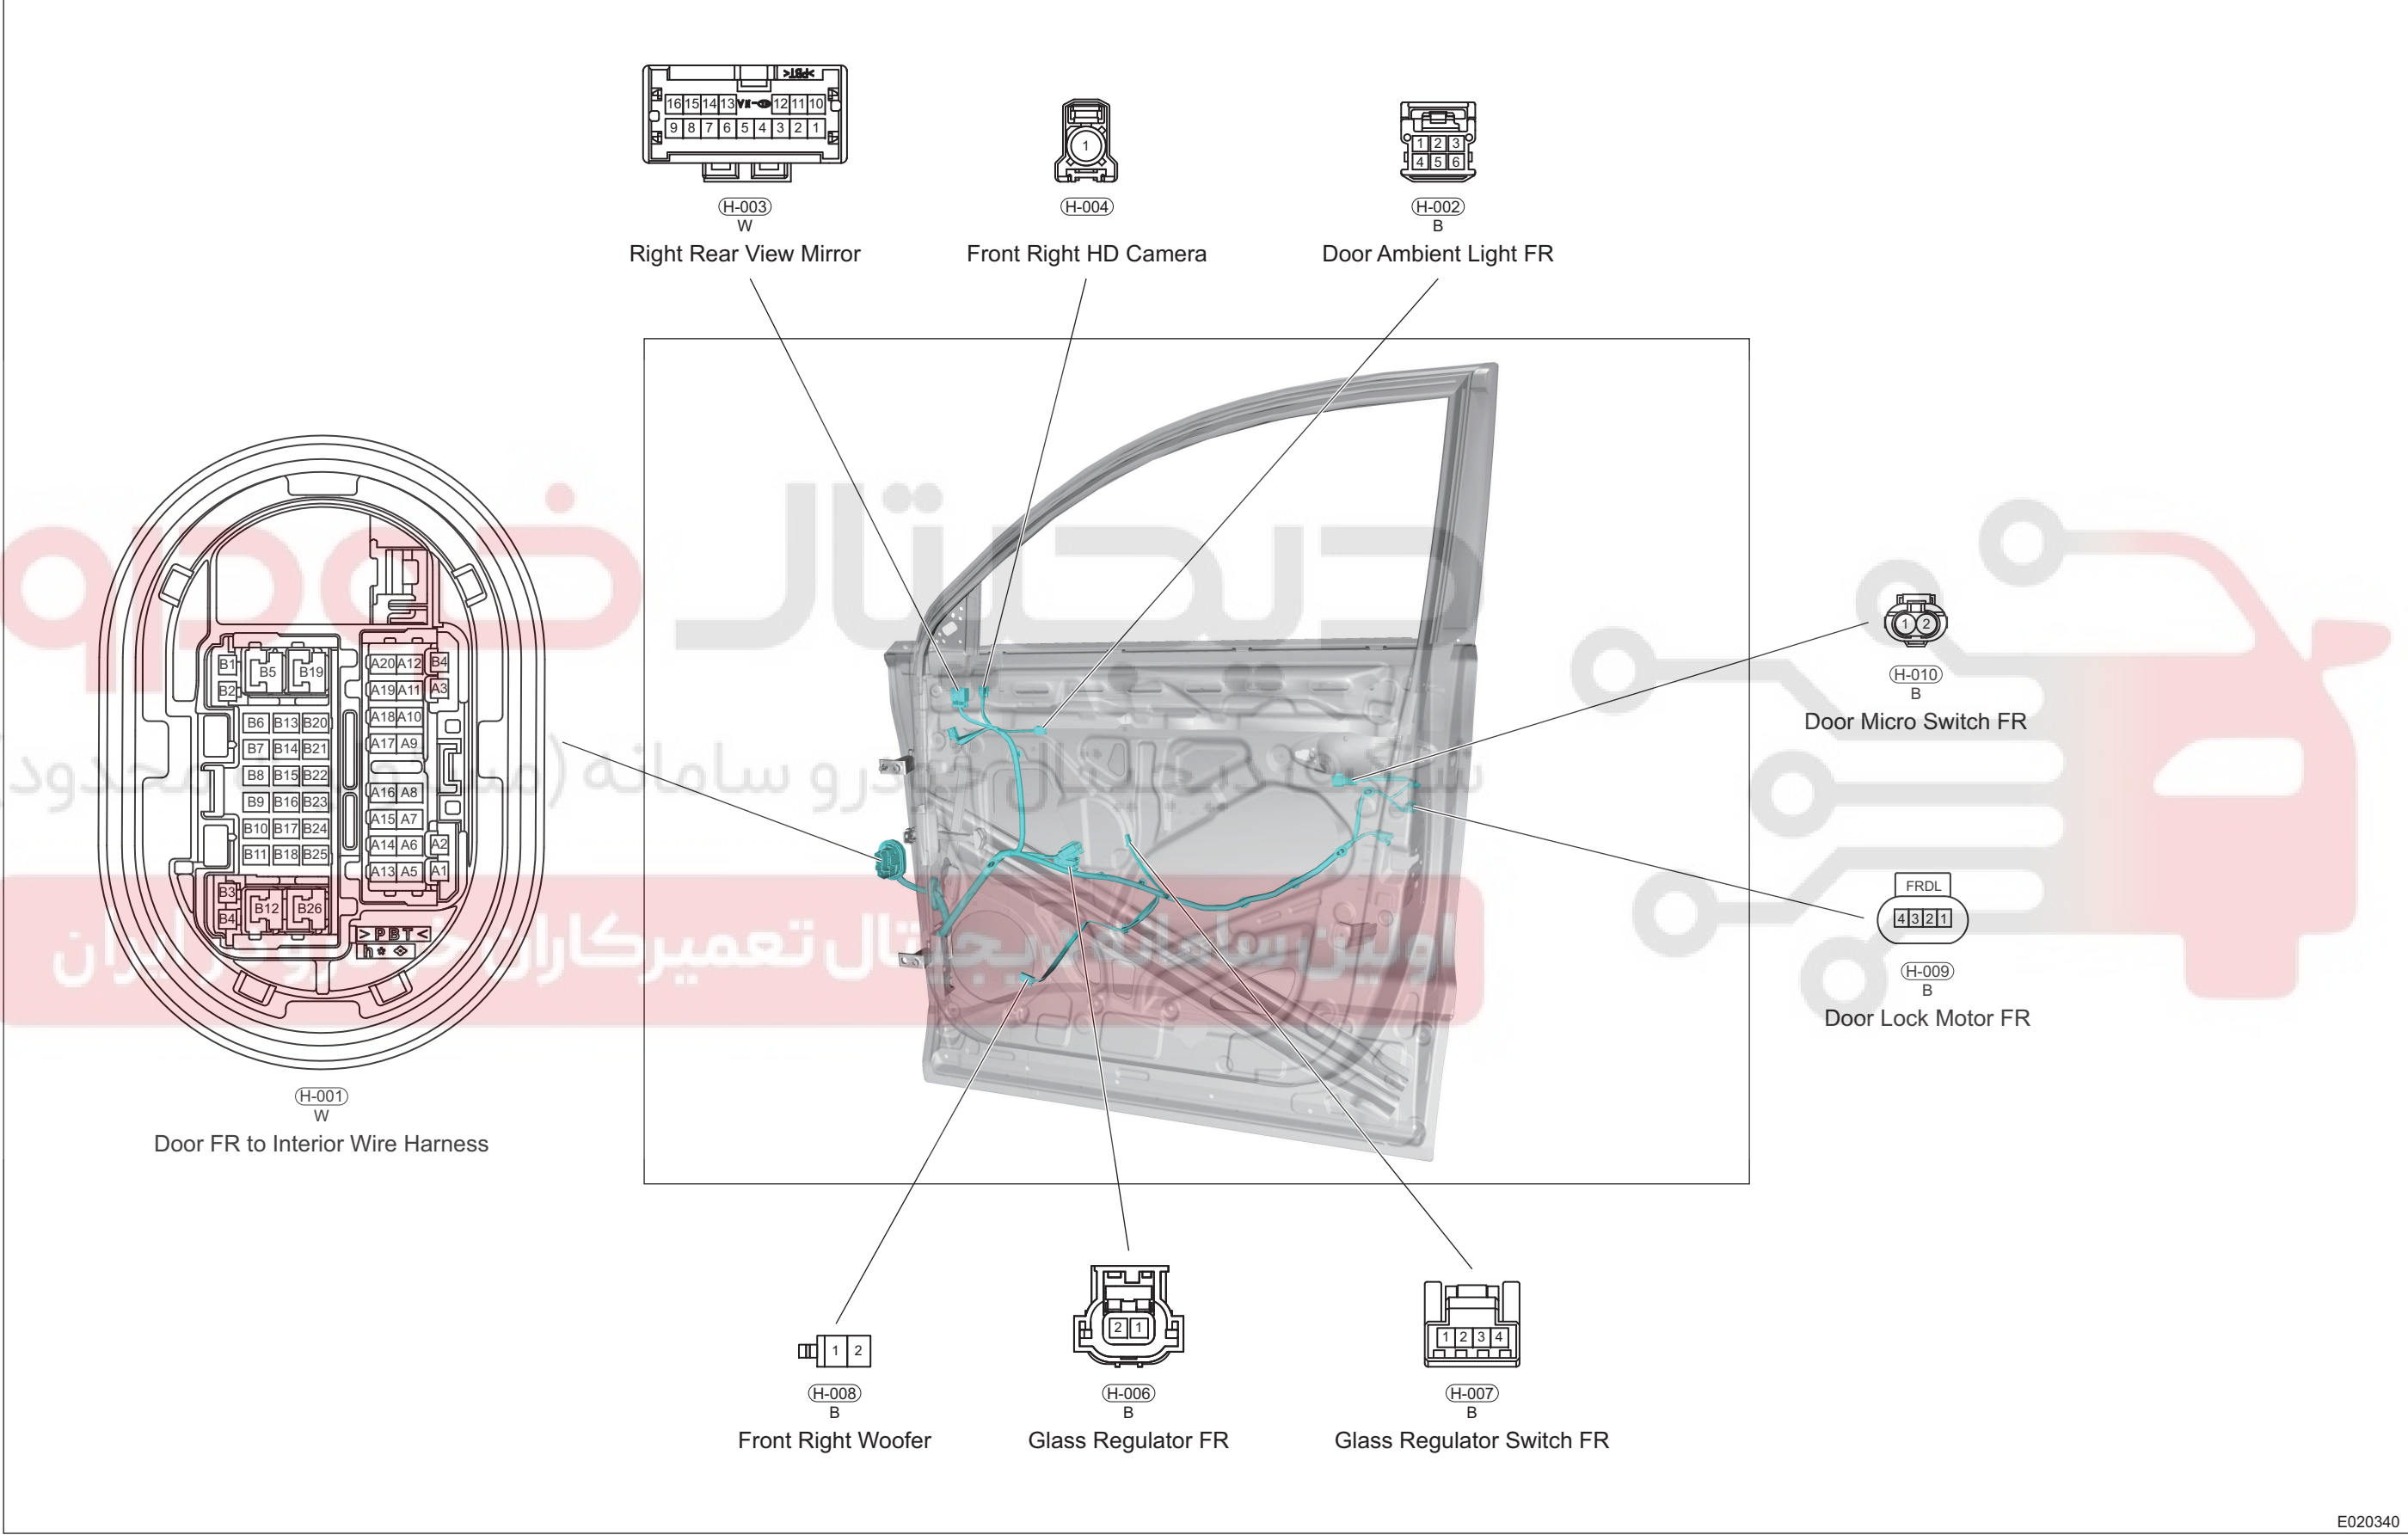


E020340

 5.3. Door Wire Harness Connector RL Position Diagram

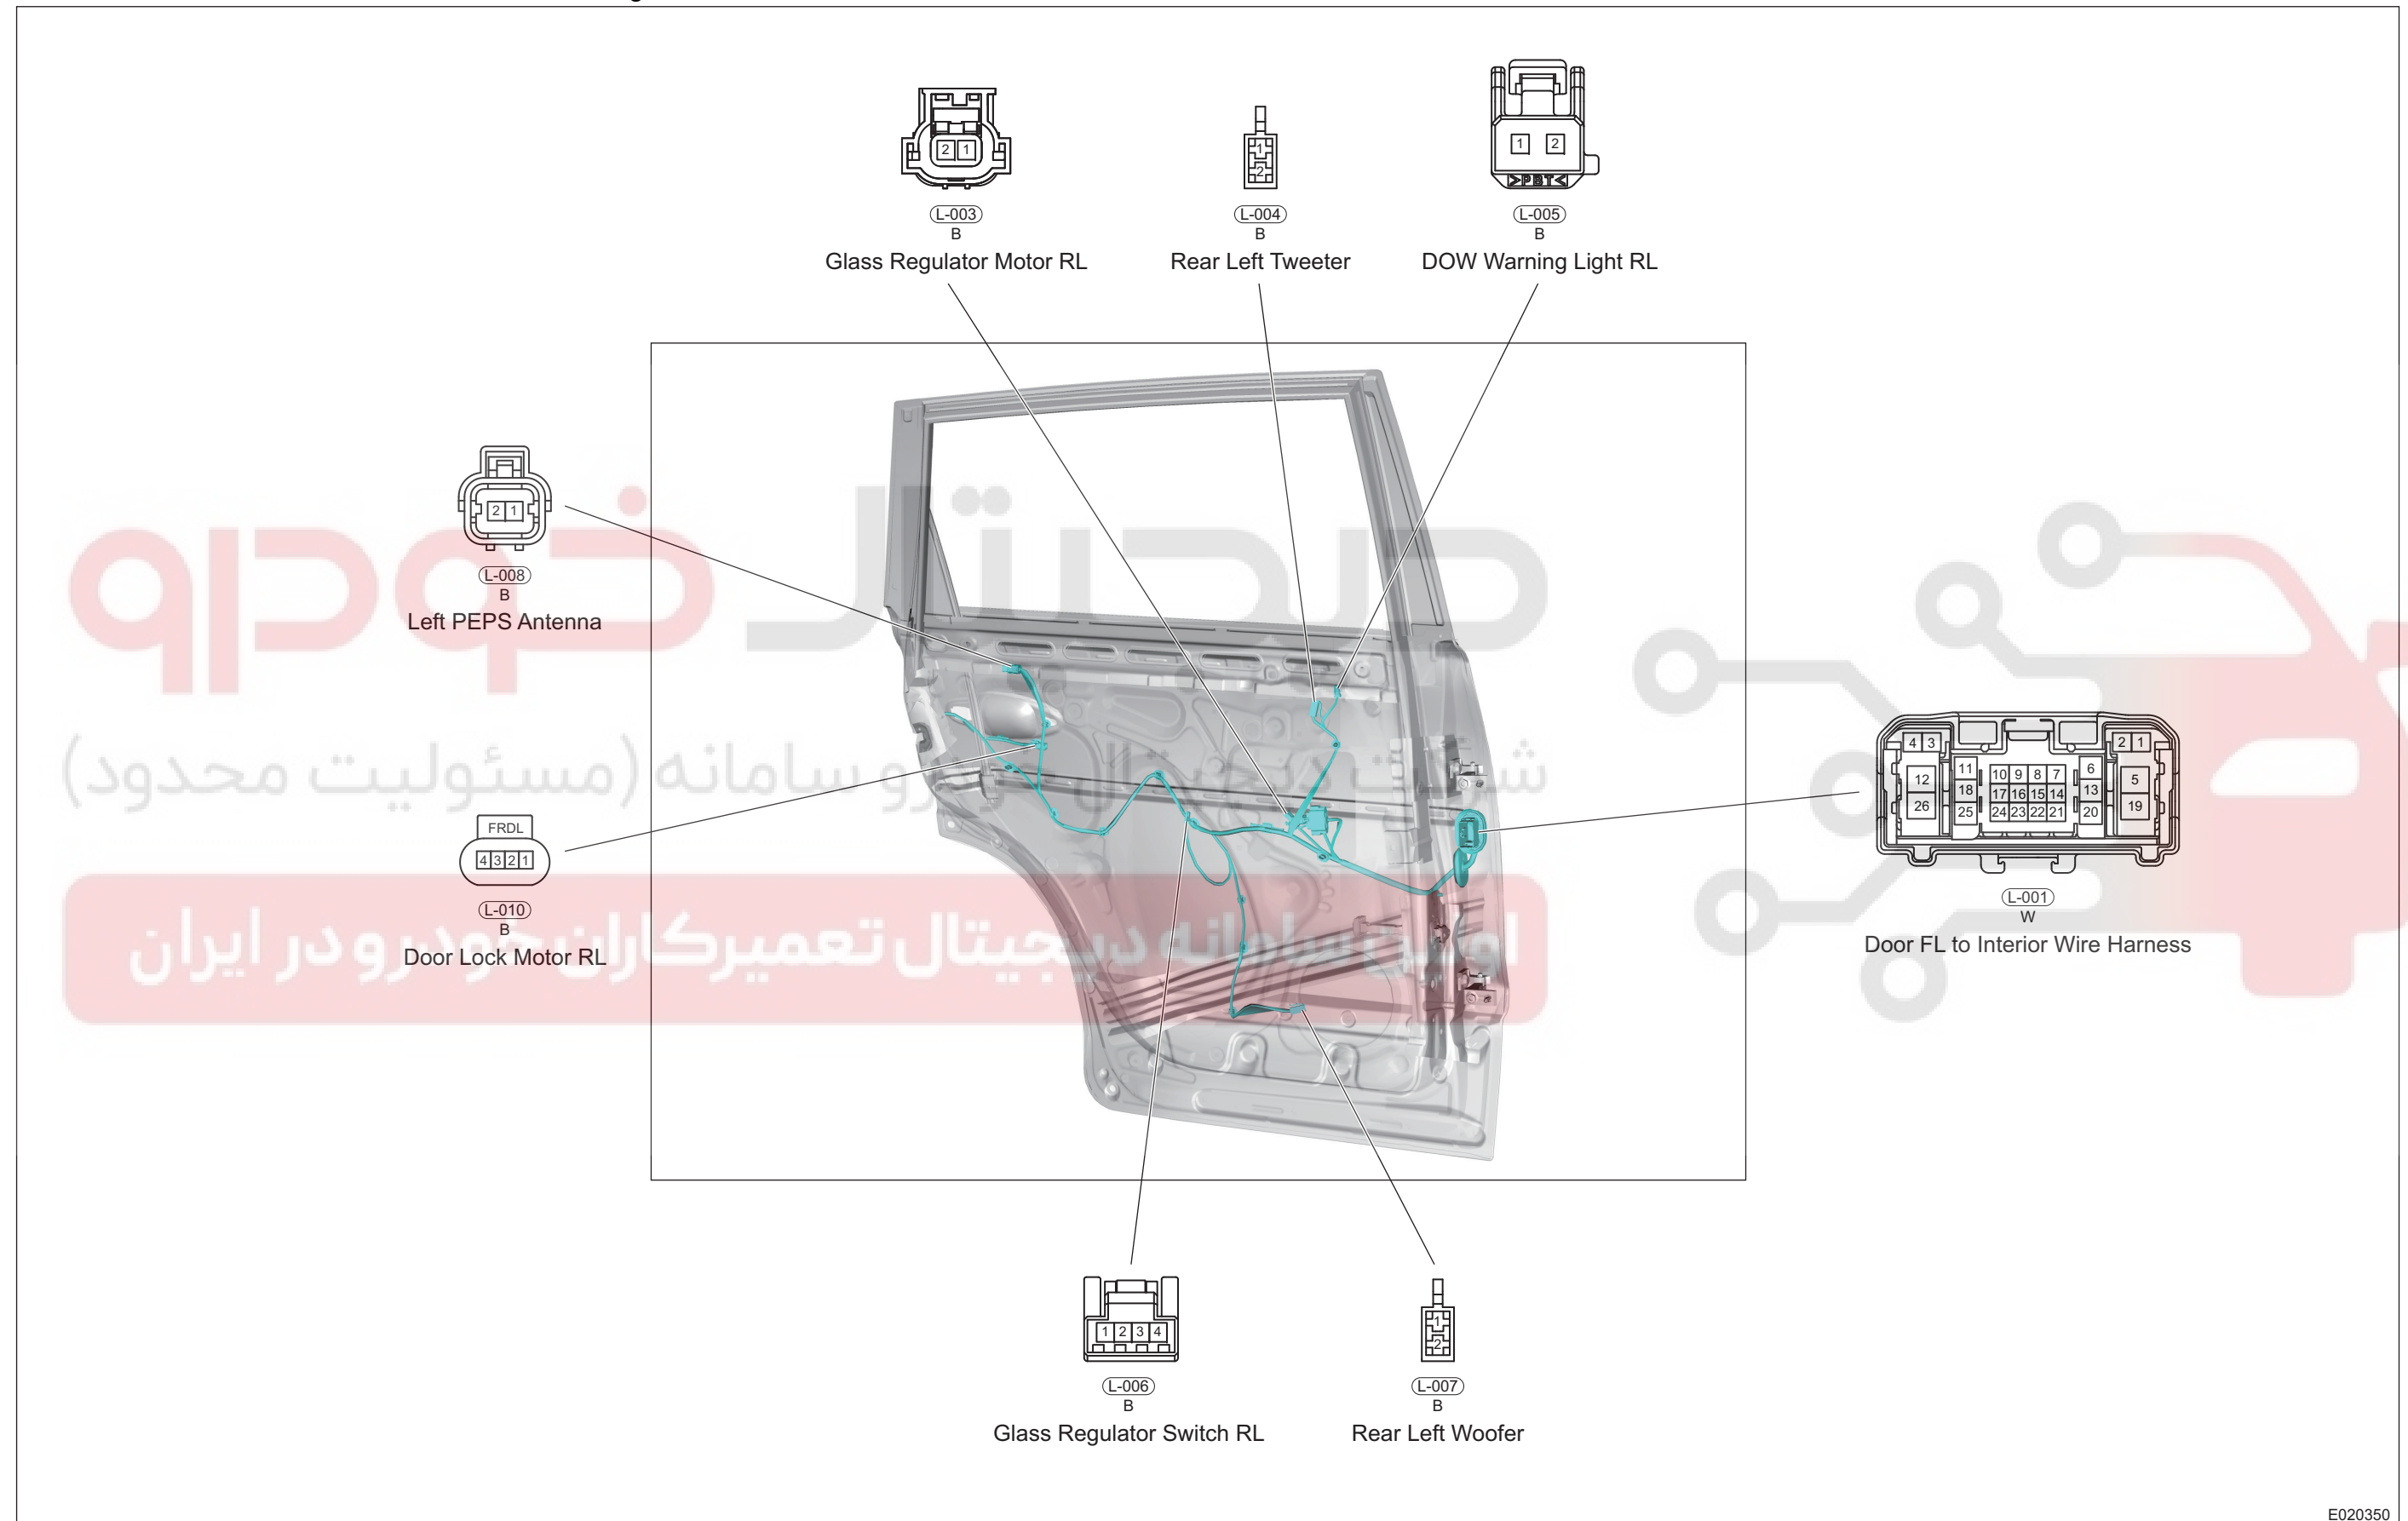

 
5.4. Door Wire Harness Connector RR Position Diagram

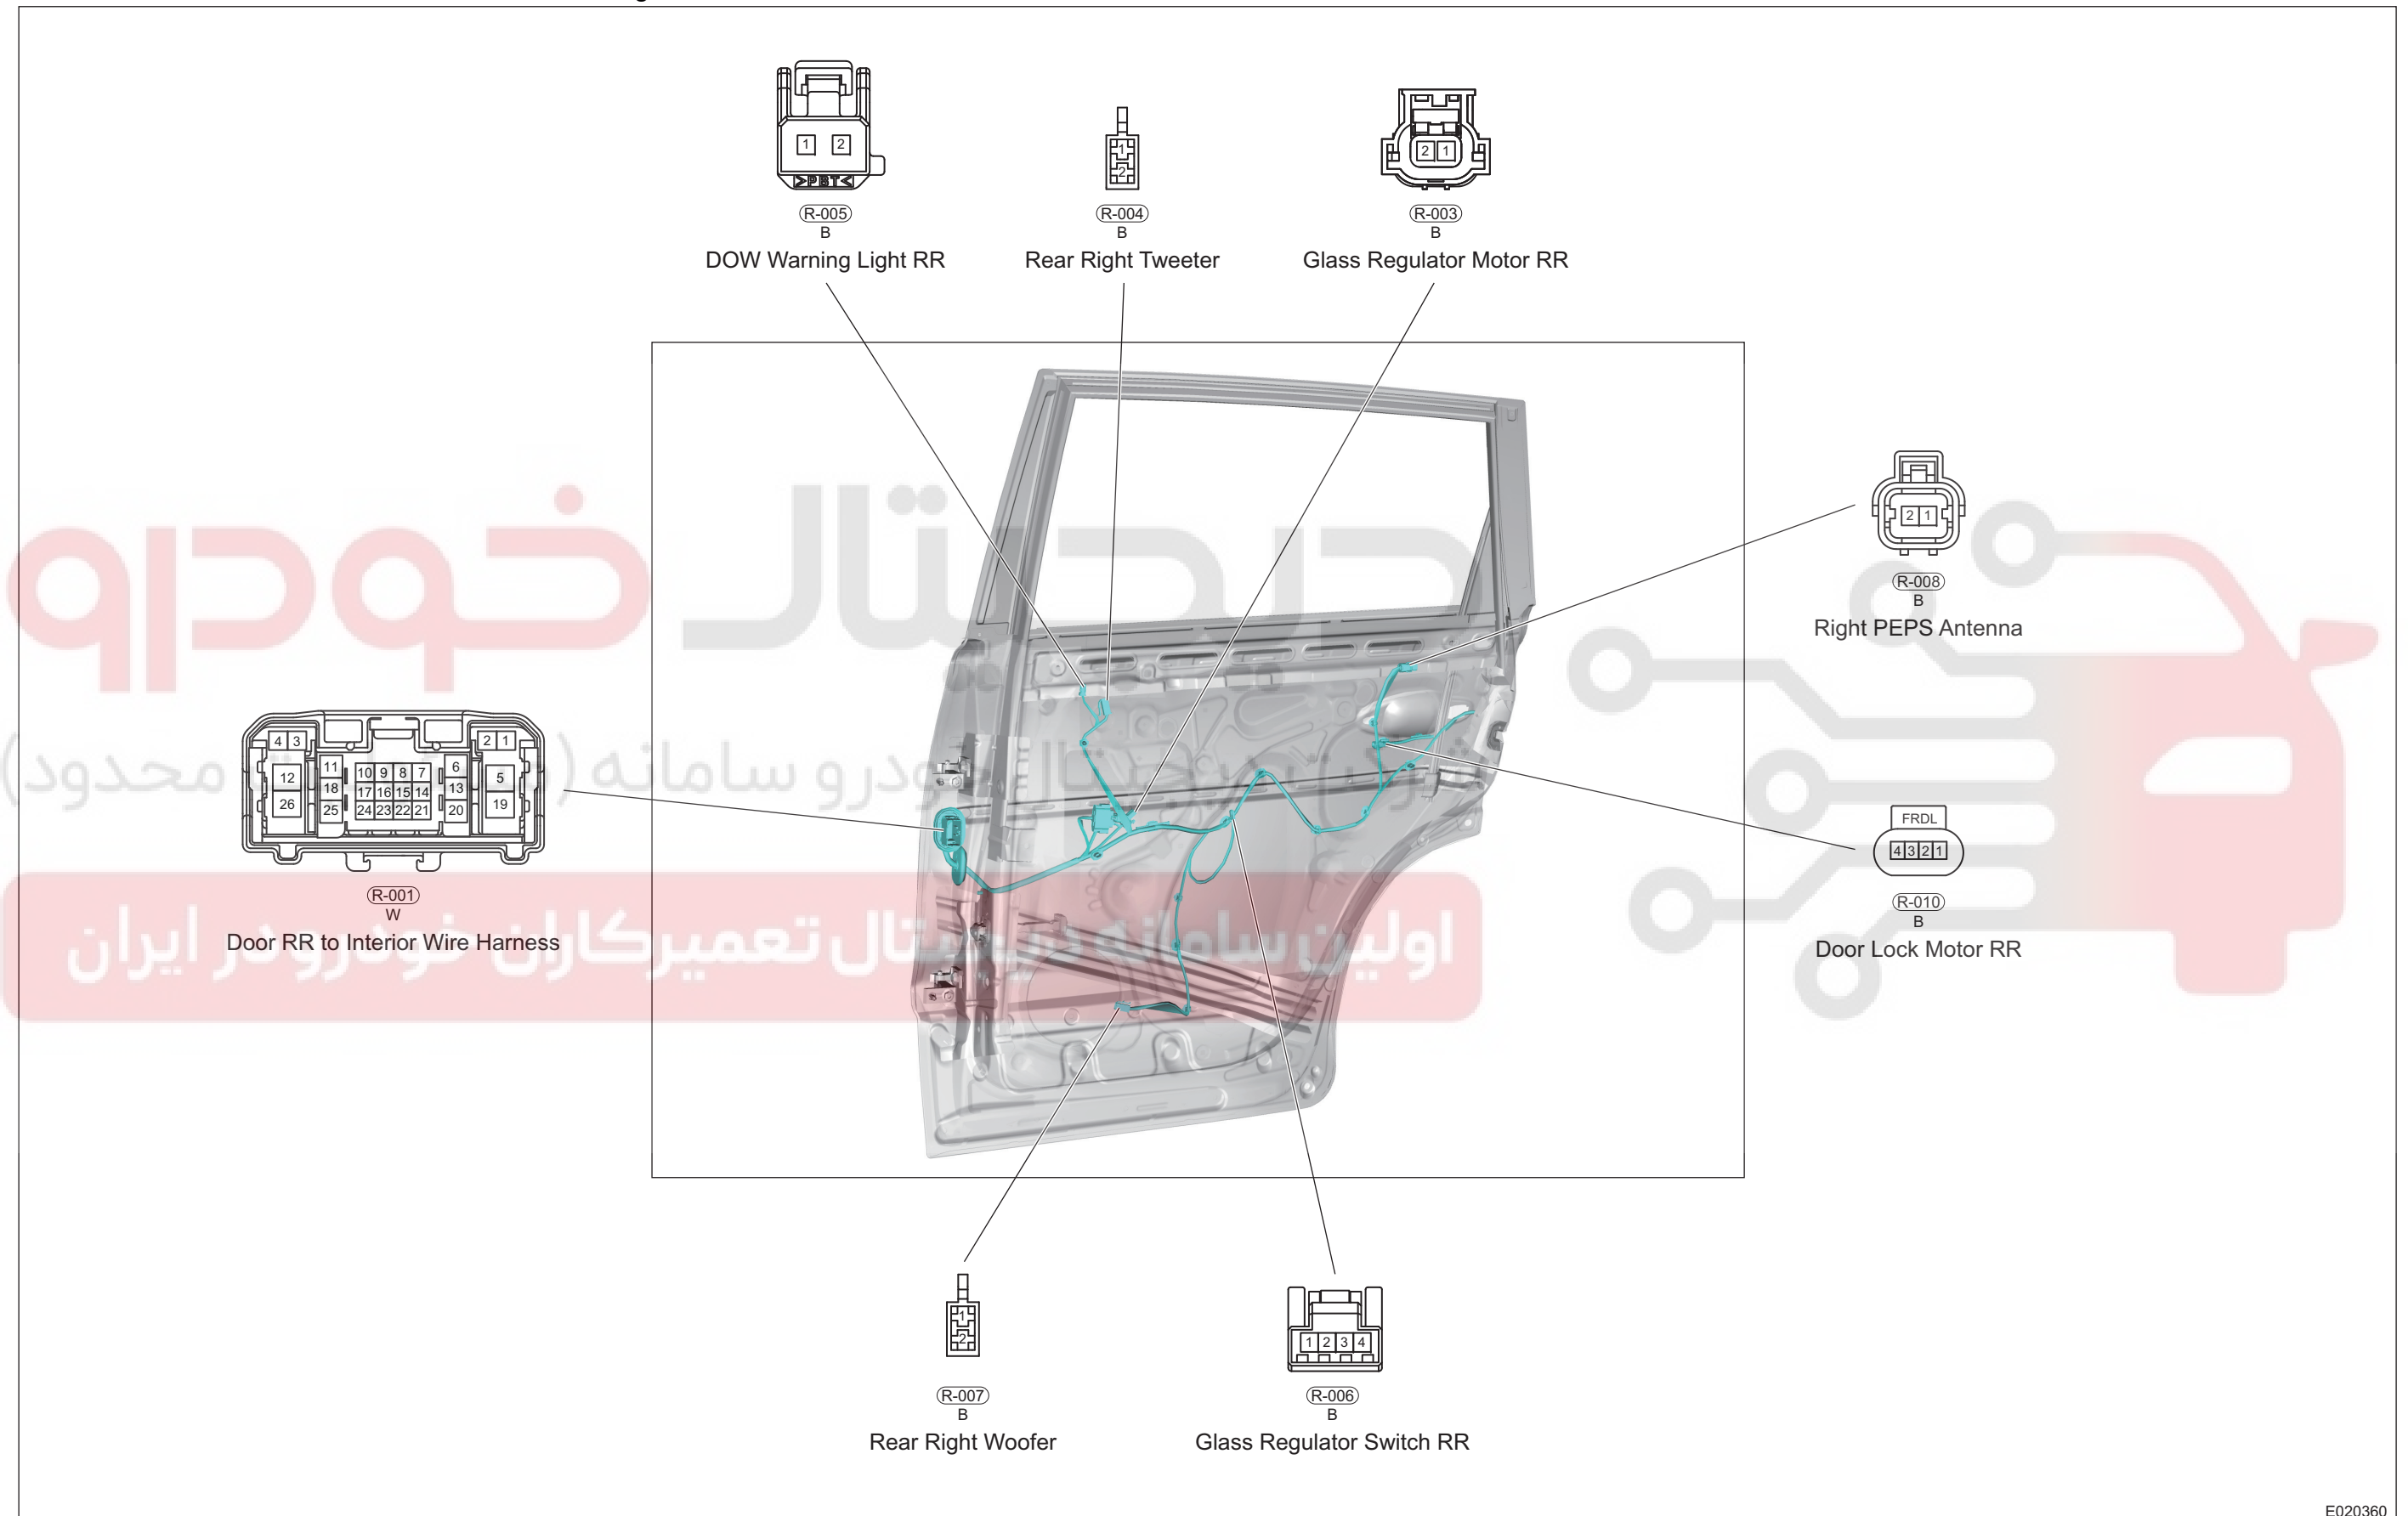

E020360

CHAPTER 2. WIRE HARNESS DIAGRAM

 
5.5. Back Door Wire Harness Connector Position Diagram

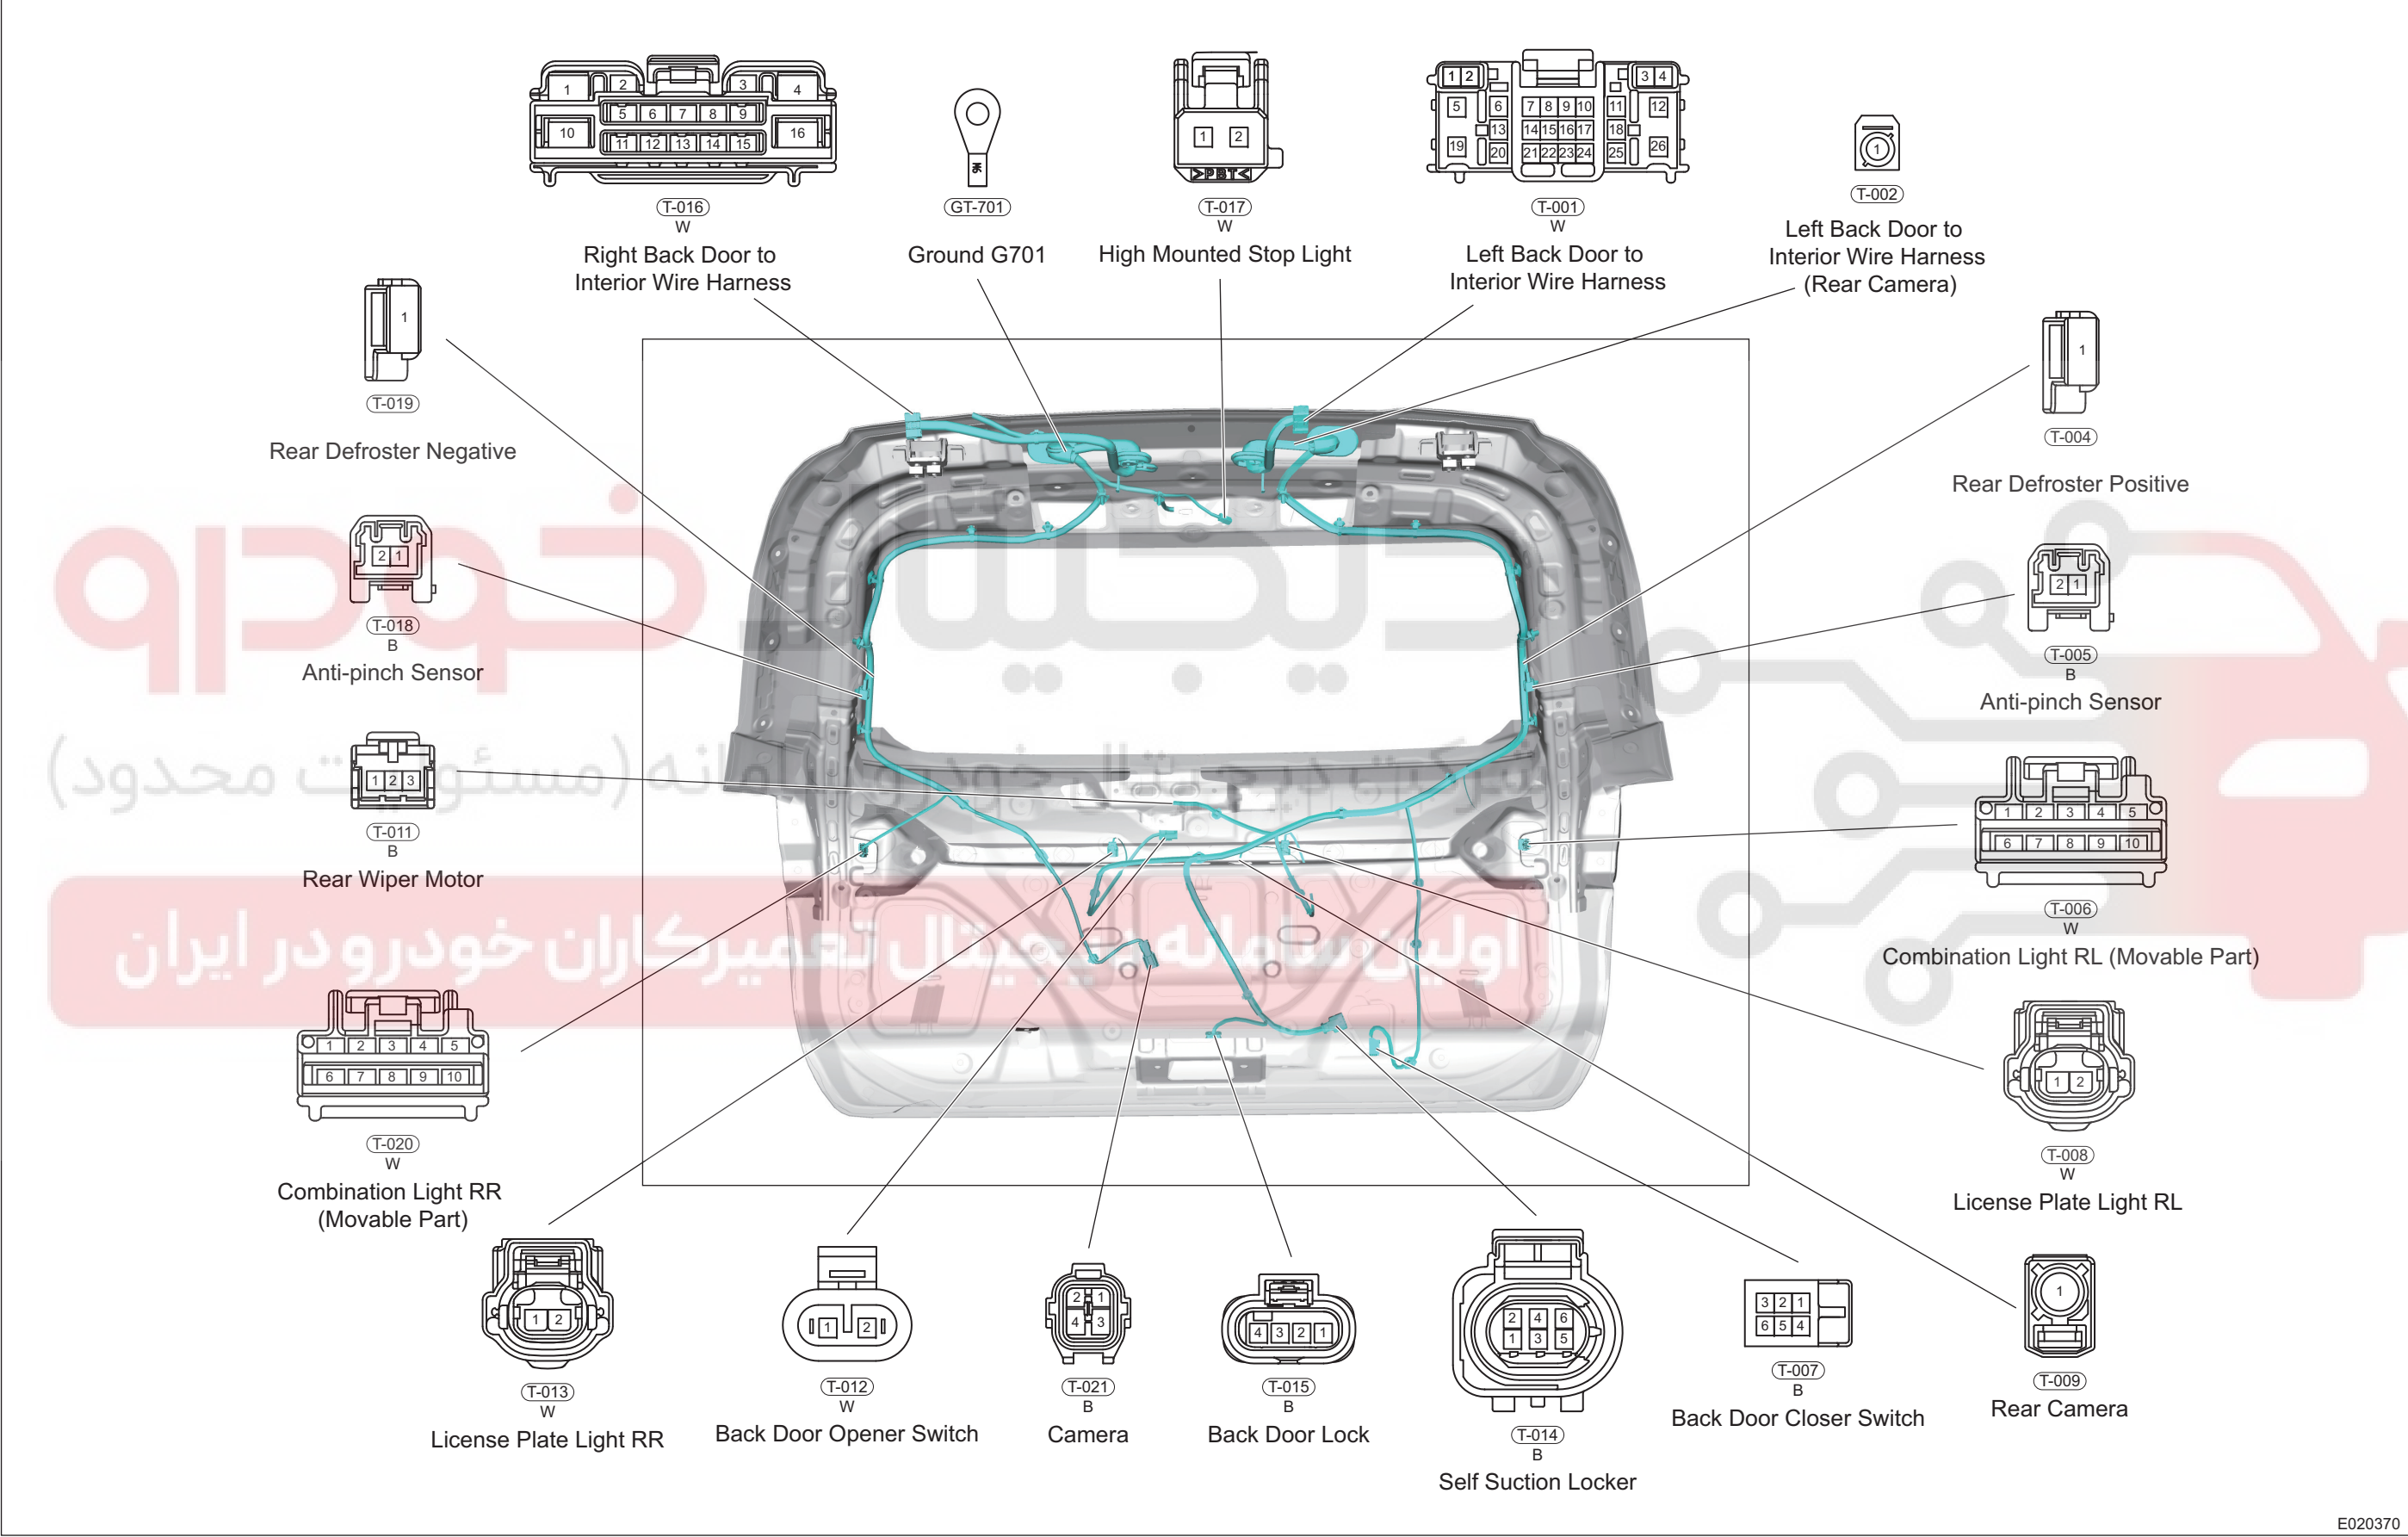

E020370

(6). Front Bumper Wire Harness Diagram

 
6.1. Front Bumper Wire Harness Connector Position Diagram

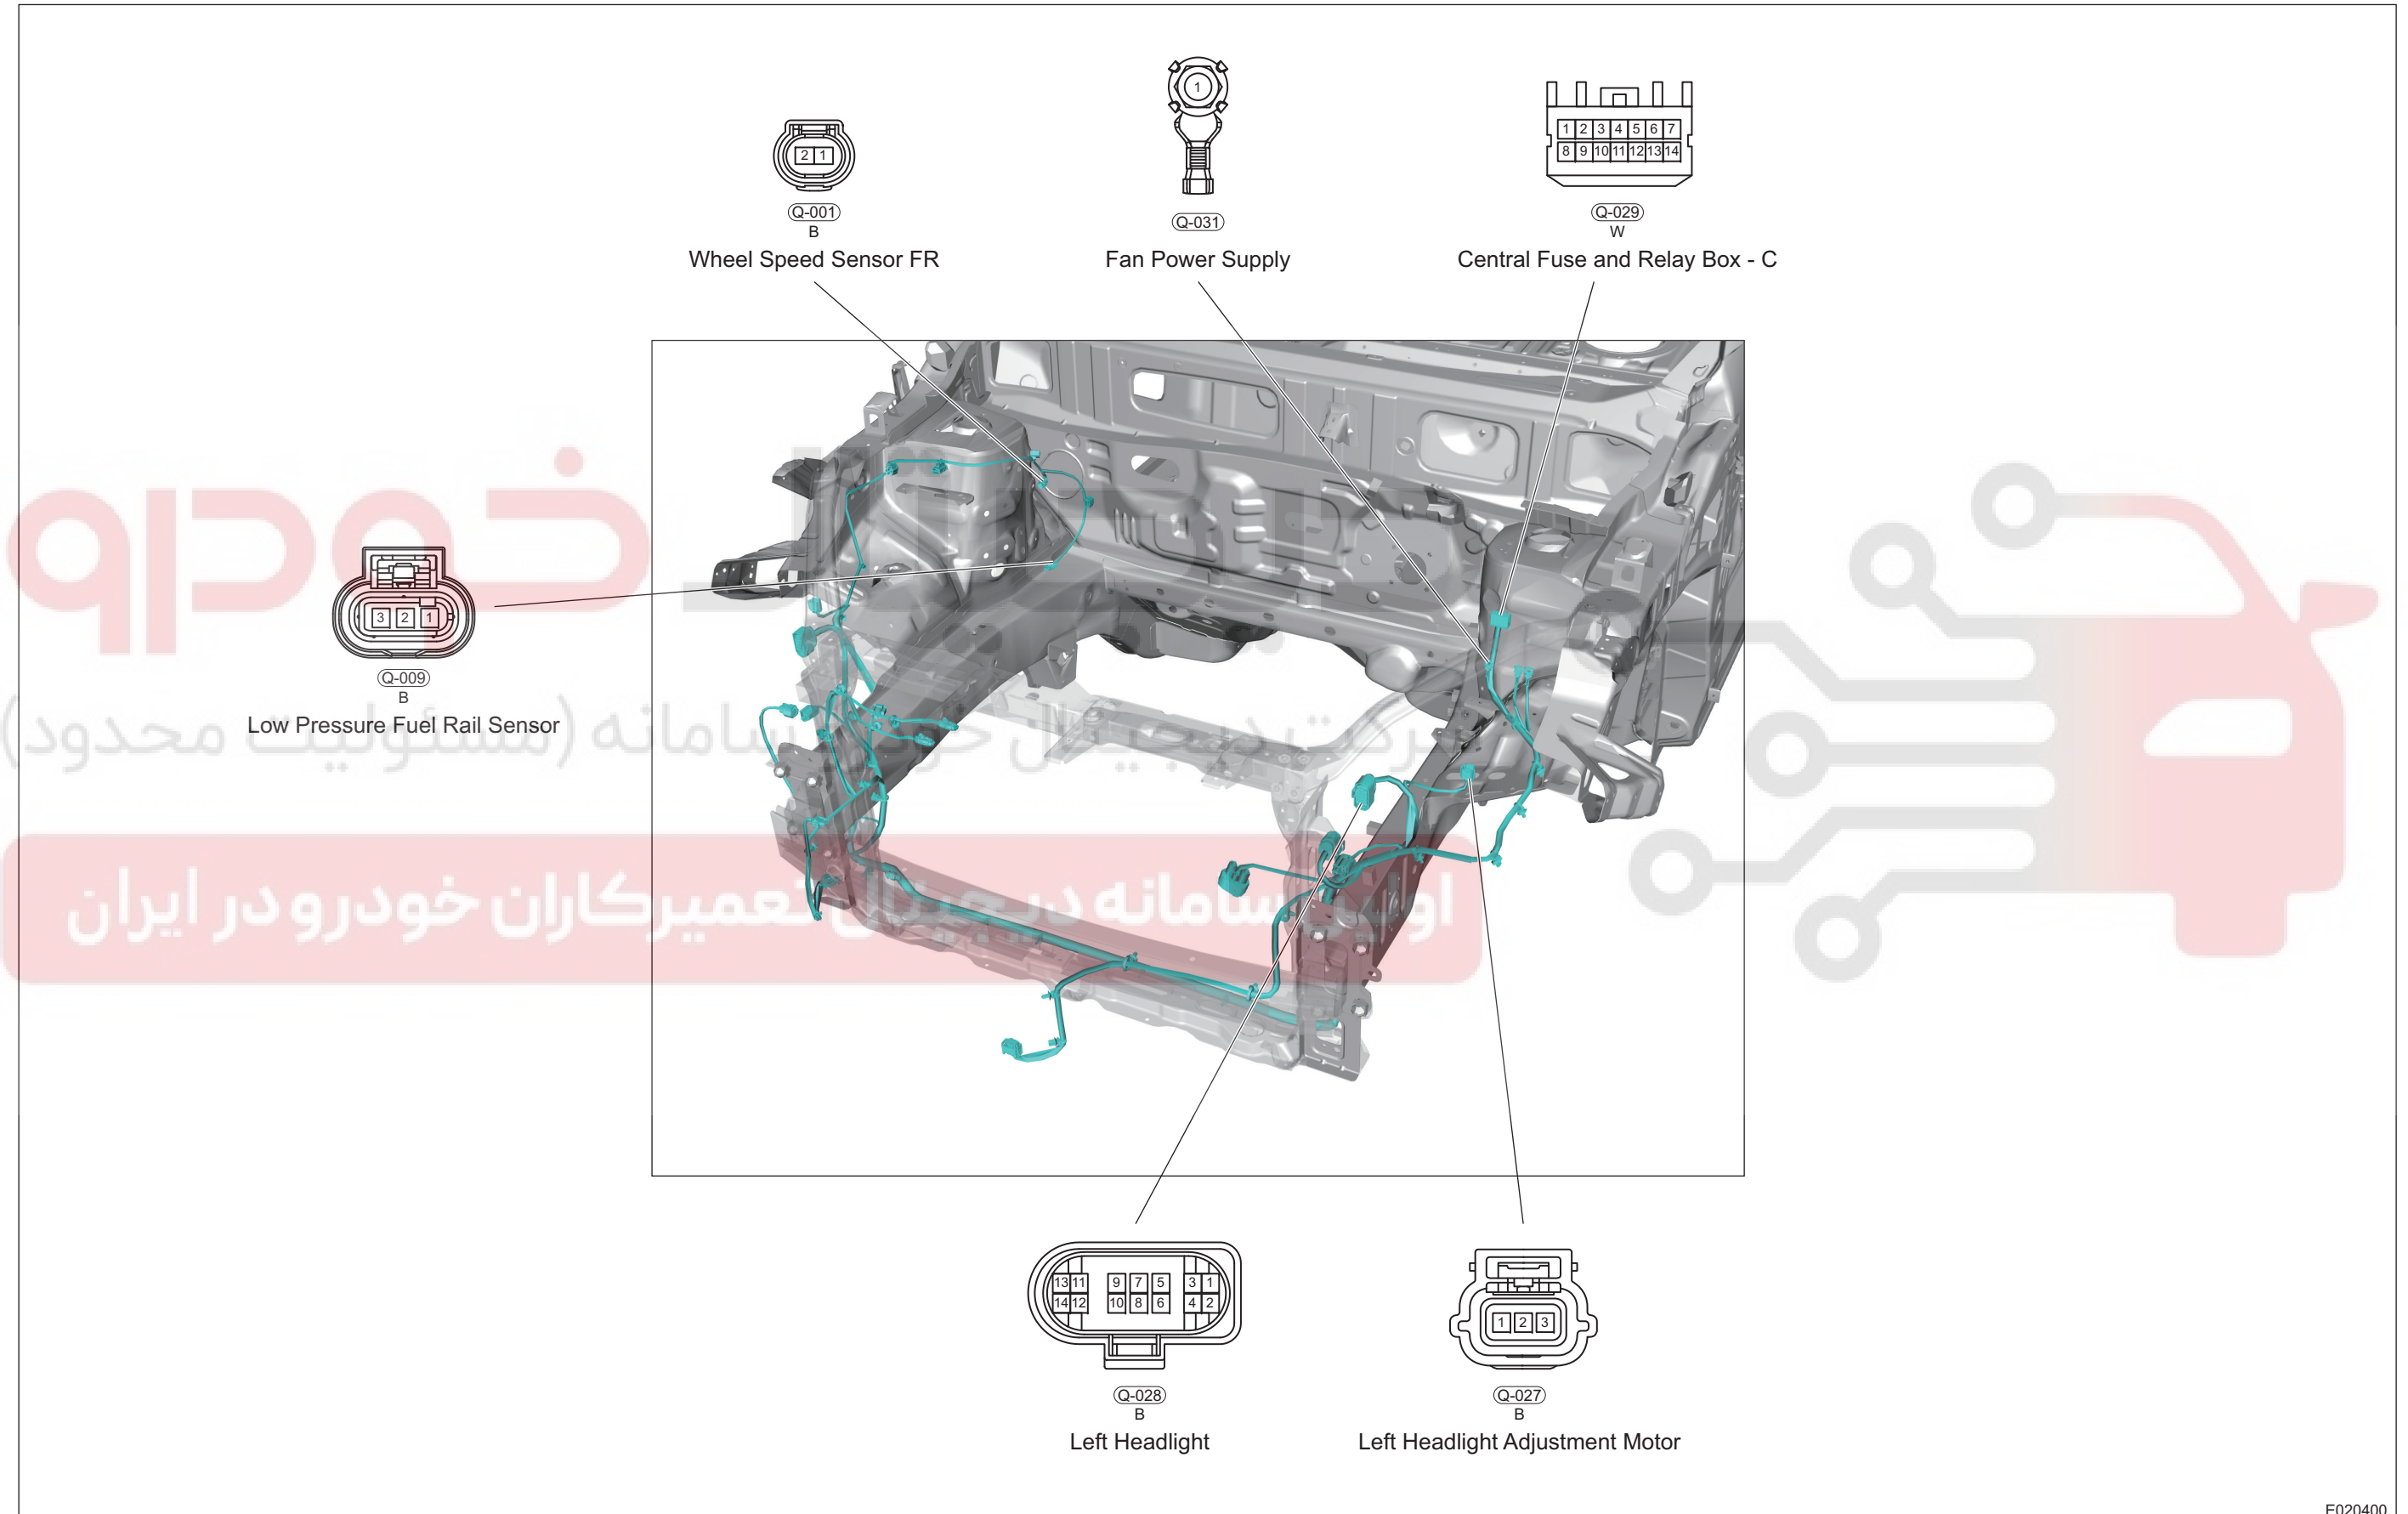

E020400


CHAPTER 2. WIRE HARNESS DIAGRAM

 6.2. Front Bumper Wire Harness Connector Position Diagram

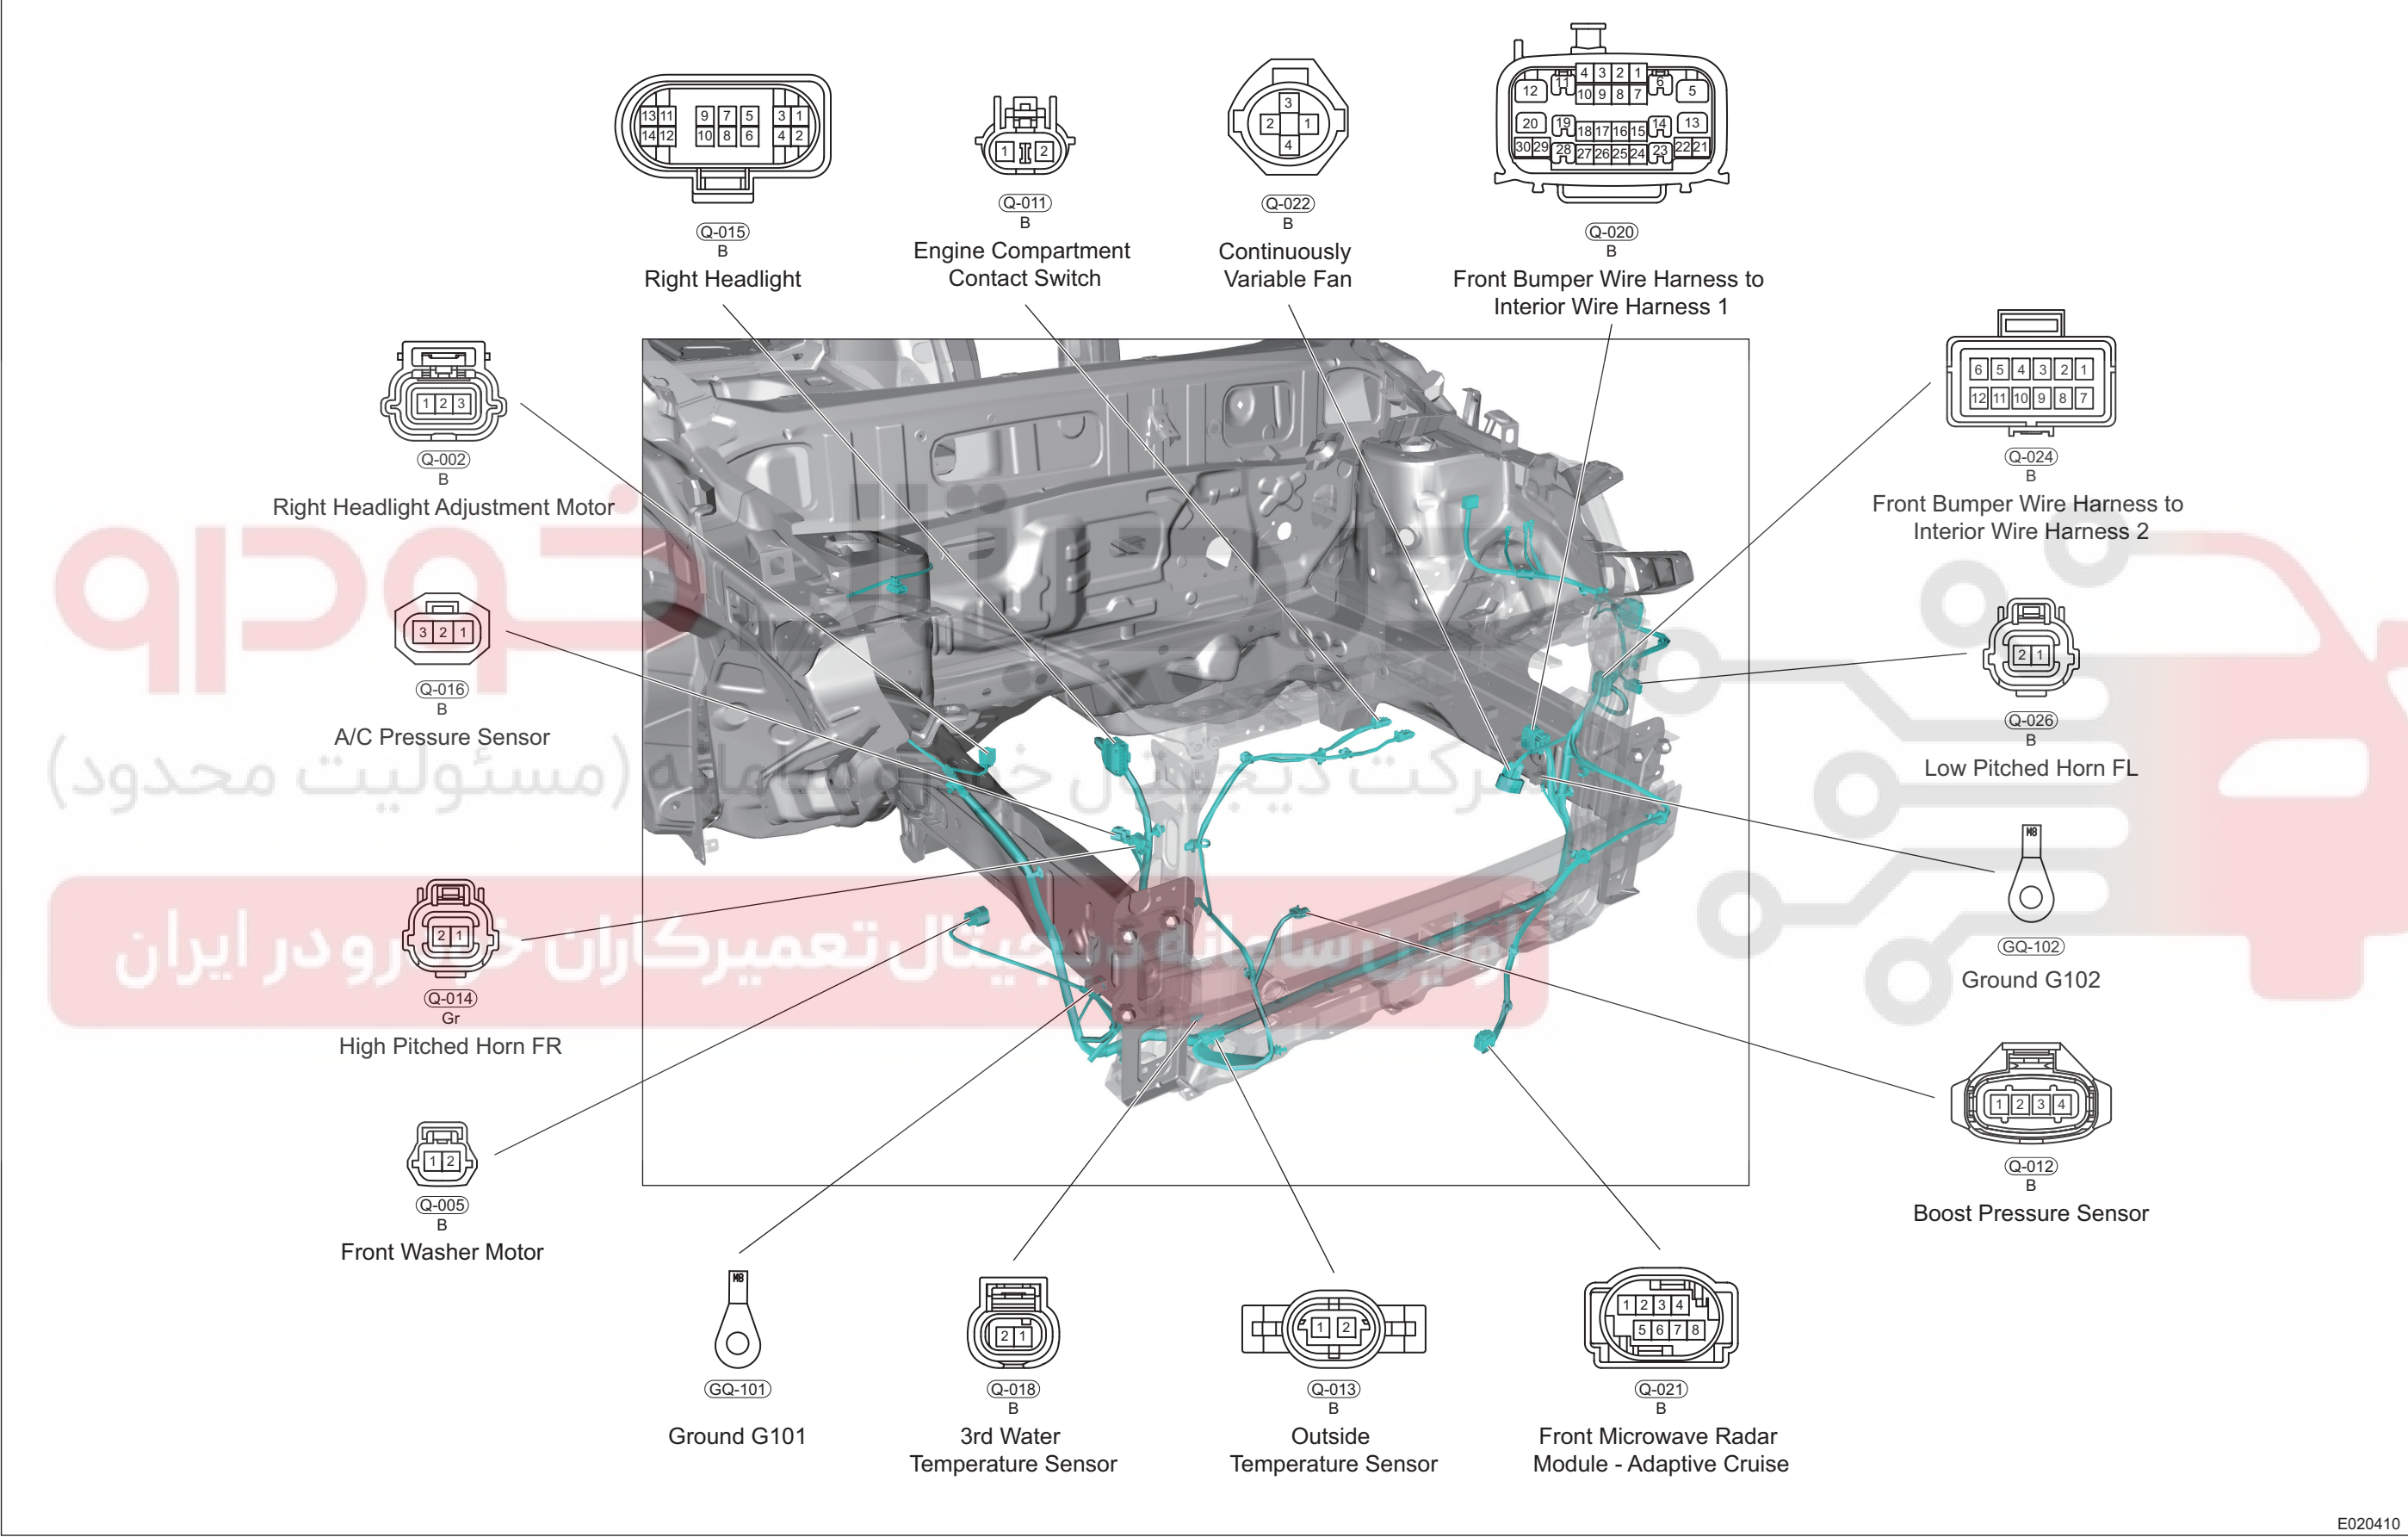

E020410

 6.3. Front Bumper Wire Harness Connector Position Diagram


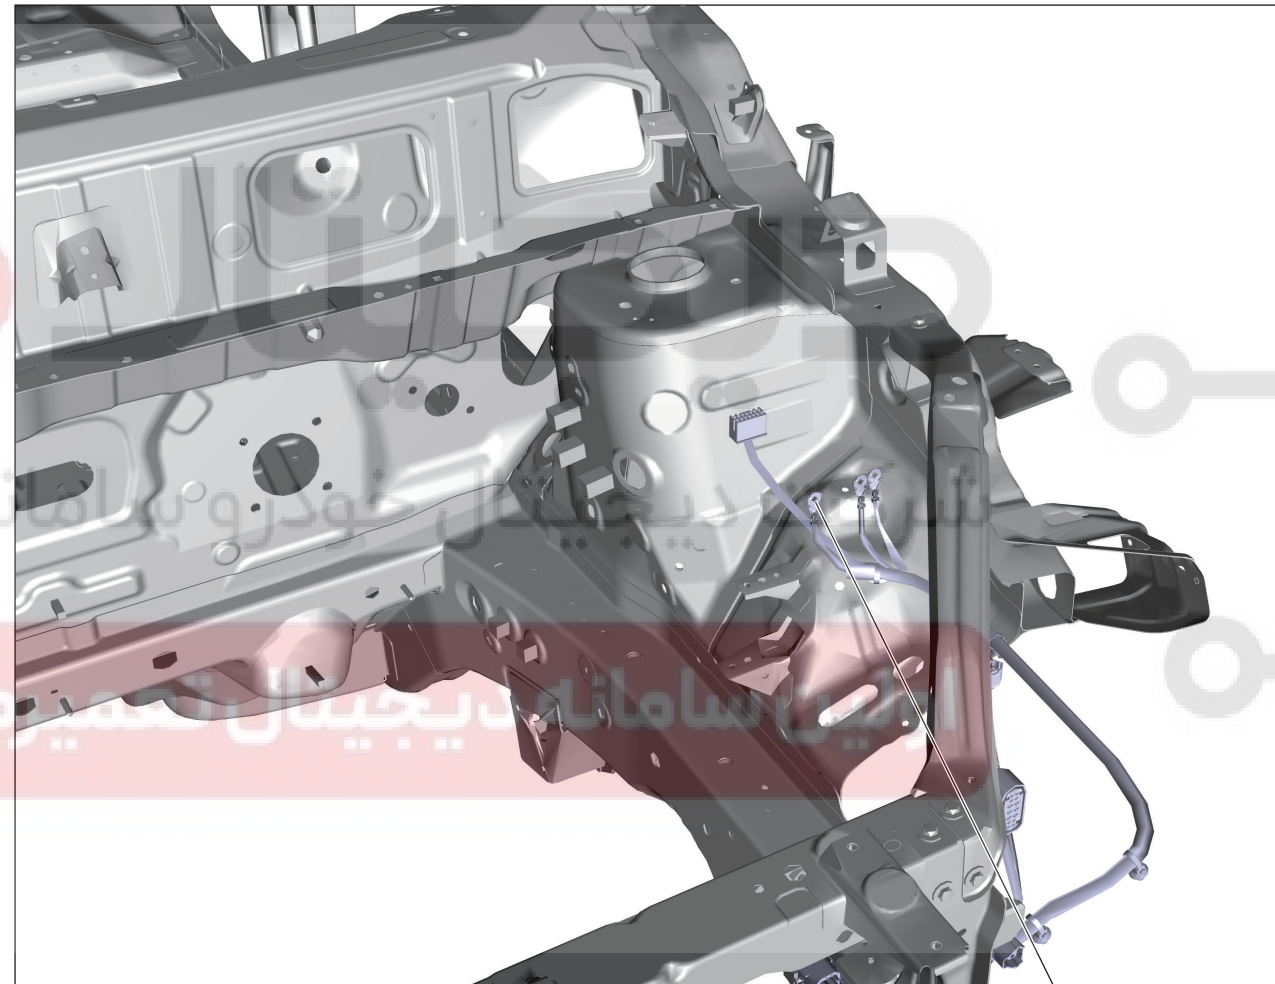


UEC-R-7 2.0T Fan Power Supply

E020412

CHAPTER 2. WIRE HARNESS DIAGRAM

  6.4. Front Bumper Wire Harness Connector Position Diagram

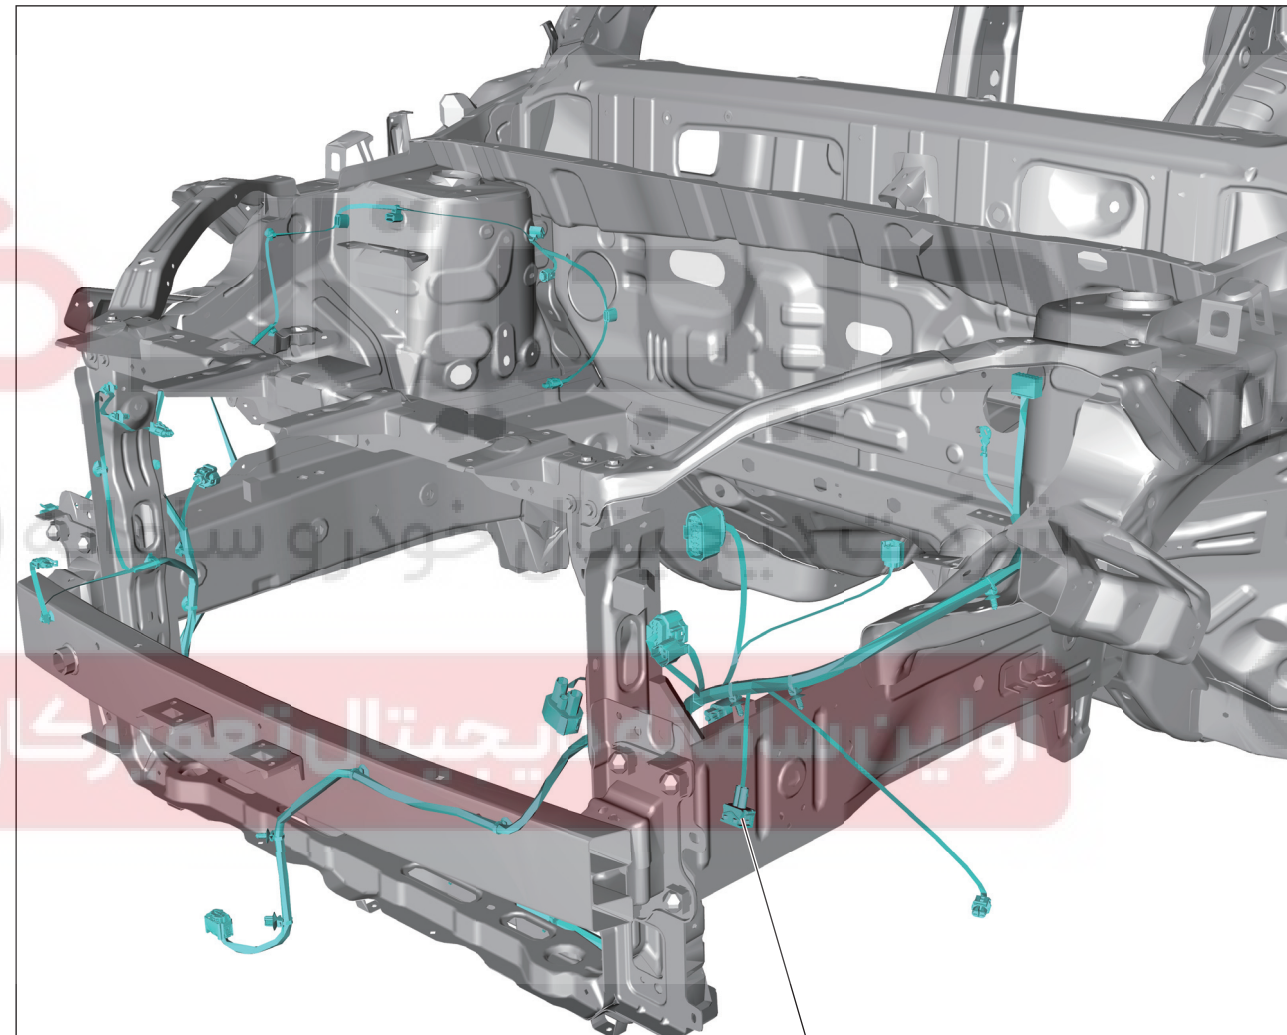


Q-052
B

Anti-theft Horn

E020413

 
(7). Front Radar Wire Harness Diagram

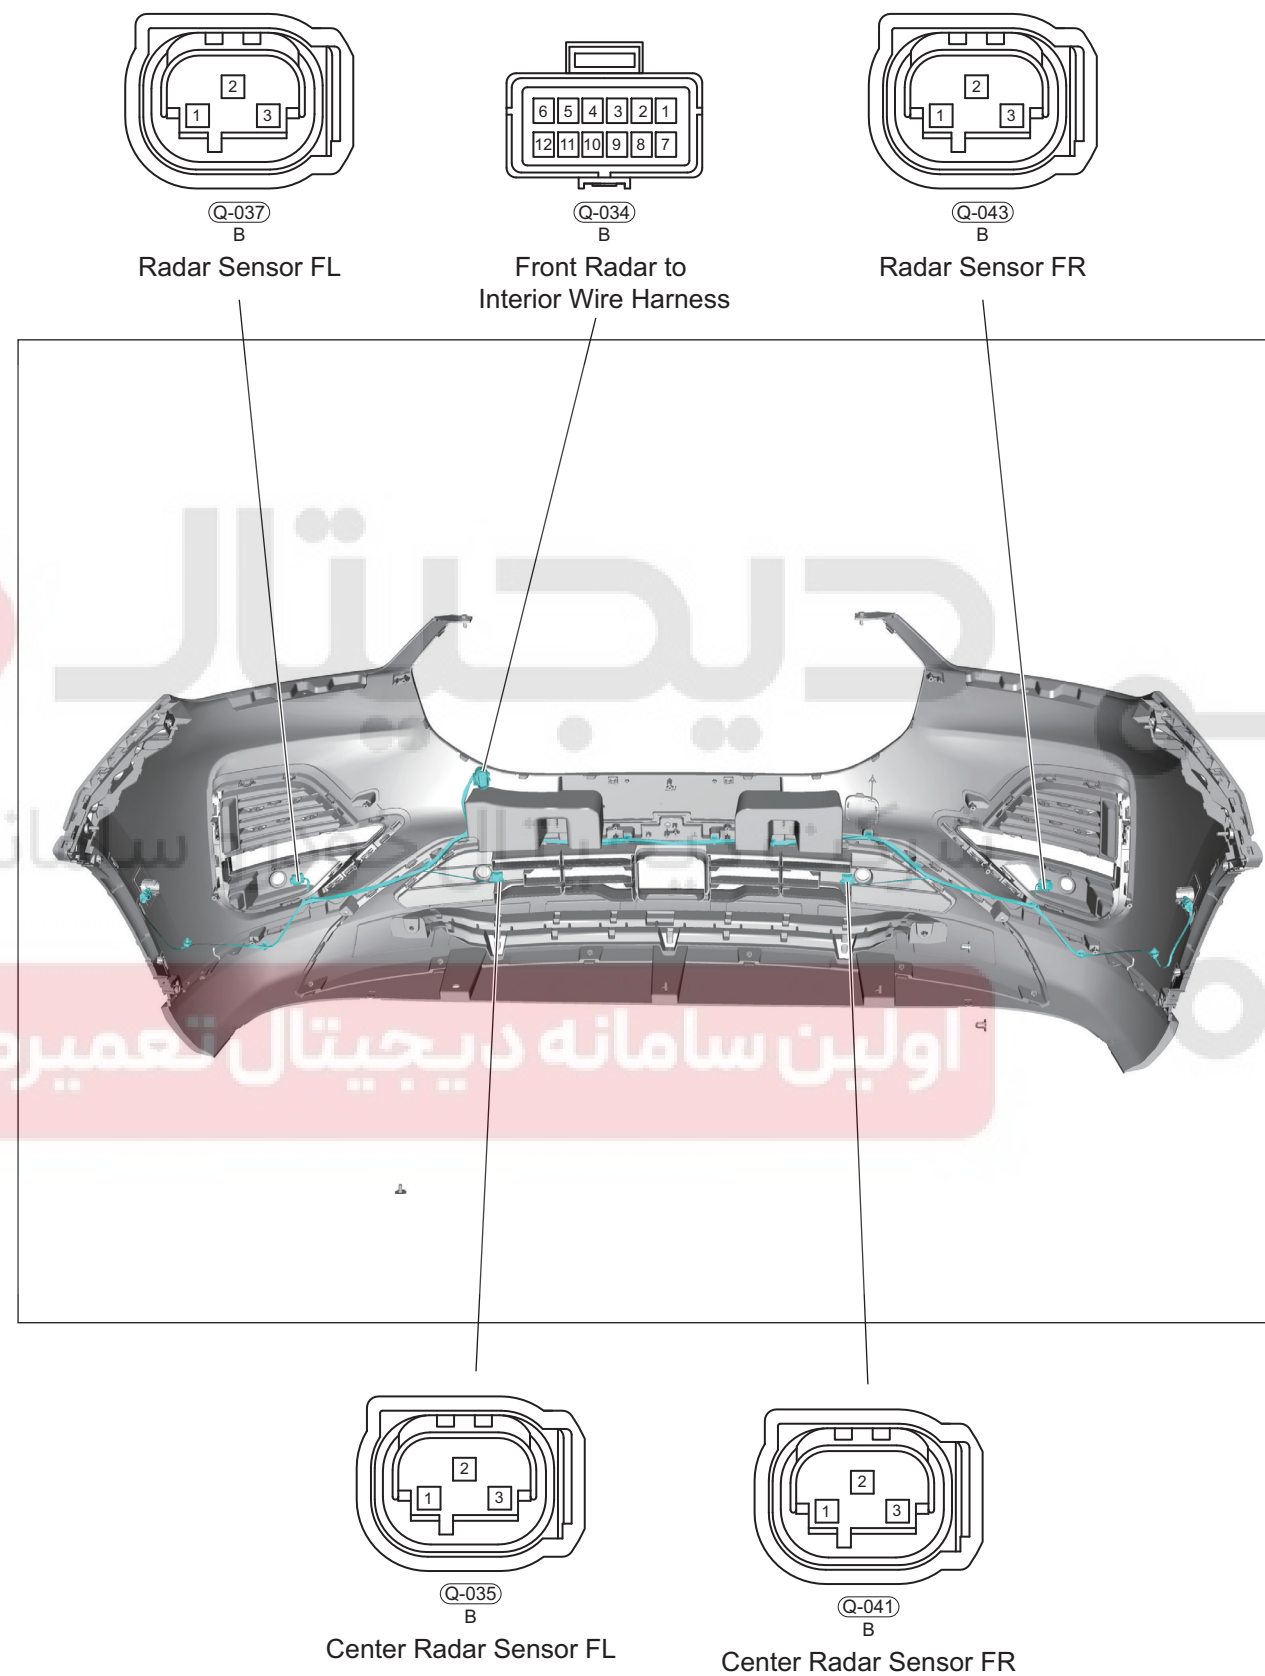

E020420


CHAPTER 2. WIRE HARNESS DIAGRAM

 (8). Rear Bumper Wire Harness Diagram

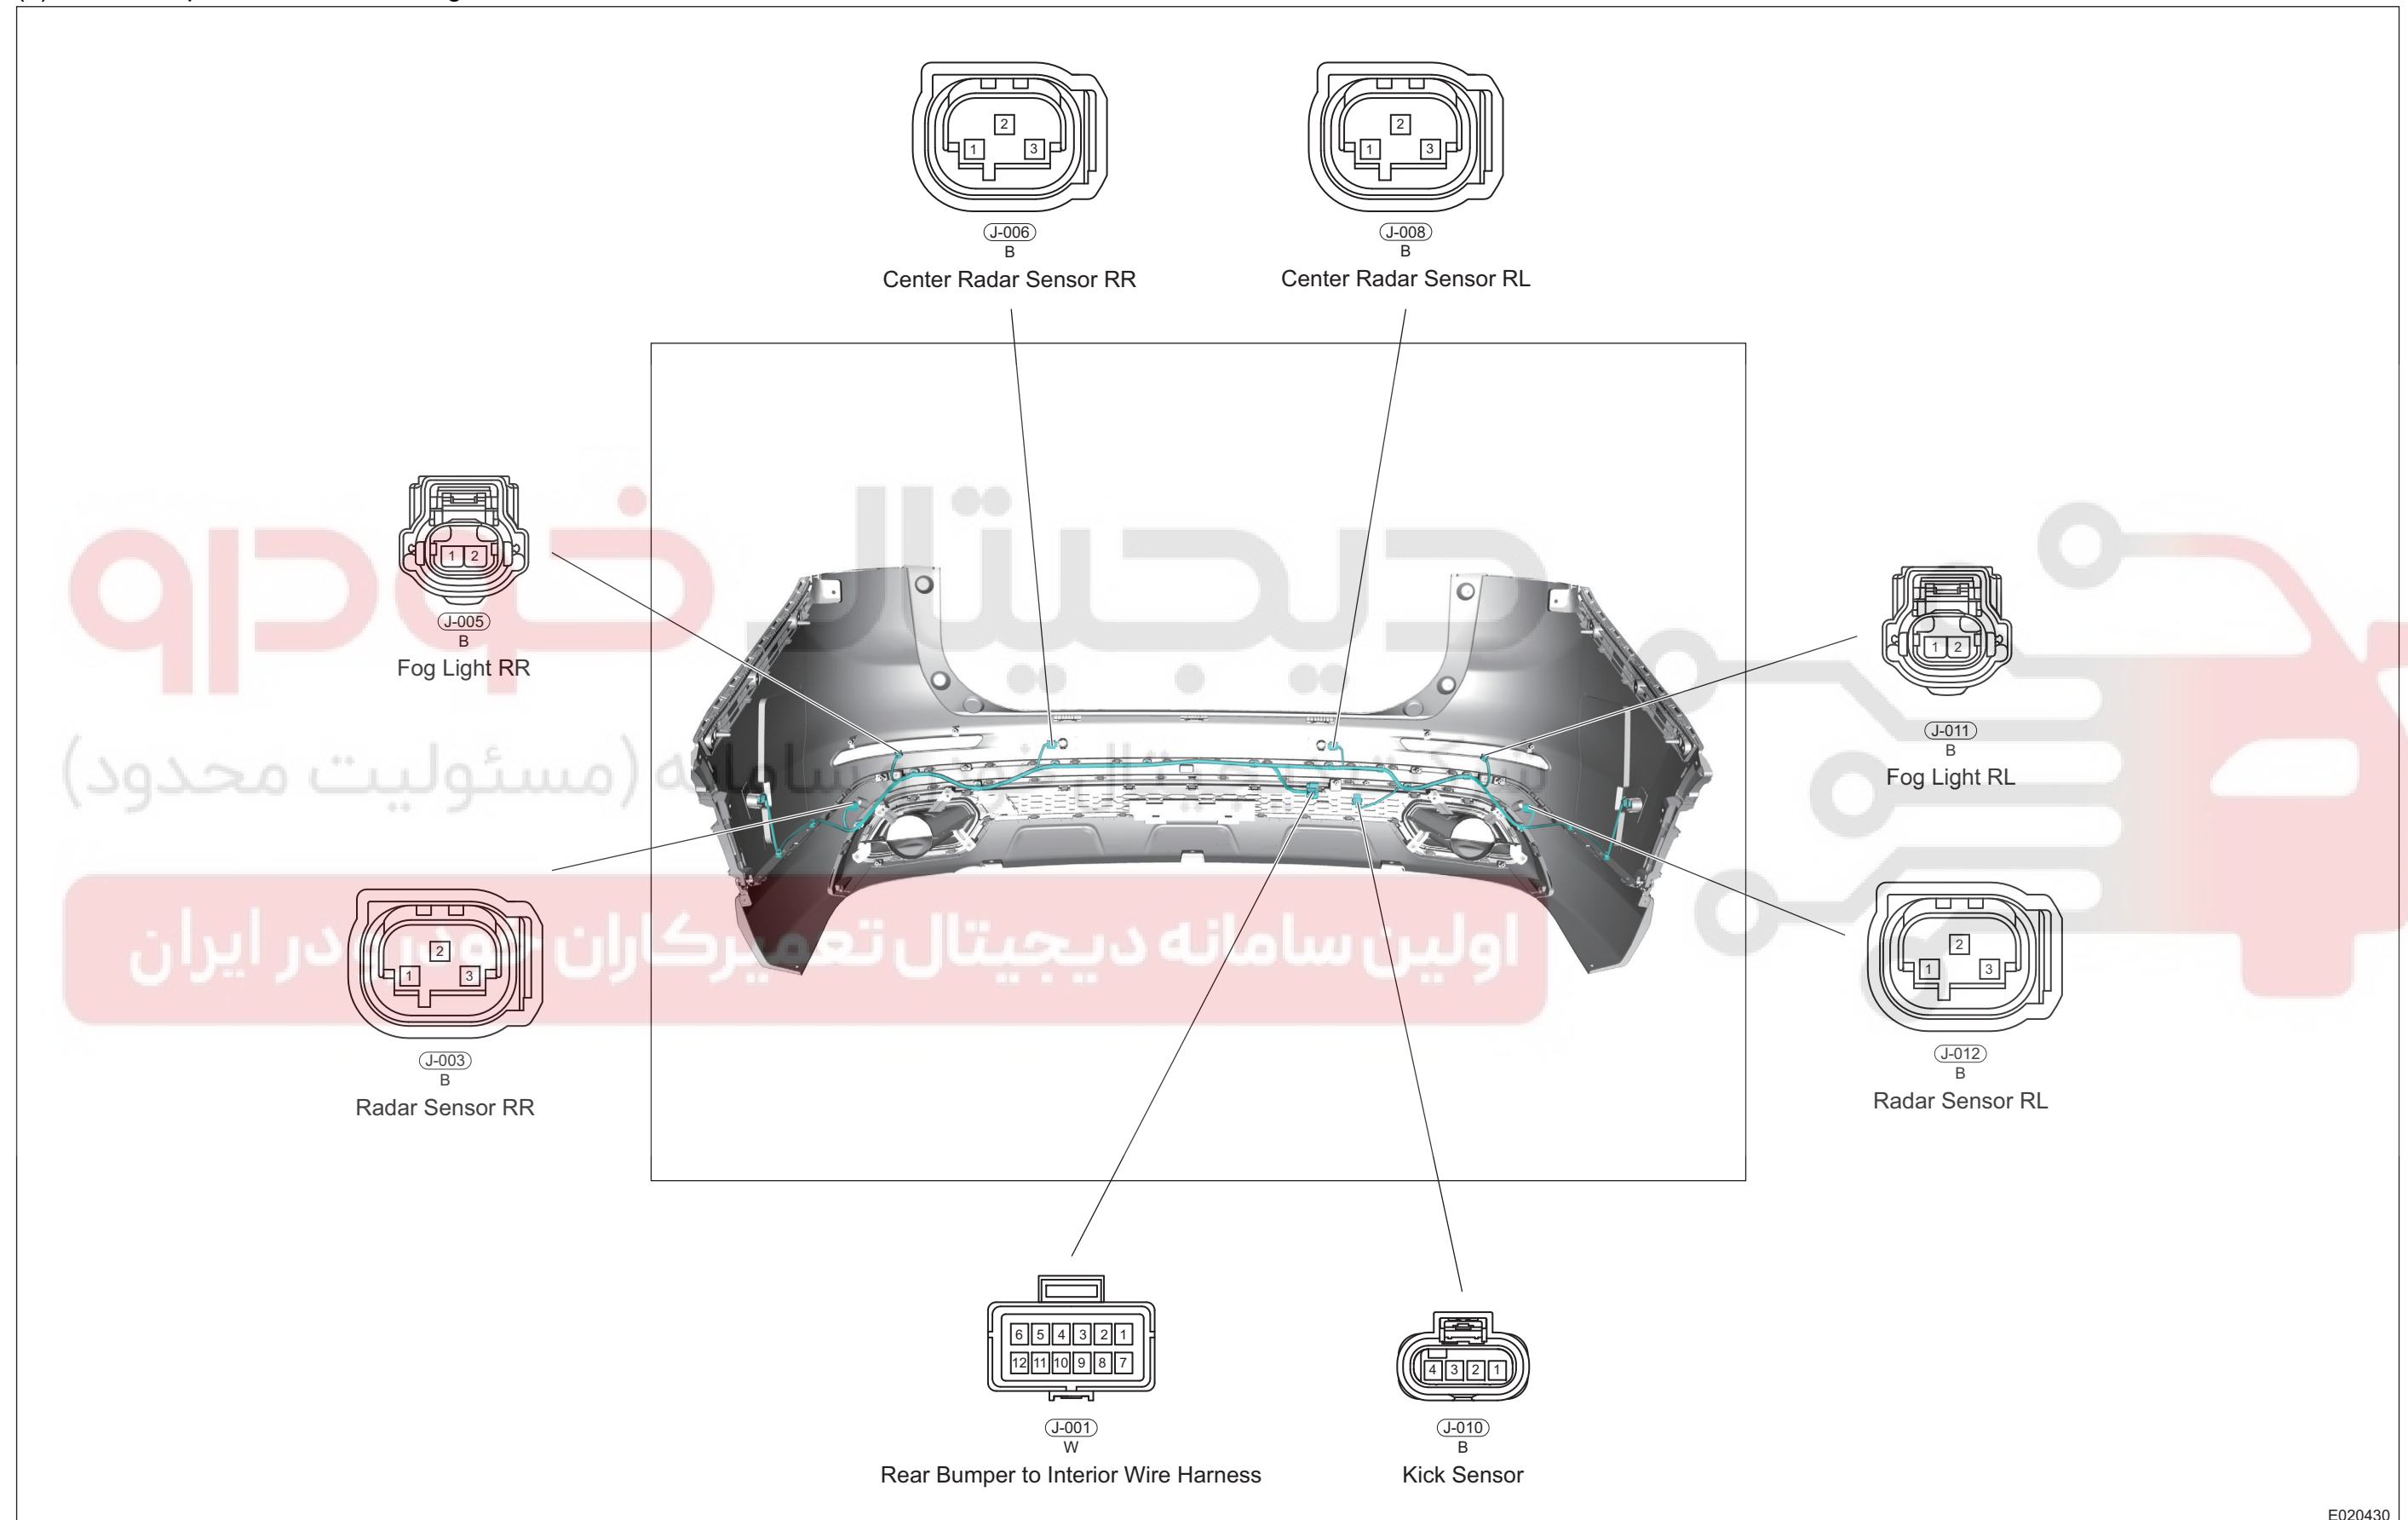

E020430

 (9). A/C Wire Harness Diagram

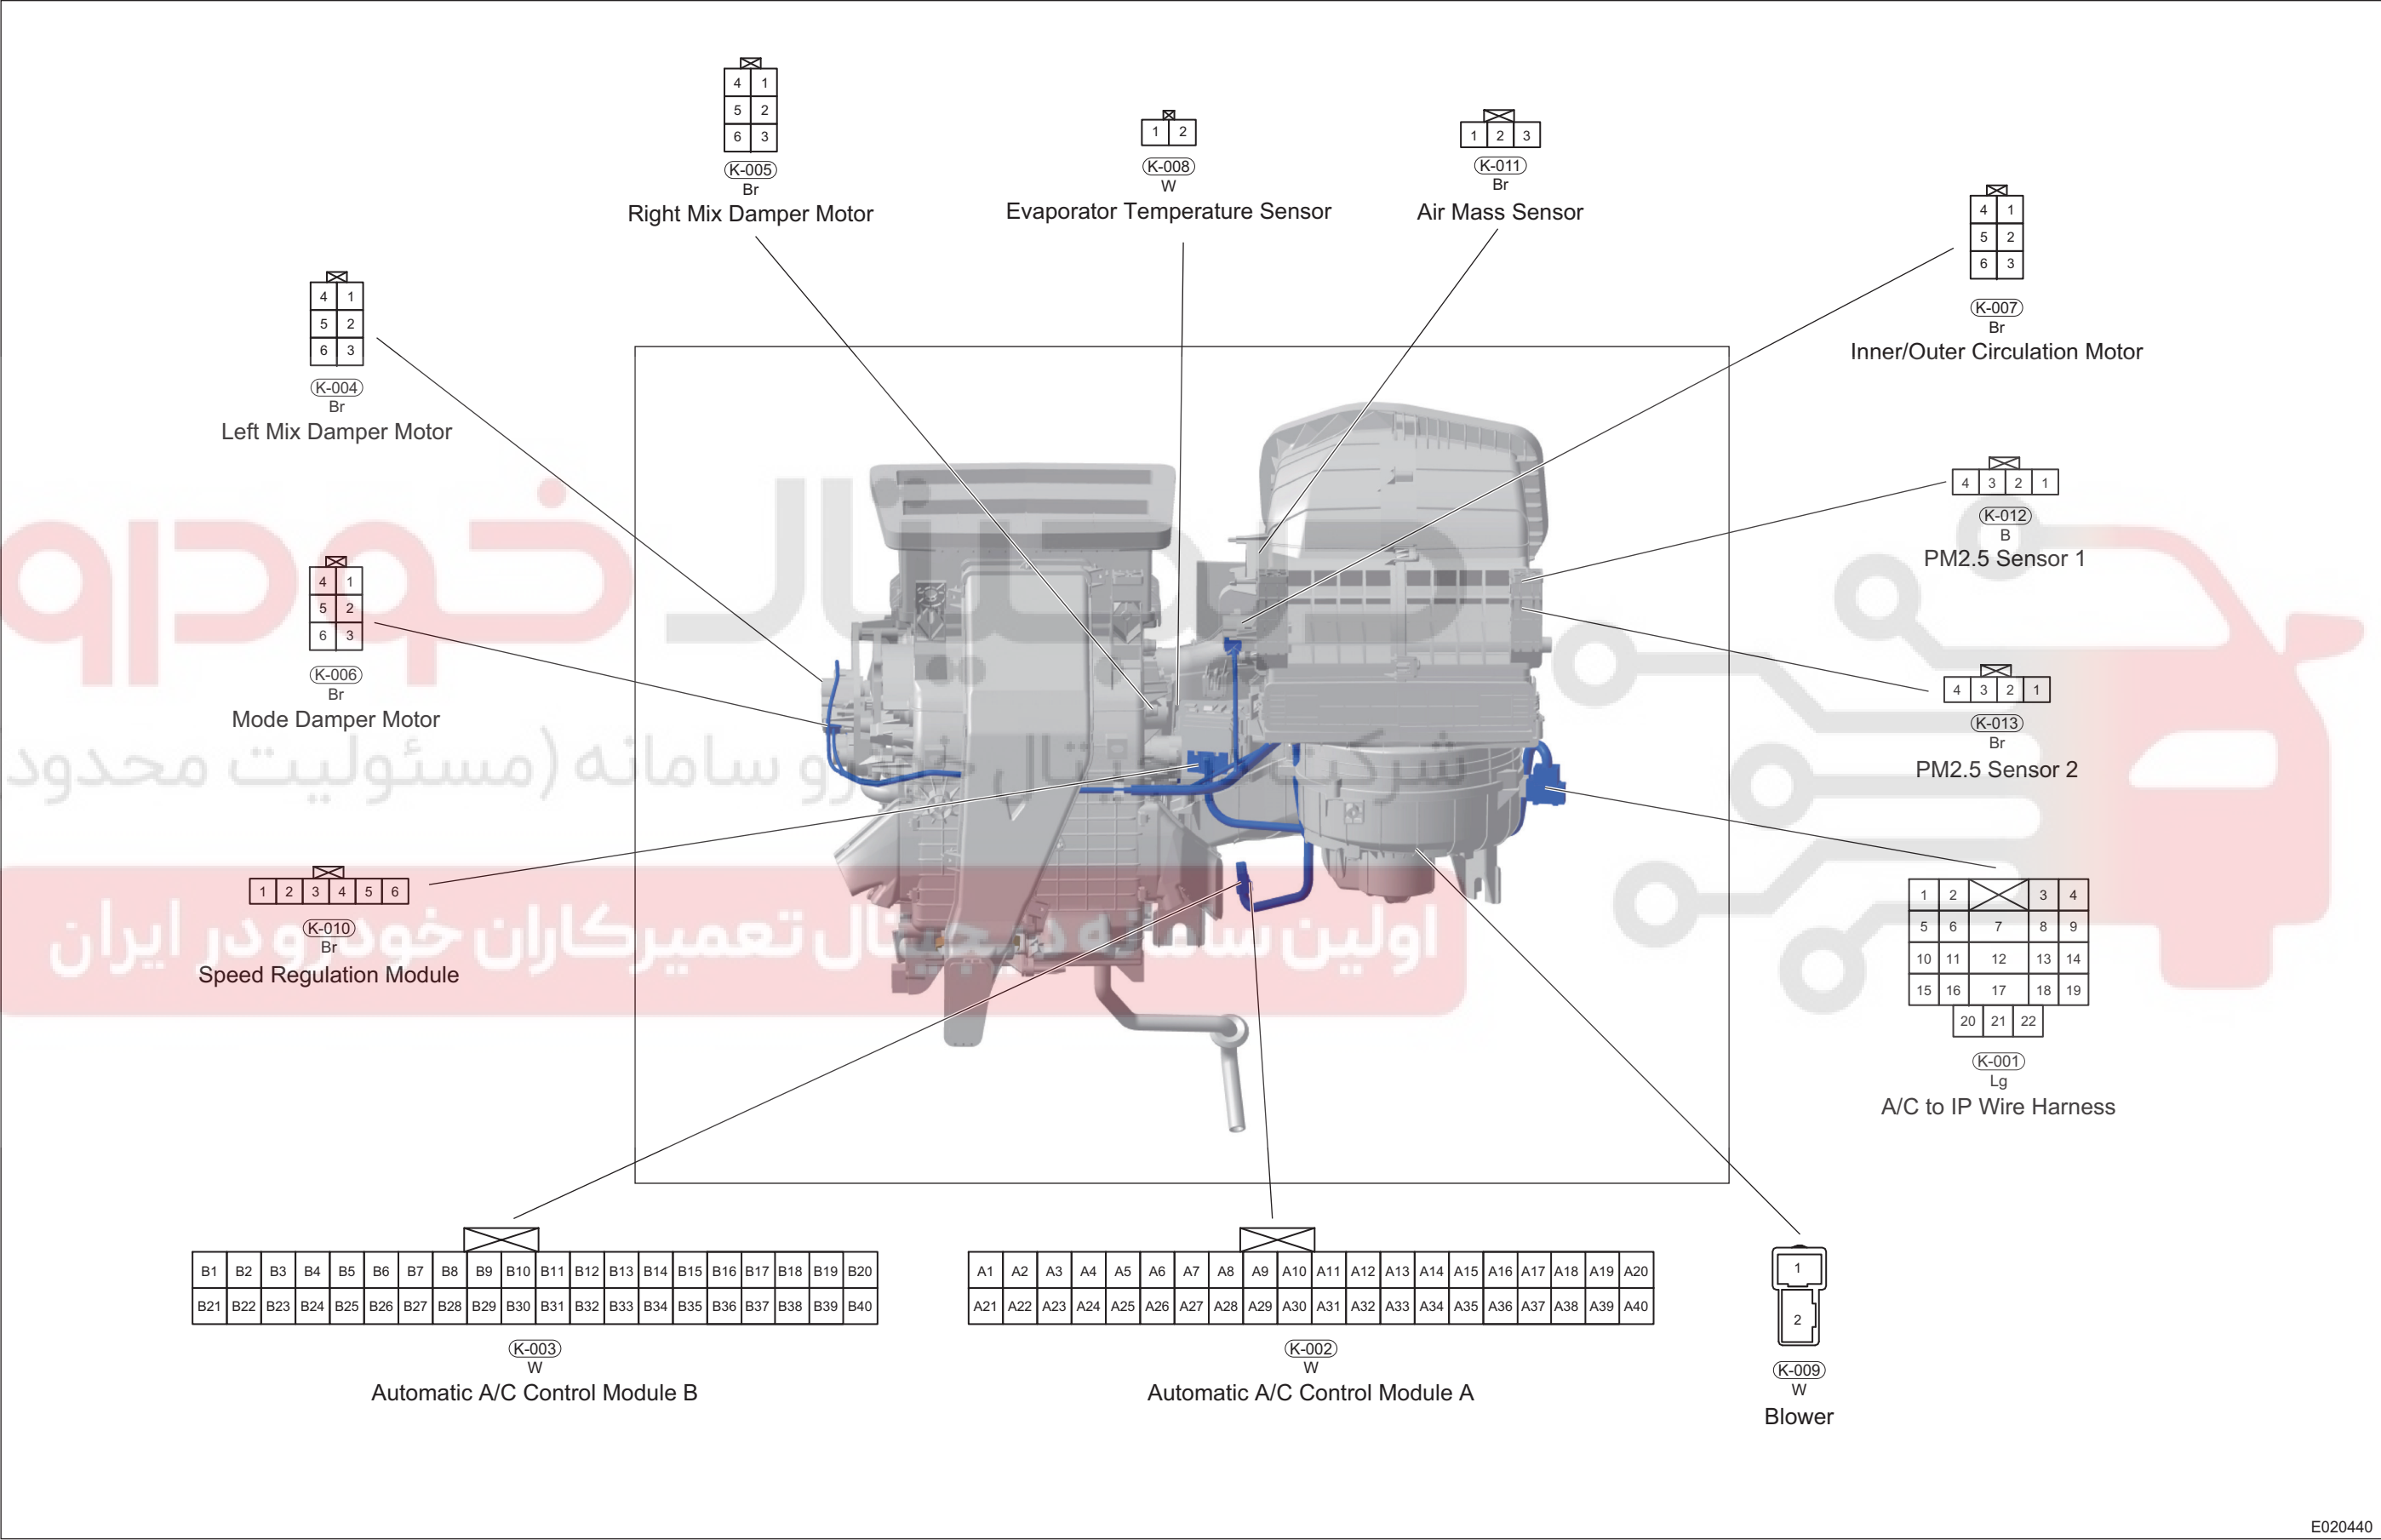

E020440