


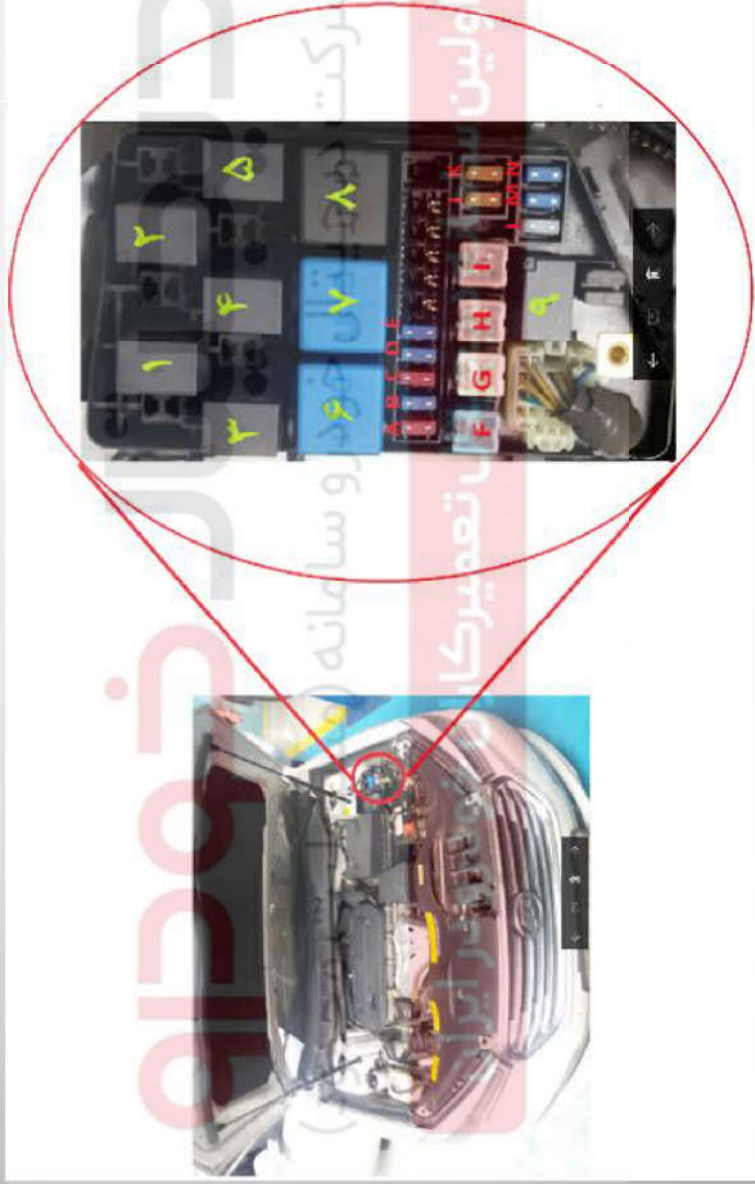


معرفی جعبه فیوز محفظه موتور خودروی ۸۲۰

مجموعه فیوزها	مجموعه رله ها
ECU (A)	۱. کولر
پمپ بنزین (B)	۲. پمپ بنزین
کولر (C)	۳. بوق
چراغ جلو (D)	۴. استارت
بوق (E)	۵. چراغ های جلو
استارت (F)	۶. فن
برق رله اصلی (G)	۷. فن
فن 1 (H)	۸. فن کولر
فن 2 (I)	۹. رله اصلی
سنسور اکسیژن بالایی (J)	
سنسور اکسیژن پایینی (K)	
ABS (L)	
کوئل (M)	
انژکتور (N)	



Engine Compartment Fuse and Relay Box

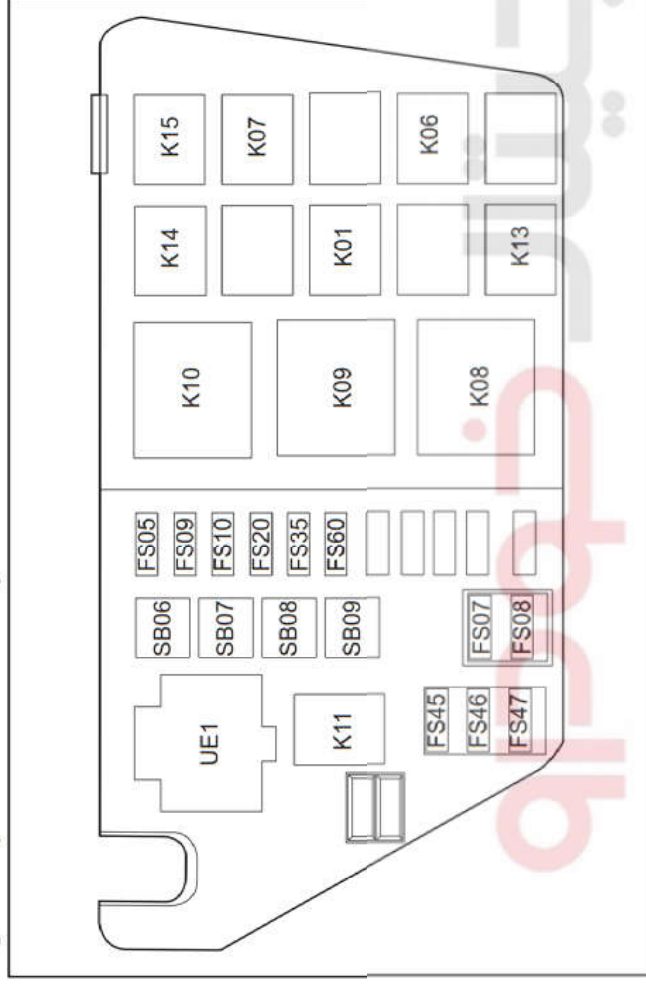

Fuse

Code	Application	Rated Current (A)	Description
FS05	ECU Fuse	10A	
FS07	Front Oxygen Sensor Fuse	5A	
FS08	Rear Oxygen Sensor Fuse	5A	
FS09	Fuel Pump Fuse	15A	
FS10	A/C Compressor Fuse	10A	
FS20	Low-Beam Lamp Fuse	15A	
FS35	Horn Fuse	15A	
FS45	ABS Fuse	25A	
FS46	Ignition Coil Fuse	15A	
FS47	Injector Fuse	15A	
FS60	Electric Water Pump Fuse	5A	2.0T Engine
SB06	Starter Fuse	20A	
SB07	Main Relay Fuse	25A	
SB08	High Speed Fan Fuse	30A	
SB09	Low Speed Fan Fuse	30A	

Relay

Code	Application	Description
K01	Start Relay	
K06	Fuel Pump Relay	
K07	Compressor Relay	
K08	Adjusting Fan Relay	
K09	High Speed Fan Relay	
K10	Low Speed Fan Relay	
K11	Main Relay	
K13	High/Low-Beam Lamp Relay	
K14	Horn Relay	
K15	Electric Water Pump Relay	2.0T Engine