WWW.DIGITALKHODRO.COM 021 62 99 92 92

前门中控开关、门锁电机、门微动开关电路图

Front door central control switch,door lock motor,Warning light module,door micro switch wiring diagram

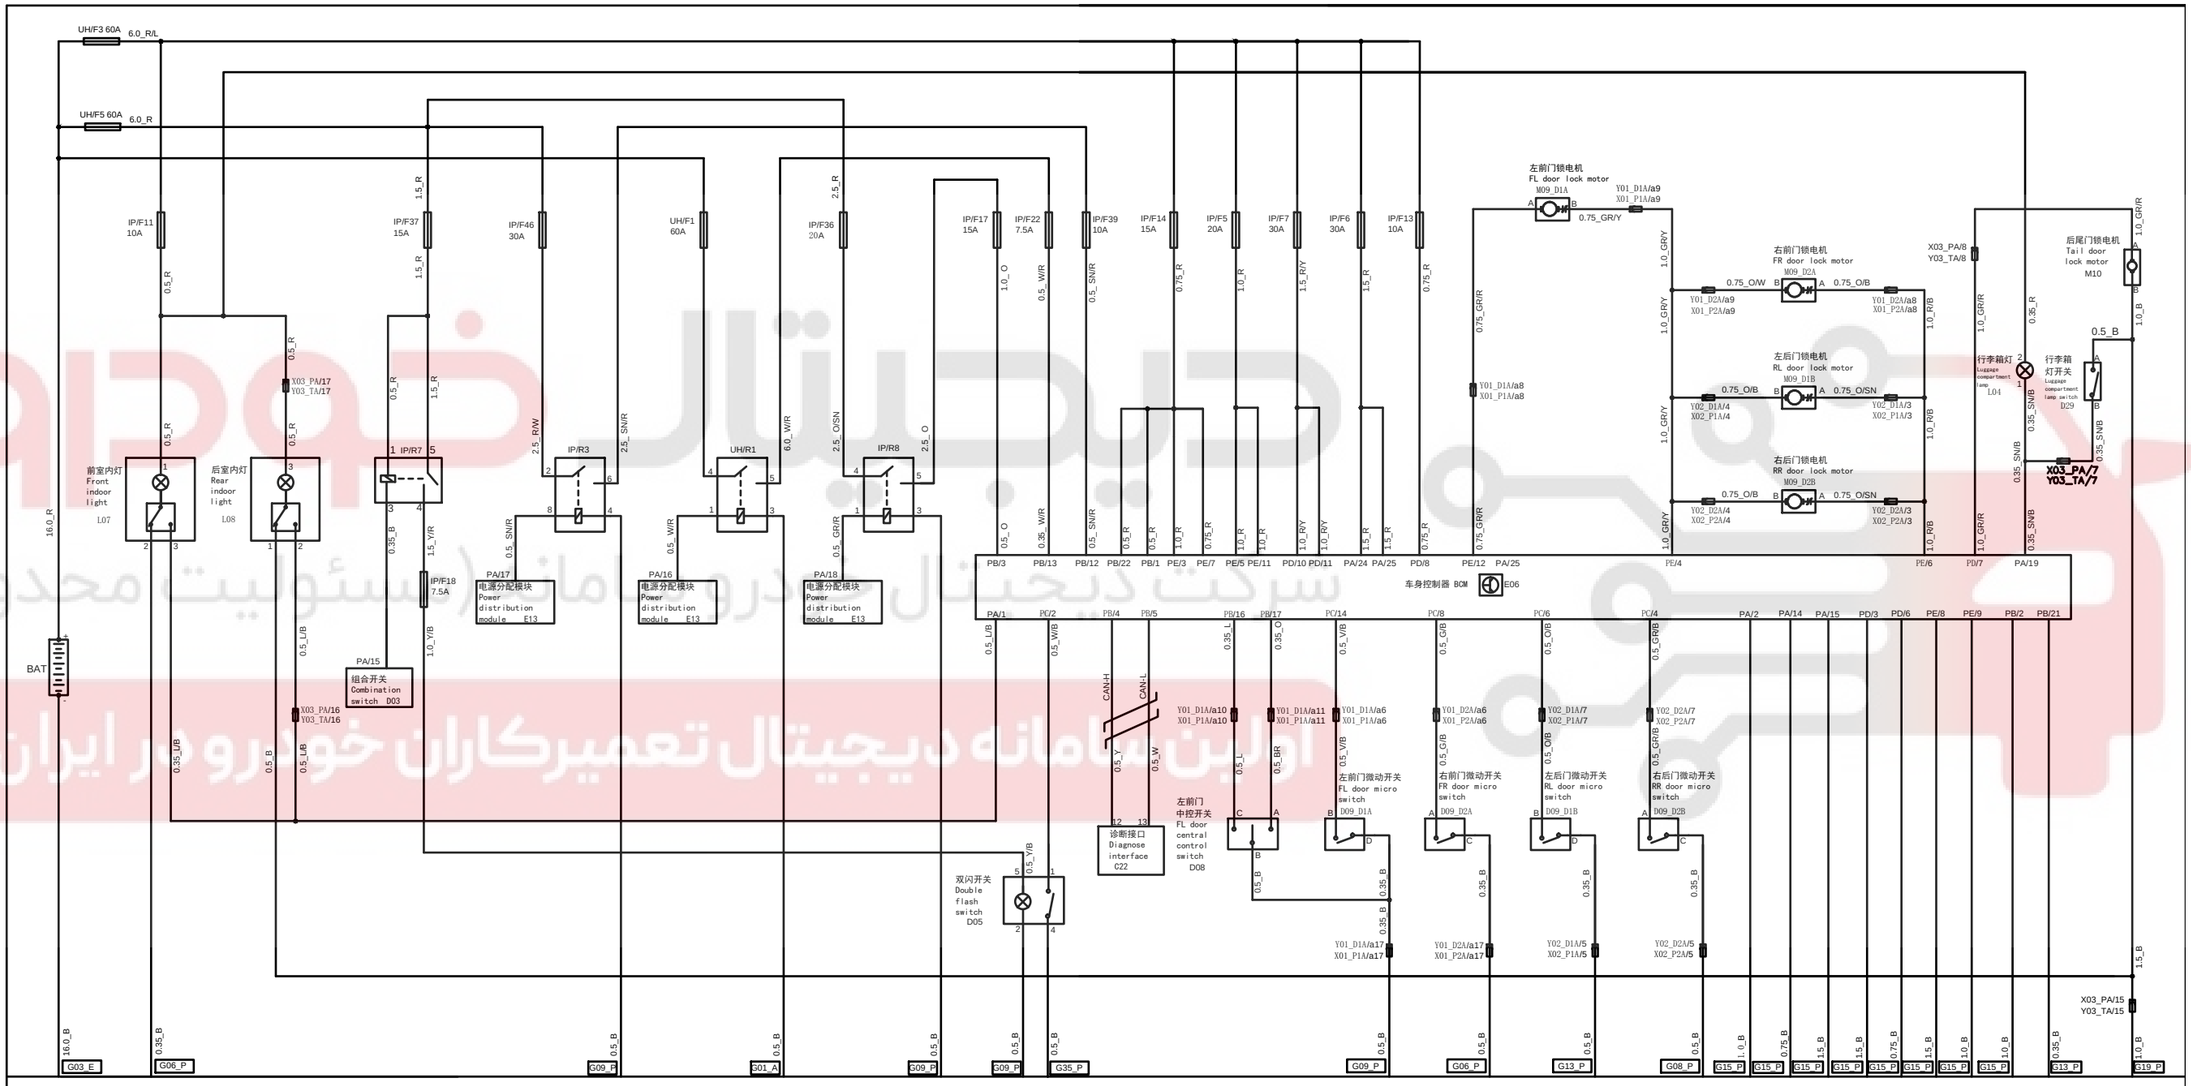

前门中控开关、门锁电机、警告灯模块、门微动开关电路图

E06—车身控制器	**D08**—左前门中控开关	**G01_A**—发动机舱左前搭铁点
D05—双闪开关	D09_D1B—左后门微动开关	**G03_E**—蓄电池负极到车身搭铁点
L07—前室内灯	D09_D2B—右后门微动开关	**G06_P**—主线束右侧**A**立柱下搭铁点
L08—后室内灯	D09_D1A—左前门微动开关	**G08_P**—主线束右侧**B**立柱上搭铁点
E13—电源分配模块	D09_D2A—右前门微动开关	**G09_P**—主线束左侧**A**立柱下搭铁点**2**
D03—组合开关	M09_D1A—左前门锁电机	**G13_P**—主线束左侧**B**立柱上搭铁点
C22—诊断接口	M09_D2A—右前门锁电机	**G15_P**—BCM处搭铁点
L04—行李箱灯	M09_D1B—左后门锁电机	**G19_P**—主线束左侧后尾部搭铁点
D29—行李箱灯开关	M09_D2B—右后门锁电机	**G35_P**—中控台处搭铁点
	M10—后尾门锁电机	

Front door central control switch,door lock motor,Warning light module,door micro switch wiring diagram

E06—BCM	D08—FL door central control switch	01_A-Front ground point in engine compartment
D05—Double flash switch	D09_D1B—RL door micro switch	G03_E-Ground point between battery terminal negative and body G06_P-Ground point below right main harness A column
L07—Front indoor light	D09_D2B—RR door micro switch	G08_P-Ground point below right main harness B column
L08—Rear indoor light	D09_D1A—FL door micro switch	G09_P-Ground point below left main harness A column 2
E13—Power distribution module	D09_D2A—FR door micro switch	G13_P-Ground point below left main harness B column
D03—Combination switch	M09_D1A—FL door lock motor	G15_P-Ground point in BCM
C22—Diagnose interface	M09_D2A—FR door lock motor	G19_P-Ground point left tail main harness A column
L04—Luggage compartment lamp	M09_D1B—RL door lock motor	G35_P-Ground point in center stack
D29—Luggage compartment lamp switch	M09_D2B—RR door lock motor	
	M10—Tail door lock motor	

WWW.DIGITALKHODRO.COM 021 62 99 92 92