WWW.DIGITALKHODRO.COM 021 62 99 92 92

灯光 beam

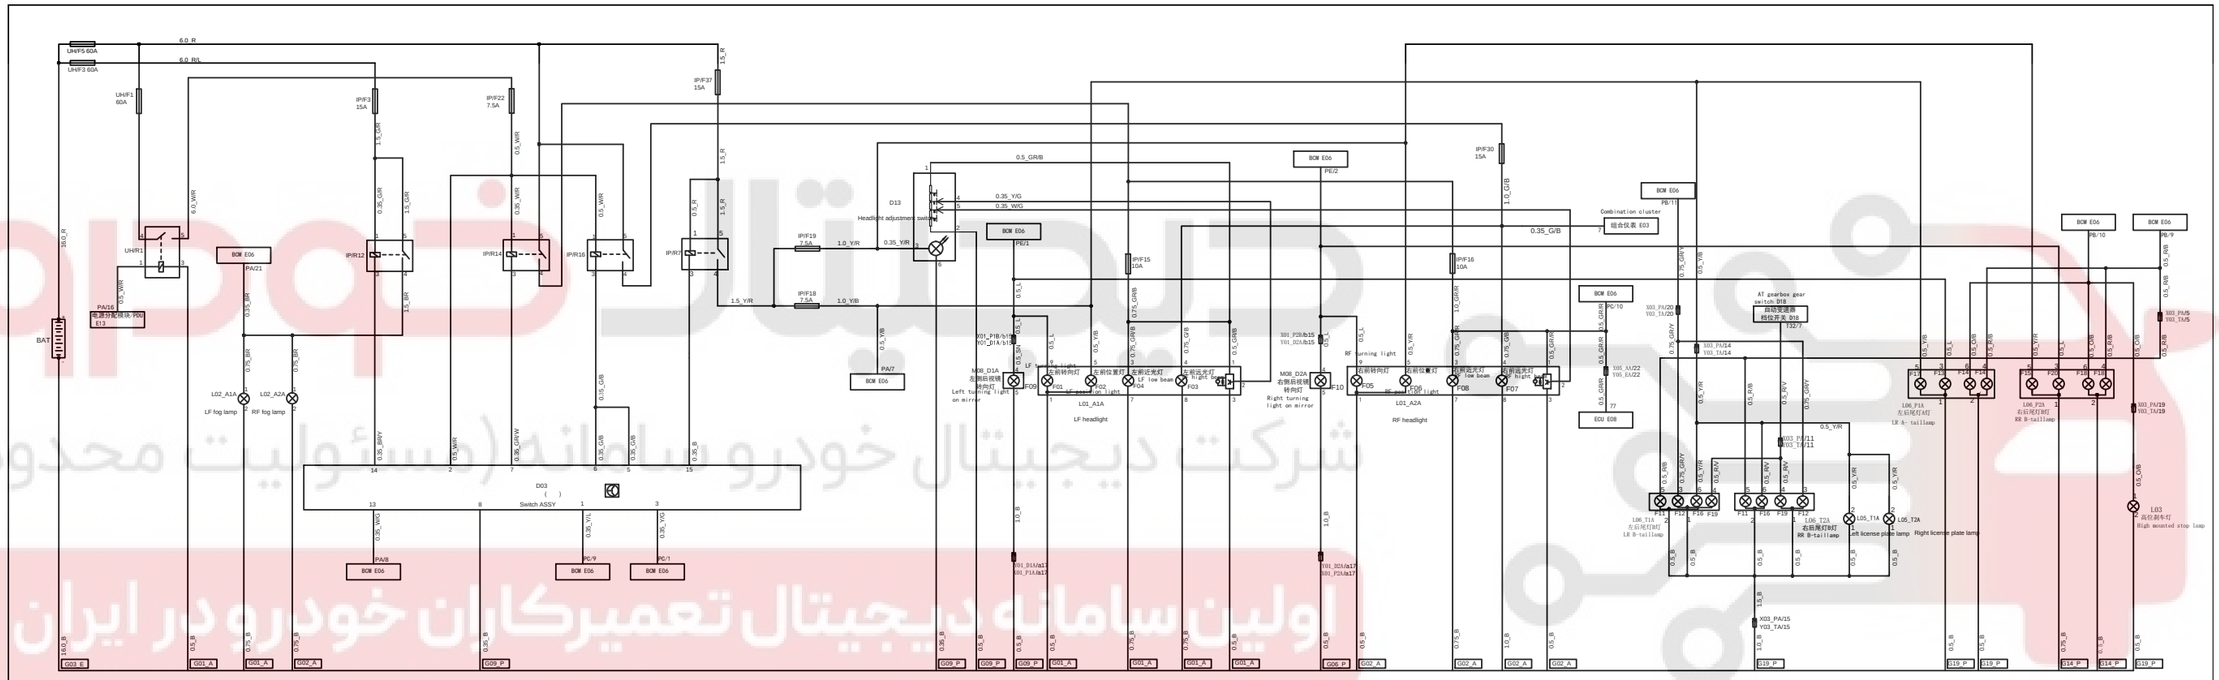

D03-灯光组合控制开关
D13-大灯调节开关
L02_A1A-左前雾灯
L02_A2A-右前雾灯
F19-B灯倒车灯
F20-A灯右后转向灯
L03-高位刹车灯
L05_T1A-左牌照灯
L05_T2A-右牌照灯

F01-左前转向灯
F02-左前位置灯
F03-左前远光灯
F04-左前近光灯
F09-左侧转向灯
F10-右侧转向灯
F05-右前转向灯
F06-右前位置灯
F07-右前远光灯
F08-右前近光灯

F11-B灯制动灯
F12-B灯后雾灯
F13-A灯左后转向灯
F14-A灯左后制动灯
F15-A灯右后尾灯
F16-B灯位置灯
F17-A灯左后尾灯
F18-A灯右后制动灯

G03_E-蓄电池负极到车身搭铁点
G01_A发动机舱左前搭铁点
G02_发动机舱右前搭铁点
G09_P主线束左侧A立柱下搭铁点2
G06_A发动机舱左前搭铁点
G19_P主线束左侧后尾部搭铁点
G14_P主线束右侧后尾部搭铁点

D03-Combination light switch
D13-Light adjustment switch
L02_A1A-LF fog switch
L02_A2A-RF fog switch
F19-B-reverse lamp
F20-A-RR turning lamp
L03-High mounted stop lamp
L05_T1A-Left license plate lamp
L05_T2A-Right license plate lamp

F01-LFturning lamp
F02-LF position lamp
F03-LF high beam
F04-LF low beam
F09-Left turning lamp
F10-Right turning lamp
F05-RF turning lamp
F06-RF position lamp
F07- RF high beam
F08-RF low beam

F11-B-brake lamp
F12-B-rear fog lamp
F13-A-LR turning lamp
F14-A-LR brake lamp
F15-A-RR taillamp
F16-B-position lamp
F17-A-LR taillamp
F18-A-RR brake lamp

G03_E-GND for BAT negative on body
G01_A-GND on LF engine room
G02_ GND on RF engine room
G09_P-GND 2 for main harness on left-side A pillar
G06_A-GND on LF engine room
G19_P- GND for main harness on left taillamp
G14_P-GND for main harness on right taillamp

WWW.DIGITALKHODRO.COM 021 62 99 92 92