


(c) Using a digital multimeter, check for continuity between the terminals of connector B-068 to check if the sliding roof switch functions normally according to the table below.

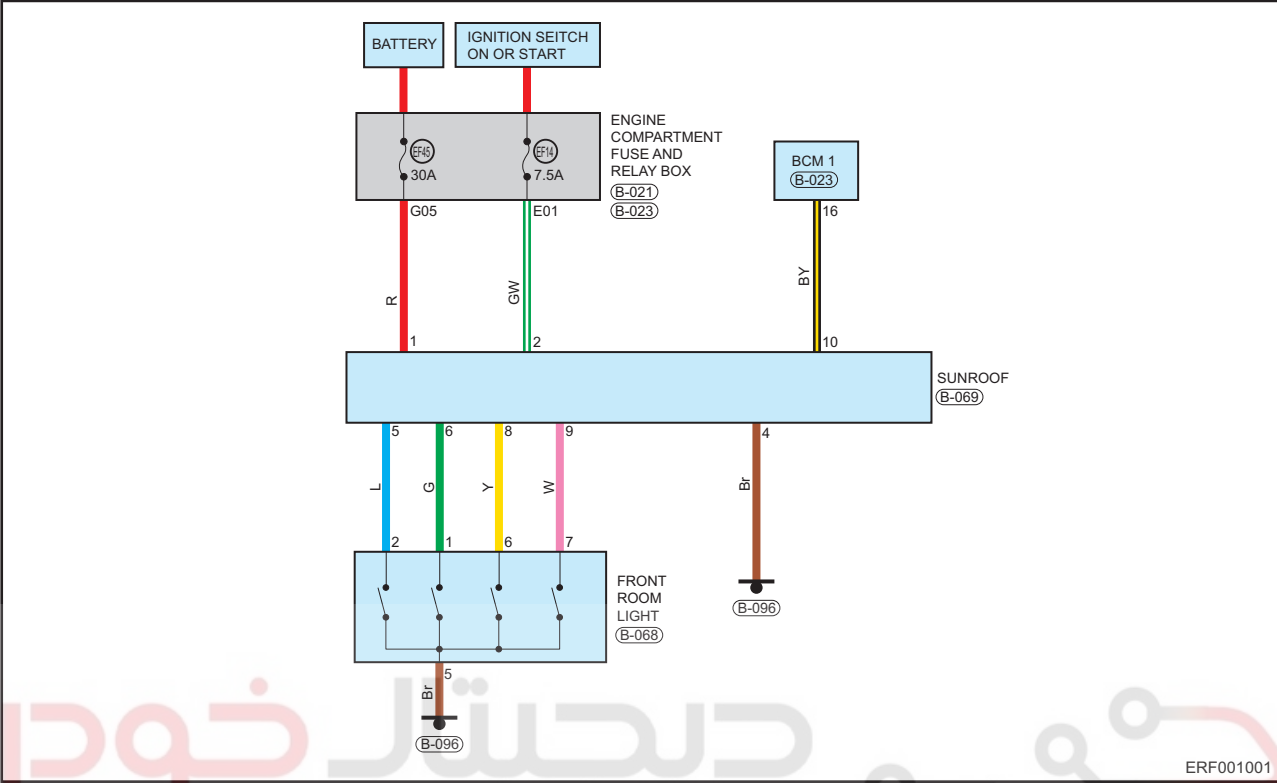

Multimeter Connection	Condition	Specified Condition
B-068 (2) - B-068 (5)	Press "Sliding Roof Glass Open " button	$\leq 1 \Omega$
B-068 (1) - B-068 (5)	Press "Sliding Roof Glass Close " button	$\leq 1 \Omega$
B-068 (6) - B-068 (5)	Press "Sunshade Open " button	$\leq 1 \Omega$
B-068 (7) - B-068 (5)	Press "Sunshade Close " button	$\leq 1 \Omega$

2. If result is not as specified, replace the sliding roof.