


2) ELECTRIC OUTSIDE MIRROR & FOLDING CIRCUIT

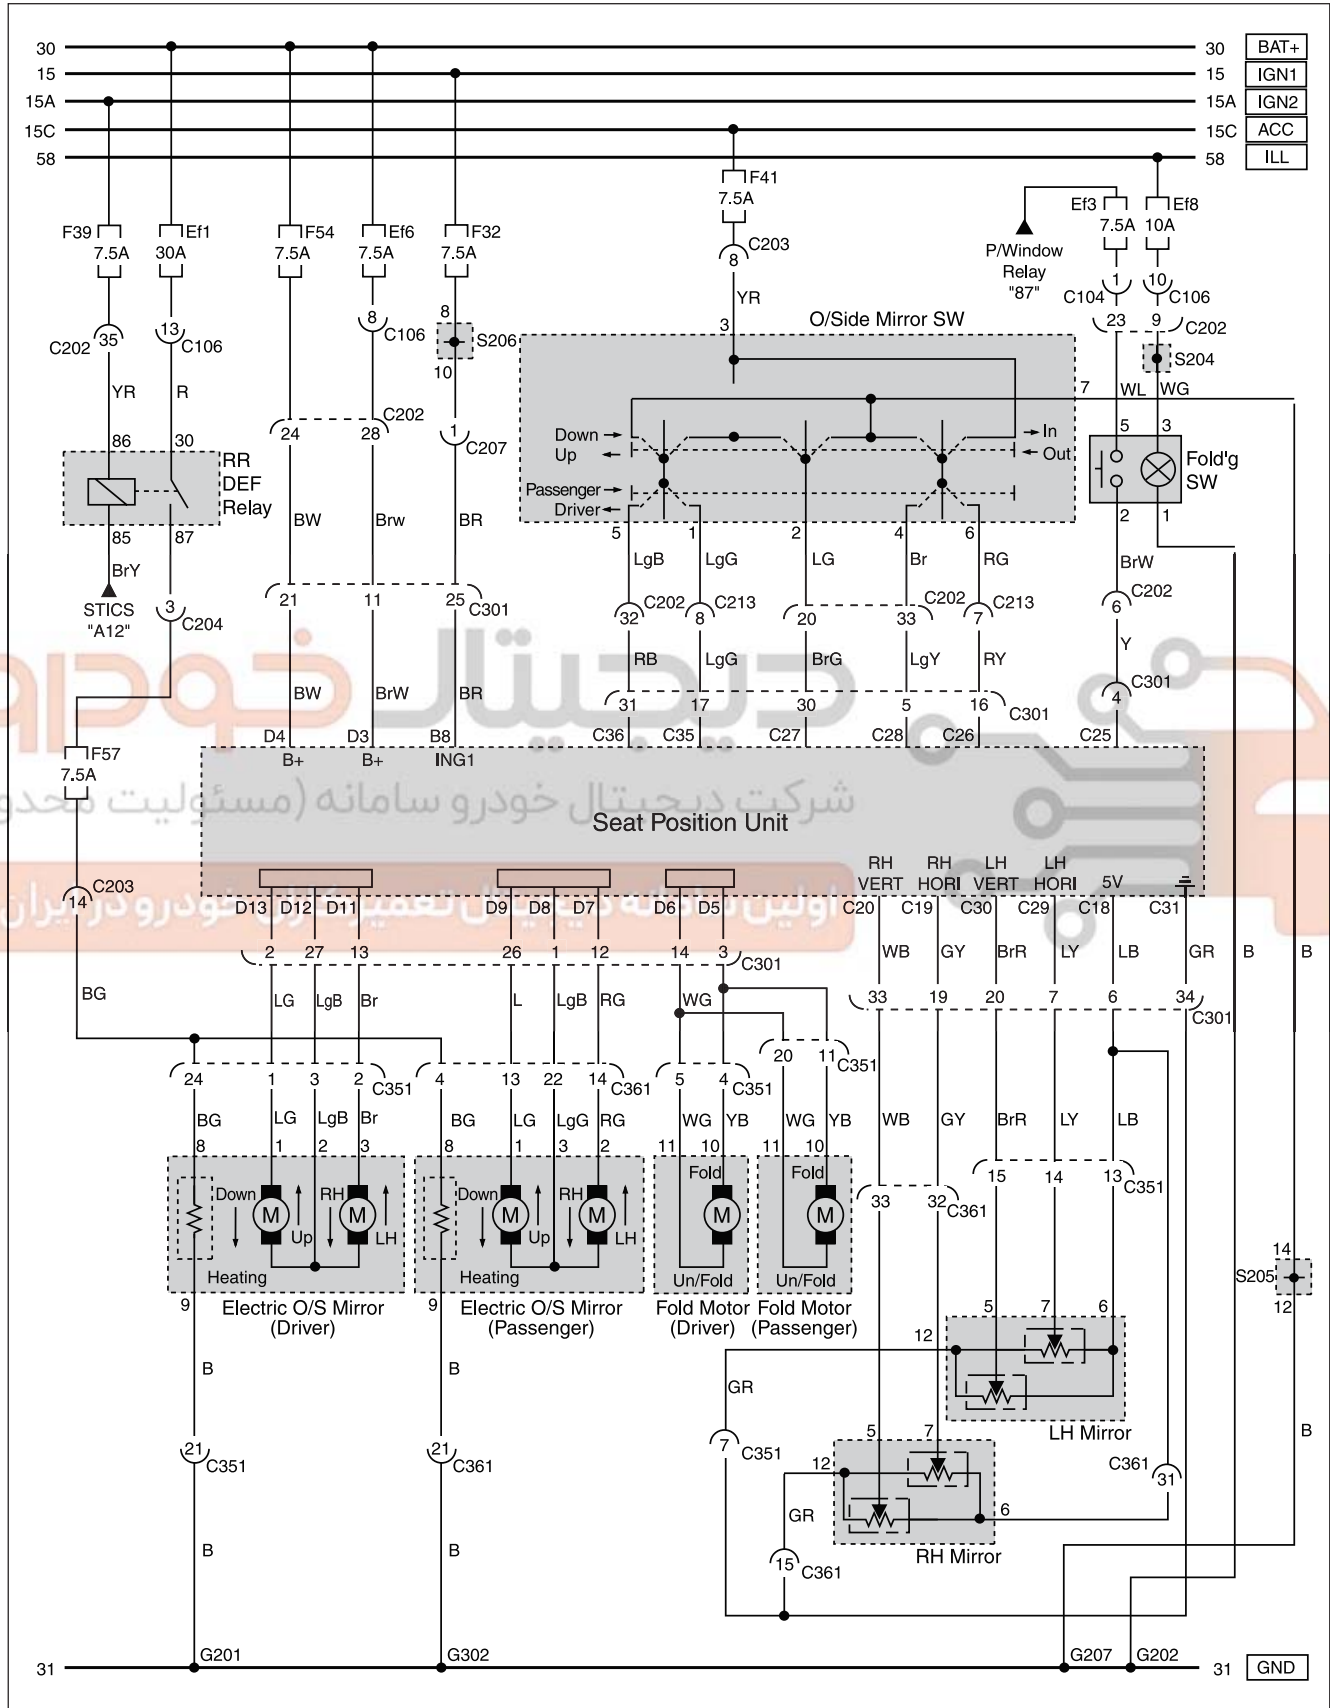

**A. CONNECTOR INFORMATION**

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C104 (14Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C204 (6Pin, Colorless)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Hoder	
C301 (39Pin, Black)	W/H Floor - W/H Driver Seat	Under the Driver Seat	W/Memory
C351 (33Pin, White)	W/H Floor - W/H Driver DR	Under the LH "A" Pillar	
C361 (33Pin, White)	W/H Floor - W/H Passenger DR	Under the LH "A" Pillar	
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G202	W/H Main	Under the Driver "A" Pillar	
G207	W/H Main	Inner the Passenger Cowl Side PNL	
G302	W/H Floor	Under the Passenger Seat	
S205 (14Pin, Black)	W/H Main	Upper the PTC Protector	GND
S206 (14Pin, Black)	W/H Main	Upper the PTC Protector	IGN1, T/Signal

01

02

03

04

05

**B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION**

