


Power Outlet and Cigarette Lighter

Service Hints

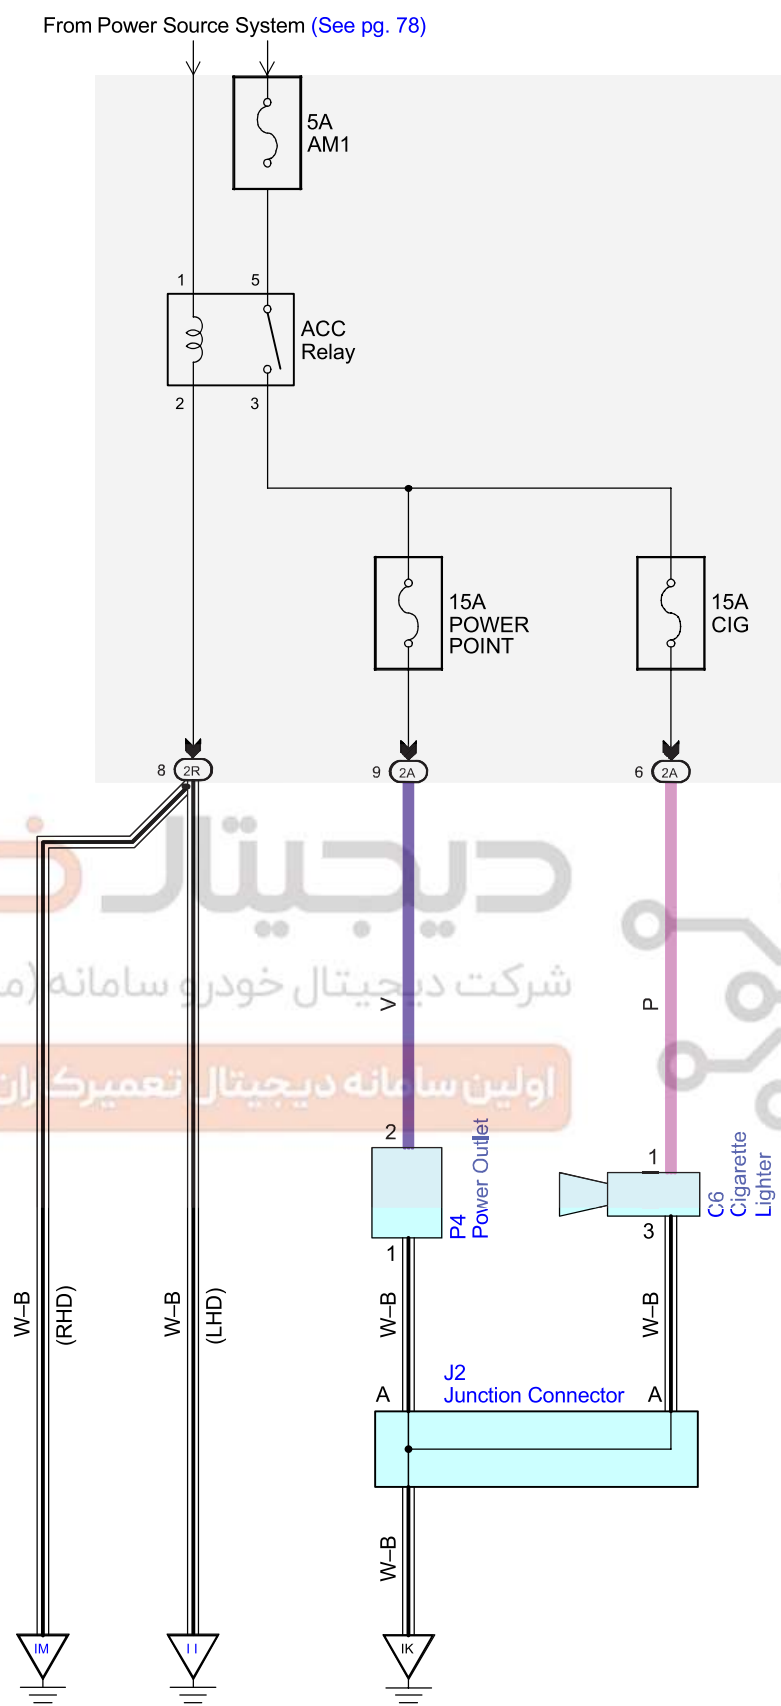

Service Hints**C6 Cigarette Lighter**

- 1-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 3-Ground : Always continuity

P4 Power Outlet (Front)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C6	36 (LHD)	J2	37 (LHD)	P4	37 (LHD)
	46 (RHD)		47 (RHD)		47 (RHD)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	26	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R	27	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
II	55 (LHD)	Instrument Panel Reinforcement LH
IK	55 (LHD)	Instrument Panel Brace LH
	67 (RHD)	
IM	67 (RHD)	Instrument Panel Reinforcement RH

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

