


BCM1

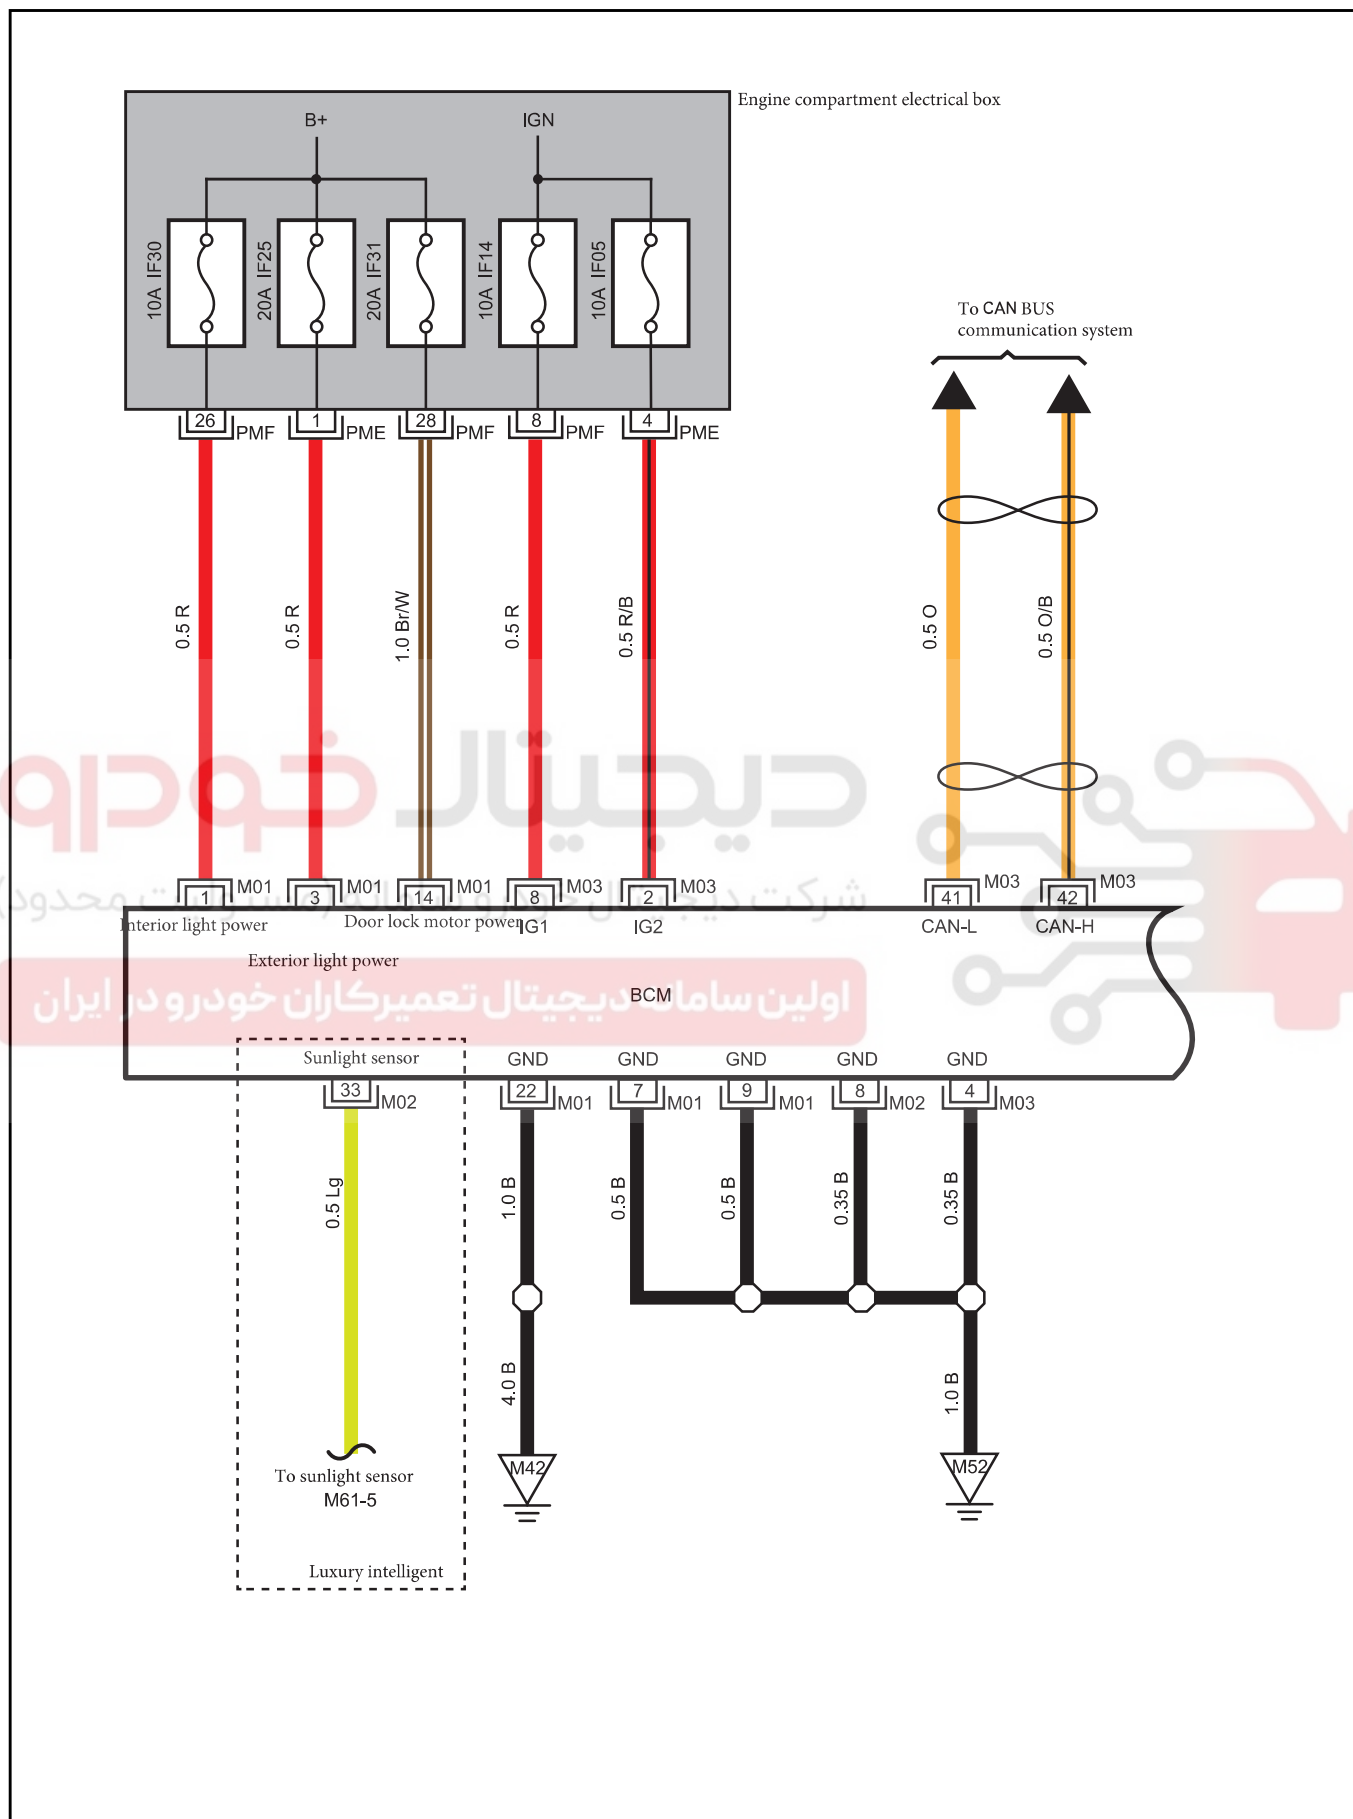

Harness connector	Name	Page
M01	BCM A harness connector	25
M02	BCM B harness connector	25
M03	BCM C harness connector	26
PMF	IP.BOX F harness connector	25
PME	IP.BOX E harness connector	25
M42	Ground	63
M52	Ground	63

Harness connector	Name	Page
M02-33	To sunlight sensor M61-5	159
M03-41	To CAN BUS communication system	229
M03-42	To CAN BUS communication system	229


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




BCM2

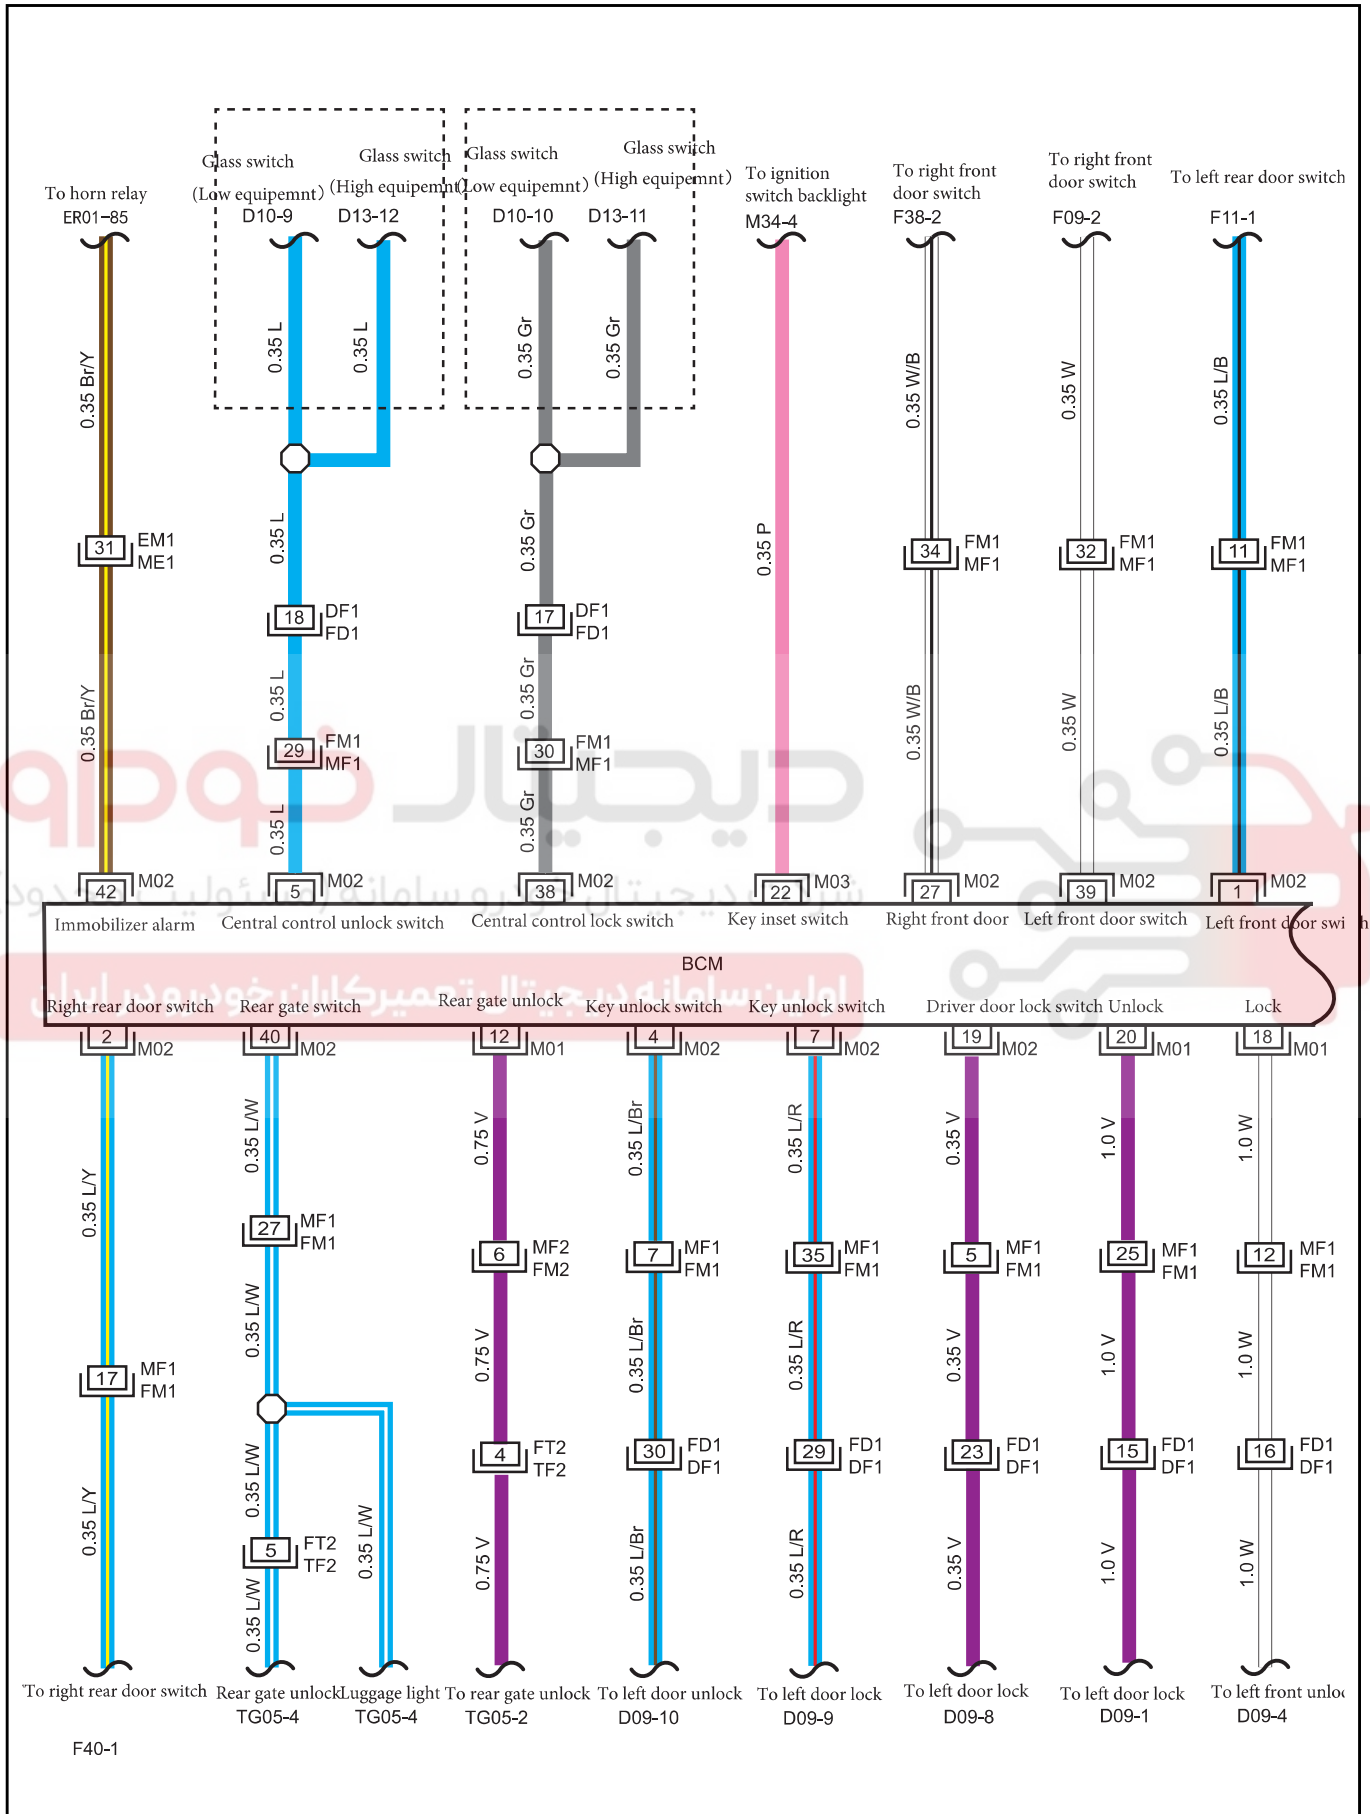

Harness connector	Name	Page
M01	BCM A harness connector	25
M02	BCM B harness connector	25
M03	BCM C harness connector	26
ME1	Main harness to engine harness connector 1	25
EM1	Engine harness to main harness 1	17
MF1	Main harness to frame harness connector 1	26
FM1	Frame harness to main harness 1	43
MF2	Main harness to frame harness 2	26
FM2	Frame harness to main harness 2	43
FD1	Body harness to left door harness	43
DF1	Left door harness to frame harness	49
FT2	Frame harness to rear gate harness	45
TF2	Rear gate harness to frame harness	54

Harness connector	Name	Page
M02-42	To horn relay ER01-85	80
M03-22	To ignition switch backlight M34-4	161
M02-27	To Right front gate switch F38-2	161
M02-39	To Left front gate switch F09-2	161
M02-1	To Left rear gate switch F11-1	161
M02-2	To right rear gate switch F11-1	161
M02-40	To rear gate unlock TG05-4	169
	To luggage light TG05-4	149
M01-12	To rear gate lock motor TG05-2	169
M02-4	To left gate lock motor D09-10	167
M02-7	To left gate lock motor D09-9	167
M02-19	To left gate lock motor D09-8	167
M01-20	To left gate lock motor D09-1	167
M01-18	To left gate lock motor D09-4	167
M02-5	To glass switch (low equipment) D10-9	169
	To glass switch (low equipment) D13-12	169
M02-38	To glass switch (low equipment) D10-10	169
	To glass switch (low equipment) D13-11	169


BCM light

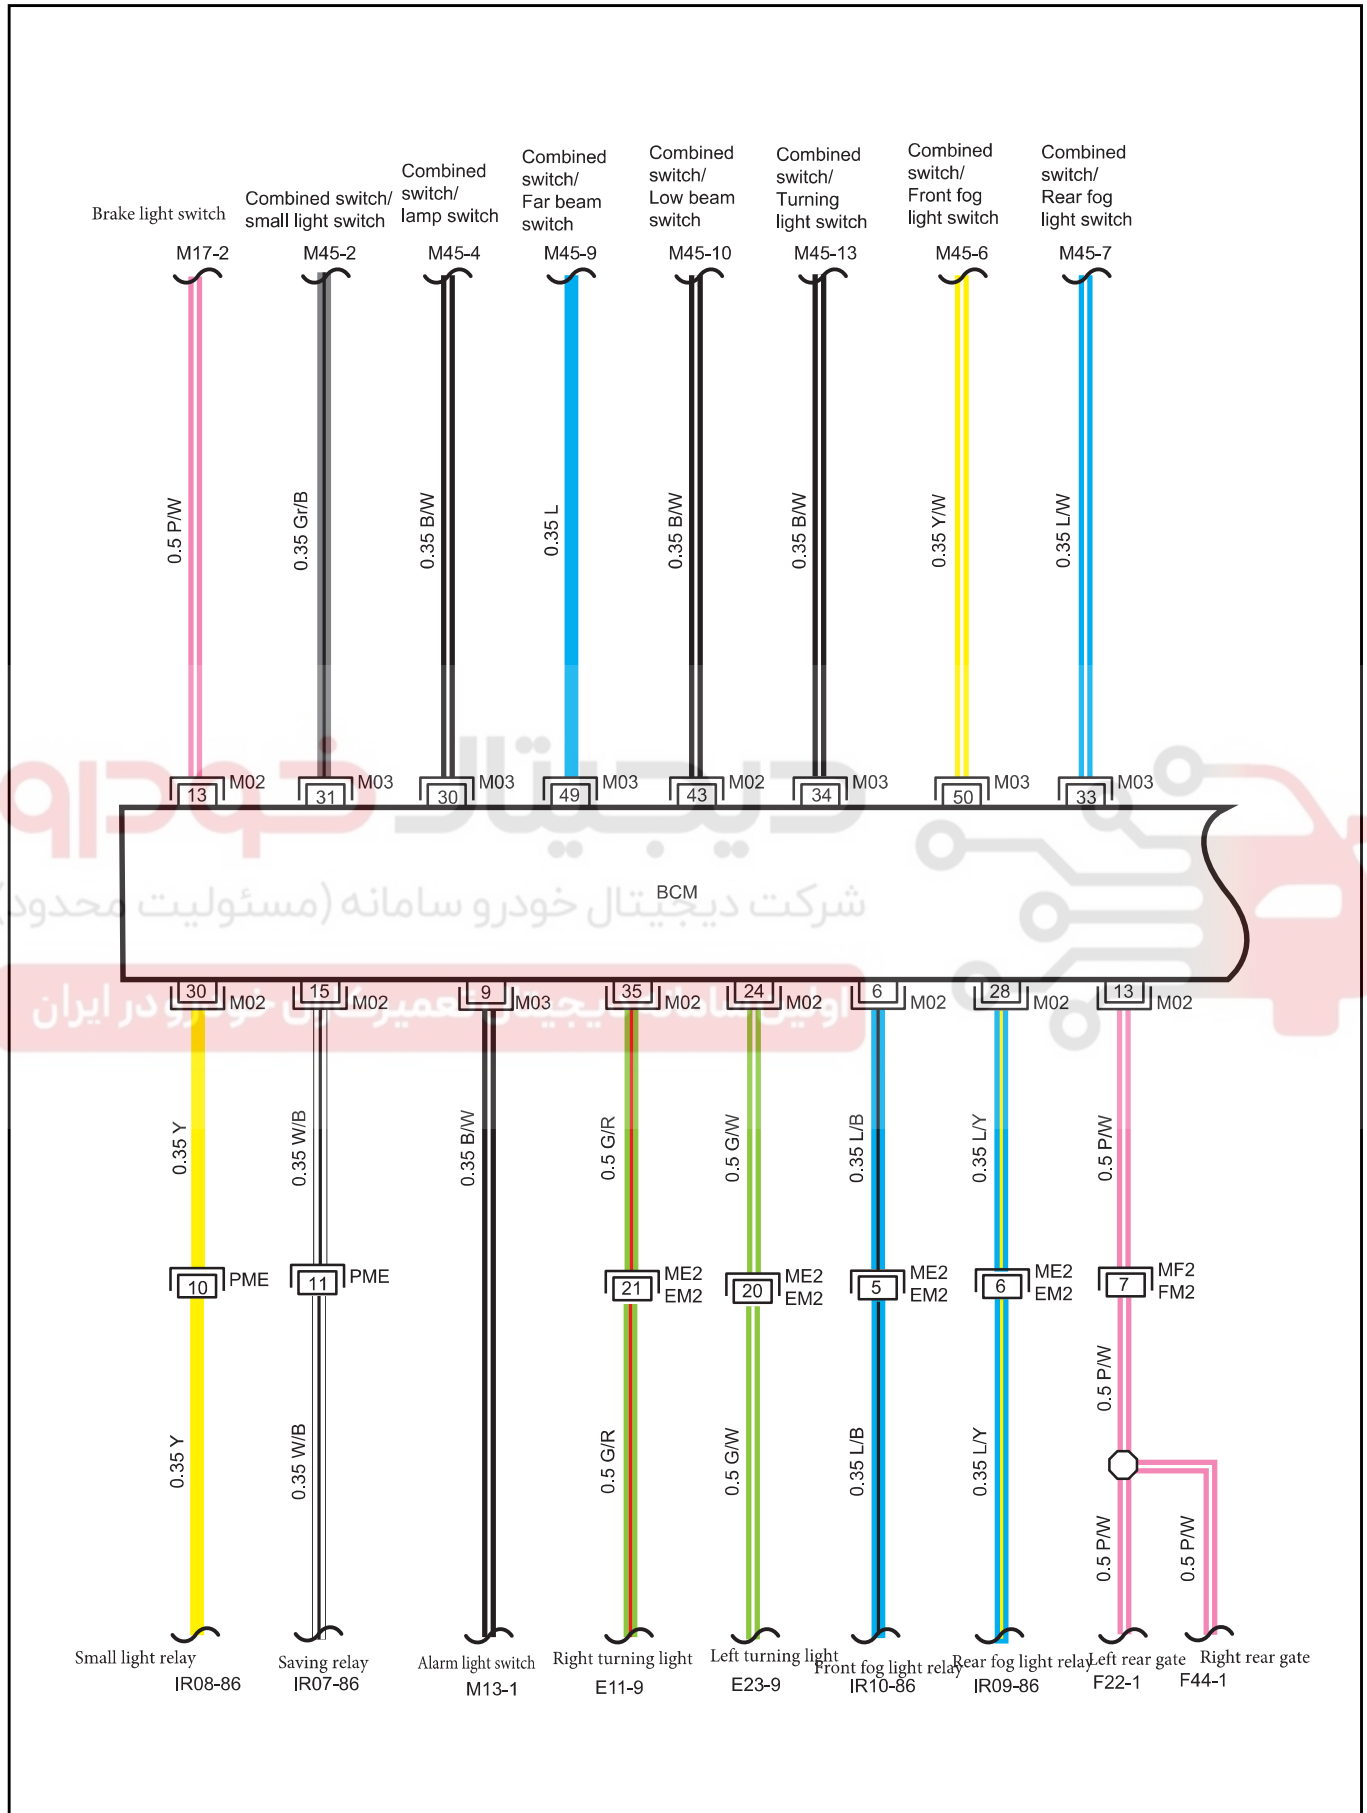

Harness connector	Name	Page
M02	BCM B harness connector	25
M03	BCM C harness connector	26
ME2	Main harness to engine harness connector 2	25
EM2	Engine harness to main harness 2	17
PME	IP.BOX E harness connector	25

Harness connector	Name	Page
M02-13	To brake switch M17-2	155
M03-31	Combined switch/ small light switch M45-2	153
M03-30	Combined switch/ lamp switch M45-4	131
M03-49	Combined switch/ far beam switch M45-9	131
M02-43	Combined switch/ low beam switch M45-10	131
M03-34	Combined switch/ turning light switch M45-13	135
M03-50	Combined switch/ front fog light switch M45-6	131
M03-33	Combined switch/ rear fog light switch M45-7	131
M02-30	To small light relay IR08-86	74
M02-15	To saving relay IR07-86	75
M03-9	To alarm light switch M13-1	135
M02-35	To right turning light E11-9	137
M02-24	To left turning light E23-9	137
M02-6	To front fog light relay IR10-86	163
M02-28	To rear fog light relay IR09-86	163
M02-13	To left rear gate F22-1	153
M02-13	To right rear gate F44-1	153

BCM wiper

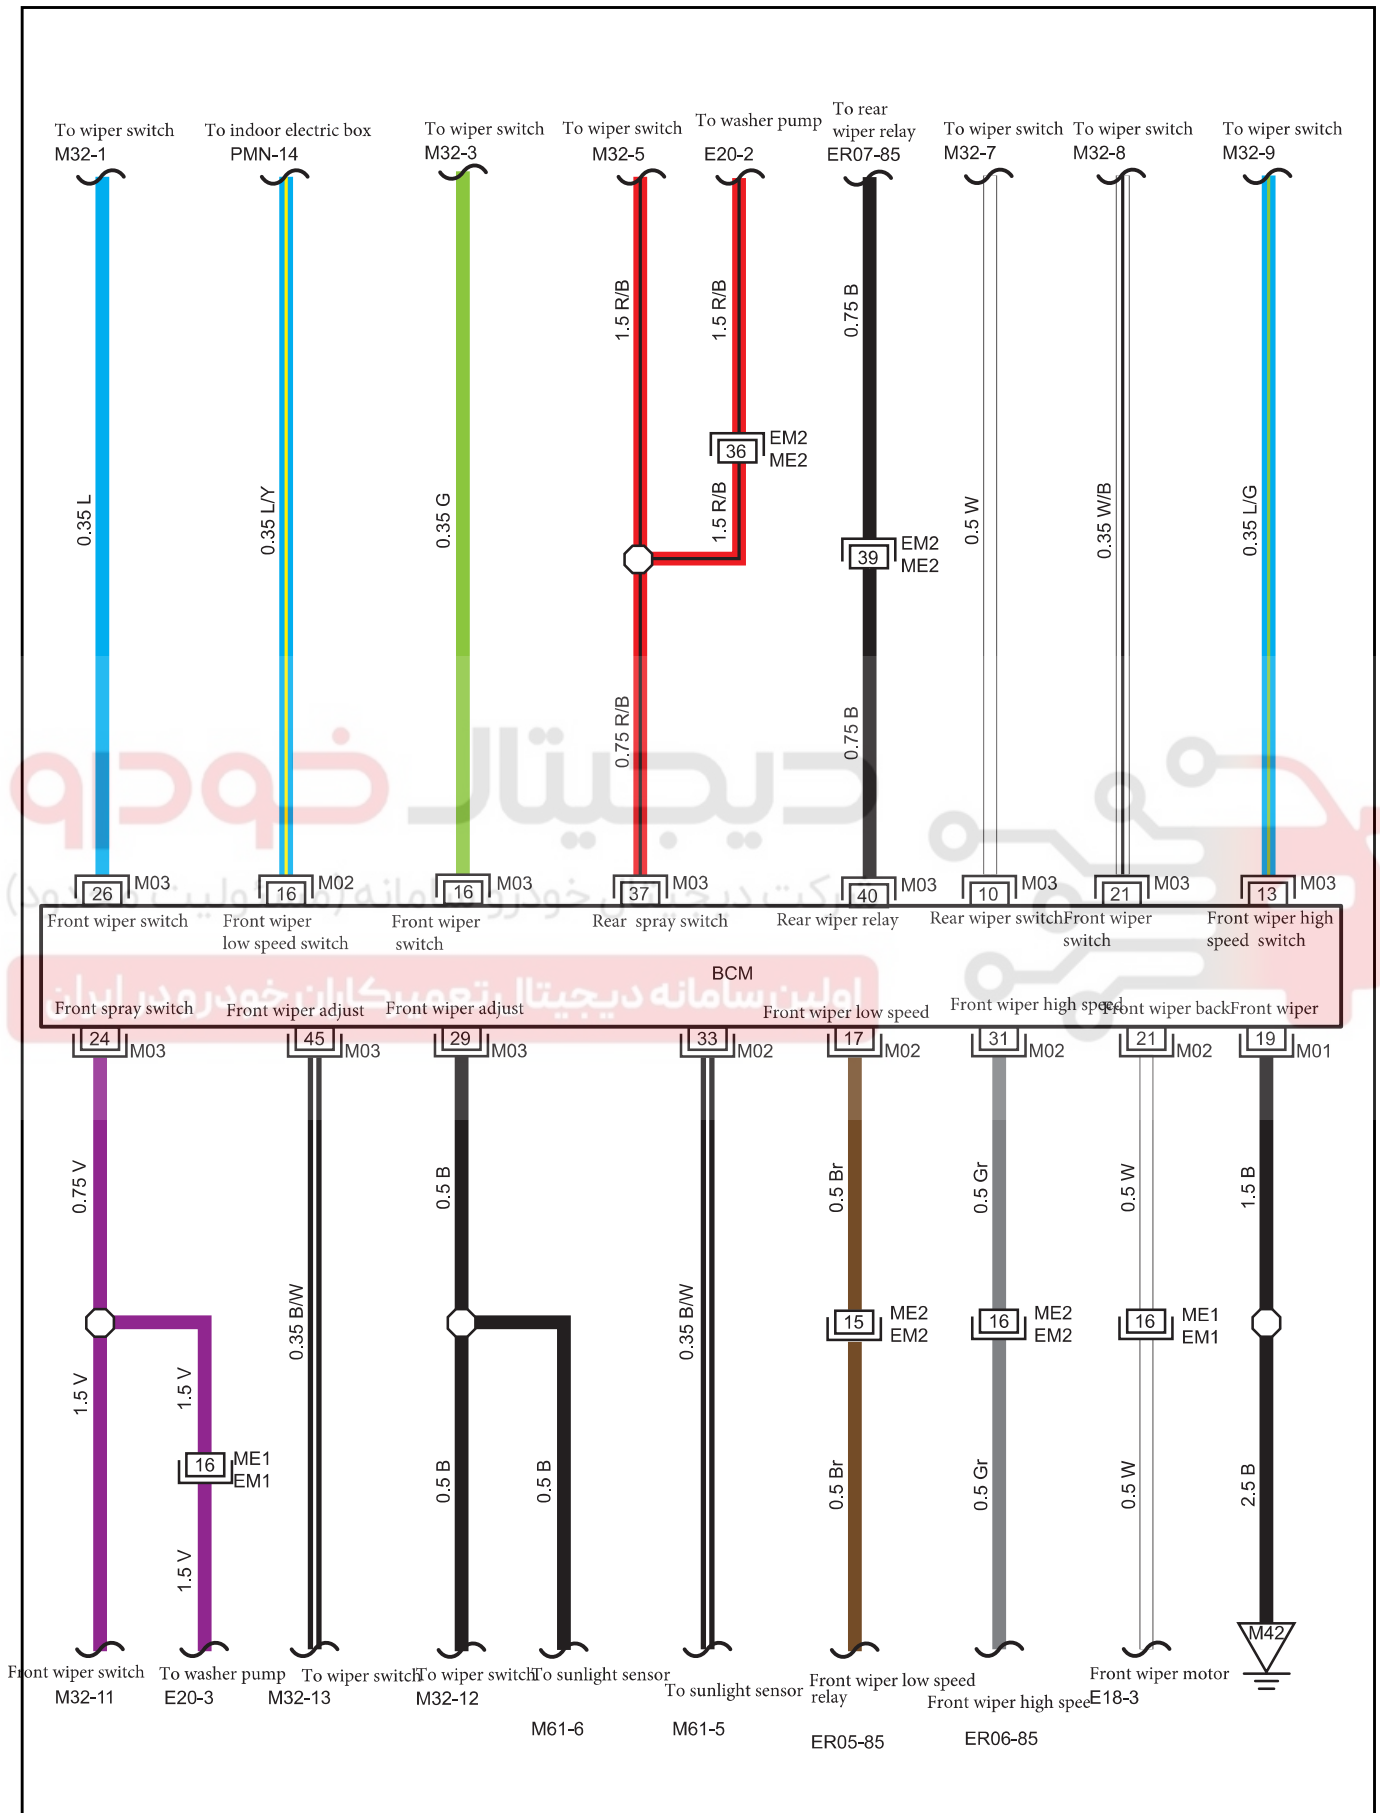

Harness connector	Name	Page
M01	BCM A Harness connector	25
M02	BCM B Harness connector	25
M03	BCM C Harness connector	26
ME1	Main harness to engine harness connector 1	25
EM1	Engine harness to main harness 1	17
ME2	Main harness to engine harness connector 2	25
EM2	Engine harness to main harness 2	17
M42	Ground	63

Harness connector	Name	Page
M03-26	To wiper switch M32-1	201
M03-16	To wiper switch M32-3	201
M03-10	To wiper switch M32-7	201
M03-21	To wiper switch M32-8	201
M03-13	To wiper switch M32-9	201
M03-37	To wiper switch M32-5	201
M03-37	To washer pump E20-2	201
M03-40	To rear wiper relay ER07-85	83
M03-24	To wiper switch M32-11	201
M03-24	To washer pump E20-3	201
M03-45	To wiper switch M32-13	201
M03-29	To wiper switch M32-12	201
M03-29	To sunlight sensor M61-6	165
M03-33	To sunlight sensor M61-5	165
M02-17	Front wiper high speed rely ER05-85	80
M02-31	Front wiper high speed relyER06-85	80
M02-21	Front wiper motor E18-3	199